



FSMC – Flexible static memory controller  
 FSMC\_NWE – write enable  
 FSMC\_NOE – output enable  
 FSMC\_NE1 – enable  
 FSMC\_INT3 – interrupt