# Microcontroller Networking

## for Embedded

**Measurement & Control Applications** 

# MCNF

MicroController Networking Framework

# - Getting Started -

Dr.-Ing. Andreas Eppinger

2012-12-17 Rev 1.0.0

1

## **MCNF Installation**

#### **Pre-Requisites**

Before installing MCNF, please make sure you have installed the following free software on your PC:

#### (1) Microsoft .NET Framework 4 (mandatory)

Microsoft Visual Studio C# 2010 (Express version will work)

http://www.microsoft.com/visualstudio/eng/products/visual-studio-2010-express

The Microsoft .NET Framework 4 and Microsoft Visual Studio C# 2010 is mandatory.

#### (2) Arduino 1.0 plus the TimerOne library

http://arduino.cc/en/Main/Software http://www.arduino.cc/playground/code/timer1

Arduino 1.0 is the IDE supporting the Arduino embedded platforms.

Recommended for AVR based and .NET MF based embedded applications, but not needed for the demos in this deocument:

(3) Atmel Studio 6 (optional)

http://www.atmel.com/microsite/atmel\_studio6/default.aspx

Atmel Studio 6 supports AVR based embedded solution development.

(4) Microsoft .NET Micro Framework SDK 4.2 (optional)

http://netmf.codeplex.com/releases/view/82448

Microsoft .NET Micro Framework SDK 4.2 is needed for .NET MF based embedded solutions.

#### Installation of MCNF Framework on the PC

- (1) Copy file MCNF.zip to a directory of your choice, e.g. "C:\Program Files".
- (2) Extract MCNF.zip with option "Extract Here".

This will create a directory "...\MCNF", e.g. "C:\Program Files\MCNF" with the following structure:



The newly created directory will be refered to as "MCNF\_Directory".

(3) Double-click onto MCNF\_Setup.exe in order to open the following application



(4) Then create MCNF icons on your desktop by clicking "Create Shortcuts":



- MCNF is the shortcut to the **MCNF Launcher** which starts the MCNF Integrated Configuration and Runtime Environment.
- MCNF\_NET is a MCNF embedded application running on the .NET platform. It works like the other "Hello Embedded World (HEW)" embedded demo applications – just on the .NET platform in your PC instead of e.g. an AVR ATmega328P chip.
- (5) Finish installation by closing the window.

#### "Hello Embedded World" Demos

The equivalent to "Hello World" examples in the embedded world is to switch a LED on/off. We're going to use that example in a basic version "HEW\_1", switching an LED on/off and in a version "HEW\_2" where we add PWM based dimming of a LED.

## Executing the .NET HEW Demo

First we're going to execute a demo that works entirely on the .NET platform. The "embedded" node and device are implemented in C# on the .NET platform. We will create a TCP/IP connection locally (port 6000 on "localhost") to connect the HEW application to its embedded counterpart.

(1) Open the HEW embedded part of the demo by clicking onto the "MCNF\_NET" icon on your desktop. A window opens showing two LEDs "Switch" and "Dimm" on the top and a number of communication options on the right.



We will use a TCP/IP connection locally on port 6000 on the PC.

Make sure, the "L" button is activated = green color.

(2) Open the MCNF PC environment by clicking the "MCNF" icon on your desktop.

If you never launched MCNF before and your VisualStudio 2010 file path is not known by the system, you will be prompted to select the directory that holds the VisualStudio 2010 Project Templates.

Usually, this directory will be under in your user account under "... Documents and Settings\MyUserAccount\My Documents\Visual Studio 2010\Templates\Project Templates".

 $| \leftarrow "MyUserAccount" is just a placeholder for your own personal user account$ 

Browse For Folder	? 🛛
Please select the Visual Studio Templates folder in which the MCNF (typically:Documents and Settings/MyUserAccount/My Docume	application templates will be installed in ! nts\Visual Studio 2010\Templates\ProjectTemplates
My Music My Pictures My Videos SMAPT Notebook Visual Studio 2010 Backup Files	
Code Snippets  My Exported Templates  Projects  Settings StartPages  Templates	
Make New Folder	OK Cancel

(3) The "MCNF Launcher" window will open and the content is grayed out while the system rebuilds our workspace (may take a little time).



(4) Once the rebuild is finished, you should see the default workspace setting as "MCNF\_Directory"\MCNF\MCNF\_Worksapce\_Tutorial\



Press the "Launch MCNF" button to launch the MCNF Configuration Editor:

- (5) Select the MCNF system "Sys\_HEW\_2\_Ethernet\_Scripts" as shown above.
- (6) Click the "Launch" button in the upper left corner of the MCNF Configuration Editor:



(7) The MCNF Execution Window is activated. You should now have two windows on your screen:



(8) The HEW\_2 user control still shows "disconnected" because we have not started the .NET embedded system yet. Press the "Start" button in the MCNF NET HEW window to start the

#### embedded system execution:



(9) Your system should change its appearance to show the active status and you should see the trace output of connectivity messages in the MCNF NET HEW window.

MCNF ICRE [ C:\Program Files\WCNF_WCNF_Workspace_Tutorial\ >>> Project_HEW_Demo >>> Sys_HEW_2_Ethernet 🔀 MCNF NET HEW		
HEW Application:	Switch: Dimm: Dimm: Inputs:	
Intercore Intercore	TCP port: 6000	<u> </u>
	5.380]: { 33 }	<u> </u>
HEW_Z - Start Script Exe	5.474): { 161 } 5.474): { 33 }	
>>> TCP Re [17:36:27 Connectivity Test	Gateway: 7.567]: { 161 } TCPIP adr: 127.0.0.1	
Save State Text	7.567): { 33 } 8.661]: { 161 }	
Selected VarSet [2] R	8.661): { 33 }	~
Source Connectivity Test	9.755]: { 161 } Baudrate: 115200	_
	IZC port	50
	Service: 17 COM	
TCP Client connected	i ! Clear Trace St	op

(10)Try out the HEW\_2 user control and MCNF tools:

- Press "LED" and see the LED on/off messages and the visual change of LED "Switch"
- Press the second (green) LED and toggle between blink and dimming mode; use the slider to set dimming (PWM duty cycle); watch the HEW embedded application window.
- Use the "Save" button and the slider above the Save button to save and recall variable settings for the green LED.
- Try the tool bar icons to access the various MCNF tools:



- Re-launch the system from the Configuration Editor with "Simulate" instead of "Launch".

(11) Close the MCNF Execution Window and the MCNF NET HEW window.

### **Executing the Arduino HEW Demo**

This demo will execute the HEW\_2 embedded application on an Arduino platform.

We're using an Arduino Uno in this example.

- (1) Prepare the Arduino hardware by connecting two LEDs:
  - yellow LED from Digital Pin 5 via a 1K resistor to ground.
  - green LED from Digital Pin 9 (PWM) via a 1K resistor to ground.
- (2) Connect the USB cable and find your COM port in the Windows Device Manager; in the example we assume COM20.

*Remark: You can change the COM port asignment in the Windows Device Manager under Port Settings – Advanced.* 



(3) Configure, compile and download the HEW application onto the Arduino hardware:

- goto "MCNF\_Directory"\MCNF\_Embedded\Arduino\MCNF\_Arduino\_HEW\_GW and launch the Arduino IDE by double-clicking onto MCNF\_Arduino\_HEW\_GW.ino.

🟁 MCNF_Ardi <mark> ino_HEW_GW   Arduino</mark>	1.0.1		. 🗆 🔀	00 MCNF_Ardu 10_11LW_OW   Ard	10110-110-1		
MOLP.Acdimon tetry, wy produme Re Edit Stetz     Tool Meb     Auto Format     Senal Port     Senal Port     Senal Port     Senal Port     Senal Port     Auto     Senal Port     Senal	2 3 U2 3 Strg+T Strg+Umschalt+M	Device_Switch     Gateway_Channels     Arduno Unio     Arduno Nemarinarova // ATmega328     Wadro Okonni // ATmega328     Arduno Nemo // ATmega328     Arduno Nemi // ATmega328     Ardun	led pled pled	COMANY And IN CARACTER AND THE PARTY AND	Strg+U Strg+Umschalt+N → ///////// → COMS → COMS	<pre>Jwitch Osteway_Channels 120 ////////////////////////////////////</pre>	led bled bled
Idefine DEDOG	1 //	LifyPad Arduino w/ ATmega188 Arduino Pro or Pro Mini (SV, 16 MHz) w/ ATmega328 Arduino Pro or Pro Mini (SV, 16 MHz) w/ ATmega328 Arduino Pro or Pro Mini (3.9, 8 MHz) w/ ATmega328 Arduino Pro or Pro Mini (3.9, 8 MHz) w/ ATmega328 Arduino No Fro Pro Mini (3.9, 8 MHz) w/ ATmega38 Arduino NG or older w/ ATmega8		¢define DEBUG (//	0 // DEBUG:0 =	disabled; 1 = enabled	>
			COM20	1			

- select Arduino UNO in Tools-Board and COM20 in Tools-Serial Port

- In tab MCNF\_Arduino\_HEW\_GW in section COMMUNICATION CONFIGURATION, set the

#defines DEVICE\_DIMM and UART\_INPUT to 1, all others to 0.

	Ť	*		ø
MCNF_Arduino_HEW_GW§ COM_R	x Device_Dimm	Device_Switch	Gateway_Channels	12C_1 - ut
///				^
	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	///////////////////////////////////////	///////////////////////////////////////	
///////////////////////////////////////	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	dimmente de	
/// Basic size: 3.4 KB	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,		<i>π</i>	
/// UART Input: 2.2 KB				
/// I°C Input: 0.4 KB				
/// TCP Input: 8.0 KB				
/// Device_Dimm: 2.0 KB				
/// Debug: 3.6 KB				
#define DEVICE_DIMM	1 // DIM	M: O = disabled;	1 = enabled	
#define UART_INPUT	1 // UAR	T: 0 = disabled;	1 = enabled	
#define I2C_INPUT	0 // I²C	: 0 = disabled;	1 = enabled	
#define SPI_INPUT	0 // SPI	: 0 = disabled;	1 = enabled	
#define TCP_INPUT	0 // TCP	: U = disabled;	l = enabled	
#define IZU_GAIEWAY	U // 120	GW Channel I:	U = disabled; I = 6	enabled
#define CARL_GAILWAY	0 // UAR	I GW Channel 2:	0 = disabled; 1 =	enabled
#define DEBUG	0 // DFB	GW UNAMMEL 3: UC:0 - disabled:	U = ursabled; I =	enabled
ACTINC PEDGO	0 // DED	oo.o - disabica,	i – chubicu	×
				1
Code formatted for the Arduino forum has	been copied to the clip	oboard:		

- save the changes, compile and upload the code

(4) Launch the MCNF environment and select system "Sys\_HEW\_2\_UART\_Scripts". In the lower right section you can define the Network Settings for your configuration. Make sure that the Arduino's COM port is defined in the network settings; edit and save the changes if necessary.

MCNF Configuration Editor [ C:\Program Files\MCNF\MCNF_Workspace_Tutorial\ >>> Project_HEW_Demo ]											
	Syster	n Tree		Data	base Proje	ct Application	n System	Network Va	ariableSet Script		
Simulate	Launch	Save	Exit	Save	Sys_HEW_2_U	ART_Scripts		Delete	]	Info	
Trace     Sys. ►     N     N     N     N     Sys. ►     N     N     V     S     S     C     S     S     S     S     S     S     S     S     S     S	Delete Terri HEW_2_UART w HEW_2_UEW_2 >> Dev_Sv >> Dev_Sv >> Dev_Sv >> Dev_Dis S_PUM_30 S_Blink_Fast_So Blink_Fast_So Blink_Slow essage_Hello alt_Hello pplication_Te ev_Switch_LS w _Stat_Script inf<	Edit Item Scripts ART vice, Switch] vitch vice, Dimm] " mm vial, 500 150 1250 xt D: Off, On, Off TypeInfo	"switch" dimm" ff in_Off	Sys Emp Sys HEW Sys HEW	6/ √ 1 Ethernet / 1 12C / 1 SPI / 1 UART / 2 Ethernet - / 2 Ethernet -	cripts s Script 2] 232_Input > _Switch _Gateway [120	) Export / >> N_HEW_ C]	Import ] 2	<pre>System Date: 2012-0 Version: 1.0 Description: 1.0 - Node HEM: 2 - Node HEM: 2 - "Dimm" dii - "Dimm" dii</pre>	A HEW 2 connected vi 18-11 implements two dev: > see HEW 1 ves a LEDvia PRM: neriod and DRM duty Network Settings [0]: nt Property PortName Eaudrate ServiceRequestEnabled	a UART ====

(5) Eventually save all changes with "Save" and press "Launch" to start executing the demo.

MCNF ICRE [ C:\Program F	iles\MCNF\MCNF_Workspace_Tutorial\ >>> Project_HEW_Demo >>> Sys_HEW_2_UART ]	×
	No Error	
HEW_2		
	Application: MCNF_HEW_2	
	ED Save	
	Selected VarSet [0]	

- (6) Press the Arduino hardware reset button to see the effect of hardware disconnecting and reconnecting.
- (7) Experiment with the tools, run scripts etc.
- (8) Close the MCNF Execution Window.