

Error Code	USB Update Error Display	Details of Error code	Remedies
5F	Updating fail 5F	Setup failure of the XModem transfer method.	This unit automatically retries the request several times. Wait until the Display stops. If the Display stops at the Error display, press and hold the "Power operation" button for 5 seconds.
60	Updating fail 60	NACK received in response or no response from Sub for the "P" command.	This unit automatically retries the request several times. Wait until the Display stops. If the Display stops at the Error display, press and hold the "Power operation" button for 5 seconds.
61	UpdateCheckNG 61	Mismatched Check Sum in response or no response from Sub for the "I" command.	This unit automatically retries the request several times. Wait until the Display stops. If the Display stops at the Error display, press and hold the "Power operation" button for 5 seconds.
62	Updating fail 62	Failed to start up Sub in Power On sequence during Update.	This unit automatically retries the request several times. Wait until the Display stops. If the Display stops at the Error display, press and hold the "Power operation" button for 5 seconds.
63	Updating fail 63	Failed to transit to Application Mode.	This unit automatically retries the request several times. Wait until the Display stops. If the Display stops at the Error display, press and hold the "Power operation" button for 5 seconds.
64	Updating fail 64	Failed to transit to Boot Loader Mode.	This unit automatically retries the request several times. Wait until the Display stops. If the Display stops at the Error display, press and hold the "Power operation" button for 5 seconds.
80	Updating fail 80	Write Enable Latch Bit not set in Read after issuing the "WREN" command.	This unit automatically retries the request several times. Wait until the Display stops. If the Display stops at the Error display, press and hold the "Power operation" button for 5 seconds.
81	Updating fail 81	Block Erase failed in Read after issuing the "BE" command.	This unit automatically retries the request several times. Wait until the Display stops. If the Display stops at the Error display, press and hold the "Power operation" button for 5 seconds.
82	Updating fail 82	No Update Packet received from CY920 (Time Out).	This unit automatically retries the request several times. Wait until the Display stops. If the Display stops at the Error display, press and hold the "Power operation" button for 5 seconds.
83	Updating fail 83	Abnormal data in Update Packet received from CY920 (CRCError).	This unit automatically retries the request several times. Wait until the Display stops. If the Display stops at the Error display, press and hold the "Power operation" button for 5 seconds.
84	Updating fail 84	Abnormal data in Update Packet received from CY920 (Packet No Error).	This unit automatically retries the request several times. Wait until the Display stops. If the Display stops at the Error display, press and hold the "Power operation" button for 5 seconds.
85	Updating fail 85	Abnormal data in Update Packet received from CY920 (Data Length / Data No).	This unit automatically retries the request several times. Wait until the Display stops. If the Display stops at the Error display, press and hold the "Power operation" button for 5 seconds.
86	Updating fail 86	Mismatched Check Sum in Check Sum comparison after rewriting.	This unit automatically retries the request several times. Wait until the Display stops. If the Display stops at the Error display, press and hold the "Power operation" button for 5 seconds.
A2	ConnectionFailA2	Unable to detect USB.	This unit automatically retries the request several times. Wait until the Display stops. If the Display stops at the Error display, press and hold the "Power operation" button for 5 seconds.