

Operation Instruction

M-206E Single Access Controller


Make your choice.....



1 Safety instructions

Thanks for purchasing this product, please read the instruction before using.

2 The overall structure of the parts

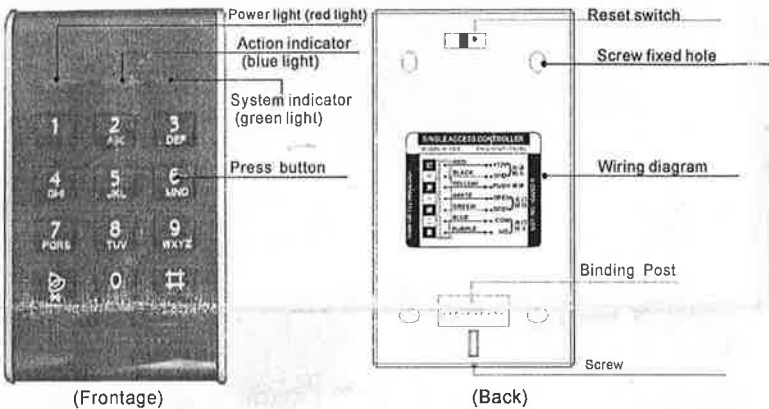

3 Operating list

Continuously operation


Operation	System password	Function	Operation	Log out	Operating result	Note
System password revision	#12345	1	88888 (example)	*	The system password is 88888	The system password is 5 figures
Open password revision	#12345	2	2580(example)	*	Open password is 2580	Open password is 4 figures
Ways of opening door	#12345	3	01	*	Both card and password can open doors	01. Card Or Password to open door. 02. Card +Password to open door.
Add card (one by one)	#12345	4	0# card number #	*	Card is added	
Add card continuously	#12345	4	1# read card #	*	Cards are added successfully	More than one card can be read continuously
Add sequential card	#12345	5	0 # start card # total cards number	*	Sequential cards are added	Card number should be 3 figures,(100) press * to log out.
Read sequential card	#12345	5	1 # start card# total cards number	*	Sequential cards are added	Card number should be 3 figures,(100) press * to log out.
Delete Cards on by one	#12345	6	0# card number #	*	This card number deleted	
Delete Cards continuously	#12345	6	1# read cards #	*	Cards are deleted	
Delete sequential card	#12345	7	0 # start card # total cards number	*	All cards are deleted	Card Number should be sequential total card number is 3 figures
Delete sequential card (Read cards)	#12345	7	1 # start card# total cards number	*	All cards are deleted	Card Number should be sequential total card number is 3 figures
Delete all cards	#12345	8	88#	*	All user card deleted	
Opening time revision	#12345	0	05 (Door open after 05 second)	*	Door opening time is 5S.	From 01-99S available
Initialization setting	switch off the power, open rear cover, pull the dial switch to RESET POSITION.		Connect power, buzzer calls, three indicators shine at the same time.		switch off the power, pull the dial switch back to NORMAL POSITION	The system password is #12345.

Note: The default setting is 12345. If you hear alarm after entering 12345, means default setting has been changed already. Initialization setting should be carried out.

4 The overall characteristic

- With the standard capacity of the user records of 1000pcs.
- Open method: Proximity card, password and both.
- Operations is simple and clear, increase or decrease cards is flexible and it also can delete cards on offline.
- Link with auto-door directly to achieve open lock before opening door.
- Dapper appearance, stable performance and easy installation
- Design with new streamlined shape and fashion cover.

5 Wiring Diagram

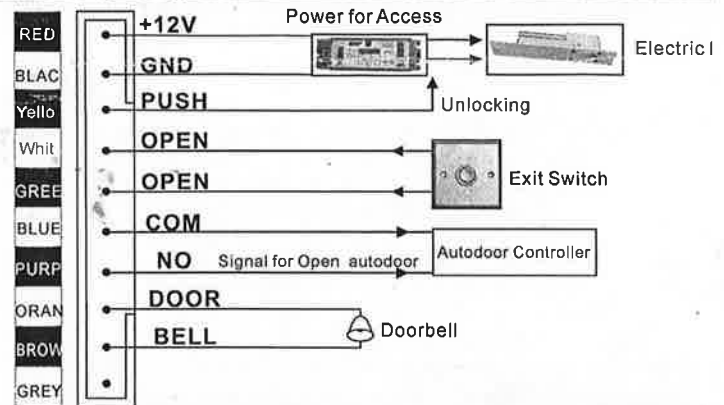

6 Main technical parameters

Operating voltage: DC12V±3%
 Static current: 35mA
 Action current: 50mA
 Storage capacity: 1000 standard user (ID card)
 Open password: A public password
 The interval time of open lock and auto-door: 400ms
 The reading distance of card: 20~100mm
 Environment temperature: -10°C~70°C
 The card type: EM or EM compatible card
 Appearance dimension: 113(L)x63(W)x20(H)mm