


PFC Voltage Booster circuits.
 When QB851 turns on by the PS_ON (= about +3V) signal from the main board, Transistor in OPTO PC80s is then turn on, which will turn on QB802, which will supply VCC for PFC IC Controller ICP801S, that is when the DC gets boosted up by the MOSFET QP801S, Diode D802, Inductor LP801.

PS_ON INPUT

MK32P3 - PFC, S/B BLOCK

DONGYANG E&P INC.

Title		Title	
Size	No.	Rev.	Title
Title	Title	Title	Title
File	Title	Date	Temp

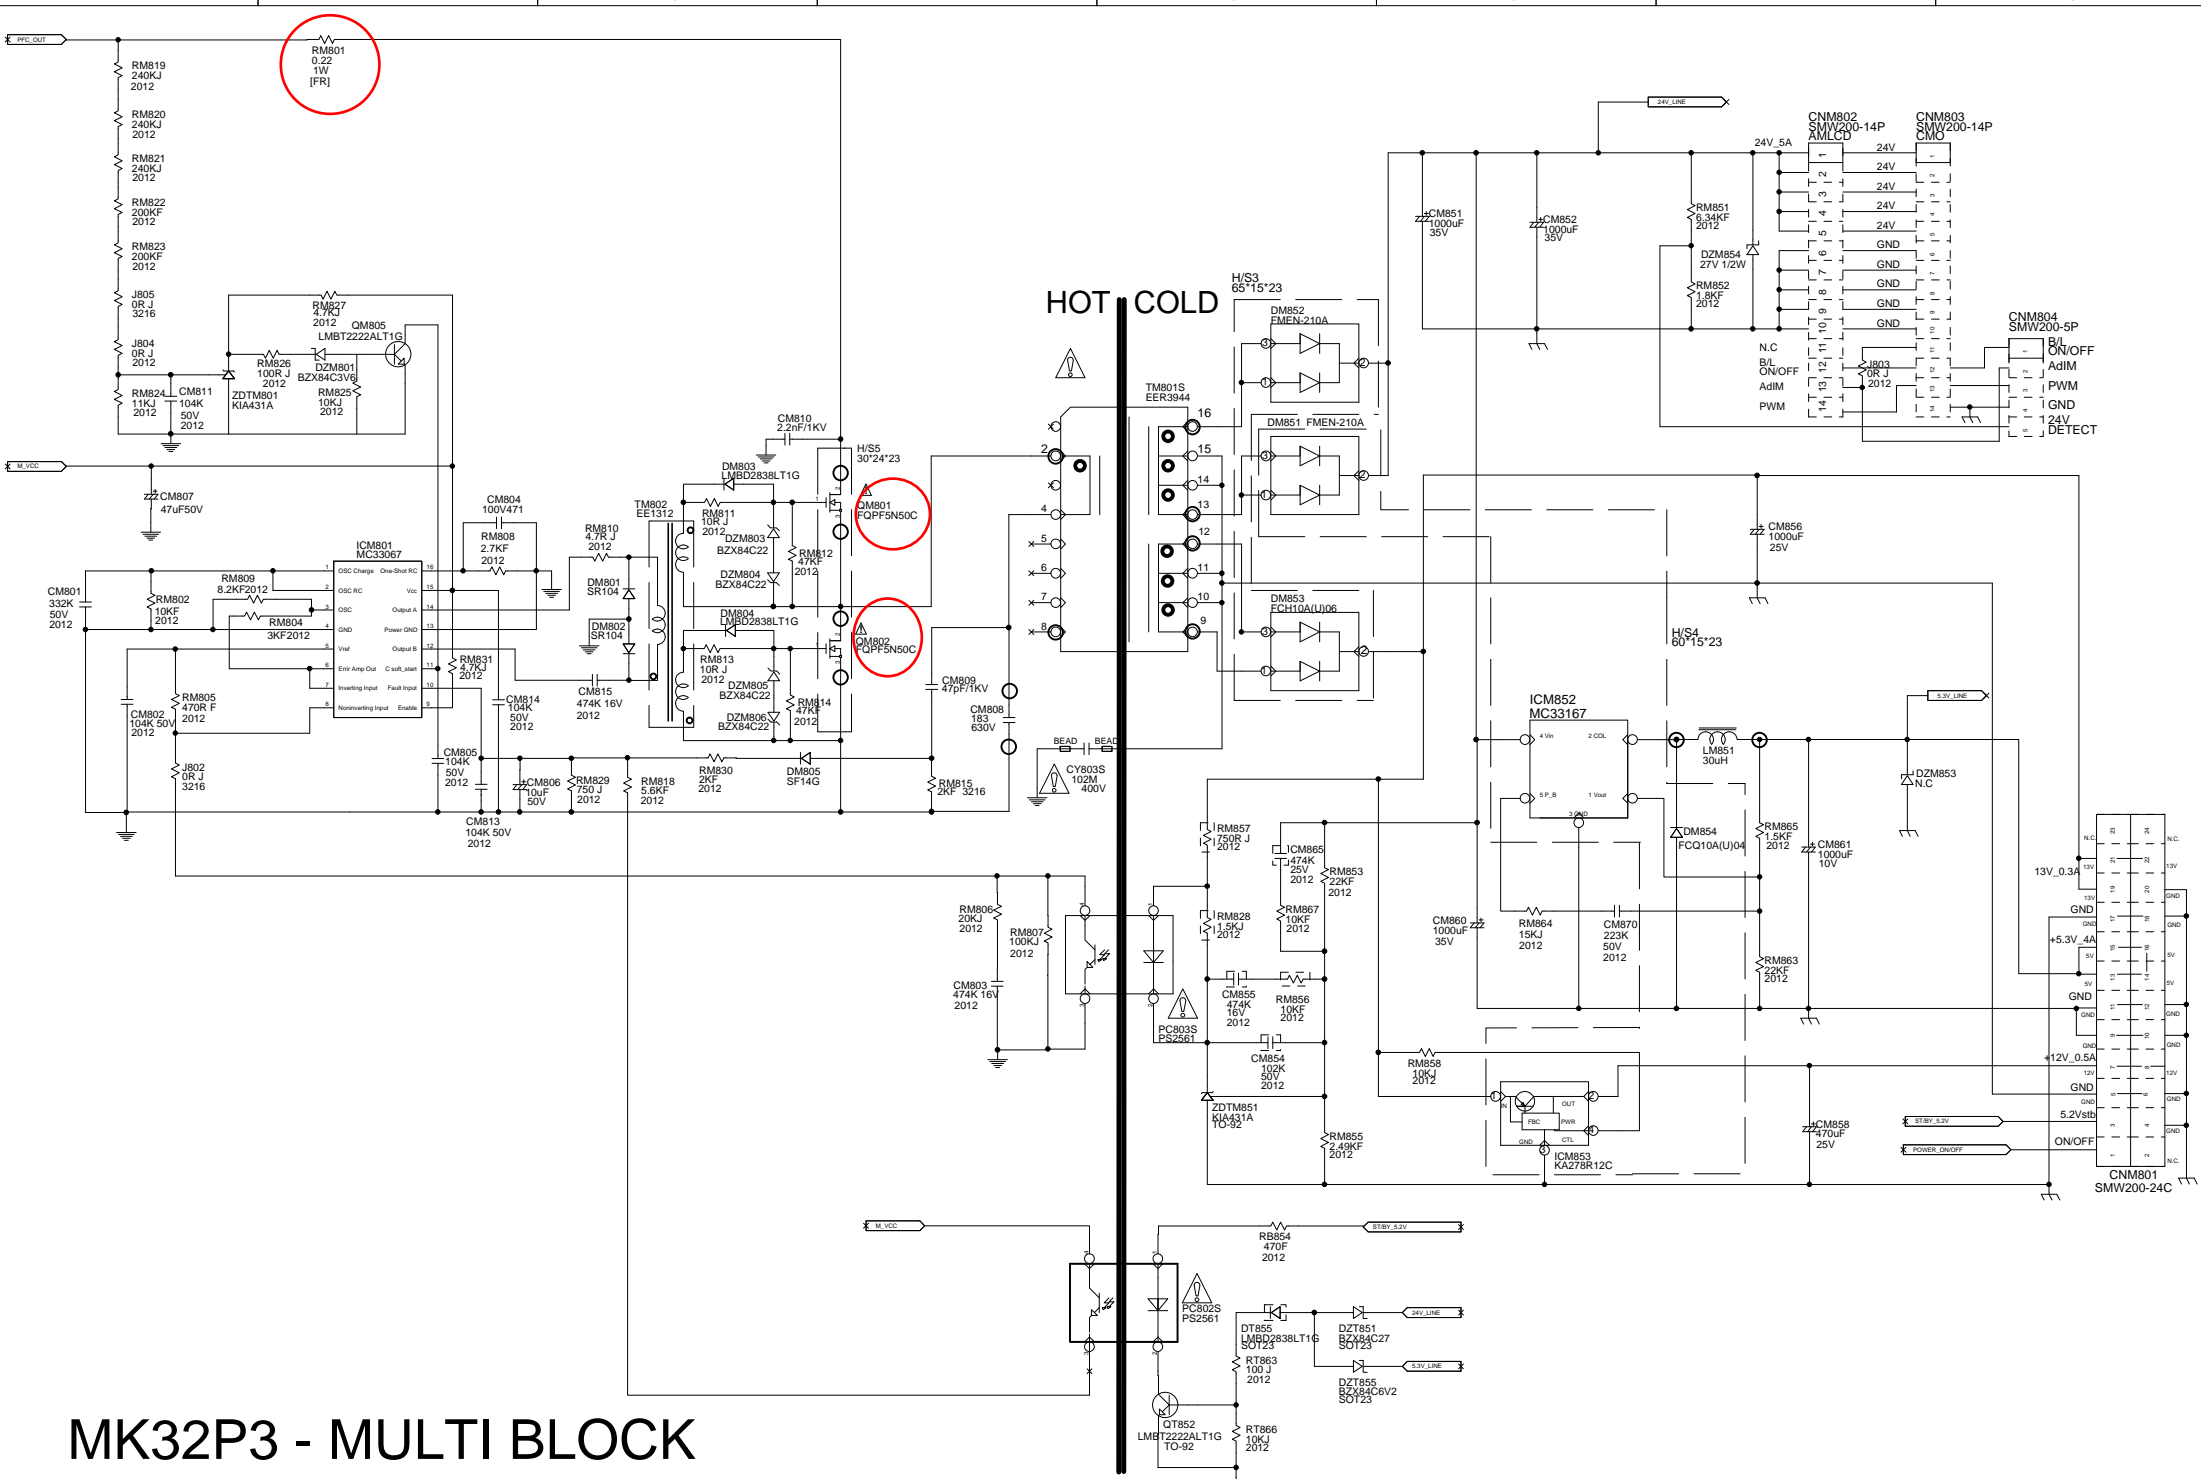

MK32P3 - MULTI BLOCK

DONGYANG E&P INC.

Titb	MK32P VE_MULTI	Titb	
Size		Rev.	
FILE		DATE	