




SiRFstarIV™

One Socket Protocol Interface Control Document

Issue 8

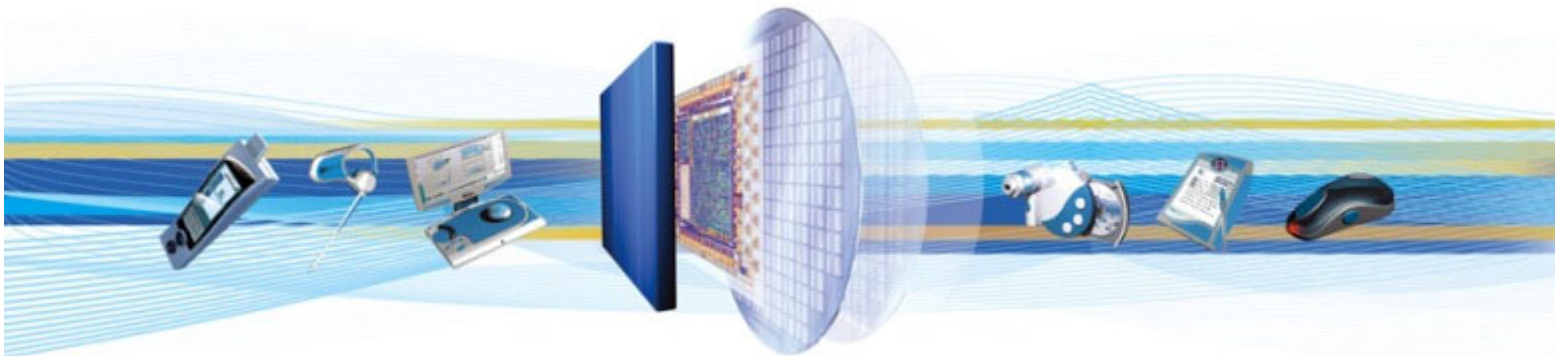

CSR
Churchill House
Cambridge Business Park
Cowley Road
Cambridge CB4 0WZ
United Kingdom
Registered in England 3665875
Tel.: +44 (0)1223 692000
Fax.: +44 (0)1223 692001
www.csr.com

Document History

Revision	Date	Change Reason
1	29 JUL 09	Original publication of this document.
2	25 SEP 09	Updated issue, to include SiRF Binary Protocol Reference Manual.
3	21 MAY 10	Not issued.
4	25 MAY 10	<p>Restructured document to organise SSB and OSP messages into common Input and Output sections and formats.</p> <p>Added and updated technical content for the following messages:</p> <ul style="list-style-type: none"> ▪ MID 10 Error ID Data ▪ MID 11 Command Acknowledgment ▪ MID 12 Command Negative Acknowledgment ▪ MID 19 Navigation Parameters (Response to Poll) ▪ MID 41 Geodetic Navigation Data ▪ MID 46 Test Mode 3/4/5/6 ▪ MID 56 SGEE Download Output, SIDs 1, 2, 4, 5, 6 and 7 ▪ MID 70 Ephemeris Status Response, etc. ▪ MID 72, SIDs 1, 2, 3, 4 and 5 Sensor Data Output Messages ▪ MID 77 Low Power Mode Output ▪ MID 93 TCXO Learning Output Request, SID 5 ▪ MID 128 Initialize Data Source ▪ MID 136 Mode Control ▪ MID 178 SW Toolbox Input, SID 2 ▪ MID 210 Position Request ▪ MID 212, SID 9 TX Blanking Request ▪ MID 215, SID 3 Frequency Transfer Response ▪ MID 218 Power Mode Request, SID 2 ▪ MID 225 Statistics Channel, SIDs 6 and 7 ▪ MID 232 SGEE Download Input, SIDs 6 and 7 ▪ MID 234 Sensor Control Input, SIDs 1 and 2
5	18 JUN 10	<p>Editorial updates.</p> <p>Added and updated technical content for the following messages:</p> <ul style="list-style-type: none"> ▪ MID 72 Sensor Data Output Messages ▪ MID 210 Position Request
6	02 JUL 10	<p>Added and updated technical content for the following messages:</p> <ul style="list-style-type: none"> ▪ MID 41 Geodetic Navigation Data ▪ MID 128 Initialize Data Source ▪ MID 232 SID 254 Disable CGEE Prediction
7	08 JUL 10	<p>Added and updated technical content for the following messages:</p> <ul style="list-style-type: none"> ▪ MID 41 Geodetic Navigation Data ▪ MID 133 DGPS Source
8	13 JUL 10	<p>Added Build Number table to Section 1.</p> <p>If you have any comments about this document, send an email to comments@csr.com, giving the document number, title and section with your feedback.</p>

Trademarks, Patents and Licenses

Unless otherwise stated, words and logos marked with TM or [®] are trademarks registered or owned by CSR plc or its affiliates.

Other products, services and names used in this document may have been trademarked by their respective owners.

This document contains proprietary and confidential information regarding SiRF products and is provided only under a non-disclosure agreement. SiRF reserves the right to make changes to its products and specifications at any time and without notice. SiRF makes no warranty, either express or implied, as to the accuracy of the information in this document. Performance characteristics listed in this document do not constitute a warranty or guarantee of product performance. All terms and conditions of sale are governed by separate terms and conditions, a copy of which may be obtained from your authorized SiRF sales representative. SiRF, SiRFstar, and the SiRF logo are registered trademarks of SiRF Technology, Inc. The SiRF products described in this document are protected by one or more patents granted in the United States and worldwide.

No statements or representations in this document are to be construed as advertising, marketing, or offering for sale in the United States imported covered products subject to the Cease and Desist Order issued by the U.S. International Trade Commission in its Investigation No. 337-TA-602. Such products include SiRFstarIIITM chips that operate with SiRF software that supports SiRFInstantFixTM, and/or SiRFLoc[®] servers, or contains SyncFreeNav functionality.

Contents

1	Overview	22
2	References	23
3	Message Structure and Transport Mechanism	24
3.1	Transport Message	24
3.2	NMEA Protocol Support	24
3.3	Payload Structure	24
4	OSP Message Mappings	25
4.1	Access to OSP Messages and Their Documentation	25
4.2	Mapping between AI3 Messages and OSP Messages	61
4.3	Mapping between F Messages and OSP Messages	62
5	Input Message Definitions	65
5.1	Poll GRF3i+ Normal/Low Power Mode - Message ID 233, Sub ID 11	65
5.2	SiRFDRive Input Messages - Message IDs 45 and 172	66
5.2.1	TrkADCOdoGPIO - Message ID 45, 0x2D	66
5.2.2	SetDrNavInit - Message ID 172 (0xAC), Sub ID 1 (0x01)	68
5.2.3	SetDrNavMode - Message ID 172 (0xAC), Sub ID 2 (0x02)	71
5.2.4	SetGyrFactCal - Message ID 172 (0xAC), Sub ID 3 (0x013)	74
5.2.5	SetDrSensParam - Message ID 172 (0xAC), Sub ID 4 (0x04)	75
5.2.6	PollDrValid - Message ID 172 (0xAC), Sub ID 5 (0x05)	76
5.2.7	PollGyrFactCal - Message ID 172 (0xAC), Sub ID 6 (0x06)	79
5.2.8	PollDrSensParam - Message ID 172 (0xAC), Sub ID 7 (0x07)	80
5.2.9	InputCarBusData - Message ID 172 (0xAC), Sub ID 9 (0x09)	81
5.2.10	CarBusEnabled - Message ID 172 (0xAC), Sub ID 10 (0x0A)	88
5.2.11	CarBusDisabled - Message ID 172 (0xAC), Sub ID 11 (0x0B)	89
5.2.12	SetGenericSensorParam - Message ID 172 (0xAC), Sub ID 12 (0x0C)	90
5.2.13	PollGenericSensorParam - Message ID 172 (0xAC), Sub ID 13 (0x0D)	94
5.2.14	InputMMFData - Message ID 172 (0xAC), Sub ID 80 (0x50)	98
5.2.15	SetMMFMode - Message ID 172 (0xAC), Sub ID 81 (0x51)	103
5.3	Advanced Power Management – Message ID 53	104
5.4	Initialize Data Source – Message ID 128	106
5.5	Switch To NMEA Protocol – Message ID 129	107
5.6	Set Almanac – Message ID 130	109
5.7	Handle Formatted Dump Data – Message ID 131	110
5.8	Poll Software Version – Message ID 132	111
5.9	Software Version Request - Message ID 132	112
5.10	DGPS Source – Message ID 133	112
5.11	Set Binary Serial Port – Message ID 134	114
5.12	Set Protocol – Message ID 135	114
5.13	Mode Control – Message ID 136	115
5.14	DOP Mask Control – Message ID 137	117
5.15	DGPS Control – Message ID 138	118
5.16	Elevation Mask – Message ID 139	119
5.17	Power Mask – Message ID 140	120
5.18	Static Navigation – Message ID 143	120
5.19	Poll Clock Status – Message ID 144	121
5.20	Set DGPS Serial Port – Message ID 145	121
5.21	Poll Almanac - Message ID 146	122
5.22	Poll Ephemeris - Message ID 147	123
5.23	Flash Update - Message ID 148	123
5.24	Set Ephemeris - Message ID 149	124

5.25 Switch Operating Modes – Message ID 150 124

5.26 Set TricklePower Parameters – Message ID 151 127

5.27 Poll Navigation Parameters – Message ID 152 129

5.28 SiRFNAV Command Messages 130

 5.28.1 Store GPS Snapshot Information - Message ID 161, Sub ID 7 130

5.29 Set UART Configuration – Message ID 165 132

5.30 Set Message Rate - Message ID 166 134

5.31 Poll Command Parameters - Message ID 168 134

 5.31.1 Set Low Power Acquisition Parameters - Message ID 167 135

5.32 Set SBAS Parameters - Message ID 170 136

5.33 Initialize GPS/DR Navigation - Message ID 172, Sub ID 1 137

5.34 Set GPS/DR Navigation Mode - Message ID 172, Sub ID 2 139

5.35 Set DR Gyro Factory Calibration - Message ID 172, Sub ID 3 140

5.36 Set DR Sensors' Parameters - Message ID 172, Sub ID 4 141

5.37 Poll DR Gyro Factory Calibration – Message ID 172, Sub ID 6 141

5.38 Poll DR Sensors' Parameters - Message ID 172, Sub ID 7 141

5.39 Input Car Bus Data to NAV - Message ID 172, Sub ID 9 141

5.40 Car Bus Enabled - Message ID 172, Sub ID 10 145

5.41 Car Bus Disabled - Message ID 172, Sub ID 11 145

5.42 Input Car Bus Data 2 - Message ID 172, Sub ID 14 146

5.43 User Set Command - Message ID 175 151

5.44 SW Toolbox Input - Message ID 178, Sub IDs 1-3, 20, 34, 38, 40 151

 5.44.1 MeiToCustomlo - Message ID 178, Sub ID 1 151

 5.44.2 TrackerConfig - Message ID 178, Sub ID 2 152

 5.44.3 PeekPoke - Message ID 178, Sub ID 3 156

 5.44.4 PatchStorageControllInput - Message ID 178, Sub ID 20 158

 5.44.5 Initial Patch Memory Load Request - Message ID 178, Sub ID 34 160

 5.44.6 Patch Manager Exit Request - Message ID 178, Sub ID 38 161

 5.44.7 Patch Manager Start Request - Message ID 178, Sub ID 40 162

5.45 GSC2xr Preset Operating Configuration - Message ID 180 162

 5.45.1 Software Control - Message ID 205 163

5.46 Query Request - Message ID 209 164

5.47 Position Request - Message ID 210 165

5.48 Set Ionospheric Model - Message ID 211, Sub ID 1 168

5.49 Set Satellite Ephemeris and Clock Corrections - Message ID 211, Sub ID 2 169

5.50 Set Almanac Assist Data - Message ID 211, Sub ID 3 173

5.51 Set Acquisition Assistance Data - Message ID 211, Sub ID 4 175

5.52 Set Real-Time Integrity - Message ID 211, SID 5 177

5.53 Set UTC Model - Message ID 211, Sub ID 6 177

5.54 Set Auxiliary Navigation Model Parameters - Message ID 211, Sub ID 8 179

5.55 Push Aiding Availability - Message ID 211, Sub ID 9 180

5.56 Ephemeris Status Request - Message ID 212, Sub ID 1 182

5.57 Almanac Request - Message ID 212, Sub ID 2 182

5.58 Broadcast Ephemeris Request - Message ID 212, Sub ID 3 183

5.59 Time Frequency Approximate Position Status Request - Message ID 212, Sub ID 4 184

5.60 Channel Load Query - Message ID 212, Sub ID 5 185

5.61 Client Status Request - Message ID 212, Sub ID 6 186

5.62 OSP Revision Request - Message ID 212, Sub ID 7 186

5.63 Serial Port Setting Request - Message ID 212, Sub ID 8 187

5.64 TX Blanking Request - Message ID 212, Sub ID 9 188

5.65 Session Opening Request - Message ID 213, Sub ID 1 189

5.66 Session Closing Request - Message ID 213, Sub ID 2 189

5.67 Hardware Configuration Response - Message ID 214 190

5.68 Approximate MS Position Response - Message ID 215, Sub ID 1 192

5.69	Time Transfer Response - Message ID 215, Sub ID 2	194
5.70	Frequency Transfer Response - Message ID 215, Sub ID 3	196
5.71	Nav Subframe 1_2_3 Aiding Response - Message ID 215, Sub ID 4	198
5.72	Nav Subframe 4_5 Aiding Response - Message ID 215, Sub ID 5	199
5.73	OSP ACK/NACK/ERROR Notification - Message ID 216, SID 1	200
5.74	Reject - Message ID 216, Sub ID 2	201
5.75	Set GPS TOW Assist - Message ID 217, Sub ID 7	202
5.76	Power Mode Request - Message ID 218, Sub IDs 1, 2, 3, 4	203
5.76.1	SID 0x00 (0) FP_MODE_REQ	204
5.76.2	SID 0x01 (1) APM REQ	204
5.76.3	SID 0x02 (2) MPM REQ	207
5.76.4	SID 0x03 (3) TP REQ	207
5.76.5	SID 0x04 (4) PTF REQ	208
5.77	Hardware Control Input - Message ID 219	208
5.78	CW Configuration - Message ID 220, Sub ID 1	209
5.79	TCXO Learning Input - Message ID 221, Sub ID 0, 1, 2, 3	210
5.79.1	TCXO Learning Clock Model Output Control - Message ID 221, Sub ID 0	210
5.79.2	TCXO Learning Clock Model Data Base Input - Message ID 221, Sub ID 1	212
5.79.3	TCXO Learning Temperature Table Input - Message ID 221, Sub ID 2	214
5.79.4	TCXO Learning Test Mode Control - Message ID 221, Sub ID 3	217
5.80	Reserved - Message ID 228	219
5.81	Extended Ephemeris - Message ID 232	219
5.81.1	Extended Ephemeris Proprietary - Message ID 232, Sub ID 1	219
5.81.2	Format - Message ID 232, Sub ID 2	219
5.81.3	ECLM Start Download - Message ID 232, Sub ID 22	219
5.81.4	ECLM File Size - Message ID 232, Sub ID 23	220
5.81.5	ECLM Packet Data - Message ID 232, Sub ID 24	220
5.81.6	Get EE Age - Message ID 232, Sub ID 25	223
5.81.7	Get SGEE Age - Message ID 232, Sub ID 26	224
5.81.8	ECLM Host File Content - Message ID 232, Sub ID 27	224
5.81.9	ECLM Host Ack/Nack - Message ID 232, Sub ID 28	225
5.81.10	EE Storage Control Input - Message ID 232, Sub ID 253	226
5.81.11	Disable CGEE Prediction - Message ID 232, Sub ID 254	229
5.81.12	Extended Ephemeris Debug - Message ID 232, Sub ID 255	229
5.81.13	Test Mode Configuration Request - Message ID 232, Sub ID 255	230
5.82	Set GRF3i+ IF BW Mode - Message ID 233, Sub ID 1	230
5.83	Set GRF3i+ Normal/Low Power RF Mode - Msg ID 233, Sub ID 2	231
5.84	Bandwidth Mode - Message ID 233, Sub ID 10	232
5.85	Sensor Control Input - Message ID 234, Sub IDs 1 and 2	232
6	Output Message Definition	244
6.1	Reference Navigation Data – Message ID 1	244
6.2	Measure Navigation Data Out - Message ID 2	244
6.3	True Tracker Data – Message ID 3	247
6.4	Measured Tracker Data Out - Message ID 4	247
6.5	Raw Tracker Data Out - Message ID 5	249
6.6	Software Version String (Response to Poll) – Message ID 6	249
6.7	Clock Status Data (Response to Poll) - Message ID 7	250
6.8	50 BPS Data - Message ID 8	251
6.9	CPU Throughput - Message ID 9	251
6.10	Error ID Data – Message ID 10	252
6.10.1	Error ID: 2	252
6.10.2	Error ID: 9	253
6.10.3	Error ID: 10	254
6.10.4	Error ID: 11	254

6.10.5	Error ID: 12	255
6.10.6	Error ID: 13	256
6.10.7	Error ID: 4097 (0x1001)	257
6.10.8	Error ID: 4099 (0x1003)	257
6.10.9	Error ID: 4104 (0x1008)	258
6.10.10	Error ID: 4105 (0x1009)	260
6.10.11	Error ID: 4106 (0x100A)	261
6.10.12	Error ID: 4107 (0x100B)	261
6.10.13	Error ID: 8193 (0x2001)	262
6.10.14	Error ID: 8194 (0x2002)	263
6.10.15	Error ID: 8195 (0x2003)	263
6.10.16	Error ID: 8196 (0x2004)	264
6.11	Command Acknowledgment - Message ID 11	266
6.12	Command Negative Acknowledgment - Message ID 12	266
6.13	Visible List - Message ID 13	267
6.14	Almanac Data - Message ID 14	267
6.15	Ephemeris Data (Response to Poll) - Message ID 15	269
6.16	Test Mode 1 - Message ID 16	270
6.17	Differential Corrections – Message ID 17	271
6.18	OkToSend - Message ID 18	272
6.19	Navigation Parameters (Response to Poll) - Message ID 19	272
6.20	Test Mode 2/3/4 – Message ID 20, 46, 48 (SiRFLoc v2.x), 49 and 55	276
6.21	Test Mode 2/3/4 - Message ID 20	276
6.21.1	Test Mode 2 - Message ID 20	276
6.21.2	Test Mode 3 - Message ID 20	280
6.21.3	Test Mode 4 - Message ID 20	283
6.22	DGPS Status Format - Message ID 27	284
6.23	Navigation Library Measurement Data - Message ID 28	287
6.24	Navigation Library DGPS Data - Message ID 29	291
6.25	Navigation Library SV State Data - Message ID 30	292
6.26	Navigation Library Initialization Data - Message ID 31	294
6.27	Geodetic Navigation Data - Message ID 41	296
6.28	Queue Command Parameters - Message ID 43	300
6.29	DR Raw Data - Message ID 45	300
6.30	Test Mode 3/4/5/6 - Message ID 46	301
6.31	Test Mode 4 – Message ID 48 (SiRFLoc v2.x only)	304
6.32	DR Navigation Status - Message ID 48, Sub ID 1	305
6.33	DR Navigation State - Message ID 48, Sub ID 2	309
6.34	Navigation Subsystem - Message ID 48, Sub ID 3	310
6.35	DR Gyro Factory Calibration - Message ID 48, Sub ID 6	310
6.36	DR Sensors Parameters - Message ID 48, Sub ID 7	311
6.37	DR Data Block - Message ID 48, Sub ID 8	311
6.38	DR Package Sensor Parameters - Message ID 48, Sub ID 9	312
6.39	Test Mode 4 – Message ID 49	313
6.40	SBAS Parameters - Message ID 50	315
6.41	Tracker Load Status Report - Message ID 51, Sub ID 6	316
6.42	1 PPS Time – Message ID 52	317
6.43	Test Mode 4 Track Data – Message ID 55	318
6.44	SGEE Download Output - Message ID 56	319
6.44.1	ECLM Ack / Nack - Message ID 56, Sub ID 32	320
6.44.2	ECLM EE Age - Message ID 56, Sub ID 33	321
6.44.3	ECLM SGEE Age - Message ID 56, Sub ID 34	322
6.44.4	ECLM Download Initiate Request - Message ID 56, Sub ID 35	323
6.44.5	ECLM Erase Storage File - Message ID 56, Sub ID 36	324

- 6.44.6 ECLM Update file content - Message ID 56, Sub ID 37 324
- 6.44.7 ECLM Request File Content - Message ID 56, Sub ID 38 325
- 6.45 Extended Ephemeris Data - Message ID 56 326
- 6.46 GPS Data and Ephemeris Mask - Message ID 56, Sub ID 1 326
- 6.47 Extended Ephemeris Integrity - Message ID 56, Sub ID 2 327
- 6.48 Extended Ephemeris Integrity - Message ID 56, Sub ID 3 328
- 6.49 EE Provide Synthesized Ephemeris Clock Bias Adjustment - Message ID 56, Sub ID 4 329
- 6.50 Verified 50 bps Broadcast Ephemeris and Iono Data - Message ID 56, Sub ID 5 330
- 6.51 Extended Ephemeris ACK - Message ID 56, Sub ID 255 331
- 6.52 Test Mode Configuration Response - Message ID 56, Sub ID 255 332
- 6.53 Test Mode Output - Message ID 63, Sub ID 7 332
 - 6.53.1 Test_status 333
 - 6.53.2 Spur Frequency 334
- 6.54 Navigation Library Messages - Message ID 64 334
 - 6.54.1 Navigation Library (NL) Auxiliary Initialization Data - Message ID 64, Sub ID 1 334
 - 6.54.2 Navigation Library (NL) Auxiliary Measurement Data - Message ID 64, Sub ID 2 335
 - 6.54.3 Navigation Library (NL) Aiding Initialization - Message ID 64, Sub ID 3 339
- 6.55 Message ID 65, Sub ID 192 339
- 6.56 DOP Values Output - Message ID 66 340
- 6.57 Measurement Engine - Message ID 68 341
- 6.58 Position Response - Message ID 69, Sub ID 1 342
- 6.59 Measurement Response - Message ID 69, Sub ID 2 351
- 6.60 Ephemeris Status Response - Message ID 70, Sub ID 1 354
- 6.61 Almanac Response - Message ID 70, Sub ID 2 356
- 6.62 Broadcast Ephemeris Response - Message ID 70, Sub ID 3 358
- 6.63 Time Frequency Approximate Position Status Response - Message ID 70, Sub ID 4 360
- 6.64 Channel Load Response - Message ID 70, Sub ID 5 362
- 6.65 Client Status Response - Message ID 70, Sub ID 6 363
- 6.66 OSP Revision Response - Message ID 70, Sub ID 7 364
- 6.67 Serial Port Settings Response - Message ID 70, Sub ID 8 365
- 6.68 Tx Blanking Response - Message ID 70, Sub ID 9 366
- 6.69 Sensor Data Output Messages - Message ID 72 366
 - 6.69.1 Sensor Data Readings Output - Message ID 72, Sub ID 1 367
 - 6.69.2 Sensor Data Readings Output - Message ID 72, Sub ID 2 370
 - 6.69.3 Receiver State Output - Message ID 72, Sub ID 3 372
 - 6.69.4 Sensor Point and Tell - Message ID 72, Sub ID 4 373
 - 6.69.5 Sensor Calibration - Message ID 72, Sub ID 5 375
- 6.70 Approximate MS Position Request - Message ID 73, Sub ID 1 376
- 6.71 Time Transfer Request - Message ID 73, Sub ID 2 376
- 6.72 Frequency Transfer Request - Message ID 73, Sub ID 3 377
- 6.73 Nav Bit Aiding (NBA) Request - Message ID 73, Sub ID 4 378
- 6.74 Session Opening Response - Message ID 74, Sub ID 1 379
- 6.75 Session Closing Notification - Message ID 74, Sub ID 2 380
- 6.76 Hardware Configuration Request - Message ID 74 381
- 6.77 ACK/NACK/ERROR Notification - Message ID 75, Sub ID 1 382
- 6.78 Software Version Response - Message ID 6 383
- 6.79 Reject - Message ID 75, Sub ID 2 384
- 6.80 Low Power Mode Output - Message ID 77 385
 - 6.80.1 Micro Power Mode Error - Message ID 77, Sub ID 1 385
- 6.81 Query Response - Message ID 81 386
- 6.82 Power Mode Response - Message ID 90 387
- 6.83 Hardware Control Output - Message ID 91 388
- 6.84 CW Controller Output - Message ID 92 388
 - 6.84.1 CW Interference Report - Message ID 92 388

6.84.2	CW Mitigation Report - Message ID 92, Sub ID 2	389
6.85	TCXO Learning Output Request - Message ID 93	391
6.85.1	TCXO Learning Clock Model Data Base - Message ID 93, Sub ID 1	392
6.85.2	TCXO Learning Temperature Table - Message ID 93, Sub ID 2	394
6.85.3	TCXO Learning Temperature Recorder - Message ID 93, Sub ID 4	397
6.85.4	TCXO Learning EARC - Message ID 93, Sub ID 5	398
6.85.5	TCXO Learning RTC Alarm - Message ID 93, Sub ID 6	399
6.85.6	TCXO Learning RTC Cal - Message ID 93, ID 7	400
6.85.7	TCXO Learning TBD (Not Used) - Message ID 93, Sub ID 8	402
6.85.8	TCXO Learning MPM Searches - Message ID 93, Sub ID 9	402
6.85.9	TCXO Learning MPM Pre-Positioning - Message ID 93, Sub ID 10	404
6.85.10	TCXO Learning Micro-Nav Measurement - Message ID 93, Sub ID 11	405
6.85.11	TCXO Learning TCXO Uncertainty - Message ID 93, Sub ID 12	407
6.85.12	TCXO Learning System Time Stamp - Message ID 93, Sub ID 13	409
6.86	SW Toolbox Output - Message ID 178	410
6.86.1	Peek/Poke Response- Message ID 178, Sub ID 4	410
6.86.2	FlashStore Response - Message ID 178, Sub ID 5	411
6.86.3	FlashErase Response - Message ID 178, Sub ID 6	411
6.86.4	TrackerConfig Response - Message ID 178, ID 7	412
6.86.5	MeiToCustomIo Response - Message ID 178, Sub ID 8	412
6.86.6	SID_Patch Manager Prompt - Message ID 178, Sub ID 144	412
6.86.7	Patch Manager Acknowledgement - Message ID 178, Sub ID 145	413
6.87	Reserved – Message ID 225	413
6.88	Statistics Channel – Message ID 225, Sub ID 6	413
6.89	Statistics Channel – Message ID 225, Message Sub ID 7	417
6.90	Output GRF3i+ IF Bandwidth Mode - Message ID 233, Sub ID 255	420
6.91	Output GRF3i+ Normal/Low Power Mode - Message ID 233, Sub ID 254	421
6.92	ASCII Development Data Output - Message ID 255	421
6.93	SiRFDRive Output Messages	422
6.93.1	Geodetic Navigation State Output - Message ID 29	422
6.93.2	Output Tracker to NAV – ADC/Odometer Data - Message ID 45	427
6.93.3	DR NAV Status - Message ID 48, Sub ID 1	429
6.93.4	DR NAV State - Message ID 48, Sub ID 2	437
6.93.5	NAV Subsystems Data - Message ID 48, Sub ID 3	442
6.93.6	Preserved DR Data Validity - Message ID 48, Sub ID 5	446
6.93.7	Gyro Factory Calibration Response - Message ID 48, Sub ID 6	448
6.93.8	Sensor package parameters - Message ID 48, Sub ID 7	450
6.93.9	DR Data Block Output - Message ID 48, Sub ID 8	452
6.93.10	Sensor Package Parameters - Message ID 48, Sub ID 9	454
6.93.11	Generic Sensors Raw Data - Message ID 48, Sub ID 10	458
6.93.12	Map Matching Feedback State - Message ID 48, Sub ID 80	464
6.93.13	SiRF Binary GSA - Message ID 48, Sub ID 100	467
6.93.14	SiRFDRive NVM at Boot - Message ID 48, Sub ID 105	469
6.93.15	GPIO State - Message ID 65, Sub ID 129	474
6.93.16	Car Bus Data to NAV - Message ID 172, Sub ID 9	476
6.94	ACK/NACK for Push Aiding Availability	482
7	Message Processing Procedures	483
7.1	Message Flow	483
7.1.1	Typical Message Flow in Stand-Alone Mode	483
7.1.2	Typical Message Flow in Aided Mode	484
7.1.3	Typical Low Power Operation	485
7.1.4	Push-Mode Aiding Procedure	485
7.1.5	Time/Frequency/Approximate Position Status Procedure	486
7.2	Message Organization	486

7.3	“Reject message” vs. “Error Notification” Messages	489
7.4	Error handling	489
7.5	Message Time-out Procedures	489
7.6	Power ON/Power OFF	489
7.7	GPS Soft Reset	490
7.8	Low Power Management	490
7.8.1	Advanced Power Management (APM)	490
7.8.2	TricklePower Operation in DGPS Mode	491
7.9	Hardware Configuration	491
7.10	Serial Port management	492
7.11	Session Opening/Session Closing	493
7.12	Session Suspend/Session Resume	494
7.13	Approximate MS Position Management	495
7.14	Time Transfer	496
7.15	Frequency Transfer	496
7.16	Interoperability between different Air-Interface ICD revision numbers	498
7.17	Software Version ID	498
7.18	Configuration Option Selection Storage Control	499
7.18.1	Levels of Configuration Option Selection Value Storage	499
7.18.2	Scope and Rules of Configuration Option Storage Control	499
7.18.3	Configuration Option Setting Messages in OSP	499
8	Protocol Layers	500
8.1	Transport Message	500
8.2	Transport	500
8.3	Message Validation	500
8.4	Payload Length	500
8.5	Payload Data	500
8.6	Checksum	501
A	GPS Data Representation and Conversion Detail Specification	502
A.1	GPS Week Reporting	502
A.2	Computing GPS Clock Frequency	502
A.3	Converting Sirf Message ID 14 (0x0E) and ID 15 (0x0F) into Engineering Units	502
A.4	Message # 14: Almanac Data	502
A.5	Message # 15: Ephemeris Data	503
	Terms and Definitions	506

List of Figures

Figure 5.1	Sensor Control Architecture Block Diagram	233
Figure 6.1	Poll Sensor’s Parameters	455
Figure 7.1	Typical Message Flow in Stand-Alone Mode	483
Figure 7.2	Typical Message Flow in Aided Mode	484
Figure 7.3	Typical Low Power Operation Message Sequence	485
Figure 7.4	Example Request/Response	487
Figure 7.5	Example Notification Message	488

List of Tables

Table 1.1	OSP and OSP-ICD Release History	22
Table 3.1	Generic Packet Format	24
Table 4.1	OSP Message Access	26
Table 4.2	Mapping between A13 Messages and OSP Messages	61
Table 4.3	Mapping between F Messages and OSP Messages	62

Table 5.1	Poll GRF3i+ Normal/Low Power Mode - Message ID 233, Sub ID 11	65
Table 5.2	TrkADCOdoGPIO - Message ID 45, 0x2D	66
Table 5.3	TrkADCOdoGPIO Message	67
Table 5.4	SetDrNavInit - Message ID 172 (0xAC), Sub ID 1 (0x01)	68
Table 5.5	SetDrNavInit Message	69
Table 5.6	SetDrNavMode - Message ID 172 (0xAC), Sub ID 2 (0x02)	71
Table 5.7	SetDrNavMode Message	72
Table 5.8	SetGyrFactCal - Message ID 172 (0xAC), Sub ID 3 (0x013)	74
Table 5.9	SetGyrFactCal Message	74
Table 5.10	SetDrSensParam - Message ID 172 (0xAC), Sub ID 4 (0x04)	75
Table 5.11	SetDrSensParam Message	75
Table 5.12	PollDrValid - Message ID 172 (0xAC), Sub ID 5 (0x05)	76
Table 5.13	PollDrValid Message	77
Table 5.14	PollGyrFactCal - Message ID 172 (0xAC), Sub ID 6 (0x06)	79
Table 5.15	PollGyrFactCal Message	79
Table 5.16	PollDrSensParam - Message ID 172 (0xAC), Sub ID 7 (0x07)	80
Table 5.17	PollDrSensParam Message	80
Table 5.18	InputCarBusData - Message ID 172 (0xAC), Sub ID 9 (0x09)	81
Table 5.19	InputCarBusData Message	82
Table 5.20	CarBusEnabled - Message ID 172 (0xAC), Sub ID 10 (0x0A)	88
Table 5.21	CarBusEnabled Message	88
Table 5.22	CarBusDisabled - Message ID 172 (0xAC), Sub ID 11 (0x0B)	89
Table 5.23	CarBusDisabled Message	89
Table 5.24	SetGenericSensorParam - Message ID 172 (0xAC), Sub ID 12 (0x0C)	90
Table 5.25	SetGenericSensorParam Message	91
Table 5.26	PollGenericSensorParam - Message ID 172 (0xAC), Sub ID 13 (0x0D)	94
Table 5.27	PollGenericSensorParam Message	95
Table 5.28	InputMMFData - Message ID 172 (0xAC), Sub ID 80 (0x50)	98
Table 5.29	InputMMFData Message	99
Table 5.30	SetMMFMode - Message ID 172 (0xAC), Sub ID 81 (0x51)	103
Table 5.31	SetMMFMode Message	103
Table 5.32	Advanced Power Management – Message ID 53	104
Table 5.33	Horizontal/Vertical Error	105
Table 5.34	Initialize Data Source – Message ID 128	106
Table 5.35	Reset Configuration Bits	107
Table 5.36	Switch to NMEA Protocol - Message ID 129	108
Table 5.37	Mode Values	109
Table 5.38	Set Almanac - Message ID 130	110
Table 5.39	Handle Formatted Dump Data – Message ID 131	111
Table 5.40	Member Size Data Type	111
Table 5.41	Poll Software Version - Message ID 132	112
Table 5.42	Software Version Request - Message ID 132	112
Table 5.43	Software Version Request Message	112
Table 5.44	DGPS Source – Message ID 133, Example 1	113
Table 5.45	DGPS Source – Message ID 133, Example 2	113
Table 5.46	DGPS Source Selections	114
Table 5.47	Set Main Serial Port – Message ID 134	114
Table 5.48	Set Protocol - Message ID 135	115
Table 5.49	Mode Control – Message ID 136	115
Table 5.50	Degraded Mode	117
Table 5.51	Altitude Hold Mode	117
Table 5.52	DOP Mask Control – Message ID 137	118
Table 5.53	DOP Selection	118
Table 5.54	DGPS Control – Message ID 138	119

Table 5.55	DGPS Selection	119
Table 5.56	Elevation Mask – Message ID 139	120
Table 5.57	Power Mask – Message ID 140	120
Table 5.58	Static Navigation - Message ID 143	121
Table 5.59	Clock Status - Message ID 144	121
Table 5.60	Set DGPS Serial Port - Message ID 145	122
Table 5.61	Poll Almanac - Message ID 146	122
Table 5.62	Poll Ephemeris - Message ID 147	123
Table 5.63	Flash Update - Message ID 148	123
Table 5.64	Set Ephemeris - Message ID 149	124
Table 5.65	Switch Operating Modes – Message ID 150 (all software options prior to GSD3tw)	124
Table 5.66	Switch Operating Modes – Message ID 150 (LT SLC version 3.3 or later)	126
Table 5.67	Switch Operating Modes - Message ID 150 (GSD3tw)	127
Table 5.68	Set TricklePower Parameters - Message ID 151	128
Table 5.69	Example of Selections for TricklePower Mode of Operation	128
Table 5.70	Duty Cycles for Supporting TricklePower Settings	129
Table 5.71	Poll Navigation Parameters – Message ID 152	130
Table 5.72	Store GPS Snapshot Information - Message ID 161, Sub ID 7	130
Table 5.73	Store GPS Snapshot Information Message	131
Table 5.74	Set UART Configuration – Message ID 165	132
Table 5.75	Set Message Rate - Message ID 166	134
Table 5.76	Poll Command Parameters - Message ID 168	135
Table 5.77	Set Low Power Acquisition Parameters - Message ID 167	135
Table 5.78	Set SBAS Parameters - Message ID 170	136
Table 5.79	Detailed Description	137
Table 5.80	Initialize GPS/DR Navigation - Message ID 172, Sub ID 1	137
Table 5.81	Set GPS/DR Navigation Mode - Message ID 172, Sub ID 2	139
Table 5.82	Set DR Gyro Factory Calibration - Message ID 172, Sub ID 3	140
Table 5.83	Set DR Sensors' Parameters - Message ID 172, Sub ID 4	141
Table 5.84	Poll DR Gyro Factory Calibration – Message ID 172, Sub ID 6	141
Table 5.85	Poll DR Sensors' Parameters - Message ID 172, Sub ID 7	141
Table 5.86	Input Car Bus Data to NAV - Message ID 172, Sub ID 9	142
Table 5.87	Car Bus Enabled - Message ID 172, Sub ID 10	145
Table 5.88	Car Bus Disabled - Message ID 172, Sub ID 11	145
Table 5.89	Input Car Bus Data 2 - Message ID 172, Sub ID 14	146
Table 5.90	User Set Command - Message ID 175	151
Table 5.91	SW Toolbox Input - Message ID 178, Sub IDs 1-3, 20, 34, 38, 40	151
Table 5.92	MeiToCustomIo - Message ID 178, Sub ID 1	151
Table 5.93	Tracker Configuration Command	154
Table 5.94	TrackerConfig - Message ID 178, Sub ID 2	154
Table 5.95	Tracker Peek and Poke Command (four-byte peek)	156
Table 5.96	Tracker Peek and Poke Command (four-byte poke)	156
Table 5.97	Tracker Peek and Poke Command (n-byte peek)	157
Table 5.98	Tracker Peek and Poke Command (n-byte poke)	157
Table 5.99	PatchStorageControllInput - Message ID 178, Sub ID 20	158
Table 5.100	Patch Storage Control Message	159
Table 5.101	Patch Storage Control Message Bit Fields	160
Table 5.102	Initial Patch Memory Load Request - Message ID 178, Sub ID 34	160
Table 5.103	Subsequent Patch Memory Load Request Message Definition	161
Table 5.104	Patch Manager Exit Request - Message ID 178, Sub ID 38	161
Table 5.105	Patch Manager Start Request - Message ID 178, Sub ID 40	162
Table 5.106	Valid Input Values	162
Table 5.107	GSC2xr Preset Operating Configuration - Message ID 180	162
Table 5.108	GSC2xr Preset Operating Configurations	163

Table 5.109	Software Control - Message ID 205	164
Table 5.110	Software Commanded Off - Message ID 205 (Message Sub ID 16)	164
Table 5.111	Query Request - Message ID 209	164
Table 5.112	Query Request M	164
Table 5.113	QUERY_MID Field	165
Table 5.114	Position Request - Message ID 210	165
Table 5.115	Position Request Message	165
Table 5.116	Vertical Error Field	166
Table 5.117	Time/Accuracy Priority Field	167
Table 5.118	GPS Location Method Field	167
Table 5.119	Set Ionospheric Model - Message ID 211, Sub ID 1	168
Table 5.120	Set Ionospheric Model Message	168
Table 5.121	Set Satellite Ephemeris and Clock Corrections - Message ID 211, Sub ID 2	169
Table 5.122	Set Satellite Ephemeris and Clock Corrections Message	169
Table 5.123	URA Coding	171
Table 5.124	Set Almanac Assist Data - Message ID 211, Sub ID 3	173
Table 5.125	Set Almanac Assist Data Message	173
Table 5.126	Set Acquisition Assistance Data - Message ID 211, Sub ID 4	175
Table 5.127	Set Acquisition Assistance Data Message	175
Table 5.128	DOPPLER_UNCERTAINTY Field	176
Table 5.129	Set Real-Time Integrity - Message ID 211, SID 5	177
Table 5.130	Set Real-Time Integrity Message	177
Table 5.131	Set UTC Model - Message ID 211, Sub ID 6	177
Table 5.132	Set UTC Model Message	178
Table 5.133	Set Auxiliary Navigation Model Parameters - Message ID 211, Sub ID 8	179
Table 5.134	Set Auxiliary Navigation Model Parameters message	179
Table 5.135	Push Aiding Availability - Message ID 211, Sub ID 9	180
Table 5.136	Push Aiding Availability Message	180
Table 5.137	Ephemeris Status Request - Message ID 212, Sub ID 1	182
Table 5.138	Ephemeris Status Request Message	182
Table 5.139	Almanac Request - Message ID 212, Sub ID 2	182
Table 5.140	Almanac Request Message	182
Table 5.141	Broadcast Ephemeris Request - Message ID 212, Sub ID 3	183
Table 5.142	Broadcast Ephemeris Request Message	183
Table 5.143	Time Frequency Approximate Position Status Request - Message ID 212, Sub ID 4	184
Table 5.144	Time Frequency Approximate Position Status Request Message	184
Table 5.145	Channel Load Query - Message ID 212, Sub ID 5	185
Table 5.146	Channel Load Query Message	185
Table 5.147	MODE Field	185
Table 5.148	Client Status Request - Message ID 212, Sub ID 6	186
Table 5.149	Client Status Request Message	186
Table 5.150	OSP Revision Request - Message ID 212, Sub ID 7	186
Table 5.151	OSP Revision Request Message	186
Table 5.152	Serial Port Setting Request - Message ID 212, Sub ID 8	187
Table 5.153	Serial Port Setting Request Message	187
Table 5.154	TX Blanking Request - Message ID 212, Sub ID 9	188
Table 5.155	TX Blanking Request Message	188
Table 5.156	MODE Field	188
Table 5.157	Session Opening Request - Message ID 213, Sub ID 1	189
Table 5.158	Session Opening Request Message	189
Table 5.159	SESSION_OPEN_REQ_INFO Field	189
Table 5.160	Session Closing Request - Message ID 213, Sub ID 2	189
Table 5.161	Session Closing Request Message	190
Table 5.162	SESSION_CLOSE_REQ_INFO Field	190

Table 5.163	Hardware Configuration Response - Message ID 214	190
Table 5.164	Hardware Configuration Response Message	190
Table 5.165	HW_CONFIG Field	191
Table 5.166	NW_ENHANCE_TYPE Field	192
Table 5.167	Approximate MS Position Response - Message ID 215, Sub ID 1	192
Table 5.168	Approximate MS Position Response Message	193
Table 5.169	EST_HOR_ER Field	193
Table 5.170	Time Transfer Response - Message ID 215, Sub ID 2	194
Table 5.171	Time Transfer Response Message	194
Table 5.172	TIME_ACCURACY Field - Coarse Time Transfer Method	195
Table 5.173	TIME_ACCURACY Field - Precise Time Transfer Method	195
Table 5.174	Frequency Transfer Response - Message ID 215, Sub ID 3	196
Table 5.175	Frequency Transfer Response Message	196
Table 5.176	REL_FREQ_ACC Field	197
Table 5.177	REF_CLOCK_INFO Field	198
Table 5.178	Nav Subframe 1_2_3 Aiding Response - Message ID 215, Sub ID 4	198
Table 5.179	Nav Subframe 1_2_3 Aiding Response Message	199
Table 5.180	Nav Subframe 4_5 Aiding Response - Message ID 215, Sub ID 5	199
Table 5.181	Nav Subframe 4_5 Aiding Response Message	200
Table 5.182	OSP ACK/NACK/ERROR Notification - Message ID 216, SID 1	200
Table 5.183	ACK/NACK/ERROR Notification Message	201
Table 5.184	ACK/NACK/ERROR Fields	201
Table 5.185	Reject - Message ID 216, Sub ID 2	201
Table 5.186	Reject Message	202
Table 5.187	REJ_REASON Field	202
Table 5.188	Set GPS TOW Assist - Message ID 217, Sub ID 7	202
Table 5.189	Set GPS TOW Assist Message	203
Table 5.190	Power Mode Request - Message ID 218, Sub IDs 1, 2, 3, 4	203
Table 5.191	Power Mode Request Message - Sub ID 1	204
Table 5.192	TBF Cycle Time Derived On Time Period Length	205
Table 5.193	Maximum Vertical Error	206
Table 5.194	Power Mode Request Message - Sub ID 2	207
Table 5.195	Power Mode Request Message - Sub ID 3	207
Table 5.196	Power Mode Request Message - Sub ID 4	208
Table 5.197	Hardware Control Input - Message ID 219	208
Table 5.198	Hardware Control Input Message	209
Table 5.199	CW Configuration - Message ID 220, Sub ID 1	209
Table 5.200	CW Configuration Message	209
Table 5.201	TCXO Learning Input - Message ID 221, Sub ID 0, 1, 2, 3	210
Table 5.202	TCXO Learning Input SID Descriptions	210
Table 5.203	TCXO Learning Clock Model Output Control - Message ID 221, Sub ID 0	210
Table 5.204	Clock Model Output Message	211
Table 5.205	TCXO Learning Clock Model Data Base Input - Message ID 221, Sub ID 1	212
Table 5.206	Clock Model Data Base Input Message	213
Table 5.207	TCXO Learning Temperature Table Input - Message ID 221, Sub ID 2	214
Table 5.208	TCXO Learning Temperature Table Input Message	215
Table 5.209	TCXO Learning Test Mode Control - Message ID 221, Sub ID 3	217
Table 5.210	Test Mode Control Message	218
Table 5.211	Extended Ephemeris Proprietary - Message ID 232, Sub ID 1	219
Table 5.212	Format - Message ID 232, Sub ID 2	219
Table 5.213	ECLM Start Download - Message ID 232, Sub ID 22	220
Table 5.214	ECLM File Size - Message ID 232, Sub ID 23	220
Table 5.215	ECLM Packet Data - Message ID 232, Sub ID 24	222
Table 5.216	Get EE Age - Message ID 232, Sub ID 25	223

Table 5.217	Get SGEE Age - Message ID 232, Sub ID 26	224
Table 5.218	ECLM Host File Content - Message ID 232, Sub ID 27	225
Table 5.219	ECLM Host Ack/Nack - Message ID 232, Sub ID 28	226
Table 5.220	EE Storage Control Input - Message ID 232, Sub ID 253	227
Table 5.221	EE Storage Control Input Message	228
Table 5.222	EE Storage Control Input Message Bit-Fields	229
Table 5.223	Disable CGEE Prediction	229
Table 5.224	Extended Ephemeris Debug - Message ID 232, Sub ID 255	230
Table 5.225	Test Mode Configuration Request - Message ID 232, Sub ID 255	230
Table 5.226	Set GRF3i+ IF BW Mode - Message ID 233, Sub ID 1	231
Table 5.227	Set GRF3i+ Normal/Low Power RF Mode - Msg ID 233, Sub ID 2	231
Table 5.228	Bandwidth Mode - Message ID 233, Sub ID 10	232
Table 5.229	Sensor Control Input - Message ID 234, Sub IDs 1 and 2	233
Table 5.230	Sensor Control Input SID Descriptions	233
Table 5.231	Sensor Control Input - Message ID 234, Sub IDs 1	234
Table 5.232	Sensor Control Input Message - Sub ID 1	235
Table 5.233	Sensor Control Input Message - Sub ID 2	242
Table 5.234	Sensor Switch Message	243
Table 6.1	Measure Navigation Data Out - Message ID 2	244
Table 6.2	Mode 1	245
Table 6.3	Mode 1 Bitmap Information	245
Table 6.4	Mode 2 Bitmap	247
Table 6.5	Measured Tracker Data Out - Message ID 4	248
Table 6.6	State Values for Each Channel	249
Table 6.7	Software Version String (Response to Poll) – Message ID 6	249
Table 6.8	Clock Status Data (Response to Poll) - Message ID 7	250
Table 6.9	Detailed Description of Message ID 7 Fields	251
Table 6.10	50 BPS Data - Message ID 8	251
Table 6.11	CPU Throughput - Message ID 9	252
Table 6.12	Error ID	252
Table 6.13	Error ID: 2	253
Table 6.14	Error ID: 2 Message Description	253
Table 6.15	Error ID: 9 Message	253
Table 6.16	Error ID: 9 Message Description	254
Table 6.17	Error ID: 10 Message	254
Table 6.18	Error ID: 10 Message Description	254
Table 6.19	Error ID: 11 Message	255
Table 6.20	Error ID: 11 Message Description	255
Table 6.21	Error ID: 12 Message	255
Table 6.22	Error ID: 12 Message Description	256
Table 6.23	Error ID: 13 Message	256
Table 6.24	Error ID: 13 Message Description	256
Table 6.25	Error ID: 4097 Message	257
Table 6.26	Error ID: 4097 Message Description	257
Table 6.27	Error ID: 4099 Message	257
Table 6.28	Error ID: 4099 Message Description	258
Table 6.29	Error ID: 4104 Message	258
Table 6.30	Error ID: 4104 Message Description	259
Table 6.31	Error ID: 4105 Message	260
Table 6.32	Error ID: 4105 Message Description	261
Table 6.33	Error ID: 4106 Message	261
Table 6.34	Error ID: 4106 Message Description	261
Table 6.35	Error ID: 4107 Message	262
Table 6.36	Error ID: 4107 Message Description	262

Table 6.37	Error ID: 8193 Message	262
Table 6.38	Error ID: 8193 Message Description	262
Table 6.39	Error ID: 8194 Message	263
Table 6.40	Error ID: 8194 Message Description	263
Table 6.41	Error ID: 8195 Message	264
Table 6.42	Error ID: 8195 Message Description	264
Table 6.43	Error ID: 8196 Message	265
Table 6.44	Error ID: 8196 Message Description	265
Table 6.45	Error ID: 8196 Message Description: Condition Code	265
Table 6.46	Command Acknowledgment - Message ID 11	266
Table 6.47	Command Negative Acknowledgment - Message ID 12	266
Table 6.48	Visible List - Message ID 13	267
Table 6.49	Almanac Data - Message ID 14	268
Table 6.50	Byte Positions Between Navigation Message and Data Array	268
Table 6.51	Ephemeris Data (Response to Poll) - Message ID 15	269
Table 6.52	Byte Positions Between Navigation Message and Data Array	269
Table 6.53	Test Mode 1 - Message ID 16	270
Table 6.54	Detailed Description of Test Mode 1 Data	271
Table 6.55	Detailed Description of Test Mode 1 Data	272
Table 6.56	OkToSend - Message ID 18	272
Table 6.57	Navigation Parameters (Response to Poll) - Message ID 19	273
Table 6.58	Horizontal/Vertical Error	276
Table 6.59	Test Mode 2/3/4 – Message ID 20, 46, 48 (SiRFLoc v2.x), 49 and 55	276
Table 6.60	Test Mode 2 - Message ID 20	278
Table 6.61	Detailed Description of Test Mode 2 Message ID 20	280
Table 6.62	Test Mode 3 - Message ID 20	281
Table 6.63	Detailed Description of test Mode 3 Message ID 20	282
Table 6.64	Test Mode 4 - Message ID 20	283
Table 6.65	Detailed Description of Test Mode 4 Message ID 20	284
Table 6.66	DGPS Status Format - Message ID 27	285
Table 6.67	DGPS Correction Types	287
Table 6.68	Navigation Library Measurement Data - Message ID 28	287
Table 6.69	Sync Flag Fields (for GSW2 software ONLY)	289
Table 6.70	Detailed Description of the Measurement Data	290
Table 6.71	Navigation Library DGPS Data - Message ID 29	292
Table 6.72	Navigation Library SV State Data - Message ID 30	293
Table 6.73	Navigation Library Initialization Data - Message ID 31	294
Table 6.74	Geodetic Navigation Data - Message ID 41	297
Table 6.75	Queue Command Parameters - Message ID 43	300
Table 6.76	DR Raw Data - Message ID 45	300
Table 6.77	Test Mode 3/4/5/6 - Message ID 46	301
Table 6.78	Detailed Description of Test Mode 3/4/5/6 - Message ID 46	303
Table 6.79	Test Mode 4 – Message ID 48	305
Table 6.80	Detailed Description of Test Mode 4 Message ID 48	305
Table 6.81	DR Navigation Status - Message ID 48, Sub ID 1	306
Table 6.82	DR Navigation State - Message ID 48, Sub ID 2	309
Table 6.83	Navigation Subsystem - Message ID 48, Sub ID 3	310
Table 6.84	DR Gyro Factory Calibration - Message ID 48, Sub ID 6	311
Table 6.85	DR Sensors Parameters - Message ID 48, Sub ID 7	311
Table 6.86	DR Data Block – Message ID 48, Sub ID 8	311
Table 6.87	DR Package Sensor Parameters - Message ID 48, Sub ID 9	312
Table 6.88	Test Mode 4 – Message ID 49	314
Table 6.89	Detailed Description of Test Mode 4 Message ID 49	314
Table 6.90	SBAS Parameters - Message ID 50	315

Table 6.91	Detailed Description of SBAS Parameters	316
Table 6.92	Tracker Load Status Report - Message ID 51, Sub ID 6	316
Table 6.93	Tracker Load Status Report Message	317
Table 6.94	1 PPS Time – Message ID 52	317
Table 6.95	Status Byte Field in Timing Message	318
Table 6.96	Test Mode 4 – Message ID 55	318
Table 6.97	SGEE Download Output - Message ID 56	319
Table 6.98	Output Messages Sub IDs	320
Table 6.99	ECLM Ack / Nack Message Fields	321
Table 6.100	ECLM EE Age Message Fields	322
Table 6.101	ECLM SGEE Age Message Fields	323
Table 6.102	ECLM Download Initiate Request Message Fields	324
Table 6.103	ECLM Erase Storage File Message Fields	324
Table 6.104	: ECLM Update file content - Message ID 56, Sub ID 37	325
Table 6.105	ECLM Request File Content Message Fields	326
Table 6.106	Extended Ephemeris - Message ID 56	326
Table 6.107	GPS Data and Ephemeris Mask - Message ID 56, Sub ID 1	327
Table 6.108	Detailed Description of GPS Data and Ephemeris Mask Parameters	327
Table 6.109	Extended Ephemeris Integrity - Message ID 56, Sub ID 2	328
Table 6.110	Detailed Description of Extended Ephemeris Integrity Parameters	328
Table 6.111	Extended Ephemeris Integrity - Message ID 56, Sub ID 3	329
Table 6.112	EE Provide Synthesized Ephemeris Clock Bias Adjustment - Message ID 56, Sub ID 4	330
Table 6.113	Verified 50 bps Broadcast Ephemeris and Iono Data - Message ID 56, Sub ID 5	330
Table 6.114	Verified 50 bps Broadcast Ephemeris and Iono Data Message	331
Table 6.115	Extended Ephemeris ACK - Message ID 56, Sub ID 255	331
Table 6.116	Detailed Description of Extended Ephemeris ACK Parameters	331
Table 6.117	Test Mode Configuration Response - Message ID 56, Sub ID 255	332
Table 6.118	Test Mode Output - Message ID 63, Sub ID 7	332
Table 6.119	Message Structure	332
Table 6.120	Detailed Description	333
Table 6.121	Test Status	333
Table 6.122	Navigation Library (NL) Auxiliary Initialization Data - Message ID 64, Sub ID 1	334
Table 6.123	Navigation Library (NL) Auxiliary Initialization Data Message	334
Table 6.124	Navigation Library (NL) Auxiliary Initialization Data Bit Fields	335
Table 6.125	Navigation Library (NL) Auxiliary Measurement Data - Message ID 64, Sub ID 2	335
Table 6.126	Navigation Library (NL) Auxiliary Measurement Data Message	336
Table 6.127	Navigation Library (NL) Auxiliary Measurement Data Status Bit Fields	338
Table 6.128	Navigation Library (NL) Auxiliary Measurement Data Extended Status Bit Field definitions	338
Table 6.129	Navigation Library (NL) Auxiliary Measurement Data Recovery Status Bit Fields	338
Table 6.130	Navigation Library (NL) Aiding Initialization - Message ID 64, Sub ID 3	339
Table 6.131	Navigation Library (NL) Aiding Initialization Message	339
Table 6.132	Message Structure	340
Table 6.133	Detailed Description	340
Table 6.134	DOP Values Output - Message ID 66	340
Table 6.135	DOP Value Output Message	340
Table 6.136	Measurement Engine - Message ID 68	341
Table 6.137	Measurement Engine Output SIDs	341
Table 6.138	Measurement Engine Message Fields	341
Table 6.139	Position Response - Message ID 69, Sub ID 1	342
Table 6.140	Position Response Message	342
Table 6.141	POSITION_ERROR_STATUS Field	344
Table 6.142	POS_TYPE Field	344
Table 6.143	DGPS_COR Field	345
Table 6.144	OTHER_SECTIONS Field	346

Table 6.145	MAJ_STD_ER Field	347
Table 6.146	MIN_STD_ER Field Specification	347
Table 6.147	HEIGHT_STD_ER Field	348
Table 6.148	VEL_MAJ_STD_ER Field	348
Table 6.149	VEL_MIN_STD_ER Field	349
Table 6.150	VER_VEL_STD_ER Field	349
Table 6.151	CLK_STD_ER Field	350
Table 6.152	INV_WEIGHTS Field	351
Table 6.153	Measurement Response - Message ID 69, Sub ID 2	351
Table 6.154	Measurement Response Message	351
Table 6.155	MEAS_ERROR_STATUS Field	353
Table 6.156	TIME_ACCURACY Field	353
Table 6.157	MULTIPATH_INDICATOR Field	354
Table 6.158	Pseudorange RMS Error Representation	354
Table 6.159	Ephemeris Status Response - Message ID 70, Sub ID 1	354
Table 6.160	Ephemeris Status Response Message	355
Table 6.161	Almanac Response - Message ID 70, Sub ID 2	356
Table 6.162	Almanac Response Message	357
Table 6.163	Broadcast Ephemeris Response - Message ID 70, Sub ID 3	358
Table 6.164	Broadcast Ephemeris Response Message	358
Table 6.165	Time Frequency Approximate Position Status Response - Message ID 70, Sub ID 4	360
Table 6.166	Time Frequency Approximate Position Status Response Message	361
Table 6.167	Channel Load Response - Message ID 70, Sub ID 5	362
Table 6.168	Channel Load Response Message	363
Table 6.169	Client Status Response - Message ID 70, Sub ID 6	363
Table 6.170	Client Status Response Message	363
Table 6.171	STATUS Field	364
Table 6.172	OSP Revision Response - Message ID 70, Sub ID 7	364
Table 6.173	OSP Revision Response Message	364
Table 6.174	Serial Port Settings Response - Message ID 70, Sub ID 8	365
Table 6.175	Serial Port Settings Response Message	365
Table 6.176	Tx Blanking Response - Message ID 70, Sub ID 9	366
Table 6.177	Tx Blanking Response Message	366
Table 6.178	Sensor Data Output Messages - Message ID 72	366
Table 6.179	Sensor Control Input Sub IDs	367
Table 6.180	Sensor Data Readings Output - Message ID 72, Sub ID 1	367
Table 6.181	Sensor Data Readings Output Message Fields	367
Table 6.182	Sensor Data Readings Output - Message ID 72, Sub ID 2	370
Table 6.183	Sensor Data Readings Output Message Fields	370
Table 6.184	Receiver State Output - Message ID 72, Sub ID 3	372
Table 6.185	Receiver State Output Message Fields	372
Table 6.186	Sensor Point and Tell - Message ID 72, Sub ID 4	373
Table 6.187	Sensor Point and Tell Output Message Fields	373
Table 6.188	Sensor Calibration - Message ID 72, Sub ID 5	375
Table 6.189	Sensor Calibration Output Message Fields	375
Table 6.190	Approximate MS Position Request - Message ID 73, Sub ID 1	376
Table 6.191	Approximate MS Position Request Message	376
Table 6.192	Time Transfer Request - Message ID 73, Sub ID 2	376
Table 6.193	Time Transfer Request Message	376
Table 6.194	Frequency Transfer Request - Message ID 73, Sub ID 3	377
Table 6.195	Frequency Transfer Request Message	377
Table 6.196	FREQ_REQ_INFO Field	377
Table 6.197	Nav Bit Aiding (NBA) Request - Message ID 73, Sub ID 4	378
Table 6.198	Nav Bit Aiding Request Message	379

Table 6.199	Session Opening Response - Message ID 74, Sub ID 1	379
Table 6.200	Verified 50 bps Broadcast Ephemeris Message	380
Table 6.201	SESSION_OPEN_STATUS Field	380
Table 6.202	Session Closing Notification - Message ID 74, Sub ID 2	380
Table 6.203	Session Closing Notification Message	381
Table 6.204	SESSION_CLOSE_STATUS Field	381
Table 6.205	Hardware Configuration Request - Message ID 74	381
Table 6.206	Hardware Configuration Request Message	381
Table 6.207	ACK/NACK/ERROR Notification - Message ID 75, Sub ID 1	382
Table 6.208	ACK/NACK/ERROR Notification Message	382
Table 6.209	ACK/NACK/ERROR Field	382
Table 6.210	Software Version Response - Message ID 6	383
Table 6.211	Software Version Response Message	383
Table 6.212	Reject - Message ID 75, Sub ID 2	384
Table 6.213	Reject Message	384
Table 6.214	REJ_REASON Field	385
Table 6.215	Micro Power Mode Error - Message ID 77, Sub ID 1	385
Table 6.216	Micro Power Mode Error Message	385
Table 6.217	Query Response - Message ID 81	386
Table 6.218	Query Response Message	386
Table 6.219	Query Response Supported Messages	386
Table 6.220	Power Mode Response - Message ID 90	387
Table 6.221	SIDs for Power Mode Response Message	387
Table 6.222	Power Mode Response Error Code Values	387
Table 6.223	Power Mode Response Error Code Values	387
Table 6.224	Hardware Control Output - Message ID 91	388
Table 6.225	Hardware Control Output Message	388
Table 6.226	CW Interference Report - Message ID 92	389
Table 6.227	CW Interference Report Message	389
Table 6.228	CW Mitigation Report - Message ID 92, Sub ID 2	389
Table 6.229	CW Mitigation Report Message	390
Table 6.230	TCXO Learning Output Request - Message ID 93	391
Table 6.231	TCXO Learning Output Request Message	391
Table 6.232	TCXO Learning Clock Model Data Base - Message ID 93, Sub ID 1	392
Table 6.233	Clock Model Data Base Message	393
Table 6.234	TCXO Learning Temperature Table - Message ID 93, Sub ID 2	394
Table 6.235	TCXO Learning Temperature Table Message	395
Table 6.236	TCXO Learning Temperature Recorder - Message ID 93, Sub ID 4	397
Table 6.237	TCXO Learning Temperature Recorder Message	397
Table 6.238	TCXO Learning EARC - Message ID 93, Sub ID 5	398
Table 6.239	TCXO Learning EARC Message	398
Table 6.240	TCXO Learning RTC Alarm - Message ID 93, Sub ID 6	399
Table 6.241	TCXO Learning RTC Alarm Message	399
Table 6.242	TCXO Learning RTC Cal - Message ID 93, ID 7	400
Table 6.243	TCXO Learning RTC Cal Message	400
Table 6.244	TCXO Learning TBD (Not Used) - Message ID 93, Sub ID 8	402
Table 6.245	TCXO Learning MPM Searches - Message ID 93, Sub ID 9	402
Table 6.246	TCXO Learning MPM Searches Message	402
Table 6.247	TCXO Learning MPM Pre-Positioning - Message ID 93, Sub ID 10	404
Table 6.248	TCXO Learning MPM Pre-Positioning Message	404
Table 6.249	TCXO Learning Micro-Nav Measurement - Message ID 93, Sub ID 11	405
Table 6.250	TCXO Learning Micro-Nav Measurement Message	405
Table 6.251	TCXO Learning TCXO Uncertainty - Message ID 93, Sub ID 12	407
Table 6.252	TCXO Learning TCXO Uncertainty Message	407

Table 6.253	TCXO Learning System Time Stamp - Message ID 93, Sub ID 13	409
Table 6.254	TCXO Learning System Time Stamp Message	409
Table 6.255	SW Toolbox Output - Message ID 178	410
Table 6.256	Tracker Peek Response (four-byte peek) (unsolicited)	410
Table 6.257	Tracker Poke Response (four-byte poke or n-byte poke) (unsolicited)	410
Table 6.258	Tracker Peek Response (n-byte peek) (unsolicited)	411
Table 6.259	FlashStore Response - Message ID 178, Sub ID 5	411
Table 6.260	FlashErase Response - Message ID 178, Sub ID 6	411
Table 6.261	TrackerConfig Response - Message ID 178, ID 7	412
Table 6.262	MeiToCustomIo Response - Message ID 178, Sub ID 8	412
Table 6.263	SID_Patch Manager Prompt - Message ID 178, Sub ID 144	412
Table 6.264	Patch Manager Acknowledgement - Message ID 178, Sub ID 145	413
Table 6.265	Patch Manager Acknowledge Status Bit Fields	413
Table 6.266	Statistic Channel - Message ID 225, Sub ID 6	414
Table 6.267	Description of the Navigation Mode Parameters	415
Table 6.268	Description of the Position Mode Parameters	416
Table 6.269	Description of the Status for Navigation LSQ Fix Mode	416
Table 6.270	Description of the Status for Navigation KF Mode	417
Table 6.271	Description of the Start Mode	417
Table 6.272	Statistics Channel – Message ID 225, Message Sub ID 7	417
Table 6.273	Description of the Navigation Mode Parameters	418
Table 6.274	Description of the Navigation Mode Parameters	419
Table 6.275	Description of the Position Mode Parameters	419
Table 6.276	Description of the Status for Navigation LSQ Fix Mode	419
Table 6.277	Description of the Status for Navigation KF Mode	420
Table 6.278	Description of the Start Mode	420
Table 6.279	Description of the Aiding Flags (Build Numbers 4.0.2 and later)	420
Table 6.280	Output GRF3i+ IF Bandwidth Mode - Message ID 233, Sub ID 255	421
Table 6.281	Output GRF3i+ Normal/Low Power Mode - Message ID 233, Sub ID 254	421
Table 6.282	ASCII Development Data Output - Message ID 255	422
Table 6.283	GeodNavState - Message ID 29	423
Table 6.284	TrkADCodoGPIO - Message ID 45	428
Table 6.285	DR NAV Status - Message ID 48, Sub ID 1	429
Table 6.286	DR NAV Status - Message ID 48, Sub ID 1	430
Table 6.287	DR NAV State - Message ID 48, Sub ID 2	437
Table 6.288	DR NAV State Message	438
Table 6.289	NAV Subsystems Data - Message ID 48, Sub ID 3	442
Table 6.290	NAV Subsystems Data Message	444
Table 6.291	Preserved DR Data Validity - Message ID 48, Sub ID 5	446
Table 6.292	Preserved DR Data Validity Message	447
Table 6.293	Gyro Factory Calibration Response - Message ID 48, Sub ID 6	448
Table 6.294	Gyro Factory Calibration Response Message	449
Table 6.295	Sensor package parameters - Message ID 48, Sub ID 7	450
Table 6.296	Sensor package parameters Message	451
Table 6.297	DR Data Block Output - Message ID 48, Sub ID 8	452
Table 6.298	DR Data Block Output Message	453
Table 6.299	Sensor Package Parameters - Message ID 48, Sub ID 9	454
Table 6.300	Sensor Package Parameters Message	456
Table 6.301	Generic Sensors Raw Data - Message ID 48, Sub ID 10	458
Table 6.302	Generic Sensors Raw Data Message	459
Table 6.303	Map Matching Feedback State - Message ID 48, Sub ID 80	464
Table 6.304	Map Matching Feedback State Message	465
Table 6.305	MMF Status Field Bits	466
Table 6.306	SiRF Binary GSA - Message ID 48, Sub ID 100	467

Table 6.307	SiRF Binary GSA Message	468
Table 6.308	SiRFDRIve NVM at Boot - Message ID 48, Sub ID 105	469
Table 6.309	SiRFDRIve NVM at Boot Message	470
Table 6.310	GPIO State - Message ID 65, Sub ID 129	474
Table 6.311	GPIO State Message	475
Table 6.312	Car Bus Data to NAV - Message ID 172, Sub ID 9	476
Table 6.313	Car Bus Data to NAV Message	477
Table 8.1	Data Types in Bytes Field of Message ID Tables	501

1 Overview

This document defines all SiRFLoc[®] messages in SiRF Binary format that have not yet been documented in the *SiRF Binary Protocol Reference Manual* [3]. Also not included are messages reserved for internal SiRF and future use, and the SiRFDrive[®] messages supporting mostly automotive applications.

Table 1.1 lists the OSP software versions covered.

Document Issue Number	GSD4t	GSD4e
2	4.0.0	4.0.0
4	4.0.1	4.0.1
8	4.0.2	4.0.2

Table 1.1: OSP and OSP-ICD Release History

Note:

Manual issues are backward compatible. Each issue covers versions up to and including the one listed for that issue.

2 References

- 1 Aiding Independent Interoperability Interface, Rev 2.2, 2008-03-26
- 2 SiRFLoc Client Interface Control Document, Rev 2.1, 2007-08-15
- 3 SiRF Binary Protocol Reference Manual, CS-106510-UG Draft F. February 8, 2010
- 4 SiRFHost Programmer Reference Manual, CS-129333-MA, Draft D, December 21, 2009
- 5 IO Pin Configuration Message, CS-203047-SP Issue 1, February 25, 2010

3 Message Structure and Transport Mechanism

The transport mechanism defined in Ref 3 is used to transport the messages defined in this document.

3.1 Transport Message

Start Sequence	Payload Length	PAYLOAD	Checksum	End Sequence
0xA0, 0xA2	2 Bytes (15 bits)	Up to $(2^{11} - 1)$ Bytes	2 Bytes	0xB0, 0xB3

Table 3.1: Generic Packet Format

3.2 NMEA Protocol Support

By default, the SiRF chip uses OSP only. NMEA protocol can be supported using one of the following three ways:

1. Reconstruct NMEA messages from OSP (LPL can do so).
2. Configure the SiRF chip in NMEA-only mode through a GPIO pin. This may not be available for all products. The product specification must be consulted to determine availability. For GSD4e products, the eFUSE settings can be applied to select between OSP and NMEA
3. Use "Switch To NMEA Protocol" SiRF Binary message to switch the serial port from SSB to NMEA protocol.

OSP and NMEA protocols cannot be enabled at the same time; either OSP is output or NMEA, not both. If OSP protocol is chosen for output, LPL can reconstruct NMEA messages as per point 1 above.

3.3 Payload Structure

The payload always starts with a one byte long Message ID (MID) field. Depending on the MID value, a one byte Sub ID (SID) field may follow the MID field. Subsequently, and again depending on the value of the MID field on the value of the SID field if it exists, a variable number of message parameter fields follow. This ICD documents the name, the purpose of the value, the length, the type, the units of measurement, the value range and the scale of the value of each field.

In this document, the scale of a parameter field specifies a multiplication factor to be applied before placing the parameter value into the message for subsequent transmission between the SLC and CP.

For example, if the duty cycle parameter value range in the OSP message is a number between 1 – 20; the scale factor shown in the message field description here will be *0.2, since this is the multiplication factor needed to represent the entire 0 – 100% actual value range as a number in the 1 – 20 range.

Note:

Multi-byte values are transmitted MSB first unless noted in the message tables (however, there are exceptions for floating-point and double-precision values).

The sum of the length of all payload fields, including the MID and SID fields, is captured in the payload length field of the message header as a number of bytes, preceding the payload data. This number can not exceed $2^{11} - 1$, i.e. 2047.

4 OSP Message Mappings

4.1 Access to OSP Messages and Their Documentation

OSP	New SiRFstar IV message first documented in this volume, previously not supported in the SiRFstar III SSB.
SSB	SSB message previously documented in <i>SiRF Binary Protocol Reference Manual</i> as SiRFstarIII message. These are now included in this document. Some of the previous SSB messages have been enhanced, but all of them are backward compatible. Previous applications using them should be able to execute on SiRFstarIV OSP products without any change.
SiRFNav Host Library Access Only	An OSP-SSB message that is currently documented only in the <i>SiRFNav Host Programmer's Reference Manual</i> . It is assumed that you will only invoke these OSP messages through the library functions. These messages are marked in column 1.
Reserved for SDK Customer Use	The message is documented separately (i.e. not in this document or the <i>SiRFNav Host Programmer's Reference Manual</i>). These messages are marked in column 2.
Reserved for CSR-SiRF Use	A MID that has never been assigned to a SiRF product, or is used only for internal SiRF development purposes, or is obsolete but not reusable. Any SID of any MID in any of the above categories that has not yet been assigned in the documents listed above is considered to be "CSR-SiRF Reserved". If such a reserved MID or SID is assigned to an OSP function, the resulting message definition will be included in this document in the appropriate message description format. These messages are marked in column 3.

MID (hex)	MID (dec)	Definition	Sub ID (hex)	Sub ID (dec)	Definition	OSP	SSB	1	2	3
0x00	0	MID_LookInMessage								X
0x01	1	MID_TrueNavigation					X			
0x02	2	MID_MeasuredNavigation					X			
0x03	3	MID_TrueTracker					X			
0x04	4	MID_MeasuredTracker					X			
0x05	5	MID_RawTrkData					X			
0x06	6	MID_SWVersion					X			
0x07	7	MID_ClockStatus					X			
0x08	8	MID_50BPS					X			
0x09	9	MID_ThrPut					X			
0x0A	10	MID_Error					X			
0x0B	11	MID_Ack					X			
0x0C	12	MID_Nak					X			
0x0D	13	MID_VisList					X			
0x0E	14	MID_Almanac					X			
0x0F	15	MID_Ephemeris					X			
0x10	16	MID_TestModeData					X			

MID (hex)	MID (dec)	Definition	Sub ID (hex)	Sub ID (dec)	Definition	OSP	SSB	1	2	3
0x11	17	MID_RawDGPS					X			
0x12	18	MID_OkToSend					X			
0x13	19	MID_RxMgrParams					X			
0x14	20	MID_TestModeData2					X			
0x15	21	MID_NetAssistReq								X
0x16	22	MID_StopOutput								X
0x17	23	MID_CompactTracker								X
0x18	24	MID_DRCritSave								X
0x19	25	MID_DRStatus								X
0x1A	26	MID_DRHiRateNav								X
0x1B	27	MID_DGPSStatus					X			
0x1C	28	MID_NL_MeasData					X			
0x1D	29	MID_NL_DGPSData					X			
0x1E	30	MID_NL_SVStateData					X			
0x1F	31	MID_NL_InitData					X			
0x20	32	MID_MeasureData								X
0x21	33	MID_NavData								X

MID (hex)	MID (dec)	Definition	Sub ID (hex)	Sub ID (dec)	Definition	OSP	SSB	1	2	3
0x22	34	MID_SBASData								X
0x23	35	MID_TrkComplete								X
0x24	36	MID_TrkRollover								X
0x25	37	MID_TrkInit								X
0x26	38	MID_TrkCommand								X
0x27	39	MID_TrkReset								X
0x28	40	MID_TrkDownload								X
0x29	41	MID_GeodNavState					X			
0x2A	42	MID_TrkPPS								X

MID (hex)	MID (dec)	Definition	Sub ID (hex)	Sub ID (dec)	Definition	OSP	SSB	1	2	3	
0x2B	43	MID_CMD_PARAM	0x80	128	SSB_QUEUE_CMD_NI		X				
			0x85	133	SSB_QUEUE_CMD_DGPS_SRC		X				
			0x88	136	SSB_QUEUE_CMD_SNM		X				
			0x89	137	SSB_AUEUE_CMD_SDM		X				
			0x8A	138	SSB_QUEUE_CMD_SDGPSM		X				
			0x8B	139	SSB_QUEUE_CMD_SEM		X				
			0x8C	140	SSB_QUEUE_CMD_SPM		X				
			0x8F	143	SSB_QUEUE_CMD_SSN		X				
			0x97	151	SSB_QUEUE_CMD_LP		X				
			0xAA	170	SSB_QUEUE_CMD_SSBAS		X				
0x2C	44	MID_LLA								X	
0x2D	45	MID_TrkADCOdoGPIO					X				
0x2E	46	MID_TestModeData3					X				
0x2F	47	MID_NavComplete									X

MID (hex)	MID (dec)	Definition	Sub ID (hex)	Sub ID (dec)	Definition	OSP	SSB	1	2	3
0x30	48	MID_DrOut	0x01	1	SID_DrNavStatus		X			
			0x02	2	SID_DrNavState		X			
			0x03	3	SID_NavSubsys		X			
			0x04	4	SID_RawDr		X			
			0x05	5	SID_DrValid		X			
			0x06	6	SID_GyrFactCal		X			
			0x07	7	SID_DrSensParam		X			
			0x08	8	SID_DrDataBlk		X			
			0x09	9	SID_GenericSensorParam		X			
			0x0A	10	SID_GenericRawOutput			X		
			0x50	80	SID_MMFStatus	X				
0x31	49	MID_OemOut					X			
0x32	50	MID_SbasParam					X			

MID (hex)	MID (dec)	Definition	Sub ID (hex)	Sub ID (dec)	Definition	OSP	SSB	1	2	3	
0x33	51	MID_SiRFNavNotification	0x01	1	SID_GPS_SIRFNAV_COMPLETE			X			
			0x02	2	SID_GPS_SIRFNAV_TIMING					X	
			0x03	3	SID_GPS_DEMO_TIMING						X
			0x04	4	SID_GPS_SIRFNAV_TIME_TAGS				X		
			0x05	5	SID_GPS_NAV_IS801_PSEUDORANGE_DATA						X
			0x06	6	GPS_TRACKER_LOADER_STATE			X			
				7	SSB_SIRFNAV_START						X
				8	SSB_SIRFNAV_STOP						X
			0x09	9	SSB_RESULT						X
			0x0A - 0x0F	10 - 15							X
			0x10	16	DEMO_TEST_STATUS						X
			0x11	17	DEMO_TEST_STATE						X
			0x12	18	DEMO_TEST_DATA						X
			0x13	19	DEMO_TEST_STATS						X
			0x14	20	DEMO_TEST_ERROR						X
0x34	52	MID_PPS_Time					X				

MID (hex)	MID (dec)	Definition	Sub ID (hex)	Sub ID (dec)	Definition	OSP	SSB	1	2	3
0x35	53									X
0x36	54	SSB_EVENT	0x01	1	SSB_STARTUP_INFO			X		
0x37	55	MID_TestModeTrackData					X			

MID (hex)	MID (dec)	Definition	Sub ID (hex)	Sub ID (dec)	Definition	OSP	SSB	1	2	3		
0x38	56	SSB_EE	0x01	1	SSB_EE_GPS_TIME_INFO		X					
			0x02	2	SSB_EE_INTEGRITY		X					
			0x03	3	SSB_EE_STATE		X					
			0x04	4	SSB_EE_CLK_BIAS_ADJ		X					
			0x05	5	SSB_EE_X-CORR_FREE						X	
			0x11	17	SSB_EE_EPHEMERIS_AGE					X		
			0x12	18						X		
			0x20	32	ECLM Ack/Nack			X				
			0x21	33	ECLM EE Age			X				
			0x22	34	ECLM SGEE Age			X				
			0x23	35	ECLM Download Initiate Request			X				
			0x24	36	ECLM Erase Storage File			X				
			0x25	37	ECLM Update File Content			X				
			0x26	38	ECLM Request File Content			X				
			0x27	39	ECLM BBRAM Header Data			X				
			0xFF	255	SSB_EE_ACK		X					
0x39	57	MID_SYNEPHINT								X		

MID (hex)	MID (dec)	Definition	Sub ID (hex)	Sub ID (dec)	Definition	OSP	SSB	1	2	3
0x3A	58	MID_GPIO_OUTPUT	0x01	1	SID_GPIOParam					X
			0x02	2	SID_GPIOStatus					X
0x3B	59	MID_BT_OUTPUT								X
0x3C	60	MID_AutoCorr								X
0x3D	61	MID_FAILURE_STATUS_RESPONSE								X
0x3E	62	MID_ExceptionInfo								X
0x3F	63	MID_TESTMODE_OUTPUT	0x07	7	SSB_TEST_MODE_DATA_7		X			
0x40	64		0x00	0						X
0x40	64	MID_NL_AuxData	0x01	1	NL_AUX_INIT_DATA	X				
			0x02	2	NL_AUX_MEAS_DATA	X				
			0x03	3	NL_AUX_AID_DATA	X				
0x41	65	SSB_TRACKER_DATA_GPIO_STATE	0xC0	192			X			
0x42	66	SSB_DOP_VALUES				X				
0x43	67									X
0x44	68	MID_MEAS_ENG_OUT						X		
0x45	69	MID_POS_MEAS_RESP	0x01	1	POS_RESP	X				
			0x02	2	MEAS_RESP	X				

MID (hex)	MID (dec)	Definition	Sub ID (hex)	Sub ID (dec)	Definition	OSP	SSB	1	2	3
0x46	70	MID_STATUS_RESP	0x01	1	EPH_RESP	X				
			0x02	2	ALM_RESP	X				
			0x03	3	B_EPH_RESP	X				
			0x04	4	TIME_FREQ_APPROX_POS_RESP	X				
			0x05	5	CH_LOAD_RESP	X				
			0x06	6	CLIENT_STATUS_RESP	X				
			0x07	7	OSP_REV_RESP	X				
			0x08	8	SERIAL_SETTINGS_RESP	X				
			0x09	9	TX_BLANKING_RESP	X				
0x47	71	MID_HW_CONFIG_REQ				X				
0x48	72	MID_SensorData	0x01	1	SENSOR_READINGS	X				
			0x02	2	FACTORY_STORED_PARAMS	X				
			0x03	3	RECV_STATE	X				
0x49	73	MID_AIDING_REQ	0x01	1	APPROX_MS_POS_REQ	X				
			0x02	2	TIME_TX_REQ	X				
			0x03	3	FREQ_TX_REQ	X				
			0x04	4	NBA_REQ	X				

MID (hex)	MID (dec)	Definition	Sub ID (hex)	Sub ID (dec)	Definition	OSP	SSB	1	2	3
0x4A	74	MID_SESSION_CONTROL_RESP	0x01	1	SESSION_OPEN_RESP	X				
			0x02	2	SESSION_CLOSE_RESP	X				
0x4B	75	MID_MSG_ACK_OUT	0x01	1	ACK_NACK_ERROR	X				
			0x02	2	REJECT	X				
0x4C	76									X
0x4D	77	MID_LP_OUTPUT	0x01	1	MPM_ERR	X				
0x4E	78									X
0x4F	79									X
0x50	80									X
0x51	81	MID_QUERY_RESP	All (see ICD)			X				
0x52	82									X
0x53	83									X
0x54	84									X
0x55	85									X
0x56	86									X
0x57	87									X

MID (hex)	MID (dec)	Definition	Sub ID (hex)	Sub ID (dec)	Definition	OSP	SSB	1	2	3
0x58	88									X
0x59	89		0x01	1	Reserving for known need. Waiting for def'n.					X
0x5A	90	MID_PWR_MODE_RESP	0x00	0	ERR_RESP	X				
			0x01	1	APM_RESP	X				
			0x02	2	MPM_RESP	X				
			0x03	3	TP_RESP	X				
			0x04	4	PTF_RESP	X				
0x5B	91	MID_HW_CTRL_OUT	0x01	1	VCTCXO	X				
			0x02	2	ON_OFF_SIG_CONFIG	X				
0x5C	92	MID_CW_CONTROLLER_RESP	0x01	1	SCAN_RESULT	X				
			0x02	2	FILTER_CONDITIONS	X				
			0x03	3	MON_RESULTS					X

MID (hex)	MID (dec)	Definition	Sub ID (hex)	Sub ID (dec)	Definition	OSP	SSB	1	2	3	
0x5D	93	MID_TCXO_LEARNING_OUT	0x00	0	Not Used					X	
			0x01	1	CLOCK_MODEL_DATA_BASE_OUT	X					
			0x02	2	TEMPERATURE_TABLE	X					
			0x03	3	Not Used						X
			0x04	4	TEMP_RECORDER_MESSAGE	X					
			0x05	5	EARC	X					
			0x06	6	RTC_ALARM	X					
			0x07	7	RTC_CAL	X					
			0x08	8	MPM_ACQUIRED	X					
			0x09	9	MPM_SEARCHES	X					
			0x0A	10	MPM_PREPOS	X					
			0x0B	11	MICRO_NAV_MEASUREMENT	X					
			0x0C	12	TCXO UNCERTAINTY	X					
			0x0D	13	SYSTEM_TIME_STAMP	X					
0x5E	94									X	
0x5F	95									X	
0x60	96	MID_Peek_Response								X	

MID (hex)	MID (dec)	Definition	Sub ID (hex)	Sub ID (dec)	Definition	OSP	SSB	1	2	3
0x61	97	MID_UserOutputBegin								X
0x62	98	RESERVED for SDK User							X	
0x63	99	RESERVED for SDK User							X	
0x64	100	RESERVED for SDK User							X	
0x65	101	RESERVED for SDK User							X	
0x66	102	RESERVED for SDK User							X	
0x67	103	RESERVED for SDK User							X	
0x68	104	RESERVED for SDK User							X	
0x69	105	RESERVED for SDK User							X	
0x6A	106	RESERVED for SDK User							X	
0x6B	107	RESERVED for SDK User							X	
0x6C	108	RESERVED for SDK User							X	
0x6D	109	RESERVED for SDK User							X	
0x6E	110	RESERVED for SDK User							X	
0x6F	111	RESERVED for SDK User							X	
0x70	112	RESERVED for SDK User							X	
0x71	113	RESERVED for SDK User							X	

MID (hex)	MID (dec)	Definition	Sub ID (hex)	Sub ID (dec)	Definition	OSP	SSB	1	2	3
0x72	114	RESERVED for SDK User							X	
0x73	115	RESERVED for SDK User							X	
0x74	116	RESERVED for SDK User							X	
0x75	117	RESERVED for SDK User							X	
0x76	118	RESERVED for SDK User							X	
0x77	119	RESERVED for SDK User							X	
0x78	120	RESERVED for SDK User							X	
0x79	121	RESERVED for SDK User							X	
0x7A	122	RESERVED for SDK User							X	
0x7B	123	RESERVED for SDK User							X	
0x7C	124	RESERVED for SDK User							X	
0x7D	125	RESERVED for SDK User							X	
0x7E	126	RESERVED for SDK User							X	
0x7F	127	MID_UserOutputEnd								X
0x80	128	MID_NavigationInitialization					X			
0x81	129	MID_SetNMEAMode					X			
0x82	130	MID_SetAlmanac					X			

MID (hex)	MID (dec)	Definition	Sub ID (hex)	Sub ID (dec)	Definition	OSP	SSB	1	2	3
0x83	131	MID_FormattedDump					X			
0x84	132	MID_PollSWVersion					X			
0x85	133	MID_DGPSSourceControl					X			
0x86	134	MID_SetSerialPort					X			
0x87	135	MID_SetProtocol					X			
0x88	136	MID_SET_NAV_MODE					X			
0x89	137	MID_SET_DOP_MODE					X			
0x8A	138	MID_SET_DGPS_MODE					X			
0x8B	139	MID_SET_ELEV_MASK					X			
0x8C	140	MID_SET_POWER_MASK					X			
0x8D	141	MID_SET_EDITING_RES					X			
0x8E	142	MID_SET_SS_DETECTOR					X			
0x8F	143	MID_SET_STAT_NAV					X			
0x90	144	MID_PollClockStatus					X			
0x91	145	MID_SetDGPSPort					X			
0x92	146	MID_PollAlmanac					X			
0x93	147	MID_PollEphemeris					X			

MID (hex)	MID (dec)	Definition	Sub ID (hex)	Sub ID (dec)	Definition	OSP	SSB	1	2	3
0x94	148	MID_FlashUpdate					X			
0x95	149	MID_SetEphemeris					X			
0x96	150	MID_SwitchOpMode					X			
0x97	151	MID_LowPower					X			
0x98	152	MID_PollRxMgrParams					X			
0x99	153	MID_TOWSync								X
0x9A	154	MID_PollTOWSync								X
0x9B	155	MID_EnableTOWSyncInterrupt								X
0x9C	156	MID_TOWSyncPulseResult								X
0x9D	157	MID_DRSetup								X
0x9E	158	MID_DRData								X
0x9F	159	MID_DRCritLoad								X
0xA0	160	MID_HeadSync0								X

MID (hex)	MID (dec)	Definition	Sub ID (hex)	Sub ID (dec)	Definition	OSP	SSB	1	2	3		
0xA1	161	MID_SSB_SIRFNAV_COMMAND	0x01	1	SSB_DEMO_SET_RESTART_MODE					X		
			0x02	2	SSB_DEMO_TEST_CPU_STRESS					X		
			0x03	3	SSB_DEMO_STOP_TEST_APP					X		
			0x04	4	Not specified					X		
			0x05	5	SSB_DEMO_START_GPS_ENGINE					X		
			0x06	6	SSB_DEMO_STOP_GPS_ENGINE					X		
			0x07	7	SSB_SIRFNAV_STORE_NOW			X				
			0x08	8	SSB_DEMO_START_NAV_ENGINE						X	
			0x09	9	SSB_SET_IF_TESTPOINT						X	
			0x0A - 0x0F	10 - 15								X
			0x10	16	SSB_DEMO_TEST_CFG_CONTINUOUS							X
			0x11	17	SSB_DEMO_TEST_CFG_RESTARTS							X
			0x12	18	SSB_DEMO_TEST_CFG_RF_ON_OFF							X
			0x13 - 0x1D	19 - 29								X

MID (hex)	MID (dec)	Definition	Sub ID (hex)	Sub ID (dec)	Definition	OSP	SSB	1	2	3
		MID_SSB_SIRFNAV_COMMAND (Continued)	0x1E	30	SSB_DEMO_TEST_CFG_DELETE					X
			0x1F	31	SSB_DEMO_TEST_CFG_POLL					X
			0x20	32	SSB_DEMO_TEST_START					X
			0x21	33	SSB_DEMO_TEST_STOP					X
			0x22 - 0x2F	34 - 47						X
			0x30	48	SSB_DEMO_TEST_POLL_STATUS					X
			0x31	49	SSB_DEMO_TEST_RF_ATTENUATION					X
			0x32 - 0x3F	50 - 63						X
			0x40	64	SSB_DEMO_TEST_REF_POSITION					X
			0x41	65	SSB_DEMO_TEST_PFC_CONTINUOUS					X
			0x42	66	SSB_DEMO_TEST_PFC_RESTARTS					X
0xA2	162	MID_HeadSync1							X	
0xA3	163								X	
0xA4	164								X	
0xA5	165	MID_ChangeUartChnl					X			
0xA6	166	MID_SetMsgRate					X			

MID (hex)	MID (dec)	Definition	Sub ID (hex)	Sub ID (dec)	Definition	OSP	SSB	1	2	3
0xA7	167	MID_LPAcqParams					X			
0xA8	168	MID_POLL_CMD_PARAM					X			
0xA9	169	MID_SetDatum					X			
0xAA	170				MID_SetSbasParam		X			
0xAB	171	MID_AdvancedNavInit								X

MID (hex)	MID (dec)	Definition	Sub ID (hex)	Sub ID (dec)	Definition	OSP	SSB	1	2	3		
0xAC	172	MID_DrIn	0x01	1	SID_SetDrNavInit		X					
			0x02	2	SID_SetDrNavMode		X					
			0x03	3	SID_SetGyrFactCal		X					
			0x04	4	SID_SetDrSensParam		X					
			0x05	5	SID_PollDrValid		X					
			0x06	6	SID_PollGyrFactCal		X					
			0x07	7	SID_PollDrSensParam		X					
			0x08	8	SID_Jamie Colley?						X	
			0x09	9	SID_InputCarBusData			X				
			0x0A	10	SID_CarBusEnabled			X				
			0x0B	11	SID_CarBusDisabled			X				
			0x0C	12	SID_SetGenericSensorParam							
			0x0D	13	SID_PollGenericSensorParam							
			0x0E	14	SID_InputCarBusData2				X			
			0x0F	15	SID_DR_Factory_Test_Calibration							X
			0x10	16	SID_DR_Initial_User_Information							X

MID (hex)	MID (dec)	Definition	Sub ID (hex)	Sub ID (dec)	Definition	OSP	SSB	1	2	3	
		MID_DrIn(Continued)	0x11	17	SID_DR_Output_Nav_Information					X	
			0x12	18	SID_DR_Uncertainty_Information					X	
			0x13	19	SID_DR_Debug_Information		X				
			0x50	80	SSB_MMF_DATA						
			0x51	81	SSB_MMF_SET_MODE						
0xAD	173	MID_OemPoll								X	
0xAE	174	MID_OemIn								X	
0xAF	175	MID_SendCommandString					X				
0xB0	176	MID_TailSync0								X	
0xB1	177	GPS_NAV_LPL_CMDR	0x00	0	LPL_CMDR_POLL_STATUS						X
			0x01	1	LPL_CMDR_POLL_STATUS_RESP						X
			0x02	2	LPL_CMDR_SESSION_START						X
			0x03	3	LPL_CMDR_SESSION_START_RESP						X
			0x04	4	LPL_CMDR_SESSION_STOP						X
			0x05	5	LPL_CMDR_SESSION_IN_PROGRESS						X
			0x06	6	LPL_CMDR_SESSION_IN_PROGRESS_RESP						X

MID (hex)	MID (dec)	Definition	Sub ID (hex)	Sub ID (dec)	Definition	OSP	SSB	1	2	3
		GPS_NAV_LPL_CMDR (Continued)	0x07	7	LPL_CMDR_SESSION_STATUS					X
			0x08	8	LPL_CMDR_SET_PLATFORM_CONFIG					X
			0x09	9	LPL_CMDR_GET_PLATFORM_CONFIG_REQST					X
			0x0A	10	LPL_CMDR_GET_PLATFORM_CONFIG_RESP					X
			0x0B	11	LPL_CMDR_LOAD_NMR_FILE					X
			0x0C	12	LPL_CMDR_GET_NMR_FILE_STATUS					X
			0x0D	13	LPL_CMDR_START_LOGFILE					X
			0x0E	14	LPL_CMDR_STOP_LOGFILE					X
			0x0F	15	LPL_CMDR_GET_LOGFILE_STATUS_RE					X
			0x10	16	LPL_CMDR_GET_LOGFILE_STATUS_RESP					X
			0x11	17	LPL_CMDR_IS_EE_AVAILABLE_REQST					X
			0x12	18	LPL_CMDR_IS_EE_AVAILABLE_RESP					X
			0x13	19	LPL_CMDR_GET_EE_DATA					X
			0x14	20	LPL_CMDR_GET_EE_DATA_RESP					X
			0x15	21	LPL_CMDR_SET_POWER_MODE					X
			0x16	22	LPL_CMDR_GET_POWER_MODE_REQST					X

MID (hex)	MID (dec)	Definition	Sub ID (hex)	Sub ID (dec)	Definition	OSP	SSB	1	2	3
		GPS_NAV_LPL_CMDR (Continued)	0x17	23	LPL_CMDR_GET_POWER_MODE_RESP					X

MID (hex)	MID (dec)	Definition	Sub ID (hex)	Sub ID (dec)	Definition	OSP	SSB	1	2	3
0xB2	178	SIRF_MSG_SSB_TRACKER_IC	0x00	0	Reserved	X				
			0x01	1	SIRF_MSG_SSB_MEI_TO_CUSTOMIO	X				
			0x02	2	SIRF_MSG_SSB_TRKR_CONFIG	X				
			0x03	3	SIRF_MSG_SSB_TRKR_PEEKPOKE_CMD	X				
			0x04	4	SIRF_MSG_SSB_TRKR_PEEKPOKE_RSP	X				
			0x05	5	SIRF_MSG_SSB_TRKR_FLASHSTORE_RSP	X				
			0x06	6	SIRF_MSG_SSB_TRKR_FLASHERASE_RSP	X				
			0x07	7	SIRF_MSG_SSB_TRKR_HWCONFIG_RSP	X				
			0x08	8	SIRF_MSG_SSB_TRKR_CUSTOMIO_RSP	X				
			0x14	20	PATCH_STORAGE_CONTROL	X				
			0x22	34	PATCH MEMORY LOAD REQUEST	X				
			0x26	38	PATCH MEMORY EXIT REQUEST	X				
			0x28	40	PATCH MEMORY START REQUEST	X				
			0x90	144	PATCH MANAGER PROMPT	X				
			0x91	145	PATCH MANAGER ACKNOWLEDGEMENT	X				

MID (hex)	MID (dec)	Definition	Sub ID (hex)	Sub ID (dec)	Definition	OSP	SSB	1	2	3
0xB3	179	MID_TailSync1								X
0xB4	180	MID_UserInputEnd								X
0xB5	181	RESERVED for SDK User							X	
0xB6	182	RESERVED for SDK User							X	
0xB7	183	RESERVED for SDK User							X	
0xB8	184	RESERVED for SDK User							X	
0xB9	185	RESERVED for SDK User							X	
0xBA	186	RESERVED for SDK User							X	
0xBB	187	RESERVED for SDK User							X	
0xBC	188	RESERVED for SDK User							X	
0xBD	189	RESERVED for SDK User							X	
0xBE	190	RESERVED for SDK User							X	
0xBF	191	RESERVED for SDK User							X	
0xC0	192	RESERVED for SDK User							X	
0xC1	193	RESERVED for SDK User							X	
0xC2	194	RESERVED for SDK User							X	
0xC3	195	RESERVED for SDK User							X	

MID (hex)	MID (dec)	Definition	Sub ID (hex)	Sub ID (dec)	Definition	OSP	SSB	1	2	3
0xC4	196	RESERVED for SDK User							X	
0xC5	197	RESERVED for SDK User							X	
0xC6	198	RESERVED for SDK User							X	
0xC7	199	MID_UserInputEnd							X	
0xC8	200	MID_GPIO_INPUT	0x01	1	SID_PollGPIOParam					X
			0x02	2	SID_SetGPIO					X
0xC9	201	MID_BT_INPUT								X
0xCA	202	MID_POLL_FAILURE_STATUS								X
0xCB	203	GPS_TRK_TESTMODE_COMMAND								X
0xCC	204	MID_MEAS_ENG_IN								X
0xCD	205	MID_SetGenericSWControl	0x10	16	SSB_SW_COMMANDED_OFF			X		
0xCE	206	MID_RF_Test_Point						X		
0xCF	207	MID_INT_CPUPause						X		
0xD0	208	MID_SiRFLoc								X
0xD1	209	MID_QUERY_REQ				X				
0xD2	210	MID_POS_REQ				X				

MID (hex)	MID (dec)	Definition	Sub ID (hex)	Sub ID (dec)	Definition	OSP	SSB	1	2	3
0xD3	211	MID_SET_AIDING	0x01	1	SET_IONO	X				
			0x02	2	SET_EPH_CLOCK	X				
			0x03	3	SET_ALM	X				
			0x04	4	SET_ACQ_ASSIST	X				
			0x05	5	SET_RT_INTEG	X				
			0x06	6	SET_UTC_MODEL	X				
			0x07	7	SET_GPS_TOW_ASSIST	X				
			0x08	8	SET_AUX_NAV	X				
			0x09	9	SET_AIDING_AVAIL	X				

MID (hex)	MID (dec)	Definition	Sub ID (hex)	Sub ID (dec)	Definition	OSP	SSB	1	2	3
0xD4	212	MID_STATUS_REQ	0x01	1	EPH_REQ	X				
			0x02	2	ALM_REQ	X				
			0x03	3	B_EPH_REQ	X				
			0x04	4	TIME_FREQ_APPROX_POS_REQ	X				
			0x05	5	CH_LOAD_REQ	X				
			0x06	6	CLIENT_STATUS_REQ	X				
			0x07	7	OSP_REV_REQ	X				
			0x08	8	SERIAL_SETTINGS_REQ	X				
			0x09	9	TX_BLANKING_REQ	X				
0xD5	213	MID_SESSION_CONTROL_REQ	0x01	1	SESSION_OPEN_REQ	X				
			0x02	2	SESSION_CLOSE_REQ	X				
0xD6	214	MID_HW_CONFIG_RESP				X				
0xD7	215	MID_AIDING_RESP	0x01	1	APPROX_MS_POS_RESP	X				
			0x02	2	TIME_TX_RESP	X				
			0x03	3	FREQ_TX_RESP	X				
			0x04	4	SET_NBA_SF1_2_3	X				
			0x05	5	SET_NBA_SF4_5	X				

MID (hex)	MID (dec)	Definition	Sub ID (hex)	Sub ID (dec)	Definition	OSP	SSB	1	2	3	
0xD8	216	MID_MSG_ACK_IN	0x01	1	ACK_NACK_ERROR	X					
			0x02	2	REJECT	X					
0xD9	217		0x01	1	SENSOR_ON_OFF					X	
0xDA	218	MID_PWR_MODE_REQ	0x00	0	FP_MODE_REQ	X					
			0x01	1	APM_REQ	X					
			0x02	2	MPM_REQ	X					
			0x03	3	TP_REQ	X					
			0x04	4	PTF_REQ	X					
0xDB	219	MID_HW_CTRL_IN	0x01	1	VCTCXO	X					
			0x02	2	ON_OFF_SIG_CONFIG	X					
0xDC	220	MID_CW_CONTROLLER_REQ	0x01	1	CONFIG	X					
			0x02	2	EVENT_REG					X	
			0x03	3	COMMAND_SCAN						X
			0x04	4	CUSTOM_MON_CONFIG						X
			0x05	5	FFT_NOTCH_SETUP						X

MID (hex)	MID (dec)	Definition	Sub ID (hex)	Sub ID (dec)	Definition	OSP	SSB	1	2	3	
0xDD	221	MID_TCXO_LEARNING_IN	0x00	0	OUTPUT_REQUEST	X					
			0x01	1	CLOCK_MODEL_DATA_BASE	X					
			0x02	2	TEMPERATURE_TABLE	X					
			0x03	3	TEST_MODE_CONTROL	X					
			0x04	4	Not Used						X
			0x05	5	Not Used						X
			0x06	6	Not Used						X
			0x07	7	Not Used						X
			0x08	8	Not Used						X
			0x09	9	Not Used						X
			0x0A	10	Not Used						X
			0x0B	11	Not Used						X
			0x0C	12	Not Used						X
0xDE	222									X	
0xDF	223									X	
0xE0	224	MID_Peek_Poke_Command								X	

MID (hex)	MID (dec)	Definition	Sub ID (hex)	Sub ID (dec)	Definition	OSP	SSB	1	2	3
0xE1	225	MID_SiRFOutput	0x06	6	STATISTICS		X			
			0x07	7	Statistics with Aiding	X				
0xE2	226	MID_UI_LOG								
0xE3	227	MID_NL_MeasResi								
0xE4	228	MID_SiRFInternal								
0xE5	229	MID_SysInfo								X
0xE6	230	MID_SysInfoOut								X
0xE7	231	MID_UserDebugMessage								X

MID (hex)	MID (dec)	Definition	Sub ID (hex)	Sub ID (dec)	Definition	OSP	SSB	1	2	3		
0xE8	232	MID_EE_INPUT	0x01	1	SSB_EE_SEA_PROVIDE_EPH			X				
			0x02	2	SSB_EE_POLL_STATE			X				
			0x10	16	SSB_EE_FILE_DOWNLOAD						X	
			0x11	17	SSB_EE_QUERY_AGE						X	
			0x12	18	SSB_EE_FILE_PART						X	
			0x13	19	SSB_EE_DOWNLOAD_TCP						X	
			0x14	20	SSB_EE_SET_EPHEMERIS						X	
			0x15	21	SSB_EE_FILE_STATUS						X	
			0x16	22	ECLM Start Download			X				
			0x17	23	ECLM File Size			X				
			0x18	24	ECLM Packet Data			X				
			0x19	25	Get EE Age			X				
			0x1A	26	Get SGEE Age			X				
			0x1B	27	ECLM Host File Content			X				
			0x1C	28	ECLM Host ACK/NACK			X				
			0x1D	29	ECLM Get NVM Header			X				
0xFD	253	EE_STORAGE_CONTROL			X							

MID (hex)	MID (dec)	Definition	Sub ID (hex)	Sub ID (dec)	Definition	OSP	SSB	1	2	3	
		MID_EE_INPUT (Continued)	0xFE	254	SSB_EE_DISABLE_EE_SECS					X	
			0xFF	255	SSB_EE_DEBUG		X				
0xE9	233	MID_SetRFParams	0x01	1	SET_GRF3iPLUS_IF_BANDWIDTH		X				
			0x02	2	SET_GRF3iPLUS_POWER_MODE		X				
			0x0A	10	POLL_GRF3iPLUS_IF_BANDWIDTH		X				
			0x0B	11	POLL_GRF3iPLUS_POWER_MODE		X				
			0xA5	165	SET_GRF3iPLUS_IF_TESTPOINT_PARAMETER						
			0xA6	166	SET_GRF3iPLUS_AGC_MODE						
			0xFE	254	OUTPUT_GRF3iPLUS_POWER_MODE				X		
			0xFF	255	OUTPUT_GRF3iPLUS_IF_BANDWIDTH				X		
0xEA	234	MID_SensorControl	0x01	1	SENSOR_CONFIG	X					
			0x02	2	SENSOR_SWITCH	X					
0xEB	235									X	
0xEC	236									X	
0xED	237									X	
0xEE	238									X	
0xEF	239									X	

MID (hex)	MID (dec)	Definition	Sub ID (hex)	Sub ID (dec)	Definition	OSP	SSB	1	2	3
0xF0	240									X
0xF1	241									X
0xF2	242									X
0xF3	243									X
0xF4	244	MID_BufferFull								X
0xF5	245	MID_ParityError								X
0xF6	246	MID_RcvFullError								X
0xF7	247	MID_RcvOverrunError								X
0xF8	248	MID_FrameError								X
0xF9	249	MID_BreakInterrupt								X
0xFA	250	MID_BufferTerminated								X
0xFB	251	MID_TransportDataErr								X
0xFC	252	MID_CheckSumError								X
0xFD	253	MID_LengthError								X
0xFE	254	MID_MessageTypeError								X
0xFF	255	MID_ASCIIData				X				

Table 4.1: OSP Message Access

4.2 Mapping between AI3 Messages and OSP Messages

AI3	OSP	Input or Output
AI3 Request	Position Request	I
	Set Ionospheric Model	I
	Set Satellite Ephemeris and Clock Corrections	I
	Set Almanac Assist Data	I
	Set Acquisition Assistance Data	I
	Set Real-Time Integrity Deleted ICD_REV_NUM, ALM_REQ_FLAG, IONO_FLAG	I
	Move NEW_ENHANCE_TYPE to "Hardware Configuration Response" message	
	Don't support coarse location method anymore, deleted COARSE_POS_REF_LAT and COARSE_POS_REF_LON	
AI3 Response	Position Response	O
	Measurement Response	O
	Deleted fields from SUBALM_FLAG to SUBALM_TOA	O
	Deleted fields from CP_VALID_FLAG to PR_ERR_TH	
ACK/NACK Message SLC/CP Message ACK.NACK	ACK/NACK/Error Notification	I and O
SLC Ephemeris Status Request	Ephemeris Status Request	I
Unsolicited SLC Ephemeris Status Response	Ephemeris Status Response	O
Solicited SLC Ephemeris Status Response		
Ephemeris Status Response		
Poll Almanac Request	Almanac Request	I
Poll Almanac Response	Almanac Response	O
Unsolicited SLC EE Integrity Warning	Replaced by the existing SSB message: "Extended Ephemeris Integrity – Message ID 56 (Sub ID 2)"	

A13	OSP	Input or Output
Unsolicited SLC EE Clock Bias Adjustment	Replaced by the existing SSB message: "EE Provide Synthesized Ephemeris Clock Bias Adjustment Message – Message ID 56 (Sub ID 4)"	I
CP Send Auxiliary	Set UTC Model	
NAV Message	Set GPS TOW Assist	I
	Set Auxiliary Navigation Model Parameters	I
Aiding Request Message	Deleted since RRC/RRLP doesn't provide NAV subframe aiding	
NAV Subframe 1_2_3 Aiding Response Message	NAV Subframe 1_2_3 Aiding Response Message	
NAV Subframe 4_5 Aiding Response Message	NAV Subframe 4_5 Aiding Response Message	
Broadcast Ephemeris Request Message	Broadcast Ephemeris Request	I
Broadcast Ephemeris Response Message	Broadcast Ephemeris Response	O

Table 4.2: Mapping between A13 Messages and OSP Messages

4.3 Mapping between F Messages and OSP Messages

F	OSP	Input or Output
Session Open Request	Session Open Request	I
Session Open Notification	Session Open Notification	O
Error Notification	Replaced by "ACK/NACK/Error Notification" message	
SLC Status	SLC Status	O
Session Closing Request	Session Closing Request	I
Session Closing Notification	Session Closing Notification	O
Hardware Configuration Request	Hardware Configuration Request	O
Hardware Configuration Response	Hardware Configuration Response	I
Time Transfer Request	Time Transfer Request	O
Time Transfer Response	Time Transfer Response	I
Frequency Transfer Request	Frequency Transfer Request	O
Frequency Transfer Response	Frequency Transfer Response	I
Approximate MS Position Request	Approximate MS Position Request	O

F	OSP	Input or Output
Approximate MS Position Response	Approximate MS Position Response	I
Time_Frequency_Approximate Position Status Request	Time_Frequency_Approximate_Position Status Request	I
Time_Frequency_Approximate Position Status Response	Time_Frequency_Approximate_Posit ion Status Response	O
Push Aiding Availability	Push Aiding Availability	I
ACK/NACK for Push Aiding Availability	ACK/NACK for Push Aiding Availability	O
Wireless Power Request	Deleted since we have not implemented this feature	
Wireless Power Response	Deleted since we have not implemented this feature	
Reject	Reject	O
Reset GPS Command	Replaced by the existing "Initialize Data Source – Message ID 128" message	
Software Version Request	Software Version Request	I
Software Version Response	Software Version Response	O
Set APM	"Power Mode Request" Msg ID 218 subsumes	I
Ack APM	"Power Mode Response" Msg ID 90 subsumes	O
Serial Port Setting Request	Serial Port Setting Request	I
Serial Port Setting Response	Serial Port Setting Response	O
Channel Open Request	Deleted since there is no logical channel anymore	
Channel Open Response	Deleted since there is no logical channel anymore	
Channel Close Request	Deleted since there is no logical channel anymore	
Channel Close Response	Deleted since there is no logical channel anymore	
Channel Priority Request	Deleted since there is no logical channel anymore	
Channel Priority Response	Deleted since there is no logical channel anymore	
Priority Query	Deleted since there is no logical channel anymore	

F	OSP	Input or Output
Priority Response	Deleted since there is no logical channel anymore	
Channel Load Query	Channel Load Query	I
Channel Load Response	Channel Load Response	O
Tx Blanking Request	Tx Blanking Request	I
Tx Blanking Response	Tx Blanking Response	O
Test Mode Configuration Request	Test Mode Configuration Request	I
Test Mode Configuration Response	Test Mode Configuration Response	O
ICD Version Request	Deleted since we cannot trace AI3 and F ICD version anymore	
ICD Version Response	Deleted since we cannot trace AI3 and F ICD version anymore	

Table 4.3: Mapping between F Messages and OSP Messages

5 Input Message Definitions

5.1 Poll GRF3i+ Normal/Low Power Mode - Message ID 233, Sub ID 11

This message allows user to poll whether the GRF3i+ is currently in normal or low power mode. The SubMsgID for this message is fixed to 0x0B.

Table Table 5.1 contains the input values for the following example:

Sub Message ID = 0x0B

Example:

- A0A20002 – Start Sequence and Payload Length (2 bytes)
- E90B – Payload
- 00F4B0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1U		E9		Decimal 233
Sub Message ID	1U		0B		0B: Poll GRF3i+ IF power mode

Table 5.1: Poll GRF3i+ Normal/Low Power Mode - Message ID 233, Sub ID 11

Note:

This message would be acknowledged to indicate SUCCESS/FAILURE.

SUCCESS: would be acknowledged with "Ack: MID_GRF3iPlusParams" using Command Acknowledgment – SSB Message ID 11.

FAILURE: would be acknowledged with "Rejected: MID_GRF3iPlusParams" using Command Negative Acknowledgment – SSB Message ID 12.

A corresponding output message (Message ID: 233 with SubMsgID 0xFE) with parameters status would also be sent as a response to this query message.

5.2 SiRFDRive Input Messages - Message IDs 45 and 172

5.2.1 TrkADCOdoGPIO - Message ID 45, 0x2D

MID Number:	0x2D
MID Name:	MID_TrkADCOdoGPIO
MID Purpose:	Input Tracker to NAV – ADC/ODOMETER DATA

Table 5.2: TrkADCOdoGPIO - Message ID 45, 0x2D

Message Length: 111 bytes @ 1Hz or 12 bytes @ 10Hz

Rate: 111 bytes @ 1Hz or 12 bytes @ 10Hz

Binary Message Definition:

This message is sent at a rate of 1Hz (default) or 10Hz whenever it is enabled by the control words in the Track Reset message on the GSP2t. Both ADC channels are sampled in a roundrobin fashion at 50Hz whose raw measurements are then averaged every 100mSeconds in the tracker interrupt along with the current odometer counter value and GPIO states. The GSP2t Rev D on-chip ADC is a 14-bit successive approximation two channel ADC outputting signed 16-bit values from –12000 to 28000.

The GSP2eLP with DR option currently only has one ADC input that is sampled at 50Hz and whose raw measurements are then averaged every 100mSeconds in the tracker interrupt along with the current odometer counter and GPIO state. The DR option is a Maxim MAX1240 12-bit ADC on a daughter-board installed on the SDKL. The 12-bit resolution provides unsigned values from 0 to 4095.

On the GSP2t, this message can be transmitted in 1Hz mode or 10Hz mode. On the GSP2eLP, this message is only transmitted in 1Hz mode. In 1Hz mode, there are 10 data measurements blocks in one single message. In 10Hz mode, there is a single data measurement per message.

Byte #	Field	Data Type	Bytes	Units	Range	Res
1	Message ID	UINT8	1	n/a	0x2D	n/a
2 + (n-1)*11 ⁽¹⁾	currentTime ⁽²⁾	UINT32	4	ms	0-4294967295	n/a
6 + (n-1)*11 ⁽¹⁾	Gyro adc Avg ⁽³⁾	UINT16 Or INT16	2	n/a	0 to 4095 (GSP2eLP w/ DR option) Or -12000 to 28000 (GSP2t)	n/a
8 + (n-1)*11 ⁽¹⁾	adc3Avg ⁽⁴⁾	UINT16 Or INT16	2	n/a	0 (GSP2eLP w/ DR option) Or -12000 to 28000 (GSP2t)	n/a
10 + (n-1)*11 ⁽¹⁾	odoCount ⁽⁵⁾	UINT16	2	n/a	0 to 65535	n/a
12 + (n-1)*11 ⁽¹⁾	gpioStat ⁽⁶⁾	UINT8	1	Bit Map	bit 0 – if = 1: Reverse “ON” bits 1 to 7 Reserved	n/a

Table 5.3: TrkADCodoGPIO Message

⁽¹⁾ n corresponds to either 1 or 1-10 depending on whether the message comes out a 10Hz (10 messages 1 data set) or 1Hz (1 message 10 data sets)

⁽²⁾ Tracker Time, millisecond counts

⁽³⁾ Averaged measurement from Gyro input. On the GSP2t, this is the ADC[2] input, on the GSP2eLP, this is the Maxim ADC input

⁽⁴⁾ On a GSP2eLP system, there is currently only one ADC input so this field is always 0.

⁽⁵⁾ Odometer counter measurement at the most recent 100mSec tracker interrupt. This field will rollover to 0 after 65535

⁽⁶⁾ GPIO input states at the most recent 100mSec tracker interrupt

API:

```
#define NUM_OF_DR_RAW 10
typedef struct
{
    UINT32 currentTime;
    UINT16 adc2Avg;
    UINT16 adc3Avg;
    UINT16 odoCount;
    UINT8 gpioStat;
} tADCOdometer;
typedef struct
{
    struct
    {
        tADCOdometer ADCOdometer [NUM_OF_DR_RAW];
    } DrRaw;
} tDrRawData, *tDrRawDataPtr;
```

5.2.2 SetDrNavInit - Message ID 172 (0xAC), Sub ID 1 (0x01)

MSG ID:

MID Number:	0xAC
MID Name:	MID_DrIn
SID Number:	0x01
SID Name:	SID_SetDrNavInit
SID Purpose:	DR NAV Initialization Input Message

Table 5.4: SetDrNavInit - Message ID 172 (0xAC), Sub ID 1 (0x01)

Message Length: 28 bytes

Rate: Input

Byte #	Field	Data Type	Bytes	Units	Range	Res
1	Message ID	UINT8	1	n/a	0xAC	n/a
2	Sub-ID	UINT8	1	n/a	0x01	n/a
3-6	Latitude	INT32	4	deg	-90 to 90	10 ⁻⁷
7-10	Longitude	INT32	4	deg	-180 to 180	10 ⁻⁷
11-14	Altitude (from Ellipsoid)	INT32	4	meters	-2000 to 100000.0	0.01
15-16	Heading (True)	UINT16	2	deg	0 to 360	0.01
17-20	Clock Offset	INT32	4	Hz	25000 to 146000	n/a
21-24	Time Of Week	UINT32	4	secs	0 to 604800.00	0.001
25-26	Week Number	UINT16	2	n/a	0 to 1023	n/a
27	Number of Channels	UINT8	1	n/a	1-12	n/a
28	Reset Configuration	UINT8	1	BitMap	Bit 0: Data valid flag (set warm/hot start) Bit 1: Clear ephemeris (set warm start) Bit 2: Clear memory (set cold start) Bit 3: Factory reset Bit 4: Enable raw track data Bit 5: Enable debug data for SiRF binary Bit 6: reserved Bit 7: reserved	n/a

Table 5.5: SetDrNavInit Message

API:

```
typedef struct
{
    INT32    Lat;
    INT32    Lon;
    INT32    Alt;
    UINT16   Hd;
    INT32    clkOffset;
    UINT32   timeOfWeek;
    UINT16   weekno;
    UINT8    chnlCnt;
    UINT8    resetCfg;
} MI_DR_NAV_INIT;
```

5.2.3 SetDrNavMode - Message ID 172 (0xAC), Sub ID 2 (0x02)

MID Number:	0xAC
MID Name:	MID_DrIn
SID Number:	0x02
SID Name:	SID_SetDrNavMode
SID Purpose:	DR NAV Mode Control Input Message

Table 5.6: SetDrNavMode - Message ID 172 (0xAC), Sub ID 2 (0x02)

Message Length: 4 bytes

Rate: Input

Byte #	Field	Data Type	Bytes	Units	Range	Res
1	Message ID	UINT8	1	n/a	0xAC	n/a
2	Sub-ID	UINT8	1	n/a	0x02	n/a
3	DR NAV Mode Control	UINT8	1	Bit Map	Bit settings are exclusive Bit 0: 1 = GPS Nav Only Bit 1: 1 = DR Nav Ok (with Stored or Default Calibration) Bit 2: 1 = DR Nav Ok with Current GPS calibration Bit 3: 1 = DR NAV Only Bits 4-7 Reserved	n/a
4	Reserved	UINT8	1	n/a	undefined	n/a

Table 5.7: SetDrNavMode Message

API:

```
typedef struct
{
    UINT8 Mode;
    INT8 Reserved;
} MI_DR_NAV_MODE;
```

5.2.4 SetGyrFactCal - Message ID 172 (0xAC), Sub ID 3 (0x013)

MID Number:	0xAC
MID Name:	MID_DrIn
SID Number:	0x03
SIDName:	SID_SetGyrFactCal
SIDPurpose:	Gyro Factory Calibration Control Input Message

Table 5.8: SetGyrFactCal - Message ID 172 (0xAC), Sub ID 3 (0x013)

Message Length: 4 bytes

Rate: Input

Byte #	Field	Data Type	Bytes	Units	Range	Res
1	Message ID	UINT8	1	n/a	0xAC	n/a
2	Sub-ID	UINT8	1	n/a	0x03	n/a
3	Gyro Factory Calibration Control ⁽¹⁾	Bit Map	1	n/a	Bit 0 = 1: Start Gyro Bias calibration Bit 1 = 1: Start Gyro Scale Factor calibration ⁽²⁾	n/a
4	Reserved	UINT8	1	n/a	undefined	n/a

Table 5.9: SetGyrFactCal Message

⁽¹⁾ The bit map of the Field variable controls the gyro factory calibration stages. The Gyro Factory Calibration procedure calls for the Gyro Bias Calibration to be done first while the gyro is stationary, and the Gyro Scale Factor Calibration to be done next while the gyro rotates smoothly through 360 degrees.

⁽²⁾ The individual bits are referenced by their offset from the start of the bit map, starting with offset 0 for the LSB of the Least Significant byte.

API:

```
typedef struct
{
    UINT8 Cal;
    UINT8 Reserved;
} MI_GYR_FACT_CAL;
```

5.2.5 SetDrSensParam - Message ID 172 (0xAC), Sub ID 4 (0x04)

MID Number:	0xAC
MID Name:	MID_DrIn
SID Number:	0x04
SID Name:	SID_SetDrSensParam
SID Purpose:	DR Sensor's Parameters Input Message

Table 5.10: SetDrSensParam - Message ID 172 (0xAC), Sub ID 4 (0x04)

Message Length: 7 bytes

Rate: Input

Byte #	Field	Data Type	Bytes	Units	Range	Res
1	Message ID	UINT8	1	n/a	0xAC	n/a
2	Sub-ID	UINT8	1	n/a	0x04	n/a
3	Baseline Speed Scale Factor	UINT8	1	ticks/m	1 to 255 (default:4)	1
4-5	Baseline Gyro Bias	UINT16	2	zero rate Volts	2.0 to 3.0 (default:2.5)	0.0001
6-7	Baseline Gyro Scale Factor	UINT16	2	mV / (deg/ sec)	1 to 65 (default: 22)	0.001

Table 5.11: SetDrSensParam Message

API:

```
typedef struct
{
    UINT8   BaseSsf;
    UINT16  BaseGb;
    UINT16  BaseGsf;
} MI_DR_SENS_PARAM;
```

5.2.6 PollDrValid - Message ID 172 (0xAC), Sub ID 5 (0x05)

MSG ID:

MID Number:	0xAC
MID Name:	MID_DrIn
SID Number:	0x05
SID Name:	SID_PollDrValid
SID Purpose:	Request Dr Valid to be outputted

Table 5.12: PollDrValid - Message ID 172 (0xAC), Sub ID 5 (0x05)

Message Length: 10 bytes

Rate: Input

Byte #	Field	Data Type	Bytes	Units	Range	Res
1	Message ID	UINT8	1	n/a	0xAC	n/a
2	Sub-ID	UINT8	1	n/a	0x05	n/a
3-6	Data Valid	UINT32	4	BitMap	Bit 0: 1= invalid position Bit 1: 1= invalid position error Bit 2: 1= invalid heading Bit 3: 1= invalid heading error Bit 4: 1= invalid speed scale factor Bit 5: 1= invalid speed scale factor error Bit 6: 1= invalid gyro bias Bit 7: 1= invalid gyro bias error Bit 8: 1= invalid gyro scale factor Bit 9: 1= invalid gyro scale factor error Bit 10: 1= invalid baseline speed scale factor Bit 11: 1= invalid baseline gyro bias Bit 12: 1= invalid baseline gyro scale factor Bit 13 - 31: reserved	n/a
7-10	Reserved	UINT32	4	n/a	undefined	n/a

Table 5.13: PollDrValid Message

API:

```
typedef struct
{
    UINT32 Valid;
    UINT32 Reserved;
} MI_DR_VALID;
```

5.2.7 PollGyrFactCal - Message ID 172 (0xAC), Sub ID 6 (0x06)

Number:	0xAC
Name:	MID_DrIn
Number:	0x06
Name:	SID_PollGyrFactCal
Purpose:	Request gyro calibration data to be outputted

Table 5.14: PollGyrFactCal - Message ID 172 (0xAC), Sub ID 6 (0x06)

Message Length: 4 bytes

Rate: Input

Byte #	Field	Data Type	Bytes	Units	Range	Res
1	Message ID	UINT8	1	n/a	0xAC	n/a
2	Sub-ID	UINT8	1	n/a	0x06	n/a
3	Calibration	UINT8	1	bitmap	Bit 0: 1 = start gyro bias calibration Bit 1: 1 = start gyro scale factor calibration	n/a
4	Reserved	UINT8	1	n/a	undefined	n/a

Table 5.15: PollGyrFactCal Message

API:

```
typedef struct
{
    UINT8 Cal;
    UINT8 Reserved;
} MI_GYR_FACT_CAL;
```

5.2.8 PollDrSensParam - Message ID 172 (0xAC), Sub ID 7 (0x07)

MID Number:	0xAC
MID Name:	MID_DrIn
SID Number:	0x07
SID Name:	SID_PollDrSensParam
SID Purpose:	Request gyro & odo scale factors be outputted

Table 5.16: PollDrSensParam - Message ID 172 (0xAC), Sub ID 7 (0x07)

Message Length: 7 bytes

Rate: Input

Binary Message Definition:

Byte #	Field	Data Type	Bytes	Units	Range	Res
1	Message ID	UINT8	1	n/a	0xAC	n/a
2	Sub-ID	UINT8	1	n/a	0x07	n/a
3	Baseline Speed Scale Factor	UINT8	1	ticks/m	1 to 255 (default:4)	1
4-5	Baseline Gyro Bias	UNIT16	2	zero rate Volts	2.0 to 3.0 (default: 2.5)	0.0001
6-7	Baseline Gyro Scale Factor	UINT16	2	mV / (deg/ sec)	1 to 65 (default: 22)	0.001

Table 5.17: PollDrSensParam Message

API:

```
typedef struct
{
    UINT8 BaseSsf;
    UINT16 BaseGb;
    UINT16 BaseGsf;
} MI_DR_SENS_PARAM;
```

5.2.9 InputCarBusData - Message ID 172 (0xAC), Sub ID 9 (0x09)

MID Number:	0xAC
MID Name:	MID_DrIn
SID Number:	0x09
SID Name:	SID_InputCarBusData
SID Purpose:	Input Car Bus Data to NAV

Table 5.18: InputCarBusData - Message ID 172 (0xAC), Sub ID 9 (0x09)

Message Length: 22 to 182 bytes

Rate: Input

Byte #	Field	Data Type	Bytes	Units	Range	Res
1	Message ID	UINT8	1	n/a	0xAC	n/a
2	Sub-ID	UINT8	1	n/a	0x09	n/a
3	Sensor Data Type (SDT)	UINT8	1	N/A	0-127 1: Gyro, Speed Data, and Reverse 2: 4 Wheel Pulses, and Reverse 3: 4 Wheel Speed, and Reverse 4: 4 Wheel Angular Speed, and Reverse 5: Gyro, Speed Data, NO Reverse 6: 4 Wheel Pulses, NO Reverse 7: 4 Wheel Speed, NO Reverse 8: 4 Wheel Angular Speed, NO Reverse 9: Gyro, Speed Data, Reverse, Steering Wheel Angle, Longitudinal Acceleration, Lateral Acceleration 10: Yaw Rate Gyro, Downward Acceleration (Z), Longitudinal Acceleration (X), Lateral Acceleration (Y) 10-127: Reserved	N/A
4	Number of Valid data sets	UINT8	1	N/A	0-11	N/A
5	Reverse Bit Map N/A for SDT = 10	UINT16	2	N/A	Bit-wise indication of REVERSE status corresponding to each sensor data set, i.e. bit 0 corresponds to the first data set, bit 1 corresponds to the second data set, etc.	N/A

Byte #	Field	Data Type	Bytes	Units	Range	Res
7+(N- 1)* 16 ⁽¹⁾	Valid Sensor Indication	UINT8	1	N/A	Valid/Not Valid indication for each one of the 4 possible sensor inputs in a individual data set; when a particular bit is set to 1 the corresponding data is Valid, when the bit is set to 0 the corresponding data is NOT valid. Bit 0 corresponds to Data Set Time Tag Bit 1 corresponds to Odometer Speed Bit 2 corresponds to Data 1 Bit 3 corresponds to Data 2 Bit 4 corresponds to Data 3 Bit 5 corresponds to Data 4 Bits 6-7 : Reserved	N/A
8+(N- 1)* 16 ⁽¹⁾	Data Set Time Tag	UINT32	4	msec	0-4294967295	1
12+ (N- 1)*16 ⁽¹⁾	Odometer Speed (also known as VSS) N/A for SDT = 10	UINT16	2	m/sec	0 to 100	0.01
14+(N- 1)* 16 ⁽¹⁾	Data 1 (Depends on SDT)	INT16	2	(Depends on (SDT))	(Depends on (SDT))	(Depends on (SDT))
	SDT = 1,5, 9,10: Gyro Rate			Deg/sec	-120 to 120	0.01
	SDT = 2, 6: Right Front Wheel Pulses			N/A	4000	1
	SDT = 3, 7: Right Front Wheel Speed			m/sec	0 to 100	0.01
	SDT = 4, 8: Right Front Wheel Angular Speed			rad/sec	-327.67 to 327.67	0.01

Byte #	Field	Data Type	Bytes	Units	Range	Res
16+(N- 1)* 16 ⁽¹⁾	Data 2 (Depends on SDT)	INT16	2	(Depends on (SDT))	(Depends on (SDT))	(Depends on (SDT))
	SDT = 1: N/A			N/A	N/A	N/A
	SDT =2 , 6: Left Front Wheel Pulses			N/A	4000	1
	SDT = 3, 7: Left Front Wheel Speed			m/sec	0 to 100	0.01
	SDT = 4, 8: Left Front Wheel Angular Speed			rad/sec	-327.67 to 327.67	0.01
	SDT = 9: Steering Wheel Angle			deg	-720 to 720	0.05
	SDT = 10: Downwards Acceleration			m/sec ²	-15 to 15	0.001

Byte #	Field	Data Type	Bytes	Units	Range	Res
18+(N- 1)* 16 ⁽¹⁾	Data 3 (Depends on SDT)	INT16	2	(Depends on (SDT))	(Depends on (SDT))	(Depends on (SDT))
	SDT = 1: N/A			N/A	N/A	N/A
	SDT = 2, 6: Right Rear Wheel Pulses			N/A	4000	1
	SDT = 3, 7: Right Rear Wheel Speed			m/sec	0 to 100	0.01
	SDT = 4, 8: Right Rear Wheel Speed			rad/sec	-327.67 to 327.67	0.01
	SDT = 9,10:Longitudinal Acceleration			m/sec ²	-15 to 15	0.001

Byte #	Field	Data Type	Bytes	Units	Range	Res
20+(N- 1)* 16 ⁽¹⁾	Data 4 (Depends on SDT)	INT16	2	(Depends on (SDT))	(Depends on (SDT))	(Depends on (SDT))
	SDT = 1: N/A			N/A	N/A	N/A
	SDT = 2, 6: Left Rear Wheel Pulses			N/A	4000	1
	SDT = 3, 7: Left Rear Wheel Speed			m/sec	0 to 100	0.01
	SDT = 4, 8: Left Rear Wheel Speed			rad/sec	-327.67 to 327.67	0.01
	SDT = 9,10: Lateral Acceleration			m/sec ²	-15 to 15	0.001
22+(N- 1)* 16 ⁽¹⁾	Reserved	UINT8	1	N/A	N/A	N/A

Table 5.19: InputCarBusData Message

⁽¹⁾ N indicates the number of valid data sets in the message

API:

```
typedef struct
{
    UINT8   ValidSensorIndication;
    UINT32  DataSetTimeTag;
    UINT16  OdometerSpeed;
    INT16   Data1;
    INT16   Data2;
    INT16   Data3;
    INT16   Data4;
    UINT8   Reserved;
} tCarSensorData;

typedef struct
{
    UINT8   SensorDataType;
    UINT8   NumValidDataSets;
    UINT16  ReverseBitMap;
    tCarSensorData CarSensorData[11];
} tCarBusData;
```

5.2.10 CarBusEnabled - Message ID 172 (0xAC), Sub ID 10 (0x0A)

Number:	0xAC
Name:	MID_DrIn
Number:	0x0A
Name:	SID_CarBusEnabled
Purpose:	Indicates Car Bus is enabled and ready for function

Table 5.20: CarBusEnabled - Message ID 172 (0xAC), Sub ID 10 (0x0A)

Message Length: 6 bytes

Rate: Input

Byte #	Field	Data Type	Bytes	Units	Range	Res
1	Message ID	UINT8	1	n/a	0xAC	n/a
2	Sub-ID	UINT8	1	n/a	0x0A	n/a
3-6	Mode ⁽¹⁾	UINT8	4	n/a	undefined	n/a

Table 5.21: CarBusEnabled Message

⁽¹⁾ For future use.

API:

```
typedef struct
{
    UINT32 Mode;
} MI_DR_CAR_BUS_ENABLED;
```

5.2.11 CarBusDisabled - Message ID 172 (0xAC), Sub ID 11 (0x0B)

MID Number:	0xAC
MID Name:	MID_DrIn
SID Number:	0x0B
SID Name:	SID_CarBusDisabled
SID Purpose:	Indicates Car Bus is not enabled and not ready for function

Table 5.22: CarBusDisabled - Message ID 172 (0xAC), Sub ID 11 (0x0B)

Message Length: 6 bytes

Rate: Input

Byte #	Field	Data Type	Bytes	Units	Range	Res
1	Message ID	UINT8	1	n/a	0xAC	n/a
2	Sub-ID	UINT8	1	n/a	0x0B	n/a
3-6	Mode ⁽¹⁾	UINT32	4	n/a	undefined	n/a

Table 5.23: CarBusDisabled Message

⁽¹⁾ For future use.

API:

```
typedef struct
{
    UINT32 Mode;
} MI_DR_CAR_BUS_DISABLED;
```

5.2.12 SetGenericSensorParam - Message ID 172 (0xAC), Sub ID 12 (0x0C)

MID Number:	0xAC
MID Name:	MID_DrIn
SID Number:	0x0C
SID Name:	SID_SetGenericSensorParam
SID Purpose:	DR set Sensor's Parameters Input Message

Table 5.24: SetGenericSensorParam - Message ID 172 (0xAC), Sub ID 12 (0x0C)

Message Length: 30 bytes

Rate: Input

Byte #	Field	Data Type	Bytes	Units	Range	Res
1	Message ID	UINT8	1	n/a	0xAC	n/a
2	Sub-ID	UINT8	1	n/a	0x0C	n/a
3	Sensors[0].SensorType	UINT8	1	N/A	GYRO_SENSOR = 0x1 ACCELERATION_SENSOR = 0x2	N/A
4 – 5	Sensors[0].ZeroRateVolts	UINT16	2	volts	0 to 5.0 ⁽¹⁾	0.0001
6– 7	Sensors[0].MilliVoltsPer	UINT16	2	millivolts	0 to 1000 ⁽²⁾	0.0001
8 – 9	Sensors[0].ReferenceVoltage	UINT16	2	volts	0 to 5.0	0.0001
10	Sensors[1].SensorType	UINT8	1	N/A	GYRO_SENSOR = 0x1 ACCELERATION_SENSOR = 0x2	N/A
11 – 12	Sensors[1].ZeroRateVolts	UINT16	2	volts	0 to 5.0	0.0001
13 – 14	Sensors[1].MilliVoltsPer	UINT16	2	millivolts	0 to 1000	0.0001
15 – 16	Sensors[1].ReferenceVoltage	UINT16	2	volts	0 to 5.0	0.0001
17	Sensors[2].SensorType	UINT8	1	N/A	GYRO_SENSOR = 0x1 ACCELERATION_SENSOR = 0x2	N/A
18 – 19	Sensors[2].ZeroRateVolts	UINT16	2	volts	0 to 5.0	0.0001

Byte #	Field	Data Type	Bytes	Units	Range	Res
20 – 21	Sensors[2].MilliVoltsPer	UINT16	2	millivolts	0 to 1000	0.0001
22 – 23	Sensors[2].ReferenceVoltage	UINT16	2	volts	0 to 5.0	0.0001
24	Sensors[3].SensorType	UINT8	1	N/A	GYRO_SENSOR = 0x1 ACCELERATION_SENSOR = 0x2	N/A
25 – 26	Sensors[3].ZeroRateVolts	UINT16	2	volts	0 to 5.0	0.0001
27 – 28	Sensors[3].MilliVoltsPer	UINT16	2	millivolts	0 to 1000	0.0001
29 – 30	Sensors[3].ReferenceVoltage	UINT16	2	volts	0 to 5.0	0.0001

Table 5.25: SetGenericSensorParam Message

- ⁽¹⁾ To restore ROM defaults for ALL sensors enter the value 0xdeadabba here. You must still include the remainder of the message but these values will be ignored.
- ⁽²⁾ For gyro this is millivolts per degree per second. For the acceleration sensor it is millivolts per metre per second ²

API:

```
typedef struct
{
    UINT8  SensorType;
    UINT32 ZeroRateVolts;
    UINT32 MilliVoltsPer;
    UINT32 ReferenceVoltage;

}MI_SensorDescriptionType;

typedef struct
{
    MI_SensorDescriptionType Sensors [MAX_NUMBER_OF_SENSORS];

} MI_DR_SENS_PARAM;
```


5.2.13 PollGenericSensorParam - Message ID 172 (0xAC), Sub ID 13 (0x0D)

MID Number:	0xAC
MID Name:	MID_DrIn
SID Number:	0x0D
SID Name:	SID_PollGenericSensorParam
SID Purpose:	Request sensor scale factors be outputted

Table 5.26: PollGenericSensorParam - Message ID 172 (0xAC), Sub ID 13 (0x0D)

Message Length: 30 bytes

Rate: Input

Byte #	Field	Data Type	Bytes	Units	Range	Res
1	Message ID	UINT8	1	N/A	0xAC	N/A
2	Sub-ID	UINT8	1	N/A	0x0D	N/A
3	Sensors[0].SensorType	UINT8	1	N/A	GYRO_SENSOR = 0x1 ACCELERATION_SENSOR = 0x2	N/A
4 – 5	Sensors[0].ZeroRateVolts	UINT16	2	volts	0 to 5.0 ⁽¹⁾	0.0001
6– 7	Sensors[0].MilliVoltsPer	UINT16	2	millivolts	0 to 1000 ⁽²⁾	0.0001
8 – 9	Sensors[0].ReferenceVoltage	UINT16	2	volts	0 to 5.0	0.0001
10	Sensors[1].SensorType	UINT8	1	N/A	GYRO_SENSOR = 0x1 ACCELERATION_SENSOR = 0x2	N/A
11 – 12	Sensors[1].ZeroRateVolts	UINT16	2	volts	0 to 5.0	0.0001
13 – 14	Sensors[1].MilliVoltsPer	UINT16	2	millivolts	0 to 1000	0.0001
15 – 16	Sensors[1].ReferenceVoltage	UINT16	2	volts	0 to 5.0	0.0001
17	Sensors[2].SensorType	UINT8	1	N/A	GYRO_SENSOR = 0x1 ACCELERATION_SENSOR = 0x2	N/A
18 – 19	Sensors[2].ZeroRateVolts	UINT16	2	volts	0 to 5.0	0.0001

Byte #	Field	Data Type	Bytes	Units	Range	Res
20 – 21	Sensors[2].MilliVoltsPer	UINT16	2	millivolts	0 to 1000	0.0001
22 – 23	Sensors[2].ReferenceVoltage	UINT16	2	volts	0 to 5.0	0.0001
24	Sensors[3].SensorType	UINT8	1	N/A	GYRO_SENSOR = 0x1 ACCELERATION_SENSOR = 0x2	N/A
25 – 26	Sensors[3].ZeroRateVolts	UINT16	2	volts	0 to 5.0	0.0001
27 – 28	Sensors[3].MilliVoltsPer	UINT16	2	millivolts	0 to 1000	0.0001
29 – 30	Sensors[3].ReferenceVoltage	UINT16	2	volts	0 to 5.0	0.0001

Table 5.27: PollGenericSensorParam Message

- (¹) To restore ROM defaults for ALL sensors enter the value 0xdeadabba here. You must still include the remainder of the message but these values will be ignored.
- (²) For gyro this is millivolts per degree per second. For the acceleration sensor it is millivolts per metre per second ^ 2

API:

```
#define MAX_NUMBER_OF_SENSORS 0x4
typedef struct
{
    UINT8  SensorType;
    UINT32 ZeroRateVolts;
    UINT32 MilliVoltsPer
    UINT32 ReferenceVoltage;

}MI_SensorDescriptionType;

typedef struct
{
    MI_SensorDescriptionType Sensors [MAX_NUMBER_OF_SENSORS];
} MI_DR_SENS_PARAM;
```

5.2.14 InputMMFData - Message ID 172 (0xAC), Sub ID 80 (0x50)

MID Number:	0xAC
MID Name:	MID_DrIn
SID Number:	0x50
SID Name:	SID_InputMMFData
SID Purpose:	Input MMF data into Nav

Table 5.28: InputMMFData - Message ID 172 (0xAC), Sub ID 80 (0x50)

Message Length: 86 bytes

Rate: Input at 1Hz

Byte #	Field	Data Type	Bytes	Units	Range	Res
1	Message ID	UINT8	1	n/a	0xAC	n/a
2	Sub-ID	UINT8	1	n/a	0x50	n/a
3 - 6	RefGpsTow	UINT32	4	sec	0 to 604800.00	0.001
7	NumValidDataSets ⁽¹⁾	UINT8	1	n/a	0 to 3	n/a
8	UseDataBitMap	UINT8	1	n/a	Bit 0 is LSB Bit 0 : 1 = Position must be updated if bit 3 = 1 0 = Position may be updated if bit 3 = 1 Bit 1: 1 = Heading must be updated if bit 4 = 1 0 = Heading may be updated if bit 4 = 1 Bit 2: 1 = Altitude must be updated if bit 5 = 1 0 = Altitude may be updated if bit 5 = 1 Bit 3: 1 = Position provided is valid 0 = Position provided is NOT valid Bit 4: 1 = Heading provided is valid 0 = Heading provided is NOT valid Bit 5: 1 = Altitude provided is valid 0 = Altitude provided is NOT valid Bit 6 to 7: Reserved.	n/a
9 – 12	Latitude[0]	INT32	4	deg	-90 to 90	1e-7f
13 – 16	Longitude[0]	INT32	4	deg	-180 to 180	1e-7f

Byte #	Field	Data Type	Bytes	Units	Range	Res
17-20	HorPosUncert[0]	UINT32	4	metres	0 to 0xffffffff	0.01
21-24	Altitude[0]	INT32	4	metre	-2000 to 120000	0.1
25-28	VerPosUncert[0]	UINT32	4	metre	122000	0.1
29-30	Heading[0]	UINT16	2	deg	0 to 360	0.01
31-32	HeadingUncert[0]	UINT16	2	deg	0 to 180	0.01
33-34	Reserved[0]	UINT16	2	n/a	undefined	n/a
35-38	Latitude[1]	INT32	4	deg	-90 to 90	1e-7f
39-42	Longitude[1]	INT32	4	deg	-180 to 180	1e-7f
43-46	HorPosUncert[1]	UINT32	4	metres	0 to 0xffffffff	0.01
47-50	Altitude[1]	INT32	4	metre	-2000 to 120000	0.1
51-54	VerPosUncert[1]	UINT32	4	metre	122000	0.1
55-56	Heading[1]	UINT16	2	deg	0 to 360	0.01
57-58	HeadingUncert[1]	UINT16	2	deg	0 to 180	0.01
59-60	Reserved[1]	UINT16	2	n/a	undefined	n/a
61-64	Latitude[2]	INT32	4	deg	-90 to 90	1e-7f
65-68	Longitude[2]	INT32	4	deg	-180 to 180	1e-7f

Byte #	Field	Data Type	Bytes	Units	Range	Res
69-72	HorPosUncert[2]	UINT32	4	metres	0 to 0xffffffff	0.01
73-76	Altitude[2]	INT32	4	metre	-2000 to 120000	0.1
77-80	VerPosUncert[2]	UINT32	4	metre	122000	0.1
81-82	Heading[2]	UINT16	2	deg	0 to 360	0.01
83-84	HeadingUncert[2]	UINT16	2	deg	0 to 180	0.01
85-86	Reserved[2]	UINT16	2	n/a	undefined	n/a

Table 5.29: InputMMFData Message

⁽¹⁾ Current implementation considers one and only one MMF packet.

API:

```
typedef struct
{
    FLOAT32    Latitude;
    FLOAT32    Longitude;
    FLOAT32    HorPosUncert;
    FLOAT32    Altitude;
    FLOAT32    VerPosUncert;
    FLOAT32    Heading;
    FLOAT32    HeadingUncert;
    UINT16     Reserved;
} tMapFeedbackData2NAV;

typedef struct
{
    UINT32     MeasurementTime;
    FLOAT32    RefGpsTow;
    UINT16     NumValidDataSets;
    UINT16     UseDataBitMap;
    tMapFeedbackData2NAV MMFData[3];
} tMapMatchedData2NAV;
```

5.2.15 SetMMFMode - Message ID 172 (0xAC), Sub ID 81 (0x51)

Note:

This is defined but not used by MMF.

MID Number:	0xAC
MID Name:	MID_DrIn
SID Number:	0x51
SID Name:	SID_SetMMFMode
SID Purpose:	Enable or disable MMF feedback processing within NAV

Table 5.30: SetMMFMode - Message ID 172 (0xAC), Sub ID 81 (0x51)

Message Length: 3 bytes

Rate: Input

Byte #	Field	Data Type	Bytes	Units	Range	Res
1	Message ID	UINT8	1	n/a	0xAC	n/a
2	Sub-ID	UINT8	1	n/a	0x51	n/a

Table 5.31: SetMMFMode Message

API:

```
typedef struct
{
    FLOAT32 Latitude;
    FLOAT32 Longitude;
    FLOAT32 HorPosUncert;
    FLOAT32 Altitude;
    FLOAT32 VerPosUncert;
    FLOAT32 Heading;
    FLOAT32 HeadingUncert;
    UINT16 Reserved;
} tMapFeedbackData2NAV;

typedef struct
{
    UINT32 MeasurementTime;
    FLOAT32 RefGpsTow;
    UINT16 NumValidDataSets;
    UINT16 UseDataBitMap;
} tMapMatchedData2NAV;

tMapFeedbackData2NAV MMFData[3];
} tMapMatchedData2NAV;
```

5.3 Advanced Power Management – Message ID 53

Implements Advanced Power Management (APM). APM allows power savings while ensuring that the quality of the solution is maintained when signal levels drop. APM does not engage until all information is received.

Example:

The following example sets the receiver to operate in APM mode with 0 cycles before sleep (continuous operation), 20 seconds between fixes, 50% duty cycle, a time between fixes priority and no preference for accuracy.

- A0A2000C - Start Sequence and Payload Length (12 bytes)
- 3501001400030700000A0100 - Payload
- 005FB0B3 - Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1		35		Decimal 53
APM Enabled	1		01		1 = True, 0 = False
Number Fixes	1		00		Number of requested APM cycles. Range 0 to 255 ⁽¹⁾
Time Between Fixes	1	1	14	sec	Requested time between fixes. Range 0 to 255 ⁽²⁾
Spare Byte 1	1		00		Reserved
Maximum Horizontal Error	1		03		Maximum requested horizontal error (See Table 5.33)

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Maximum Vertical Error	1		07		Maximum requested vertical error (See Table 5.33)
Maximum Response Time	1	1	00	sec	Maximum response time. Not currently used.
Time Acc Priority	1		00		0x00 = No priority 0x01 = Response Time Max has higher priority 0x02 = Horizontal Error Max has higher priority. Not currently used.
Power Duty Cycle	1	5	0A	%	Power duty cycle, defined as the time in full power to total operation time. 1->20; duty cycle (%) is this value *5 ⁽³⁾
Time Duty Cycle	1		01		Time/power duty cycle priority. 0x01 = Time between two consecutive fixes has priority 0x02 = Power duty cycle has higher priority. Bits 2..7 reserved for expansion.
Spare Byte 2	1		00		Reserved

Table 5.32: Advanced Power Management – Message ID 53

⁽¹⁾ A value of zero indicates that continuous APM cycles are requested.

⁽²⁾ It is bound from 10 to 180 s

⁽³⁾ If a duty cycle of 0 is entered, it is rejected as out of range. If a duty cycle value of 20 is entered, the APM module is disabled and continuous power operation is resumed.

Value	Position Error
0x00	< 1 meter
0x01	< 5 meter
0x02	< 10 meter
0x03	< 20 meter
0x04	< 40 meter
0x05	< 80 meter
0x06	< 160 meter
0x07	No Maximum
0x08 - 0xFF	Reserved

Table 5.33: Horizontal/Vertical Error

5.4 Initialize Data Source – Message ID 128

Causes the receiver to restart. Optionally, it can provide position, clock drift and time data to initialize the receiver.

Note:

Some software versions do not support use of the initializing data.

Table 6.269 contains the input values for the following example:

Command a Warm Start with the following initialization data: ECEF XYZ (-2686727 m, -4304282 m, 3851642 m), Clock Offset (75,000 Hz), Time of Week (86,400 sec), Week Number (924), and Channels (12). Raw track data enabled, Debug data enabled.

Example:

- A0A20019 - Start Sequence and Payload Length (25 bytes, or 26 bytes for GSD4e and later)
- 80FFD700F9FFBE5266003AC57A000124F80083D600039C0C33 - Payload
- 0A91B0B3 - Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1 U		80		Decimal 128
ECEF X	4 S		FFD700F9	meters	
ECEF Y	4 S		FFBE5266	meters	
ECEF Z	4 S		003AC57A	meters	
Clock Drift	4 S		000124F8	Hz	
Time of Week	4 U	*100	0083D600	sec	
Week Number	2 U		51F		Extended week number (0 - no limit)
Channels	1 U		0C		Range 1 to 12
Reset Configuration Bit Map	1 D		33		See Table 5.35

Table 5.34: Initialize Data Source – Message ID 128

Bit	Description
0	Data valid flag: 1 = Use data in ECEF X, Y, Z, Clock Offset, Time of Week and Week number to initialize the receiver; 0 = Ignore data fields
1	Clear Ephemeris from memory: blocks Snap or Hot Start from occurring
2	Clear all history (except clock drift) from memory: blocks Snap, Hot, and Warm Starts
3	Factory Reset: Clears all GPS memory including clock drift. Also clears almanac stored in flash memory ⁽¹⁾
4	Enable Nav Lib data (YES = 1, NO = 0) ⁽²⁾
5	Enable debug data (YES = 1, NO = 0)
6	Factory reset including Xo model ⁽³⁾ and clearing CW controller config settings ⁽⁴⁾
7	Perform full system reset during “non-factory” system resets.

Table 5.35: Reset Configuration Bits

- ⁽¹⁾ During a factory reset, if Bit 3= 1 and Bit 7 = 0, it requests a factory reset without clearing the almanac stored in flash memory. If Bit 3=1 and Bit 7=1, it requests a factory reset and clears the almanac stored in flash memory.
- ⁽²⁾ If Nav Lib data are enabled, the resulting messages are enabled: Clock Status (Message ID 7), 50BPS (Message ID 8), Raw DGPS (Message ID 17), NL Measurement Data (Message ID 28), DGPS Data (Message ID 29), SV State Data (Message ID 30), and NL Initialized Data (Message ID 31). All messages sent at 1 Hz. If SiRFDemo is used to enable Nav Lib data, the bit rate is automatically set to 57600 by SiRFDemo.
- ⁽³⁾ Reset of Xo model supported starting from SiRFstarIV.
- ⁽⁴⁾ Clearing CW controller config settings is supported starting from the second product build release of GSD4t , and including all GSD4e product builds.

5.5 Switch To NMEA Protocol – Message ID 129

Switches a serial port from binary to NMEA protocol and sets message output rates and bit rate on the port.

The scope of this message and the rules for overriding other settings of these values that may have already been stored are described in Section 7.18.

Table 5.36 contains the input values for the following example:

Request the following NMEA data at 9600 bits per second:

GGA – ON at 1 sec, GLL – OFF, GSA – ON at 1sec,

GSV – ON at 5 sec, RMC – ON at 1sec, VTG-OFF, MSS – OFF, ZDA-OFF.

Example:

- A0A20018 - Start Sequence and Payload Length (24 bytes)
- 810201010001010105010101000100010001000100012580 - Payload
- 013AB0B3 - Message Checksum and End Sequence

Name	Bytes	Example	Unit	Description
Message ID	1 U	0x81		Decimal 129
Mode	1 U	0x02		See Table 5.37
GGA Message ⁽¹⁾	1 U	0x01	sec	Refer to the <i>NMEA Protocol Reference Manual</i> for format
Checksum ⁽²⁾	1 U	0x01		Send checksum with GGA message
GLL Message	1 U	0x00	sec	Refer to the <i>NMEA Protocol Reference Manual</i> for format
Checksum	1 U	0x01		
GSA Message	1 U	0x01	sec	Refer to the <i>NMEA Protocol Reference Manual</i> for format
Checksum	1 U	0x01		
GSV Message	1 U	0x05	sec	Refer to the <i>NMEA Protocol Reference Manual</i> for format
Checksum	1 U	0x01		
RMC Message	1 U	0x01	sec	Refer to the <i>NMEA Protocol Reference Manual</i> for format
Checksum	1 U	0x01		
VTG Message	1 U	0x00	sec	Refer to the <i>NMEA Protocol Reference Manual</i> for format
Checksum	1 U	0x01		
MSS Message	1 U	0x00	sec	Output rate for MSS message
Checksum	1 U	0x01		
EPE Message ⁽³⁾	1 U	0x00		

Name	Bytes	Example	Unit	Description
Checksum ⁽³⁾	1 U	0x00		
ZDA Message	1 U	0x00	sec	Refer to the <i>NMEA Protocol Reference Manual</i> for format
Checksum	1 U	0x01		
Unused Field ⁽⁴⁾	1 U	0x00		
Unused Field ⁽⁴⁾	1 U	0x00		
Bit Rate ⁽⁵⁾	2 U	0x2580		1200, 2400, 4800, 9600, 19200, 38400 and 57600

Table 5.36: Switch to NMEA Protocol - Message ID 129

- ⁽¹⁾ A value of 0x00 implies not to send the message. Otherwise, data is sent at 1 message every X seconds requested (e.g., to request a message to be sent every 5 seconds, request the message using a value of 0x05). The maximum rate is 1/255 sec.
- ⁽²⁾ A value of 0x00 implies the checksum is not transmitted with the message (not recommended). A value of 0x01 has a checksum calculated and transmitted as part of the message (recommended).
- ⁽³⁾ In SiRFNavIII software, this field is reserved for SiRF's proprietary \$PSRFEPE message. Otherwise it is unused.
- ⁽⁴⁾ These fields are available if additional messages have been implemented in the NMEA protocol.
- ⁽⁵⁾ Bit Rate changes are not supported in SiRFNavIII software.

Value	Meaning
0	Enable NMEA debug messages
1	Disable NMEA debug messages
2	Do not change last-set value for NMEA debug messages

Table 5.37: Mode Values

In TricklePower mode, the user specifies the update rate. When switching to NMEA protocol, the message update rate is also required. The resulting update rate is the product of the TricklePower update rate and the NMEA update rate (e.g., TricklePower update rate = 2 seconds, NMEA update rate = 5 seconds, the resulting update rate is every 10 seconds (2 X 5 = 10)).

Note:

To return to the SiRF Binary protocol, send a SiRF NMEA message to revert to SiRF binary mode (Refer to the *SiRF NMEA Reference Manual* for more information).

5.6 Set Almanac – Message ID 130

Enables the user to upload an almanac file to the receiver.

Note:

Some software versions do not support this command.

Example:

- A0A20381 – Start Sequence and Payload Length (897 bytes)
- 82xx..... – Payload
- xxxxB0B3 – Message checksum and end sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1 U		82		Decimal 130
Almanac[448]	2 S		00		Reserved

Table 5.38: Set Almanac - Message ID 130

The almanac data is stored in the code as a 448-element array of INT16 values. These elements are partitioned as a 32 x 14 two-dimensional array where the row represents the satellite ID minus 1 and the column represents the number of INT16 values associated with this satellite. The data is actually packed and the exact format of this representation and packing method can be extracted from the ICD-GPS-200 document. The ICD-GPS-200 document describes the data format of each GPS navigation subframe and is available on the web at <http://www.arinc.com>.

5.7 Handle Formatted Dump Data – Message ID 131

Requests the output of formatted data from anywhere within the receiver's memory map. It is designed to support software development and can handle complex data types up to an array of structures. Message ID 10 Error 255 is sent in response to this message.

Note:

The buffer size limit is 912 bytes.

Table 5.39 contains the input values for the following example. This example shows how to output an array of elements. Each element structure appears as follows:

```
typedef structure // structure size = 9 bytes
{
    UINT8 Element 1
    UINT16 Element 2
    UINT8 Element 3
    UINT8 Element 4
    UINT32 Element 5
} tmy_struct
tmy_struct my_struct [3]
```

Example:

- A0A2002B - Start Sequence and Payload Length (variable)
- 83036000105005010201010448656C6C6F0025326420253264202532642025326420 25313
- 02E316C660000 - Payload
- 0867B0B3 - Message Checksum and End Sequence

Name	Bytes	Binary (Hex)	Unit	Description
		Example		
Message ID	1 U	83		Decimal 131
Elements	1 U	03		Number of elements in array to dump (minimum 1)
Data address	4 S	60000150		Address of the data to be dumped
Members	1 U	05		Number of items in the structure to be dumped
Member Size	Elements S	01 02 01 01 04	bytes	List of element sizes in the structure. See Table 5.40 for definition of member size (total of 5 for this example)
Header	string length + 1 S	"Hello"0		String to print out before data dump (total of 8 bytes in this example)
Format	string length + 1 S	"%2d %2d %2d %2d %10.1f"0		Format string for one line of output (total of 26 bytes in this example) with 0 termination
Trailer	string length + 1 S	00		Not used

Table 5.39: Handle Formatted Dump Data – Message ID 131

Table 5.40 defines the values associated with the member size data type.

Data Type	Value for Member Size (Bytes)
char, INT8, UINT8	1
short int, INT16, UINT16, SINT16, BOOL16	2
long int, float, INT32, UINT32, SINT32, BOOL32, FLOAT32	4
long long, double INT64, DOUBLE64	8

Table 5.40: Member Size Data Type

5.8 Poll Software Version – Message ID 132

Requests the output of the software version string. Message ID 6 is sent in response.

Table 5.41 contains the input values for the following example:

Poll the software version

Example:

- A0A20002 - Start Sequence and Payload Length (2 bytes)
- 8400 - Payload
- 0084B0B3 - Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1 U		84		Decimal 132
Control	1 U		00		Not used

Table 5.41: Poll Software Version - Message ID 132

5.9 Software Version Request - Message ID 132

MID (Hex)	0x84
MID (Dec)	132
Message Name in Code	MID_PollSWVersion

Table 5.42: Software Version Request - Message ID 132

Field	Bytes	Scale Factor	Unit
Message ID	U1		
Control	U1		

Table 5.43: Software Version Request Message

The Control field has a value of 0 and it is not used. The only purpose of it is backward compatibility with the SSB Poll Software Version message.

5.10 DGPS Source – Message ID 133

Allows the user to select the source for Differential GPS (DGPS) corrections. The default source is external RTCM SC-104 data on the secondary serial port. Options available are:

External RTCM SC-104 Data (on any serial port prior to SiRFstarIII, but not supported in SiRFstarIII and in later product lines)

Satellite Based Augmentation System (SBAS) – subject to SBAS satellite availability

Internal DGPS beacon receiver (supported only on specific GPS receiver hardware)

Example 1: Set the DGPS source to External RTCM SC-104 Data

- A0A200007 - Start Sequence and Payload Length (7 bytes)
- 8502000000000000 - Payload
- 0087B0B3 - Checksum and End Sequence

Name	Bytes	Scale	Hex	Unit	Decimal	Description
Message ID	1 U		85		133	Message identification
DGPS Source	1 U		02		2	See Table 5.46
Internal Beacon Frequency	4 U		00000000		0	Not used
Internal Beacon Bit Rate	1 U		0		0	Not used

Table 5.44: DGPS Source – Message ID 133, Example 1

Example 2: Set the DGPS source to Internal DGPS Beacon Receiver

Search Frequency 310000, Bit Rate 200

- A0A200007 - Start Sequence and Payload Length (7 bytes)
- 85030004BAF0C802 - Payload
- 02FEB0B3 - Checksum and End Sequence

Name	Bytes	Scale	Hex	Unit	Decimal	Description
Message ID	1 U		85		133	Message Identification
DGPS Source	1 U		03		3	See Table 5.46
Internal Beacon Frequency	4 U		0004BAF0	Hz	310000	See Note 1
Internal Beacon Bit Rate	1 U		C8	BPS	200	See Note 2

Table 5.45: DGPS Source – Message ID 133, Example 2

Note:

Beacon frequency valid range is 283500 to 325000 Hz. A value of zero indicates the Beacon should be set to automatically scan all valid frequencies.

Bit rates can be 25, 50, 100 or 200 BPS. A value of zero indicates the Beacon should be set to automatically scan all bit rates.

Value	DGPS Source	Description
0	None	DGPS corrections are not used (even if available)
1	SBAS	Uses SBAS satellite (subject to availability)
2	External RTCM Data	External RTCM input source (e.g., Coast Guard Beacon)
3	Internal DGPS Beacon Receiver	Internal DGPS beacon receiver
4	User Software	Corrections provided using a module interface routine in a custom user application

Table 5.46: DGPS Source Selections

5.11 Set Binary Serial Port – Message ID 134

Sets the serial port values that are used whenever the binary protocol is activated on a port. It also sets the current values for the port currently using the binary protocol. The values that can be adjusted are: Bit rate, parity, data bits per character and stop bit length.

Table 5.47 contains the input values for the following example:

Set Binary serial port to 9600,n,8,1.

Example:

- A0A20009 - Start Sequence and Payload Length (9 bytes)
- 860000258008010000 - Payload
- 0134B0B3 - Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1 U		86		Decimal 134
Bit Rate	4 U		00002580		1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200
Data Bits	1 U		08		8
Stop Bit	1 U		01		1 = 1 stop bit
Parity	1 U		00		None = 0, Odd = 1, Even = 2
Pad	1 U		00		Reserved

Table 5.47: Set Main Serial Port – Message ID 134

5.12 Set Protocol – Message ID 135

Switches the protocol to another protocol. For most software, the default protocol is SiRF binary. For SiRFstarIII software, refer to tCtrl_ProtocolEnum in ctrl_sif.h.

Table 5.48 contains the input values for the following example:

Set protocol to NMEA

Example:

- A0A20002 - Start Sequence and Payload Length (2 bytes)
- 8702 - Payload
- 0089B0B3 - Message checksum and end sequence.

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1 U		87		Decimal 135
Protocol ⁽¹⁾	1 U		02		Null = 0 SiRF Binary = 1 NMEA = 2 ASCII = 3 RTCM = 4 USER1 = 5 (note1) SiRFLoc = 6 Statistic = 7

Table 5.48: Set Protocol - Message ID 135

⁽¹⁾ Use caution when switching to User1 protocol. Use it only when User1 protocol supports switching back to SiRF Binary protocol.

Note:

In any system only some of these protocols are present. Switching to a protocol that is not implemented may cause unpredictable results.

5.13 Mode Control – Message ID 136

Sets up the navigation operations. It controls use of fewer than 4 satellites, and enables or disables the track smoothing filter. Using fewer than 4 satellites results in what is commonly called a 2-D fix. 4 or more satellites allow a 3-D fix.

Table 5.49 contains the input values for the following example:

Alt Constraining = Yes, Degraded Mode = clock then direction

Altitude = 0, Alt Hold Mode = Auto, Alt Source = Last Computed,

Degraded Time Out = 5, DR Time Out = 2, Track Smoothing = Yes

Example:

- A0A2000E - Start Sequence and Payload Length
- 880000010000000000000000050201 - Payload
- 0091B0B3 - Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1 U		88		Decimal 136
Reserved	2 U		0000		Reserved
Degraded Mode ⁽¹⁾	1 U		01		Controls use of 2-SV and 1-SV solutions. See Table 5.50.
Position Calc Mode ⁽²⁾	1 U		01		xxxx xxx0 ABP ⁽³⁾ OFF xxxx xxx1 ABP ON

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Reserved	1 U		00		Reserved
Altitude	2 S		0000	meters	User specified altitude, range -1,000 to 10,000
Alt Hold Mode	1 U		00		Controls use of 3-SV solution. See Table 5.51.
Alt Hold Source	1 U		00		0 = Use last computed altitude 1 = Use user-input altitude
Reserved	1 U		00		Reserved
Degraded Time Out	1 U		05	sec	0 = disable degraded mode, 1 to 120 seconds degraded mode time limit
DR Time Out	1 U		02	sec	0 = disable dead reckoning, 1 to 120 seconds dead reckoning mode time limit
Measurement and Track Smoothing	1 U		00000011		xxxxxx0 = disable track smoothing xxxxxx1 = enable track smoothing xxxxxx0x = use raw measurements xxxxxx1x ⁽⁴⁾ = use smooth measurements

Table 5.49: Mode Control – Message ID 136

- (1) Degraded Mode is not supported in GSW3.2.5 and later. This field should be set to 4 in these software versions.
- (2) The Position Calc Mode field follows the Degraded Mode field immediately. It is supported only for the GSD4e product and beyond. When this field is not used and set to zero, no ABP feature is supported and the solution is calculated as if ABS OFF was set.
- (3) ABP - Almanac Based Positioning. When ABP is enabled and no sufficient ephemerides data is available to calculate a QoP compliant solution, a coarse solution should be provided where the position is calculated based on one or more of the SVs having their states derived from almanac parameters as opposed to ephemerides. ABP solutions are provided in messages 41 and 69 and the use of ABP in calculating the position is appropriately flagged in the message as described in the sections of this document for Message ID 41 and 69.
- (4) This option is only supported for the GSD4e and later.

Byte Value	Description
0	Allow 1-SV navigation, freeze direction for 2-SV fix, then freeze clock drift for 1-SV fix
1	Allow 1-SV navigation, freeze clock drift for 2-SV fix, then freeze direction for 1-SV fix
2	Allow 2-SV navigation, freeze direction. Does not allow 1-SV solution.
3	Allow 2-SV navigation, freeze clock drift. Does not allow 1-SV solution.
4	Do not allow Degraded Modes (2-SV and 1-SV navigation)

Table 5.50: Degraded Mode

Note:

Degraded mode is not supported in GSW3.2.5 and later. Set this field to 4 in these software versions.

Byte Value	Description
0	Automatically determine best available altitude to use
1	Always use user-input altitude
2	Do not use altitude hold – Forces all fixes to be 3-D fixes

Table 5.51: Altitude Hold Mode

5.14 DOP Mask Control – Message ID 137

Dilution of Precision (DOP) is a measure of how the geometry of the satellites affects the current solution's accuracy. This message provides a method to restrict use of solutions when the DOP is too high. When the DOP mask is enabled, solutions with a DOP higher than the set limit is marked invalid.

Table 5.52 contains the input values for the following example:

Auto PDOP/HDOP, GDOP = 8 (default), PDOP = 8, HDOP = 8

Example:

- A0A20005 - Start Sequence and Payload Length (5 bytes)
- 8900080808 - Payload
- 00A1B0B3 - Message checksum and end sequence

Name	Bytes	Binary (Hex)		Unit	Description	tSIRF_MSG_SSB_SET_DOP_MODE	
		Scale	Example			Structure Member	Data Type
Message ID	1 U		89		Decimal 137		
DOP Selection	1 U		00		See Table 5.53	mode	tSIRF_UINT8
GDOP Value	1 U		08		Range 1 to 50	gdop_th	tSIRF_UINT8
PDOP Value	1 U		08		Range 1 to 50	pdop_th	tSIRF_UINT8
HDOP Value	1 U		08		Range 1 to 50	hdop_th	tSIRF_UINT8

Table 5.52: DOP Mask Control – Message ID 137

Byte Value	Description
0	Auto: PDOP for 3-D fix; HDOP for 2-D fix
1	PDOP
2	HDOP
3	GDOP
4	Do Not Use

Table 5.53: DOP Selection

5.15 DGPS Control – Message ID 138

Enables users to control how the receiver uses differential GPS (DGPS) corrections.

Table 5.54 contains the input values for the following example:

Set DGPS to exclusive with a time out of 30 seconds.

Example:

- A0A20003 - Start Sequence and payload length (3 bytes)
- 8A011E - Payload
- 00A9B0B3 - Message checksum and end sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1 U		8A		Decimal 138
DGPS Selection	1 U		01		See Table 5.55
DGPS Time Out	1 U		1E	sec	Range 0 to 255

Table 5.54: DGPS Control – Message ID 138

Byte Value	Description
0	Auto = Use corrections when available
1	Exclusive = Include in navigation solution only SVs with corrections
2	Never Use = Ignore corrections

Table 5.55: DGPS Selection

Note:

DGPS Timeout interpretation varies with DGPS correction source. For an internal beacon receiver or RTCM SC-104 external source, a value of 0 means infinite timeout (use corrections until another one is available). A value of 1 to 255 means use the corrections for a maximum of this many seconds. For DGPS corrections from an SBAS source, the timeout value is ignored unless Message ID 170, Flag bit 0 is set to 1 (User Timeout). If Message ID 170 specifies User Timeout, a value of 1 to 255 here means that SBAS corrections can be used for the number of seconds specified. A value of 0 means to use the timeout specified in the SBAS satellite message (usually 18 seconds).

5.16 Elevation Mask – Message ID 139

Elevation mask is an angle above the horizon. Unless a satellite’s elevation is greater than the mask, it is not used in navigation solutions. This message permits the receiver to avoid using the low-elevation-angle satellites most likely to have multipath problems.

Table 5.56 contains the input values for the following example:

Set Navigation Mask to 15.5 degrees (Tracking Mask is defaulted to 5 degrees).

Example:

- A0A20005 - Start Sequence and payload length (5 bytes)
- 8B0032009B - Payload
- 0158B0B3 - Message checksum and end sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1 U		8B		Decimal 139
Tracking Mask	2 S	*10	0032	degrees	Not implemented
Navigation Mask	2 S	*10	009B	degrees	Range -20.0 to 90.0

Table 5.56: Elevation Mask – Message ID 139
Note:

A satellite with an elevation angle that is below the specified navigation mask angle is not used in the navigation solution.

5.17 Power Mask – Message ID 140

The power mask is a limit on which satellites are used in navigation solutions. Satellites with signals lower than the mask are not used.

Table 5.57 contains the input values for the following example:

Navigation mask to 33 dB-Hz (tracking default value of 28)

Example:

- A0A20003 - Start sequence and payload length (3 bytes)
- 8C1C21 - Payload
- 00C9B0B3 - Message checksum and end sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1 U		8C		Decimal 140
Tracking Mask	1 U		1C	dBHz	Not implemented
Navigation Mask	1 U		21	dBHz	Range 20 ⁽¹⁾ to 50

Table 5.57: Power Mask – Message ID 140

⁽¹⁾ The range for GSW3 and GSWLT3 is 12 to 50.

Note:

Satellites with received signal strength below the specified navigation mask signal level are used in the navigation solution.

5.18 Static Navigation – Message ID 143

Allows the user to enable or disable static navigation to the receiver.

Example:

- A0A20002 – Start sequence and payload length (2 bytes)
- 8F01 – Payload
- 0090B0B3 – Message checksum and end sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1 U		8F		Decimal 143
Static Navigation Flag	1 U		01		1 = enable 0 = disable

Table 5.58: Static Navigation - Message ID 143
Note:

Static navigation is a position filter for use with motor vehicle applications. When the vehicle's speed falls below a threshold, the position and heading are frozen, and speed is set to zero. This condition continues until the computed speed rises above 1.2 times the threshold, or until the computed position is at least a set distance from the frozen place. The threshold speed and set distance may vary with software versions.

5.19 Poll Clock Status – Message ID 144

Causes the receiver to report the most recently computed clock status. The resulting clock status is reported in Message ID 7.

Table 5.59 contains the input values for the following example:

Poll the clock status.

Example:

- A0A20002 - Start sequence and payload length (2 bytes)
- 9000 - Payload
- 0090B0B3 - Message checksum and end sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1 U		90		Decimal 144
Control	1 U		00		Not used

Table 5.59: Clock Status - Message ID 144
Note:

Returned message is Message ID 7. See Section 6.7.

5.20 Set DGPS Serial Port – Message ID 145

Sets the serial port settings associated with the RTCM SC-104 protocol. If the RTCM SC-104 protocol is currently assigned to a port, it also changes that port's settings. The values entered are stored in battery-backed RAM (called NVRAM in this document) and are used whenever the RTCM protocol is assigned to a port. The settings control:

- Serial bit rate
- Parity
- Bits per character
- Stop bit length

Table 5.60 contains the input values for the following example:

Set DGPS Serial port to 9600,n,8,1.

Example:

- A0A20009 - Start sequence and payload length (9 bytes)
- 910000258008010000 - Payload
- 013FB0B3 - Message checksum and end sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1 U		91		Decimal 145
Bit Rate	4 U		00002580		1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200
Data Bits	1 U		08		8,7
Stop Bit	1 U		01		0,1
Parity	1 U		00		None = 0, Odd = 1, Even = 2
Pad	1 U		00		Reserved

Table 5.60: Set DGPS Serial Port - Message ID 145

Note:

Setting the DGPS serial port using Message ID 145 affects COM-B only regardless of the port being used to communicate with the evaluation receiver.

5.21 Poll Almanac - Message ID 146

Causes the most recently stored almanacs to be reported by the receiver. Almanacs are reported in Message ID 14, with a total of 32 messages being sent in response.

Note:

Some software versions do not support this command.

Table 5.61 contains the input values for the following example:

Poll for the almanac.

Example:

- A0A20002 - Start Sequence and payload length (2 bytes)
- 9200 - Payload
- 0092B0B3 - Message checksum and end sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1 U		92		Decimal 146
Control	1 U		00		Not used

Table 5.61: Poll Almanac - Message ID 146

Note:

Returned message is Message ID 14. See *Almanac Data – Message ID 14*.

5.22 Poll Ephemeris - Message ID 147

Causes the receiver to respond with the ephemeris of the requested satellite. The ephemeris is sent using Message ID 15. It can also request all ephemerides, resulting in as many Message 15s as there are ephemerides currently stored in the receiver.

Note:

Some software versions do not support this command.

Table 5.62 contains the input values for the following example:

Poll for Ephemeris Data for all satellites.

Example:

- A0A20003 - Start sequence and payload length (3 bytes)
- 930000 - Payload
- 0092B0B3 - Message checksum and end sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1 U		93		Decimal 147
Sv ID ⁽¹⁾	1 U		00		Range 0 to 32
Control	1 U		00		Not used

Table 5.62: Poll Ephemeris - Message ID 147

⁽¹⁾ A value of zero requests all available ephemeris records. This results in a maximum of twelve output messages. A value of 1 through 32 requests only the ephemeris of that SV.

Note:

Returned message is Message ID 15. See *Ephemeris Data (Response to Poll) – Message ID 15*.

5.23 Flash Update - Message ID 148

Allows the user to command the receiver to enter internal boot mode without setting the hardware bootstrap configuration input. Internal boot mode allows the user to reflash the embedded code in the receiver.

Note:

It is highly recommended that all hardware designs provide access to the hardware bootstrap configuration input pin(s) in the event of a failed flash upload.

Example:

- A0A20001 – Start sequence and payload length (1 byte)
- 94 – Payload
- 0094B0B3 – Message checksum and end sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1 U		94		Decimal 148

Table 5.63: Flash Update - Message ID 148

Note:

Some software versions do not support this command

5.24 Set Ephemeris - Message ID 149

Enables the user to upload an ephemeris file to the receiver.

Example:

- A0A2005B – Start Sequence and Payload Length (91 bytes)
- 95 – Payload
- xxxxB0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1 U		95		Decimal 149
Ephemeris Data [45]	2 U		00		Reserved

Table 5.64: Set Ephemeris - Message ID 149

The ephemeris data for each satellite is stored as a two dimensional array of [3][15] UNIT16 elements. The row represents three separate sub-frames. See *Ephemeris Data (Response to Poll) – Message ID 15* for a detailed description of this data format.

Note:

Some software versions do not support this command.

5.25 Switch Operating Modes – Message ID 150

This command sets the receiver into production test or normal operating mode.

Table Table 5.65 contains the input values for the following example. This version of message 150 is supported by all prior to GSD3tw.

Sets the receiver to track SV ID 6 on all channels and to collect test mode performance statistics for 30 seconds.

Example:

- A0A20007 – Start Sequence and Payload Length
- 961E510006001E – Payload
- 0129B0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1		96		.Decimal 150
Mode	2		1E55		0 = Normal, IE51 = Testmode1, IE52 = Testmode2, IE53 = Testmode3, IE54 = Testmode4
SVID	2		0006		Satellite to track
Period	2		001E	Seconds	Duration of track

Table 5.65: Switch Operating Modes – Message ID 150 (all software options prior to GSD3tw)

Table 5.66 lists the input values for the following example:

Sets the receiver to track SV ID 6 on all channels and to collect test mode performance statistics for 30 seconds.

Example:

- A0A20007 – Start Sequence and Payload Length (7 bytes)
- 961E510006001E – Payload
- 0129B0B3 – Message Checksum and End Sequence

Test mode 5:

Example:

- A0A2000D – Start Sequence and Payload Length (13 bytes)
- 961E550001601E001400140014 – Payload
- 01C4B0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1		96		Decimal 150
Mode	2		1E55		0 = normal, 1E51 = Testmode 1, 1E52 = Testmode 2, 1E53 = Testmode 3, 1E54 = Testmode 4, 1E55 = Testmode 5
SVID	2		0006		Satellite to track
Period	2		001E	Seconds	Duration of track. Minimum duration for track in testmode 5 shall be at least 15 seconds. Recommended value 20 seconds.
The following fields are only required for testmode 5					
Testmode4 Period	2		0014	Seconds	Testmode 4 period. Minimum recommended period at least 10 seconds
Testmode4 max Period	2		0014	Seconds	Maximum duration of testmode 4. maximum recommended value = 60 seconds.
Attenuation Period	2		0014	Seconds	Dead time allowed for signal to drop. maximum recommended value = 20 seconds.

Table 5.66: Switch Operating Modes – Message ID 150 (LT SLC version 3.3 or later)

Table 5.67 lists the input values for the following example:

Sets the receiver to track SV ID 6 on all channels and to collect test mode performance statistics for 30 seconds.

Example:

- A0A20008 – Start Sequence and Payload Length (8 bytes)
- 961E510006001E00 – Payload
- 0129B0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1		96		.Decimal 150
Mode	2		1E51		0 = normal, 1E51 = Testmode 1, IE52 = Testmode 2, IE53 = Testmode 3, IE54 = Testmode 4, IE55 = Testmode 5, IE56 = Testmode 6, IE57 = Testmode 7
SVID	2		0006		Satellite to track
Period	2		001E	Seconds	Duration of track
Test Mode 5 Command	2 U		00		Test Mode 5 weak signal stage command. Not applicable in other test modes 0 = strong signal stage (test mode step 1) 1 = weak signal stage (test mode step 2)

Table 5.67: Switch Operating Modes - Message ID 150 (GSD3tw)

Note:

In GSW3 and GSWLT3, processing this message sets MaxOffTime and MaxAcqTime to default values. Requires Message ID 167 after this to restore those to non-default values.

5.26 Set TricklePower Parameters – Message ID 151

Allows the user to set some of the power-saving modes of the receiver.

Table 5.68 contains the input values for the following example:

Sets the receiver to low power modes.

Example: Set the receiver to TricklePower at 1 Hz update and 200 ms on-time.

- A0A20009 – Start Sequence and Payload Length (9 bytes)
- 97000000C8000000C8 – Payload
- 00227B0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1 U		97		Decimal 151
Push-to-Fix Mode	2 S		0000		ON = 1, OFF = 0
Duty Cycle	2 S	*10	00C8	%	% time ON. A duty cycle of 1000 (100%) means continuous operation
On-Time ⁽¹⁾	4 S		000000C8	msec	range 200 - 900 msec

Table 5.68: Set TricklePower Parameters - Message ID 151

⁽¹⁾ On-time of 700, 800, or 900 ms is invalid if an update rate of 1 second is selected.

Computation of Duty Cycle and On Time

The Duty Cycle is the desired time to be spent tracking. The On-Time is the duration of each tracking period (range is 200 - 900 msec). To calculate the TricklePower update rate as a function of Duty Cycle and On Time, use the following formula:

$$\text{Update Rate} = \frac{\text{On-Time (in sec)}}{\text{Duty Cycle}}$$

Note:

It is not possible to enter an on-time > 900 msec.

Table 5.69 lists some examples of selections.

Mode	On Time (ms)	Duty Cycle (%)	Interval Between Updates (sec)
Continuous ⁽¹⁾	200 ⁽²⁾	100	1
TricklePower	200	20	1
TricklePower	200	10	2
TricklePower	300	10	3
TricklePower	500	5	10

Table 5.69: Example of Selections for TricklePower Mode of Operation

⁽¹⁾ when the duty cycle is set to 100 %, the on time has no effect. However, the command parser might still test the value against the 200-600 ms limits permitted for a 1-second cycle time. Therefore, we recommend that you set the on-time value to 200 ms.

⁽²⁾ When the duty cycle is set to 100%, the value in this field has no effect. Thus, any legal value (100 to 900) may be used.

On-Time (ms)	1	2	3	4	5	6	7	8	9	10
200 ⁽¹⁾	200	100	67	50	40	33	29	25	22	20
300	300	150	100	75	60	50	43	37	33	30
400	400	200	133	100	80	67	57	50	44	40
500	500	250	167	125	100	83	71	62	56	50
600	600	300	200	150	120	100	86	75	67	60
700	Value not permitted	350	233	175	140	117	100	88	78	70
800	Value not permitted	400	267	200	160	133	114	100	89	80
900	Value not permitted	450	300	225	180	150	129	112	100	90

Table 5.70: Duty Cycles for Supporting TricklePower Settings

⁽¹⁾ When the duty cycle is set to 100%, the on time has no effect. However, the command parser may still test the value against the 200-600 ms limits permitted for a 1-second cycle time. Therefore, set the on-time value to 200 ms.

Note:

Values are in % times 10 as needed for the duty cycle field. For 1 second update rate, on-times greater than 600 ms are not allowed.

Push-to-Fix

In this mode the receiver turns on every cycle period to perform a system update consisting of an RTC calibration and satellite ephemeris data collection if required (i.e., a new satellite has become visible) as well as all software tasks to support Snap Start in the event of a Non-Maskable Interrupt (NMI). Ephemeris collection time in general takes 18 to 36 seconds. If ephemeris data is not required then the system recalibrates and shuts down. In either case, the amount of time the receiver remains off is in proportion to how long it stayed on:

$$\text{Off Period} = \frac{\text{On Period} \times (1 - \text{Duty Cycle})}{\text{Duty Cycle}}$$

The off period has a possible range between 10 and 7200 seconds. The default is 1800 seconds. Push-to-Fix cycle period is set using Message ID 167.

Note:

When Message ID 151 is issued in GSW3 software, the receiver resets both MaxOffTime and MaxSearchTime to default values. If different values are needed, Message ID 151 must be issued before Message ID 167.

5.27 Poll Navigation Parameters – Message ID 152

Requests the receiver to report its current navigation parameter settings. The receiver responds to this message with Message ID 19. Table 5.71 contains the input values for the following example:

Example: Poll receiver for current navigation parameters.

- A0A20002 – Start Sequence and Payload Length (2 bytes)
- 9800 – Payload
- 0098B0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1 U		98		Decimal 152
Reserved	1 U		00		Reserved

Table 5.71: Poll Navigation Parameters – Message ID 152

5.28 SiRFNAV Command Messages

The host sends a command message to the SLC.

5.28.1 Store GPS Snapshot Information - Message ID 161, Sub ID 7

This message commands the SLC to save all GPS data in non-volatile memory when this command is executed. The GPS data saved includes but not restricted to AGC value, crystal uncertainty, position, ephemeris, almanac, UTC offset, SV health status, IONO, SBAS data, software version, power control parameters, SV visible list and other receiver data.

Message Name	MID_SIRFNAV_COMMAND
Input or Output	Input
MID (Hex)	0xA1
MID (Dec)	161
Message Name in Code	MID_SSB_SIRFNAV_COMMAND
SID (Hex)	0x07
SID (Dec)	7
SID Name in Code	SSB_SIRFNAV_STORE_NOW

Table 5.72: Store GPS Snapshot Information - Message ID 161, Sub ID 7

Name	Bytes	Binary (Hex)		Unit	Ascii (Dec)		Description
		Scale	Example		Scale	Example	
Message ID	U1		0xA1			161	
Sub ID	U1		0x07			7	
Reserved	U1						

Table 5.73: Store GPS Snapshot Information Message

5.29 Set UART Configuration – Message ID 165

Sets the protocol, bit rate, and port settings on any UART.

Note:

This message supports setting up to four UARTs.

The scope of this message and the rules for overriding other settings of these values that may have already been stored are described in Section 7.18. Table 5.74 contains the input values for the following example:

Example: Set port 0 to NMEA with 9600 bits per second, 8 data bits, 1 stop bit, no parity. Set port 1 to SiRF binary with 57600 bits per second, 8 data bits, 1 stop bit, no parity. Do not configure ports 2 and 3.

Example:

- A0A20031 – Start Sequence and Payload Length (49 bytes)
- A50001010000258008010000000100000000E1000801000000FF0505000000000000000000FF05050000000000000000 – Payload
- 0452B0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1 U		A5		Decimal 165
Port ⁽¹⁾	1 U		00		For UART 0
In Protocol ⁽²⁾	1 U		01		For UART 0
Out Protocol	1 U		01		For UART 0
Bit Rate ⁽³⁾	4 U		00002580		For UART 0 (Set to in protocol)
Data Bits ⁽⁴⁾	1 U		08		For UART 0
Stop Bits ⁽⁵⁾	1 U		01		For UART 0
Parity ⁽⁶⁾	1 U		00		For UART 0
Reserved	1 U		00		For UART 0
Reserved	1 U		00		For UART 0
Port	1 U		01		For UART 1
In Protocol	1 U		00		For UART 1
Out Protocol	1 U		00		For UART 1
Bit Rate	4 U		0000E100		For UART 1
Data Bits	1 U		08		For UART 1
Stop Bits	1 U		01		For UART 1
Parity	1 U		00		For UART 1
Reserved	1 U		00		For UART 1

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Reserved	1 U		00		For UART 1
Port	1 U		FF		For UART 2
In Protocol	1 U		05		For UART 2
Out Protocol	1 U		05		For UART 2
Bit Rate	4 U		00000000		For UART 2
Data Bits	1 U		00		For UART 2
Stop Bits	1 U		00		For UART 2
Parity	1 U		00		For UART 2
Reserved	1 U		00		For UART 2
Reserved	1 U		00		For UART 2
Port	1 U		FF		For UART 3
In Protocol	1 U		05		For UART 3
Out Protocol	1 U		05		For UART 3
Bit Rate	4 U		00000000		For UART 3
Data Bits	1 U		00		For UART 3
Stop Bits	1 U		00		For UART 3
Parity	1 U		00		For UART 3
Reserved	1 U		00		For UART 3
Reserved	1 U		00		For UART 3

Table 5.74: Set UART Configuration – Message ID 165

- (1) 0xFF means to ignore this port; otherwise, put the port number in this field (e.g., 0 or 1).
- (2) 0 = SiRF Binary, 1 = NMEA, 2 = ASCII, 3 = RTCM, 4 = User1, 5 = No Protocol. Any software version only supports some subset of these protocols. Selecting a protocol that is not supported by the software may cause unexpected results.
- (3) Valid values are 1200, 2400, 4800, 9600, 19200, 38400, 57600, and 115200.
- (4) Valid values are 7 and 8.
- (5) Valid values are 1 and 2.
- (6) 0 = None, 1 = Odd, 2 = Even.

While this message supports four UARTs, the specific baseband chip in use may contain fewer.

5.30 Set Message Rate - Message ID 166

Controls the output rate of binary messages. Table 5.75 contains the input values for the following example:

Set Message ID 2 to output every five seconds starting immediately.

The scope of this message and the rules for overriding other settings of these values that may have already been stored are described in Section 7.18.

Example:

- A0A20008 – Start Sequence and Payload Length (8 bytes)
- A600020500000000 – Payload
- 00ADB0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1 U		A6		
Mode ⁽¹⁾	1 U		00		00: enable/disable one message 01: poll one message instantly 02: enable/disable all messages 03: enable/disable default navigation messages (Message ID 2 and 4) 04: enable/disable default debug messages (Message ID 9 and 255) 05: enable/disable navigation debug messages (Message ID 7, 28, 29, 30, and 31)
Message ID to be set	1 U		02		
Update Rate ⁽²⁾	1 U		05	sec	Range = 0 - 30
Reserved	1 U		00		Not used, set to zero
Reserved	1 U		00		Not used, set to zero
Reserved	1 U		00		Not used, set to zero
Reserved	1 U		00		Not used, set to zero

Table 5.75: Set Message Rate - Message ID 166

⁽¹⁾ Values 02 - 05 are available for GSW3 and SLC3 software only.

⁽²⁾ A value of 0 means to stop sending the message. A value in the range of 1 - 30 specifies the cycle period.

5.31 Poll Command Parameters - Message ID 168

Queries the receiver to send specific response messages for one of the following messages: 128, 133, 136, 137, 138, 139, 140, 143 and 151. In response to this message, the receiver sends Message ID 43.

Table 5.76 contains the input values for the following example:

Query the receiver for current low power parameter settings set by Message ID 0x97.

Example:

- A0A20002 – Start Sequence and Payload Length (2 bytes)
- A897 – Payload
- 013FB0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1 U		A8		Decimal 168
Poll Msg ID	1 U		97		Requesting Msg ID 0x97 ⁽¹⁾

Table 5.76: Poll Command Parameters - Message ID 168

⁽¹⁾ Valid message IDs are 0x80, 0x85, 0x88, 0x89, 0x8A, 0x8B, 0x8F, and 0x97.

5.31.1 Set Low Power Acquisition Parameters - Message ID 167

Provides tools to set MaxOffTime, MaxSearchTime, Push-to-Fix period and Adaptive TricklePower. These settings affect low-power modes as follows:

MaxOffTime: when the receiver is unable to acquire satellites for a TricklePower or Push-to-Fix cycle, it returns to sleep mode for this period of time before it tries again.

MaxSearchTime: in TricklePower and Push-to-Fix modes, when the receiver is unable to reacquire at the start of a cycle, this parameter sets how long it tries. After this time expires, the unit returns to sleep mode for MaxOffTime (if in TricklePower or ATP mode) or Push-to-Fix cycle time (in Push-to-Fix mode).

Table 5.77 contains the input values for the following example:

Set maximum time for sleep mode and maximum satellite search time to default values. Also set Push-to-Fix cycle time to 60 seconds and disable Adaptive TricklePower.

Example:

- A0A2000F – Start Sequence and Payload Length (15 bytes)
- A7000075300001D4C00000003C0000 – Payload
- 031DB0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1 U		A7		Decimal 167
Max Off Time	4 U		00007530	msec	Maximum time for sleep mode. Default value: 30 seconds
Max Search Time	4 U		0001D4C0	msec	Max. satellite search time. Default value: 120 seconds
Push-to-Fix Period	4 U		0000003C	sec	Push-to-Fix cycle period
Adaptive TricklePower	2 U		0001		To enable Adaptive TricklePower 0 = off; 1 = on

Table 5.77: Set Low Power Acquisition Parameters - Message ID 167

Note:

When Message ID 151 is issued in GSW3 software, the receiver resets both MaxOffTime and MaxSearchTime to default values. If different values are needed, Message ID 151 must be issued before Message ID 167.

5.32 Set SBAS Parameters - Message ID 170

Allows the user to set the SBAS parameters.

Table 5.78 contains the input values for the following example:

Set WAAS (2) Regional Search Mode and assign PRN 122(7A) to region WAAS (2)

Example:

- A0A20006 – Start Sequence and Payload Length (6 bytes)
- AA020001027A – Payload Message
- 0129B0B3 – Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit
		Scale	Example	
Message ID	1 U		AA	
SBAS PRN or Region	1 U		02	
SBAS Mode	1 U		00	
Flag Bits ⁽¹⁾	1 D		01	
region ⁽²⁾	1		02	
regionPrn	1		7A	

Table 5.78: Set SBAS Parameters - Message ID 170

⁽¹⁾ If Bit 0 = 1, user-specified timeout from Message ID 138 is used. If Bit 0 = 0, timeout specified by the SBAS satellite is used (this is usually 18 seconds). If Bit 3 = 1, the SBAS PRN specified in the SBAS PRN field is used. If Bit 3 = 0, the system searches for any SBAS PRN.

⁽²⁾ Region designations are only supported in a GSW3 version to be designated. Current releases only allow auto mode and PRN in the SBAS field, and do not recognize region and regionPRN fields.

Name	Description
Message ID	Decimal 170
SBAS PRN or Region	<p>Defines the SBAS to use. 0 = auto mode, the system chooses the best SBAS based upon its internal almanacs.</p> <p>2-5: specifies a system to use: 2 - WAAS, 3 - EGNOS, 4 - MSAS, 5 - GAGAN. The receiver will select a PRN from among those designated as belonging to that system.</p> <p>20-138: specifies a specific PRN to be used as first choice. If that PRN cannot be found, system will search using its defined search sequence starting at that PRN.</p>
SBAS Mode	<p>0 = Testing, 1 = Integrity</p> <p>Integrity mode rejects SBAS corrections if the SBAS satellite is transmitting in a test mode</p> <p>Testing mode accepts/uses SBAS corrections even if satellite is transmitting in a test mode</p>
Flag Bits	<p>If Bit 0 = 1, user-specified timeout from Message ID 138 is used. If Bit 0 = 0, timeout specified by the SBAS satellite is used (this is usually 18 seconds). If Bit 3 = 1, the SBAS PRN specified in the SBAS PRN field is used. If Bit 3 = 0, the system searches for any SBAS PRN.</p>
region	<p>Used to assign a PRN to a defined region. 0 means this feature is not being updated by this message. 2-5 designates one of the defined regions/systems.</p>
regionPrn	<p>When region field is non-zero, this field specifies the PRN to assign to the region designated in region field.</p>

Table 5.79: Detailed Description

5.33 Initialize GPS/DR Navigation - Message ID 172, Sub ID 1

Sets the navigation initialization parameters and commands a software reset based on these parameters.

Name	Bytes	Scale	Unit	Description
Message ID	1			= 0xAC
Message Sub ID	1			= 0x01
Latitude	4		deg	for Warm Start with user input
Longitude	4		deg	for Warm Start with user input
Altitude (ellipsoid)	4		m	for Warm Start with user input

Name	Bytes	Scale	Unit	Description
True heading	2		deg	for Warm Start with user input
Clock drift	4		Hz	for Warm Start with user input
GPS time of week	4	100	sec	for Warm Start with user input
GPS week number	2			for Warm Start with user input
Channel count	1			for Warm Start with user input
Reset configuration bits ⁽¹⁾	1			Bit 0: use initial data provided in this message for start-up Bit 1: clear ephemeris in memory Bit 2: clear all memory Bit 3: perform Factory Reset Bit 4: enable SiRF Binary output messages for raw track data, navigation library, 50 bps info, RTCM data, clock status, and DR status Bit 5: enable debug output messages Bit 6: Reserved Bit 7: Reserved

Table 5.80: Initialize GPS/DR Navigation - Message ID 172, Sub ID 1

⁽¹⁾ Bits 0 - 3 determine the reset mode: 0000 = Hot; 0010 = Warm; 0011 = Warm with user input; 0100 = Cold; 1000 = Factory.

Note:

Payload length: 28 bytes

5.34 Set GPS/DR Navigation Mode - Message ID 172, Sub ID 2

Sets the GPS/DR navigation mode control parameters.

Name	Bytes	Description
Message ID	1	= AC
Message Sub ID	1	= 0x02
Mode	1	Bit 0 : GPS-only navigation Bit 1 : DR nav acceptable with stored/default calibration Bit 2 : DR nav acceptable with current GPS calibration Bit 3 : DR-only navigation
Reserved	1	

Table 5.81: Set GPS/DR Navigation Mode - Message ID 172, Sub ID 2

5.35 Set DR Gyro Factory Calibration - Message ID 172, Sub ID 3

Sets DR gyro factory calibration parameters.

Name	Bytes	Scale	Unit	Description
Message ID	1			= 0xAC
Message Sub ID	1			= 0x03
Calibration	1			Bit 0 : Start gyro bias calibration Bit 1 : Start gyro scale factor calibration Bits 2 - 7 : Reserved
Reserved	1			
Payload length: 4 bytes				

Table 5.82: Set DR Gyro Factory Calibration - Message ID 172, Sub ID 3

5.36 Set DR Sensors' Parameters - Message ID 172, Sub ID 4

Sets DR sensors parameters.

Name	Bytes	Scale	Unit	Description
Message ID	1			= 0xAC
Message Sub ID	1			= 0x04
Base speed scale factor	1		ticks/m	
Base gyro bias	2	10 ⁴	mV	
Base gyro scale factor	2	10 ³	mV/deg/s	

Table 5.83: Set DR Sensors' Parameters - Message ID 172, Sub ID 4

Note:

Payload length: 7 bytes

5.37 Poll DR Gyro Factory Calibration – Message ID 172, Sub ID 6

Polls the DR gyro factory calibration status.

Name	Bytes	Description
Message ID	1	= AC
Message Sub ID	1	= 0x06

Table 5.84: Poll DR Gyro Factory Calibration – Message ID 172, Sub ID 6

Note:

Payload length: 2 bytes

5.38 Poll DR Sensors' Parameters - Message ID 172, Sub ID 7

Message 172 Sub IDs apply to SiRFDirect only

Polls the DR sensors parameters.

Name	Bytes	Description
Message ID	1	= AC
Message Sub ID	1	= 0x07

Table 5.85: Poll DR Sensors' Parameters - Message ID 172, Sub ID 7

Note:

Payload length: 2 bytes

5.39 Input Car Bus Data to NAV - Message ID 172, Sub ID 9

Sensor data output converted into engineering units.

Byte	Field	Data Type	Bytes	Unit	Range	Res
1	Message ID	UINT8	1	N/A	0xAC	N/A
2	Message Sub-ID	UINT8	1	N/A	0x09	N/A
3	Sensor Data Type (depends on sensor)	UINT8	1	N/A	0-127 1: Gyro, Speed Data, and Reverse 2: 4 Wheel Pulses, and Reverse 3: 4 Wheel Speed, and Reverse 4: 4 Wheel Angular Speed, and Reverse 5: Gyro, Speed Data, NO Reverse 6: 4 Wheel Pulses, NO Reverse 7: 4 Wheel Speed, NO Reverse 8: 4 Wheel Angular Speed, NO Reverse 9: Gyro, Speed Data, Reverse, Steering Wheel Angle, Longitudinal Acceleration, Lateral Acceleration 10: Yaw Rate Gyro, Vertical Acceleration (Up) (Z), Longitudinal Acceleration (Front)(X), Lateral Acceleration (Left) (Y) 11-127: Reserved	N/A
4	Number of Valid data sets	UINT8	1	N/A	0-11	N/A
5	Reverse Bit Map N/A for SDT = 10	UINT16	2	N/A	Bit-mapped indication of REVERSE status corresponding to each sensor data set, i.e. bit 0 corresponds to the first data set, bit 1 corresponds to the second data set, etc.	N/A

Byte	Field	Data Type	Bytes	Unit	Range	Res
7+(N-1)* 16 ⁽¹⁾	Valid Sensor Indication	UINT8	1	N/A	Valid/Not Valid indication for each one of the four possible sensor inputs in a individual data set; when a particular bit is set to 1 the corresponding data is Valid, when the bit is set to 0 the corresponding data is NOT valid. Bit 0 corresponds to Data Set Time Tag Bit 1 corresponds to Odometer Speed Bit 2 corresponds to Data 1 Bit 3 corresponds to Data 2 Bit 4 corresponds to Data 3 Bit 5 corresponds to Data 4 Bits 6-7 : Reserved	N/A
8+(N-1)* 16 ⁽¹⁾	Data Set Time Tag	UINT32	4	msec	0-4294967295	1
12+ (N-1)*16 ⁽¹⁾	Odometer Speed (also known as VSS) N/A for SDT = 10	UINT16	2	m/sec	0 to 100	0.01
14+(N-1)* 16 ⁽¹⁾	Data 1 Depends on SDT	INT16	2	Depends on SDT	Depends on SDT	Depends on SDT
	SDT = 1, 5, 9, 10: gyro rate			Deg/sec	-120 to 120	0.01
	SDT = 2, 6: right front wheel pulses			N/A	4000	1
	SDT = 3, 7: right front wheel speed			m/sec	0 to 100	0.01
	SDT = 4, 8: right front wheel angular speed			rad/sec	-327.67 to 327.67	0.01
16+(N-1)* 16 ⁽¹⁾	Data 2 Depends on SDT	INT16	2	Depends on SDT	Depends on SDT	Depends on SDT
	SDT = 1: N/A			N/A	N/A	N/A

Byte	Field	Data Type	Bytes	Unit	Range	Res
	SDT = 2, 6: left front wheel pulses			N/A	4000	1
	SDT = 3, 7: left front wheel speed			m/sec	0 to 100	0.01
	SDT = 4, 8: left front wheel angular speed			rad/sec	-327.67 to 327.67	0.01
	SDT = 9: steering wheel angle			deg	-720 to 720	0.05
	SDT = 10: downward acceleration			m/sec ²	-15 to 15	0.001
18+(N-1)* 16 ⁽¹⁾	Data 3 Depends on SDT	INT16	2	Depends on SDT	Depends on SDT	Depends on SDT
	SDT = 1: N/A			N/A	N/A	N/A
	SDT = 2, 6: right rear wheel pulses			N/A	4000	1
	SDT = 3, 7: right rear wheel speed			m/sec	0 to 100	0.01
	SDT = 4, 8: right rear wheel speed			rad/sec	-327.67 to 327.67	0.01
	SDT = 9, 10: longitudinal acceleration			m/sec ²	-15 to 15	0.001
20+(N-1)* 16 ⁽¹⁾	Data 4 Depends on SDT	INT16	2	Depends on SDT	Depends on SDT	Depends on SDT

Byte	Field	Data Type	Bytes	Unit	Range	Res
	SDT = 1: N/A			N/A	N/A	N/A
	SDT 2, 6: left rear wheel pulses			N/A	4000	1
	SDT 3, 7: left rear wheel speed			m/sec	0 to 100	0.01
	SDT 4, 8: left rear wheel speed			rad/sec	-327.67 to 327.67	0.01
	SDT 9, 10: lateral acceleration			m/sec ²	-15 to 15	0.001
22+(N-1)* 16 ⁽¹⁾	Reserved	UINT8	1	N/A	N/A	N/A

Table 5.86: Input Car Bus Data to NAV - Message ID 172, Sub ID 9

⁽¹⁾ N indicates the number of valid data sets in the message

Note:

Payload length: 22 to 182 bytes

5.40 Car Bus Enabled - Message ID 172, Sub ID 10

Sending the message enables the car bus. Mode is reserved for future use.

Name	Bytes	Description
Message ID	1	0xAC
Message Sub ID	1	0xA
Mode	4	Undefined/not used

Table 5.87: Car Bus Enabled - Message ID 172, Sub ID 10

Note:

Payload length: 6 bytes

5.41 Car Bus Disabled - Message ID 172, Sub ID 11

Sending the message disables the car bus. Mode is reserved for future use.

Name	Bytes	Description
Message ID	1	0xAC
Message Sub ID	1	0xB
Mode	4	Undefined/not used

Table 5.88: Car Bus Disabled - Message ID 172, Sub ID 11

Note:

Payload length: 6 bytes

5.42 Input Car Bus Data 2 - Message ID 172, Sub ID 14

Message applies to SiRFDiRect only

Sensor data output converted into engineering units.

Byte	Field	Data Type	Bytes	Unit	Range	Resolution
1	Message ID	UINT8	1	N/A	0xAC	N/A
2	Sub ID	UINT8	1	N/A	0x0E	N/A
3	SensorDataType	UINT8	1	N/A	Fixed at 10	N/A
4	NumValidDataSets	UINT8	1	N/A	0 to 10 valid data sets in message	N/A
5	DataFrequency	UINT8	1	N/A	Fixed at 10	N/A
6	ValidSensorIndication[0]	UINT16	2	N/A	Bit 0x1: Time tag valid Bit 0x2: Reserved Bit 0x4: Data[0] valid Bit 0x8: Data[1] valid Bit 0x10: Data[2] valid Bit 0x20: Data[3] valid Bit 0x40: Data[4] valid Bit 0xFF80: Reserved	N/A
8	DataSetTimeTag[0]	UINT32	4	N/A	0 to 0xFFFFFFFF	N/A
12	Heading Gyro[0]	INT16	2	deg/sec	±60 degrees per second	1/1e2
14	Z-Axis[0]	INT16	2	M/sec ²	±2 Gs	1/1668.0
16	X-Axis[0]	INT16	2	M/sec ²	±2 Gs	1/1668.0
18	Y-Axis[0]	INT16	2	M/sec ²	±2 Gs	1/1668.0
20	Pitch Gyro[0]	INT16	2	deg/sec	±60 degrees per second	1/1e2
22	Reserved[0]	UINT8	1	N/A	0 to 0xff	1
23	ValidSensorIndication[1]	UINT16	2	N/A	Bit 0x1: Time tag valid Bit 0x2: Reserved Bit 0x4: Data[0] valid Bit 0x8: Data[1] valid Bit 0x10: Data[2] valid Bit 0x20: Data[3] valid Bit 0x40: Data[4] valid	N/A
25	DataSetTimeTag[1]	UINT32	4	N/A	0 to 0xFFFFFFFF	N/A

Byte	Field	Data Type	Bytes	Unit	Range	Resolution
29	Heading Gyro[1]	INT16	2	deg/sec	±60 degrees per second	1/1e2
31	Z-Axis[1]	INT16	2	M/sec^2	±2 Gs	1/1668.0
33	X-Axis[1]	INT16	2	M/sec^2	±2 Gs	1/1668.0
35	Y-Axis[1]	INT16	2	M/sec^2	±2 Gs	1/1668.0
37	Pitch Gyro[1]	INT16	2	deg/sec	±60 degrees per second	1/1e2
39	Reserved[1]	UINT8	1	N/A	0 to 0xff	1
40	ValidSensorIndication[2]	UINT16	2	N/A	Bit 0x1: Time tag valid Bit 0x2: Reserved Bit 0x4: Data[0] valid Bit 0x8: Data[1] valid Bit 0x10: Data[2] valid Bit 0x20: Data[3] valid Bit 0x40: Data[4] valid	N/A
42	DataSetTimeTag[2]	UINT32	4	N/A	0 to 0xFFFFFFFF	N/A
46	Heading Gyro[2]	INT16	2	deg/sec	±60 degrees per second	1/1e2
48	Z-Axis[2]	INT16	2	M/sec^2	±2 Gs	1/1668.0
50	X-Axis[2]	INT16	2	M/sec^2	±2 Gs	1/1668.0
52	Y-Axis[2]	INT16	2	M/sec^2	±2 Gs	1/1668.0
54	Pitch Gyro[2]	INT16	2	deg/sec	±60 degrees per second	1/1e2
56	Reserved[2]	UINT8	1	N/A	0 to 0xff	1
57	ValidSensorIndication[3]	UINT16	2	N/A	Bit 0x1: Time tag valid Bit 0x2: Reserved Bit 0x4: Data[0] valid Bit 0x8: Data[1] valid Bit 0x10: Data[2] valid Bit 0x20: Data[3] valid Bit 0x40: Data[4] valid	N/A
59	DataSetTimeTag[3]	UINT32	4	N/A	0 to 0xFFFFFFFF	N/A
63	Heading Gyro[3]	INT16	2	deg/sec	±60 degrees per second	1/1e2
65	Z-Axis[3]	INT16	2	M/sec^2	±2 Gs	1/1668.0
67	X-Axis[3]	INT16	2	M/sec^2	±2 Gs	1/1668.0

Byte	Field	Data Type	Bytes	Unit	Range	Resolution
69	Y-Axis[3]	INT16	2	M/sec ²	±2 Gs	1/1668.0
71	Pitch Gyro[3]	INT16	2	deg/sec	±60 degrees per second	1/1e2
73	Reserved[3]	UINT8	1	N/A	0 to 0xFF	1
74	ValidSensorIndication[4]	UINT16	2	N/A	Bit 0x1: Time tag valid Bit 0x2: Reserved Bit 0x4: Data[0] valid Bit 0x8: Data[1] valid Bit 0x10: Data[2] valid Bit 0x20: Data[3] valid Bit 0x40: Data[4] valid	N/A
76	DataSetTimeTag[4]	UINT32	4	N/A	0 to 0xFFFFFFFF	N/A
80	Heading Gyro[4]	INT16	2	deg/sec	±60 degrees per second	1/1e2
82	Z-Axis[4]	INT16	2	M/sec ²	±2 Gs	1/1668.0
84	X-Axis[4]	INT16	2	M/sec ²	±2 Gs	1/1668.0
86	Y-Axis[4]	INT16	2	M/Sec ²	±2 Gs	1/1668.0
88	Pitch Gyro[4]	INT16	2	deg/sec	±60 degrees per second	1/1e2
90	Reserved[4]	UINT8	1	N/A	0 to 0xff	1
91	ValidSensorIndication[5]	UINT16	2	N/A	Bit 0x1: Time tag valid Bit 0x2: Reserved Bit 0x4: Data[0] valid Bit 0x8: Data[1] valid Bit 0x10: Data[2] valid Bit 0x20: Data[3] valid Bit 0x40: Data[4] valid	N/A
93	DataSetTimeTag[5]	UINT32	4	N/A	0 to 0xFFFFFFFF	N/A
97	Heading Gyro[5]	INT16	2	deg/sec	±60 degrees per second	1/1e2
99	Z-Axis[5]	INT16	2	M/sec ²	±2 Gs	1/1668.0
101	X-Axis[5]	INT16	2	M/sec ²	±2 Gs	1/1668.0
103	Y-Axis[5]	INT16	2	M/sec ²	±2 Gs	1/1668.0
105	Pitch Gyro[5]	INT16	2	deg/sec	±60 degrees per second	1/1e2
107	Reserved[5]	UINT8	1	N/A	0 to 0xff	1

Byte	Field	Data Type	Bytes	Unit	Range	Resolution
108	ValidSensorIndication[6]	UINT16	2	N/A	Bit 0x1: Time tag valid Bit 0x2: Reserved Bit 0x4: Data[0] valid Bit 0x8: Data[1] valid Bit 0x10: Data[2] valid Bit 0x20: Data[3] valid Bit 0x40: Data[4] valid	N/A
110	DataSetTimeTag[6]	UINT32	4	N/A	0 to 0xFFFFFFFF	N/A
114	Heading Gyro[6]	INT16	2	deg/sec	±60 degrees per second	1/1e2
116	Z-Axis[6]	INT16	2	M/sec ²	±2 Gs	1/1668.0
118	X-Axis[6]	INT16	2	M/sec ²	±2 Gs	1/1668.0
120	Y-Axis[6]	INT16	2	M/sec ²	±2 Gs	1/1668.0
122	Pitch Gyro[6]	INT16	2	deg/sec	±60 degrees per second	1/1e2
124	Reserved[6]	UINT8	1	N/A	0 to 0xff	1
125	ValidSensorIndication[7]	UINT16	2	N/A	Bit 0x1: Time tag valid Bit 0x2: Reserved Bit 0x4: Data[0] valid Bit 0x8: Data[1] valid Bit 0x10: Data[2] valid Bit 0x20: Data[3] valid Bit 0x40: Data[4] valid	N/A
127	DataSetTimeTag[7]	UINT32	4	N/A	0 to 0xFFFFFFFF	N/A
131	Heading Gyro[7]	INT16	2	deg/sec	±60 degrees per second	1/1e2
133	Z-Axis[7]	INT16	2	M/sec ²	±2 Gs	1/1668.0
135	X-Axis[7]	INT16	2	M/sec ²	±2 Gs	1/1668.0
137	Y-Axis[7]	INT16	2	M/sec ²	±2 Gs	1/1668.0
139	Pitch Gyro[7]	INT16	2	deg/sec	±60 degrees per second	1/1e2
141	Reserved[7]	UINT8	1	N/A	0 to 0xff	1

Byte	Field	Data Type	Bytes	Unit	Range	Resolution
142	ValidSensorIndication[8]	UINT16	2	N/A	Bit 0x1: Time tag valid Bit 0x2: Reserved Bit 0x4: Data[0] valid Bit 0x8: Data[1] valid Bit 0x10: Data[2] valid Bit 0x20: Data[3] valid Bit 0x40: Data[4] valid	N/A
144	DataSetTimeTag[8]	UINT32	4	N/A	0 to 0xFFFFFFFF	N/A
148	Heading Gyro[8]	INT16	2	deg/sec	±60 degrees per second	1/1e2
150	Z-Axis[8]	INT16	2	M/sec ²	±2 Gs	1/1668.0
152	X-Axis[8]	INT16	2	M/sec ²	±2 Gs	1/1668.0
154	Y-Axis[8]	INT16	2	M/sec ²	±2 Gs	1/1668.0
156	Pitch Gyro[8]	INT16	2	deg/sec	±60 degrees per second	1/1e2
158	Reserved[8]	UINT8	1	N/A	0 to 0xff	1
159	ValidSensorIndication[9]	UINT16	2	N/A	Bit 0x1: Time tag valid Bit 0x2: Reserved Bit 0x4: Data[0] valid Bit 0x8: Data[1] valid Bit 0x10: Data[2] valid Bit 0x20: Data[3] valid Bit 0x40: Data[4] valid	N/A
161	DataSetTimeTag[9]	UINT32	4	N/A	0 to 0xFFFFFFFF	N/A
165	Heading Gyro[9]	INT16	2	deg/sec	±60 degrees per second	1/1e2
167	Z-Axis[9]	INT16	2	M/sec ²	±2 Gs	1/1668.0
169	X-Axis[9]	INT16	2	M/sec ²	±2 Gs	1/1668.0
171	Y-Axis[9]	INT16	2	M/sec ²	±2 Gs	1/1668.0
173	Pitch Gyro[9]	INT16	2	deg/sec	±60 degrees per second	1/1e2
175	Reserved[9]	UINT8	1	N/A	0 to 0xff	1

Table 5.89: Input Car Bus Data 2 - Message ID 172, Sub ID 14

Note:

Payload length: 175 bytes

5.43 User Set Command - Message ID 175

Allows user to send an input command string and parse the associated functions.

Table 5.90 describes the message content.

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1		AF		Decimal 175
User Set Command	Variable				Depends on user's input

Table 5.90: User Set Command - Message ID 175

Note:

Payload length: Variable bytes

Note:

This message can only be used by SDK customers.

5.44 SW Toolbox Input - Message ID 178, Sub IDs 1-3, 20, 34, 38, 40

These messages allow the User System to access Tracker features via the Host. The Host will essentially map the SSB requests from the User System to MEI requests for the Tracker. The mapping is required since a direct pass-through is not always allowed. Some User System requests will require a corresponding change to the Host (for example, a change to the Tracker baud rate will necessitate a change at the Host or communication will be lost).

MID (Hex)	0xB2
MID (Dec)	178
Message Name in Code	MID_TrackerIC (see PROTOCOL.H)
SID (Hex)	See below
SID (Dec)	See below
SID Name in Code	See below

Table 5.91: SW Toolbox Input - Message ID 178, Sub IDs 1-3, 20, 34, 38, 40

5.44.1 MeiToCustomIo - Message ID 178, Sub ID 1

The format of this message is dependent upon the custom I/O, therefore the content of this message set is not listed in this document. Instead, a separate ICD describing this message and the associated custom I/O will be distributed to each targeted customer under NDA.

Field	Length (bytes)	Description
MID	1	0xB2
SID	1	0x01
Varies	n	Dependent on the custom I/O

Table 5.92: MeiToCustomIo - Message ID 178, Sub ID 1

Response upon completion of the command: 0x0B (MID_ACK). Upon output of the SSB 0x0B (MID_ACK) response, the Host will send the appropriate MEI 0x1F (Select Custom I/O) command to the Tracker.

5.44.2 TrackerConfig - Message ID 178, Sub ID 2

The scope of this message and the rules of overriding other settings of these values that may have already been stored are described in Table 5.93.

Name	Bytes	Example (Hex)	Units	Example (Decimal)	Description
Message ID	1	B2		178	Message ID
Sub ID	1	02		2	Sub ID
Reference Clock Frequency	4	F9C568 (default)	Hz	16369000 (default)	Value of attached TCXO in Hz
Reference Start-up Delay	2	3FF (default)	RTC clock cycles	1023 (default)	Tracker inserts the start-up delay on TCXO power-up. The units are RTC clock cycles, and start-up delay can range from 0 to 2 seconds. The Tracker default is 0x03FF or 31.2 ms.
Reference Initial Uncertainty	4	BB8 (default)	ppb	3000 (default)	Initial TCXO uncertainty in ppb. The value 0xFFFFFFFF means initial uncertainty unknown, and the Tracker will use the default uncertainty.
Reference Initial Offset	4	177FA (default)	Hz	96250 (default)	Initial TCXO offset in Hz. Note this value is signed. The value 0x7FFFFFFF means the initial offset is unknown, and the Tracker will use the default offset.
LNA	1	0 (default)		0 (default)	0 = Use Internal LNA (Tracker default) 1 = Use External LNA IO Pin
Configuration Enable	1	1 (default)		1 (default)	0 = Disable (also means all IO pins are disabled) 1 = Enable (use IO Pin Configuration field)

Name	Bytes	Example (Hex)	Units	Example (Decimal)	Description
IO Pin Configuration	22 ⁽¹⁾				Details are product specific: see Ref. 5 for "IO Pin Configuration Message" document
UART Wake Up Max Preamble	1	0 (default)		0 (default)	Number of preamble byte pattern transmissions. The tracker will use this spec in subsequent transmissions to the host.
UART Idle byte wake up delay	1	0 (default)		0 (default)	Number of byte worth of delay between preamble transmissions. The tracker will use this spec in subsequent transmissions to the host.
UART Baud Rate	4	1C200 (default)	Baud	115200 (default)	UART baud rate. The following is the list of valid bauds - 900, 1200, 1800, 2400, 3600, 4800, 7200, 9600, 14400, 19200, 28800, 38400, 57600, 76800, 115200, 153600, 230400, 307200, 460800, 614400, 921600, 1228800, and 1843200.
UART Flow Control	1	0 (default)		0 (default)	0 = Disable hardware flow control 1 = Enable hardware flow control
I2C Master Address (user system)	2	62 (default)		98 (default)	Either a 7-bit or a 10-bit I2C address. If this 16-bit field begins with 0xF, then this is a flag indicating 10-bit I2C addressing is being used. For a 7-bit address, only the lower 7 bits are used. For a 10-bit address, only the lower 10-bits are used. For a 7-bit I2C address, this field will range from 0x0008 through 0x007F. Values lower than 0x08 have special uses (see the I2C Bus Specification for a description). For a 10-bit I2C address, this field will range from 0xF000 through 0xF3FF.

⁽¹⁾ The length of this field was increased from 20 bytes to 22 bytes, signifying an increase in the number of IO pins from 10 to 11 for GSD4t build numbers >= 4.0.2 and for GSD4e build numbers >= 4.0.1.

Name	Bytes	Example (Hex)	Units	Example (Decimal)	Description
I2C Slave Address (GSD4t or GSD4e)	2	60 (default)		96 (default)	Either a 7-bit or a 10-bit I2C address. If this 16-bit field begins with 0xF, then this is a flag indicating 10-bit I2C addressing is being used. For a 7-bit address, only the lower 7 bits are used. For a 10-bit address, only the lower 10-bits are used. For a 7-bit I2C address, this field will range from 0x0008 through 0x007F. Values lower than 0x08 have special uses (see the I2C Bus Specification for a description). For a 10-bit I2C address, this field will range from 0xF000 through 0xF3FF.
I2C Rate	1	1 (default)		1 (default)	0 = 100 Kbps 1 = 400 Kbps (default) 2 = 1 Mbps (not available on GSD4t or GSD4e) 3 = 3.4 Mbps (not available on GSD4t or GSD4e)
I2C Mode	1	1 (default)		1 (default)	0 = Slave 1 = Multi-Master (default) I2C Max message length 2 1F4 (default) Bytes 500 (default) Maximum message length in I2C mode
Power control on/off	1	0 (default)		0 (default)	See Table 5.94 for bit field description.
Power Supply Config Select	1	0 (default)		0 (default)	0 = Switching regulator 1 = Internal LDO 2 = External voltage 3 = Backup LDO

Table 5.93: Tracker Configuration Command

Power control on/off	
Bit Field	Description
[2:0]	Edge type
0	On/Off disabled or not detected
1	Enable Falling edge On/Off IRQ
2	Enable Rising edge On/Off IRQ
3	Enable Rising edge On, Falling edge Off IRQ

Power control on/off	
Bit Field	Description
4	Enable Falling edge On, Rising edge Off IRQ
[4:3]	Usage type
0	No On/Off used
1	Gpio controlled On/Off
2	UartA Rx controlled On/Off
3	UartB CTS controlled On/Off
[5]	OFF enabled/disabled
0	OFF disabled
1	OFF enabled
[7:6]	Reserved

Table 5.94: TrackerConfig - Message ID 178, Sub ID 2

Response upon completion of the command: 0x0B (MID_ACK). Upon output of the SSB 0x0B (MID_ACK) response, the Host will send the appropriate MEI 0x0A (Tracker Configuration) command to the Tracker if the product is a tracker product.

Note:

The tracker configuration message information is also included in the parameters of the SiRFNav_Start() API call of the *SiRFHost Reference Manual*.

All tracker configuration setting requests in message (178, 2) will apply after the next reset, with the exception of UART and I²C parameter setting requests which apply immediately.

5.44.3 PeekPoke - Message ID 178, Sub ID 3

5.44.3.1 Tracker Peek and Poke Command (four-byte peek)

Field	Length (bytes)	Description
MID	1	0xB2
SID	1	0x03
Type	1	enumeration: 0 = Peek (always four bytes) 10 = eFUSE peek (4e and beyond only, 4 bytes)
Access	1	enumeration: 1 = 8-bit access (byte access) 2 = 16-bit access (half-word access) 4 = 32-bit access (word access)
Address	4	unsigned integer
Data	4	ignored (usually filled with zero)

Table 5.95: Tracker Peek and Poke Command (four-byte peek)

Response upon completion of the command: 0x0B (MID_ACK). Upon output of the SSB 0x0B (MID_ACK) response, the Host will send the appropriate MEI 0x1E (Peek and Poke Command) command to the Tracker.

5.44.3.2 Tracker Peek and Poke Command (four-byte poke)

Field	Length (bytes)	Description
MID	1	0xB2
SID	1	0x03
Type	1	enumeration: 1 = Poke (always four bytes)
Access	1	enumeration: 1 = 8-bit access (byte access) 2 = 16-bit access (half-word access) 4 = 32-bit access (word access)
Address	4	unsigned integer
Data	4	

Table 5.96: Tracker Peek and Poke Command (four-byte poke)

Response upon completion of the command: 0x0B (MID_ACK). Upon output of the SSB 0x0B (MID_ACK) response, the Host will send the appropriate MEI 0x1E (Peek and Poke Command) command to the Tracker.

5.44.3.3 Tracker Peek and Poke Command (n-byte peek)

Field	Length (bytes)	Description
MID	1	0xB2
SID	1	0x03
Type	1	enumeration: 2 = Multi-peek 12 = eFUSE multi-peek (4e and beyond only)
Access	1	enumeration: 1 = 8-bit access (byte access) 2 = 16-bit access (half-word access) 4 = 32-bit access (word access)
Address	4	unsigned integer Beginning address
Number of Bytes	2	unsigned integer Range: 0 to 1000 If zero, no data is read

Table 5.97: Tracker Peek and Poke Command (n-byte peek)

Response upon completion of the command: 0x0B (MID_ACK). Upon output of the SSB 0x0B (MID_ACK) response, the Host will send the appropriate MEI 0x1E (Peek and Poke Command) command to the Tracker.

5.44.3.4 Tracker Peek and Poke Command (n-byte poke)

Field	Length (bytes)	Description
MID	1	0xB2
SID	1	0x03
Type	1	enumeration: 3 = Multi-poke
Access	1	enumeration: 1 = 8-bit access (byte access) 2 = 16-bit access (half-word access) 4 = 32-bit access (word access)
Address	4	unsigned integer Beginning address
Number of Bytes	2	unsigned integer Range: 0 to 1000 If zero, no data is written
Data	Number of Bytes	

Table 5.98: Tracker Peek and Poke Command (n-byte poke)

Response upon completion of the command: 0x0B (MID_ACK). Upon output of the SSB 0x0B (MID_ACK) response, the Host will send the appropriate MEI 0x1E (Peek and Poke Command) command to the Tracker.

5.44.4 PatchStorageControlInput - Message ID 178, Sub ID 20

This message specifies where to store the patches. This message can only be valid for products GSD4e and PVT products beyond. The scope of this message and the rules of overriding other settings of this value that may have already been stored are described in Section 7.18.

Message Name	Patch Storage Control
Input or Output	Input
MID (Hex)	0xB2
MID (Dec)	178
Message Name in Code	SIRF_MSG_SSB_TRACKER_IC
SID (Hex)	0x14
SID (Dec)	20
SID Name in Code	PATCH_STORAGE_CONTROL

Table 5.99: PatchStorageControlInput - Message ID 178, Sub ID 20

Name	Bytes	Binary (Hex)		Unit	Ascii (Dec)		Description
		Scale	Example		Scale	Example	
Message ID	1		0xB2			178	Message ID
Sub ID	1		0x14			20	Sub ID
Patch Storage Control	1						See bit-field table below

Table 5.100: Patch Storage Control Message

Bit Field	Description
[0]	0 = don't store to I2C serial flash 1 = store to I2C serial flash (default)
[7:1]	Reserved

Table 5.101: Patch Storage Control Message Bit Fields

5.44.5 Initial Patch Memory Load Request - Message ID 178, Sub ID 34

Field	Length (bytes)	Description
Message Id	1	0xB2
Sub Id	1	0x22
Sequence No	2	Message Sequence Number 1 indicates that this load message contains patch overlay data.
1st Load Type Character	1	If Patch Data, then 'P'.
2nd Load Type Character	1	If Patch Data, then 'M'.
ROM Version Code	2	ROM Version Code
Patch Revision Code	2	Patch Revision Code
Patch Data Base Address	4	Patch Data Base Address
Patch Data Length	2	Total byte length of both patch overlay and nonoverlay sections includes 2 bytes for CRC16.
Patch RAM Start Offset	2	Patch RAM Start Offset value is the offset indicating the start of the non-overlay section which includes the 2 byte CRC16 of the overlay section. If non-overlay section is not available, then this value will be zero.
Patch Load Data	variable (<= 998 bytes)	Patch Load Data includes 2 byte CRC16 value for patch overlay section.

Table 5.102: Initial Patch Memory Load Request - Message ID 178, Sub ID 34

Sequence No: The Sequence No is set to 1 (This marks the Initial PM Load Request and is used to indicate that this load message contains Patch Load Data bytes for the patch overlay section only).

1st Load Type Character: If Load Patch Memory Request is being used to load patch data, then this value is set to the 'P'.

2nd Load Type Character: If Load Patch Memory Request is being used to load patch data, then this value is set to the 'M'. ROM Version Code: This field is the ROM Version Code to be stored

Patch Revision Code: This field is the Patch Revision Code to be stored.

Patch Data Length: This field indicates the total byte length of the patch overlay and non-overlay sections + 2 bytes for CRC16 found in the patch file being loaded.

Patch RAM Start Offset: Patch RAM Start Offset value is the offset indicating the start of the patch non-overlay section which also includes a 2 byte CRC16 value of the patch overlay section. If patch non-overlay section is not available, then this value will be zero.

Patch Load Data: This field contains the sequence of bytes to be loaded in the patch overlay section of Patch RAM. There may be one or more segment offset, segment type, segment length and segment data values embedded in the Patch Load Data and the last 2 bytes contains the 2 byte CRC16 value of the patch overlay section.

5.44.5.1 Subsequent Patch Memory Load Request(s) (if needed)

Field	Length (bytes)	Description
Message Id	1	0xB2
Sub Id	1	0x22
Sequence No	2	Message Sequence Number (2,...X). Message Sequence Numbers > 1 are used to indicate that the load message contains patch non-overlay data.
Patch Load Data	variable (<= 1012 bytes)	Patch Load Data (The last PM Load Request will contain the Patch Payload CRC16 value)

Table 5.103: Subsequent Patch Memory Load Request Message Definition

Sequence No:	
The Sequence No is greater than 1. A Sequence No > 1 indicates load messages used to load the Patch Load Data bytes into the non-overlay section of Patch RAM.	
Patch Load Data:	

This field contains the sequence of bytes that is loaded into the non-overlay section of Patch RAM. The load message with Sequence No of 2 will contain the non-overlay segment offset and non-overlay segment length is embedded in the Patch Load Data. The last load message will also contain a 2 byte CRC16 value for the patch non-overlay section.

5.44.6 Patch Manager Exit Request - Message ID 178, Sub ID 38

Field	Length (bytes)	Description
Message Id	1	0xB2
Sub Id	1	0x26

Table 5.104: Patch Manager Exit Request - Message ID 178, Sub ID 38

This message consists only of the MSG_ID and SUB_ID itself and there is no MSG_DATA. It is sent to inform the 4e that all patch related exchanges are complete.

5.44.7 Patch Manager Start Request - Message ID 178, Sub ID 40

Field	Length (bytes)	Description
Message Id	1	0xB2
Sub Id	1	0x28

Table 5.105: Patch Manager Start Request - Message ID 178, Sub ID 40

This message is sent to query the 4e for its Patch Manager Prompt message and usually indicates the start of the Patch Protocol to load a patch. This message consists only of the MSG_ID and SUB_ID itself and there is no MSG_DATA.

5.45 GSC2xr Preset Operating Configuration - Message ID 180

Note:

This Message ID (180) is used only with GSC2xr chip.

Overrides the Preset Operating Configuration as defined in bits [3:2] of the GSC2xr chip configuration register. The valid input values mapped to the Preset Operating Configuration are described in Table 5.106.

Mapping	
Input Values	Preset Configuration
0	1
1	2
2	3
3	4
4	Standard GSW2 and GSW2x software default configuration ⁽¹⁾

Table 5.106: Valid Input Values

⁽¹⁾ The default configuration is SiRF Binary at 38400 bps using UART A and RTCM at 9600 bps using UART B.

Table 5.107 contains the input values for the following example:

Set receiver to Standard GSW2 Default Configuration.

Example:

- A0A20002 – Start Sequence and Payload Length (2 bytes)
- B404 – Payload
- 00B8B0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1		B4		Decimal 180
Input ⁽¹⁾	1		04		Valid input value from 0 to 4

Table 5.107: GSC2xr Preset Operating Configuration - Message ID 180

⁽¹⁾ Invalid input value yields a Rejected MID_UserInputBegin while a valid input value yields a Acknowledged MID_UserInputBegin response in the SiRFDemo response view.

New Config	Nav Status	Config 4	Config 3	Config 2	Config 1
UARTA		NMEA v2.2	NMEA v2.2	SiRF Binary	NMEA v2.2
UARTB		RTCM	RTCM	NMEA v2.2	SiRF Binary
Build		GSWx2.4.0 and greater	GSWx2.4.0 and greater	GSWx2.4.0 and greater	GSWx2.4.0 and greater, Adaptive TricklePower @ 300,1
UARTA bit rate		4800 n, 8, 1	19200 n, 8, 1	57600 n, 8, 1	4800 n, 8, 1
UARTB bit rate		9600 n, 8, 1	9600 n, 8, 1	115200 n, 8, 1	38400 n, 8, 1
SiRF Binary Output Messages ⁽¹⁾		2, 4, 9, 13, 18, 27, 41, 52	2, 4, 9, 13, 18, 27, 41, 52	2, 4, 9, 13, 18, 27, 41, 52	2, 4, 9, 13, 18, 27, 41, 52
NMEA Messages		RMC, GGA, VTG, GSA (GSV@ 1/5 Hz), ZDA	GGA, GLL, GSA, GSV, RMC, VTG, ZDA	GGA, GLL, GSA, GSV, RMC, VTG, ZDA	GGA, GLL, GSA, GSV, RMC, VTG, ZDA
GPIO A (GPIO 1)	No Nav	On	On	On	On
	Nav	100 ms on, 1 Hz	100 ms on, 1 Hz	100 ms on, 1 Hz	100 ms on, 1 Hz
GPIO B (GPIO 3)	No Nav	Off	Off	Off	Off
	Nav	100 ms on, 1 Hz	100 ms on, 1 Hz	100 ms on, 1 Hz	100 ms on, 1 Hz
GPIO C (GPIO 13)	No Nav	On	On	On	On
	Nav	1s on, 1s off	1s on, 1s off	1s on, 1s off	1s on, 1s off
GPIO D (GPIO 2)	No Nav	Off	Off	Off	Off
	Nav	On	On	On	On
Static Filter		Off	Off	Off	Off
Track Smoothing		On	On	On	On
WAAS		Disabled	Enabled	Enabled	Disabled
DR		Off	Off	Off	Off

Table 5.108: GSC2xr Preset Operating Configurations

⁽¹⁾ SiRF Binary Messages: 2 – Measured Nav Data, 4 – Measured Track Data, 9 – Through Put, 13 – Visible List, 18 – OK to Send, 27 – DGPS Status, 41 – Geodetic Nav Data, 52 – 1 PPS Time Message.

5.45.1 Software Control - Message ID 205

Used by GSW3 and GSWLT3 software (versions 3.2.5 or above) for generic input. Based on the Message Sub ID, there are different interpretations.

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1		CD		Decimal 205
Message Sub ID	1		10		Message Sub ID
Data					Varies with Message Sub ID
Payload length: Variable					

Table 5.109: Software Control - Message ID 205

5.45.1.1 Software Commanded Off - Message ID 205 (Sub ID 16)

Shuts down the chip.

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1		CD		Decimal 205
Message Sub ID	1		10		Message Sub ID for software commanded off
Payload length: 0 bytes					

Table 5.110: Software Commanded Off - Message ID 205 (Message Sub ID 16)

5.46 Query Request - Message ID 209

The intent of this message is to query the receiver to determine what modes/settings are active. The first implementation has the query messaging for low power and full power, with the intent that in the future this function could be expanded to other messages.

MID (Hex)	0xD1
MID (Dec)	209
Message Name in Code	MID_QUERY_REQ

Table 5.111: Query Request - Message ID 209

Field	Bytes	Scale	Unit
Message ID	1		
QUERY_MID	1		
QUERY_SID	1		

Table 5.112: Query Request M

QUERY_MID: Message ID for query

Specifies which mode/setting is being queried.

QUERY_SID: Sub ID for query

If a particular query requires that a SID be specified, it is in this field. Not all queries require a SID to be specified and therefore if a MID is sent where the SID does not matter, this field is ignored.

Query support is available only for the following MID/SIDs:

QUERY_MID	QUERY_SID	Description
218	Ignored	Determine if we are in a low power mode or full power.

Table 5.113: QUERY_MID Field

5.47 Position Request - Message ID 210

MID (Hex)	0xD2
MID (Dec)	210
Message Name in Code	MID_POS_REQ

Table 5.114: Position Request - Message ID 210

Field	Bytes	Scale	Unit
Message ID	1		
POS_REQ_ID	1		
NUM_FIXES	1		
TIME_BTW_FIXES	1	1	Seconds
HORI_ERROR_MAX	1		Metres
VERT_ERROR_MAX	1		
RESP_TIME_MAX	1	1	Seconds
TIME_ACC_PRIORITY	1		
LOCATION_METHOD	1		

Table 5.115: Position Request Message

POS_REQ_ID: Position request identifier

This is a number in the range of 0 to 255 for the SLC to identify the position response (69, 1) and the corresponding measurement response (69, 2) messages with this associated position request message 210.

NUM_FIXES: Number of requested MS position (fixes)

The CP sets this field to the number of MS Position messages it requires the CP to send back. If the number is set to 0, SLC sends MS position continuously to CP. If NUM_FIXES is 1, TIME_BTW_FIXES is ignored.

TIME_BTW_FIXES: Time elapsed between fixes

The CP sets this field to the minimum time between two consecutive fixes of the NUM_FIXES sequence triggered by this request, in second units, in the range from 0 to 255 seconds. The number 0 is for one fix case. The time is minimized in the sense that if the tracking is temporary lost during the sequence of fixes, the time between two consecutive fixes can be larger than TIME_BET_FIXES to give time to the receiver to reacquire satellites and resume the position fixes delivery. The Advanced Power Management (APM) can also affect the actual time between fixes.

HORI_ERROR_MAX: Maximum requested horizontal error

The CP sets this field to the maximum requested horizontal position error, in unit of 1 meter. The value of 0x00 indicates No Maximum. The range of HORI_ERROR_MAX is from 1 meter to 255 meters. The SLC tries to provide a position with horizontal error less than this specified value in more than 95% of the cases.

VERT_ERROR_MAX: Maximum requested vertical error

The CP sets this field to the maximum requested vertical position error according to Table 5.116.

Values	Position Error (in metres)
0x00	<1
0x01	<5
0x02	<10
0x03	<20
0x04	<40
0x05	<80
0x06	<160
0x07	No Maximum
0x08 – 0xFF	Reserved

Table 5.116: Vertical Error Field

The SLC tries to provide a position with vertical error less than this specified value in more than 95% of the cases.

Note:

The Position Request OSP message and the APM request message both specify QoS parameters and time between fixes. The APM request overrides the Position Request parameter values override the values in the APM transition request. After the response sequence to the Position Request message has completed, the QoS criteria revert back to the APM specified values.

RESP_TIME_MAX: Maximum response time

The CP sets this field to the maximum requested response time, as an unsigned binary, in seconds. The value 0 is reserved for No Time Limit.

TIME_ACC_PRIORITY: Time/accuracy priority

This field controls whether TTFF or the position accuracy criteria has priority. To indicate no time limit for a fix, MAX_RESP_TIME is set to 0. If RESP_TIME_MAX and HERRMAX/VERRMAX conditions are contradicting each other, this field determines which one has priority. This field is coded according to Table 5.117.

TIME_ACC_PRIORITY	Description
0x00	No priority imposed
0x01	RESP_TIME_MAX has priority over HORI_ERROR_MAX/VERT_ERROR_MAX
0x02	HORI_ERROR_MAX/VERT_ERROR_MAX has priority over RESP_TIME_MAX
0x03	Entire RESP_TIME_MAX used. Effective only in builds SN4_GSD4t_4.0.2-B7 or later.
0x04 – 0xFF	Reserved

Table 5.117: Time/Accuracy Priority Field

0x00 - The position fix will be reported when either TTFB or the position accuracy criteria is met, whichever event occurs first.

0x01 - TTFB has priority. The position fix will be reported when RESP_TIME_MAX expires, regardless of how good the position accuracy is estimated at that time and specified in this request.

0x02 - Position accuracy has priority. The position fix will not be reported until the position accuracy is estimated to be smaller than HORI_ERROR_MAX and/or VERT_ERROR_MAX.

0x03 - Then position fixes will be reported at RESP_TIME_MAX, regardless of how accurate the position accuracy is estimated at that time and specified in this request. Even if we have a good fix that meets HORI_ERROR_MAX and/or VERT_ERROR_MAX earlier than RESP_TIME_MAX, the position fix will not be reported until time reaches RESP_TIME_MAX. This setting is effective only in builds SN4_GSD4t_4.0.2-B7 or later.

LOCATION_METHOD: GPS Location Method

The CP sets this field according to the requested location method as described in Table 5.118.

LOCATION_METHOD	Description
0x00	MS Assisted
0x01	MS Based
0x02	MS Based is preferred, but MS Assisted is allowed
0x03	MS Assisted is preferred, but MS Based is allowed
0x04	Simultaneous MS Based and MS Assisted
All others	Reserved

Table 5.118: GPS Location Method Field

5.48 Set Ionospheric Model - Message ID 211, Sub ID 1

MID (Hex)	0xD3
MID (Dec)	211
Message Name in Code	MID_SET_AIDING
SID (Hex)	0x01
SID (Dec)	1
SID Name in Code	SET_IONO

Table 5.119: Set Ionospheric Model - Message ID 211, Sub ID 1

Field	Length (nr of bits)	Scale	Unit
Message ID	8		
Message Sub ID	8		
ALPHA_0	8 ⁽¹⁾	2 ⁻³⁰	Seconds
ALPHA_1	8 ⁽¹⁾	2 ⁻²⁷	sec/semicircles
ALPHA_2	8 ⁽¹⁾	2 ⁻²⁴	sec/(semicircles) ²
ALPHA_3	8 ⁽¹⁾	2 ⁻²⁴	sec/(semicircles) ³
BETA_0	8 ⁽¹⁾	2 ¹¹	Seconds
BETA_1	8 ⁽¹⁾	2 ¹⁴	sec/semicircles
BETA_2	8 ⁽¹⁾	2 ¹⁶	sec/(semicircles) ²
BETA_3	8 ⁽¹⁾	2 ¹⁶	sec/(semicircles) ³

Table 5.120: Set Ionospheric Model Message

⁽¹⁾ Two's complement with the bit sign (+or-) occupying the MSB

ALPHA_0: Ionosphere correction parameter α_0

The CP shall set this field to the value contained in the associated parameter of the specified GPS ephemeris.

ALPHA_1: Ionosphere correction parameter α_1

The CP shall set this field to the value contained in the associated parameter of the specified GPS

ALPHA_2: Ionosphere correction parameter α_2

The CP shall set this field to the value contained in the associated parameter of the specified GPS ephemeris.

ALPHA_3: Ionosphere correction parameter α_3

The CP shall set this field to the value contained in the associated parameter of the specified GPS ephemeris.

BETA_0: Ionosphere correction parameter β_0

The CP shall set this field to the value contained in the associated parameter of the specified GPS ephemeris.

BETA_1: Ionosphere correction parameter β_1

The CP shall set this field to the value contained in the associated parameter of the specified GPS ephemeris.

BETA_2: Ionosphere correction parameter β_2

The CP shall set this field to the value contained in the associated parameter of the specified GPS ephemeris.

BETA_3: Ionosphere correction parameter β_3

5.49 Set Satellite Ephemeris and Clock Corrections - Message ID 211, Sub ID 2

MID (Hex)	0xD3
MID (Dec)	211
Message Name in Code	MID_SET_AIDING
SID (Hex)	0x02
SID (Dec)	2
SID Name in Code	SET_EPH_CLOCK

Table 5.121: Set Satellite Ephemeris and Clock Corrections - Message ID 211, Sub ID 2

Field	Length (nr of bits)	Scale	Unit
Message ID	8		
Message Sub ID	8		
NUM_SVS	8		
The structure of ephemeris parameters below repeats for the number of times indicated in the NUM_SVS field.			
EPH_FLAG	8	N/A	N/A
SV_PRN_NUM	8	N/A	N/A
URA_IND	8	N/A	N/A
IODE	8	N/A	N/A
C_RS	16 ⁽¹⁾	2 ⁻⁵	Meters
DELTA_N	16 ⁽¹⁾	2 ⁻⁴³	semi-circles/sec
M0	32 ⁽¹⁾	2 ⁻³¹	semi-circles
C_UC	16 ⁽¹⁾	2 ⁻²⁹	Radians
ECCENTRICITY	32	2 ⁻³³	N/A
C_US	16 ⁽¹⁾	2 ⁻²⁹	Radians
A_SQRT	32	2 ⁻¹⁹	meters
TOE	16	2 ⁴	Seconds

Field	Length (nr of bits)	Scale	Unit
C_IC	16 ⁽¹⁾	2 ⁻²⁹	Radians
OMEGA_0	32 ⁽¹⁾	2 ⁻³¹	semi-circles
C_IS	16 ⁽¹⁾	2 ⁻²⁹	Radians
ANGLE_INCLINATION	32 ⁽¹⁾	2 ⁻³¹	semi-circles
C_RC	16 ⁽¹⁾	2 ⁻⁵	Meters
OMEGA	32 ⁽¹⁾	2 ⁻³¹	semi-circles
OMEGADOT	32 ⁽¹⁾	2 ⁻⁴³	semi-circles/sec
IDOT	16 ⁽¹⁾	2 ⁻⁴³	semi-circles/sec
TOC	16	24	Seconds
T_GD	8 ⁽¹⁾	2 ⁻³¹	Seconds
AF2	8 ⁽¹⁾	2 ⁻⁵⁵	sec/sec ²
AF1	16 ⁽¹⁾	2 ⁻⁴³	sec/sec
AF0	32 ⁽¹⁾	2 ⁻³¹	Seconds

Table 5.122: Set Satellite Ephemeris and Clock Corrections Message

⁽¹⁾ Two's complement with the bit sign (+or-) occupying the MSB

NUM_SVS: Number of satellites

This is the number of satellites for which satellite ephemeris and clock corrections are being given with this message.

EPH_FLAG: Ephemeris parameter validity flag

The CP shall set this field to 1 if the following fields from SV_PRN_NUM to AF0 are valid broadcast ephemeris parameters.

If those fields are not valid, The CP shall set this field and the following fields from SV_PRN_NUM to AF0 to 0. This field shall be set to 0 if ephemeris parameters are not present in this AI3 message. The client shall keep its internal ephemeris data in this case.

The CP shall set this field to 2 if the following fields from SV_PRN_NUM to AF0 are valid synthesized ephemeris parameters (ephemeris extension).

For an unhealthy SV (SV health is not equal to 0), a separate UNHEALTHY_SAT_FLAG section might be included.

Other values are interpreted as follows

Bit 5 (Bit 0 is LSB) represents the type of ephemeris extension (EE). The value of 0 represents server-based EE, and the value of 1 represents client-based EE.

Bit 0 to Bit 4 represents the age of EE.

The value of 2 represents valid ephemeris extension of age of 1-day.

The value of 3 represents valid ephemeris extension of age of 2-day.

The value of 4 represents valid ephemeris extension of age of 3-day.

The value of 5 represents valid ephemeris extension of age of 4-day.

The value of 6 represents valid ephemeris extension of age of 5-day.

The value of 7 represents valid ephemeris extension of age of 6-day.

The value of 8 represents valid ephemeris extension of age of 7-day.

For example: 0x22 represents a client-based ephemeris extension of age 1, while 0x02 represents a server-based ephemeris extension of age 1.

SV_PRN_NUM: Satellite PRN number

The CP shall set this field to the value of the PRN number for which the ephemeris is valid. It is represented as an unsigned binary value in the range from 1 to 32.

URA_IND: User range accuracy index

The CP shall set this field to the URA index of the SV. The URA index is an integer in the range of 0 through 15 and has the following relation to the URA of the SV.

URA Index	URA (meters)
0	0.00 < URA ≤ 2.40
1	2.40 < URA ≤ 3.40
2	3.40 < URA ≤ 4.85
3	4.85 < URA ≤ 6.85
4	6.85 < URA ≤ 9.65
5	9.65 < URA ≤ 13.65
6	13.65 < URA ≤ 24.00
7	24.00 < URA ≤ 48.00
8	48.00 < URA ≤ 96.00
9	96.00 < URA ≤ 192.00
10	192.00 < URA ≤ 384.00
11	384.00 < URA ≤ 768.00
12	768.00 < URA ≤ 1536.00
13	1536.00 < URA ≤ 3072.00
14	3072.00 < URA ≤ 6144.00
15	6144.00 < URA (or no accuracy prediction is available)

Table 5.123: URA Coding

IODE: Issue of data

The CP shall set this field to the value contained in the associated parameter of the specified GPS ephemeris.

C_RS: Amplitude of the sine harmonic correction term to the orbit radius.

The CP shall set this field to the value contained in the associated parameter of the specified GPS ephemeris.

DELTA_N: Mean motion difference from the computed value

The CP shall set this field to the value contained in the associated parameter of the specified GPS ephemeris.

M0: Mean anomaly at the reference time

The CP shall set this field to the value contained in the associated parameter of the specified GPS ephemeris.

C_UC: Amplitude of the cosine harmonic correction term to the argument of latitude

The CP shall set this field to the value contained in the associated parameter of the specified GPS ephemeris.

ECCENTRICITY: Eccentricity

The CP shall set this field to the value contained in the associated parameter of the specified GPS ephemeris. **C_US** Amplitude of the sine harmonic correction term to the argument of latitude. The CP shall set this field to the value contained in the associated parameter of the specified GPS ephemeris.

A_SQRT: Square root of the semi-major axis

The CP shall set this field to the value contained in the associated parameter of the specified GPS ephemeris.

TOE: Ephemeris reference time

The CP shall set this field to the value contained in the associated parameter of the specified GPS ephemeris. The SLC shall accept the associated parameter if:

1. The internal ephemeris has an TOE (let's call it int_TOE) that is in the past when compared to this TOE
2. int_TOE is in the future when compared to this TOE, and $((\text{TOE} * 16) \bmod 3600) \neq 0$.

C_IC: Amplitude of the cosine harmonic correction term to the angle of inclination

The CP shall set this field to the value contained in the associated parameter of the specified GPS ephemeris.

OMEGA_0: Longitude of ascending node of orbit plane at weekly epoch

The CP shall set this field to the value contained in the associated parameter of the specified GPS ephemeris.

C_IS: Amplitude of the sine harmonic correction term to the angle of inclination

The CP shall set this field to the value contained in the associated parameter of the specified GPS ephemeris. **ANGLE_INCLINATION** Inclination angle at reference time. The CP shall set this field to the value contained in the associated parameter of the specified GPS ephemeris.

C_RC: Amplitude of the cosine harmonic correction term to the orbit radius

The CP shall set this field to the value contained in the associated parameter of the specified GPS ephemeris.

OMEGA: Argument of perigee

The CP shall set this field to the value contained in the associated parameter of the specified GPS ephemeris.

OMEGADOT: Rate of right ascension

The CP shall set this field to the value contained in the associated parameter of the specified GPS ephemeris.

IDOT: Rate of inclination angle

The CP shall set this field to the value contained in the associated parameter of the specified GPS ephemeris.

TOC: Clock data reference time

The CP shall set this field to the value contained in the associated parameter of the specified GPS ephemeris.

T_GD: L1 and L2 correction term

The CP shall set this field to the value contained in the associated parameter of the specified GPS ephemeris.

AF2: Apparent satellite clock correction α_{f2}

The CP shall set this field to the value contained in the associated parameter of the specified GPS ephemeris.

AF1: Apparent satellite clock correction α_{f1}

The CP shall set this field to the value contained in the associated parameter of the specified GPS ephemeris.

AF0: Apparent satellite clock correction α_{f0}

The CP shall set this field to the value contained in the associated parameter of the specified GPS ephemeris.

5.50 Set Almanac Assist Data - Message ID 211, Sub ID 3

MID (Hex)	0xD3
MID (Dec)	211
Message Name in Code	MID_SET_AIDING
SID (Hex)	0x03
SID (Dec)	3
SID Name in Code	SET_ALM

Table 5.124: Set Almanac Assist Data - Message ID 211, Sub ID 3

Field	Length (nr of bits)	Scale	Unit
Message ID	8		
Message Sub ID	8		
ALM_WEEK_NUM	16	N/A	N/A
NUM_SVS	8		
The structure below of almanac parameters repeats a number of times indicated by the NUM_SVS field.			
ALM_VALID_FLAG	8	N/A	N/A
ALM_SV_PRN_NUM	8	N/A	N/A
ALM_ECCENTRICITY	16	2^{-21}	Dimensionless
ALM_TOA	8	2^{12}	Seconds
ALM_DELTA_INCL	16 ⁽¹⁾	2^{-19}	Semicircles
ALM_OMEGADOT	16 ⁽¹⁾	2^{-38}	Semicircles/sec
ALM_A_SQRT	24	2^{-11}	Meters ^{1/2}
ALM_OMEGA_0	24 ⁽¹⁾	2^{-23}	Semicircles
ALM_OMEGA	24 ⁽¹⁾	2^{-23}	Semicircles
ALM_M0	24 ⁽¹⁾	2^{-23}	Semicircles
ALM_AF0	16 ⁽¹⁾	2^{-20}	Seconds
ALM_AF1	16 ⁽¹⁾	2^{-38}	Sec/sec

Table 5.125: Set Almanac Assist Data Message

⁽¹⁾ Two's complement with the bit sign (+or-) occupying the MSB

ALM_WEEK_NUM: The GPS week number of the almanac

This field shall be equal to the 10 least significant bits of the GPS week number of the almanac. The range for this field is from 0 to 1024.

NUM_SVS: Number of satellites

This is the number of satellites for which almanac assistance is being given with this message.

ALM_VALID_FLAG: Almanac validity flag

This field shall be set to 1 if the following fields from ALM_SV_PRN_NUM to ALM_AF1 are valid. If those fields are not valid, The CP shall set this field and the following fields from ALM_SV_PRN_NUM to ALM_AF1 to 0. For a sub-almanac which is not present (i.e. not due to bad health of the SV, but due to the absence of aiding data), ALM_VALID_FLAG shall be set to 0 (0x00). In this case, the client shall preserve the sub-almanac it has in its memory without overwriting it with the sub-almanac data in this message.

ALM_SV_PRN_NUM: The satellite PRN number

This field shall set to the value of the SV PRN number for which the almanac is valid. It is represented as an unsigned value in the range from 1 to 32. ALM_ECCENTRICITY Eccentricity This field shall be set to the value contained in the associated parameter of the specified GPS almanac.

ALM_TOA: The reference time of the almanac

This field shall be set to specify the reference time of the almanac, its unit is 4096 seconds.. Its valid range is from 0 to 602,112 seconds.

ALM_DELTA_INCL: Delta inclination

This field shall be set to the value contained in the associated parameter of the specified GPS almanac.

ALM_OMEGADOT: Rate of right ascension

This field shall be set to the value contained in the associated parameter of the specified GPS almanac.

ALM_A_SQRT: Square root of the semi-major axis

This field shall be set to the value contained in the associated parameter of the specified GPS almanac.

ALM_OMEGA_0: Longitude of ascending node of orbit plane at weekly epoch

This field shall be set to the value contained in the associated parameter of the specified GPS almanac.

ALM_OMEGA: Argument of perigee

This field shall be set to the value contained in the associated parameter of the specified GPS almanac.

ALM_M0: Mean anomaly at reference time

This field shall be set to the value contained in the associated parameter of the specified GPS almanac.

ALM_AF0: Apparent satellite clock correction a_{f0}

This field shall be set to the value contained in the associated parameter of the specified GPS almanac

ALM_AF1: Apparent satellite clock correction a_{f1}

This field shall be set to the value contained in the associated parameter of the specified GPS almanac.

5.51 Set Acquisition Assistance Data - Message ID 211, Sub ID 4

MID (Hex)	0xD3
MID (Dec)	211
Message Name in Code	MID_SET_AIDING
SID (Hex)	0x04
SID (Dec)	4
SID Name in Code	SET_ACQ_ASSIST

Table 5.126: Set Acquisition Assistance Data - Message ID 211, Sub ID 4

Field	Length (nr of bits)	Scale	Unit
Message ID	8		
Message Sub ID	8		
REFERENCE_TIME	32	0.001	Seconds
NUM_SVS	8		
The acquisition assistance parameters structure below repeats a number of times indicated by the NUM_SVS field.			
ACQ_ASSIST_VALID_FLAG	8	N/A	N/A
SV_PRN_NUM	8		
DOPPLER0	16 ⁽¹⁾	2.5	Hz
DOPPLER1	8 ⁽¹⁾	1/64	Hz/s
DOPPLER_UNCERTAINTY	8	(See Table 5.128)	
SV_CODE_PHASE	16	1	Chips
SV_CODE_PHASE_INT	8	1	Milliseconds
GPS_BIT_NUM	8		
CODE_PHASE_UNCERTAINTY	16	1	Chips
AZIMUTH	16	1	Degrees
ELEVATION	8	1	Degrees

Table 5.127: Set Acquisition Assistance Data Message

⁽¹⁾ Two's complement with the bit sign (+or-) occupying the MSB

REFERENCE_TIME: GPS Time Reference for Acquisition Assistance Data

The CP shall set this field to the GPS seconds since the beginning of the current GPS week at which the acquisition assistance data is valid, in binary format, in units of 1/1000 seconds, in the range from 0s to 604,799.999 seconds.

NUM_SVS: Number of satellites

This is the number of satellites for which acquisition assistance data is being set with this message.

ACQ_ASSIST_VALID_FLAG: Acquisition Assistance Data Validity Flag

The CP shall set this field to 1 if the following fields from SV_PRN_NUM to ELEVATION are valid. If those fields are not valid, The CP shall set this field and the following fields from SV_PRN_NUM to ELEVATION to 0.

SV_PRN_NUM: Satellite PRN Number

The CP shall set this field to the value of the PRN number for which acquisition assistance data is valid. It is represented as an unsigned binary value in the range from 1 to 32, where the binary value of the field conveys the satellite PRN number.

DOPPLER0: The 0th Order Doppler

The CP shall set this field to the two's complement value of the 0th order Doppler, in units of 2.5 Hz, in the range from -5,120 Hz to 5,120 Hz. The CP shall set this field to 0xF7FF (decimal -2049) if the 0th order Doppler is unknown.

DOPPLER1: The 1st Order Doppler

The CP shall set this field to the two's complement value of the 1st order Doppler, in units of 1/64 Hz/s. The valid value is from -1 Hz/s to +1 Hz/s. The CP shall set this field to 0xBF (decimal -65) if the 1st order Doppler is unknown.

DOPPLER_UNCERTAINTY: The Doppler Uncertainty

The CP shall set this field to represent the Doppler uncertainty as specified in Table 5.128.

DOPPLER_UNCERTAINTY Value	Doppler Uncertainty
'00000000'	200 Hz
'00000001'	100 Hz
'00000010'	50 Hz
'00000011'	25 Hz
'00000100'	12.5 Hz
'00000101' – '11111110'	Reserved
'11111111'	Doppler uncertainty is unknown

Table 5.128: DOPPLER_UNCERTAINTY Field

SV_CODE_PHASE: Code Phase

The CP shall set this field to the code phase in units of 1 C/A code chip. The valid range is from 0 to 1022 Chips. The offset is specified in reference to the current millisecond boundary.

SV_CODE_PHASE_INT: The Integer Number of C/A Code Periods That Have Elapsed Since The Latest GPS Bit Boundary

The CP shall set this field to the number of the C/A code periods that have elapsed since the latest GPS bit boundary, in units of C/A code period (1 ms). The valid range is from 0 to 19.

GPS_BIT_NUM: The Two Least Significant Bits of The Bit Number (Within The GPS Frame) Being Currently Transmitted

The CP shall set this field to represent the two least significant bits of the bit number being received at REFERENCE_TIME. The valid range is from 0 to 3.

CODE_PHASE_UNCERTAINTY: Code Phase Uncertainty

The CP shall set this field to the value of the code phase uncertainty, in units of 1 C/A code chip. The valid range is from 0 to 1023 chips.

AZIMUTH: Azimuth Angle of the GPS Satellite

The CP shall set this field to the azimuth, in units of 1 degree. The valid value is from 0 to 359 degrees. The CP shall set this field to 0xFFFF if the azimuth angle is unknown.

ELEVATION: Elevation Angle of the GPS Satellite

The CP shall set this field to the elevation angle, in units of 1 degree. The valid value is from -90 to 90 degrees. The CP shall set this field to 0xFF if the elevation angle is unknown

5.52 Set Real-Time Integrity - Message ID 211, SID 5

MID (Hex)	0xD3
MID (Dec)	211
Message Name in Code	MID_SET_AIDING
SID (Hex)	0x05
SID (Dec)	5
SID Name in Code	SET_RT_INTEG

Table 5.129: Set Real-Time Integrity - Message ID 211, SID 5

Field	Bytes	Scale	Unit
Message ID	1		
Message Sub ID	1		
UNHEALTHY_SAT_INFO	4		

Table 5.130: Set Real-Time Integrity Message

UNHEALTHY_SAT_INFO: Information on unhealthy satellite

This is a 32 bit field to indicate which satellite is unhealthy. Bit 0 corresponds to satellite PRN number 1, and Bit 31 corresponds to satellite PRN number 32. An unhealthy satellite is indicated by setting the corresponding bit to 1; if the bit is zero, the satellite is considered healthy by the aiding source. If a satellite is considered unhealthy, the SLC shall not use it for search nor position computation. For all position modes the SLC shall try to collect satellite health information on its own. SLC shall use the latest satellite health information (either from OSP messages or from self collection). If this information is never received by the SLC during a session, SLC shall use its internal information.

5.53 Set UTC Model - Message ID 211, Sub ID 6

MID (Hex)	0xD3
MID (Dec)	211
Message Name in Code	MID_SET_AIDING
SID (Hex)	0x06
SID (Dec)	6
SID Name in Code	SET_UTC_MODEL

Table 5.131: Set UTC Model - Message ID 211, Sub ID 6

Field	Length (nr of bits)	Scale	Unit
Message ID	8		
Message Sub ID	8		
R_A0	32	2^{-30}	seconds
R_A1	32(24)	2^{-50}	sec/sec
R_DELTA_TLS	8	1	seconds
R_T_OT	8	2^{12}	seconds
R_WN_T	8	1	weeks
R_WN_LSF	8	1	weeks
R_DN	8	1	days
R_DELTA_T_LSF	8	1	seconds

Table 5.132: Set UTC Model Message

R_A0: Constant term of polynomial (raw)

The CP shall set this field to the value contained in the associated parameter of the UTC data.

R_A1: The first order term of polynomial (raw)

The CP shall set this field to the value contained in the associated parameter of the UTC data.

R_DELTA_TLS: Delta time due to leap seconds (raw)

The CP shall set this field to the value contained in the associated parameter of the UTC data.

R_T_OT: Reference time for UTC Data (raw)

The CP shall set this field to the value contained in the associated parameter of the UTC data.

R_WN_T: UTC reference week number (raw)

The CP shall set this field to the value contained in the associated parameter of the UTC data.

R_WN_LSF: Week number at which the scheduled future or recent past leap second becomes effective (raw)

The CP shall set this field to the value contained in the associated parameter of the UTC data.

R_DN: Day number at the end of which the scheduled future or recent past leap second becomes effective (raw)

The CP shall set this field to the value contained in the associated parameter of the UTC data.

R_DELTA_T_LSF: Delta time due to the scheduled future or recent past leap second (raw)

The GPS Data Center shall set this field to the value contained in the associated parameter of the UTC data.

5.54 Set Auxiliary Navigation Model Parameters - Message ID 211, Sub ID 8

MID (Hex)	0xD3
MID (Dec)	211
Message Name in Code	MID_SET_AIDING
SID (Hex)	0x08
SID (Dec)	8
SID Name in Code	SET_AUX_NAV

Table 5.133: Set Auxiliary Navigation Model Parameters - Message ID 211, Sub ID 8

Field	Length (nr of bits)	Scale	Unit
Message ID	8		
Message Sub ID	8		
NUM_SVS	8		
The structure of auxiliary navigation model parameters below repeats a number of times as indicated by the NUM_SVS field above.			
NAVMODEL_SV_PRN_NUM	8		
NAVMODEL_TOE	16	2 ⁴ (2)	seconds
NAVMODEL_IODC	16(10) ⁽¹⁾	N/A	N/A
NAVMODEL_SF1_L2_INFO	8(2+1) ⁽¹⁾	N/A	N/A (this field contains the "C/A or P on L2" and the "L2 P Data Flag" parameters)
NAVMODEL_SF1_SV_HEALTH	8(6) ⁽¹⁾	N/A	N/A
NAVMODEL_SF1_RESERVED	88(87) ⁽¹⁾	N/A	N/A
NAVMODEL_SF2_AODO_FIT_INTERVAL	8(1+5)	N/A	N/A (this field contains the "AODO" and the "Fit Interval Flag" parameters)

Table 5.134: Set Auxiliary Navigation Model Parameters message

⁽¹⁾ The number in parentheses indicates the actual number of bits of the parameter. If multiple parameters are included in a field, the number of bits for each parameter are connected by the + sign.

⁽²⁾ The detailed description of each parameter can be found in ICD GPS 200C.

NUM_SVS: Number of satellites

This is the number of satellites for which auxiliary navigation model parameters are being given with this message.

NAVMODEL_SV_PRN_NUM: Satellite ID number for the NAVMODEL PRN number of the satellite that the NAVMODEL belongs to

The value 0 indicates that the corresponding NAVMODEL parameters are not valid.

NAVMODEL_TOE: Time of Ephemeris of the NAVMODEL

This is the TOE of the corresponding NAVMODEL. The SLC shall accept the associated parameter if

- The internal NavModel parameters has a TOE (call it int_TOE) that is in the past when compared to this NAVMODEL_TOE
- int_TOE is in the future when compared to NAVMODEL_TOE, and $((TOE * 16) \bmod 3600) \neq 0$.

NAVMODEL_IODC: Issue of Data, Clock of the NAVMODEL

This is the 10 bit IODC that corresponds to the ephemeris of the specified satellite.

NAVMODEL_SF1_L2_INFO

Bits 2 and 1 correspond to the 2-bit “C/A or P on L2” found in bits 71 and 72 of subframe 1 of the specified satellite’s navigation message.

Bit 0 (LSB) corresponds to the 1-bit L2 P Data Flag found in bit 91 of subframe 1 of the specified satellite’s navigation message.

NAVMODEL_SF1_SV_HEALTH

Bits 5 to 0 (LSB) correspond to the 6-bit SV Health found in subframe 1 of the specified satellites’ navigation message.

NAVMODEL_SF1_RESERVED

The LSB 7 bits of the first byte and the entire next 10 bytes correspond to the 87 reserved bits found in subframe 1 of the specified satellites’ navigation message. The MSB valid bit in the first byte is transmitted from the satellite first.

NAVMODEL_SF2_AODO_FIT_INTERVAL

Bit 5 corresponds to the 1-bit Fit Interval Flag found subframe 2 of the specified satellite’s navigation message. Bits 4 to 0 (LSB) correspond to the 5-bit AODO found subframe 2 of the specified satellite’s navigation message.

5.55 Push Aiding Availability - Message ID 211, Sub ID 9

MID (Hex)	0xD3
MID (Dec)	211
Message Name in Code	MID_SET_AIDING
SID (Hex)	0x09
SID (Dec)	9
SID Name in Code	SET_AIDING_AVAIL

Table 5.135: Push Aiding Availability - Message ID 211, Sub ID 9

Field	Bytes	Scale	Unit
Message ID	1		
Message Sub ID	1		
AIDING_AVAILABILITY_MASK	1		
FORCED_AIDING_REQ_MASK	1		

Field	Bytes	Scale	Unit
EST_HOR_ER	1		
EST_VER_ER	2		
REL_FREQ_ACC	1		
TIME_ACCURACY_SCALE	1		
TIME_ACCURACY	1		
SPARE	2		

Table 5.136: Push Aiding Availability Message

AIDING_AVAILABILITY_MASK: Mask to indicate the type of aiding available

Bit 0=1: Position aiding accuracy has improved, EST_HOR_ER and EST_VER_ER are valid;

Bit 0=0: Position aiding status has not changed

Bit 1=1: Frequency aiding available, REL_FREQ_ACC valid;

Bit 1=0: Frequency aiding status has not changed

Bit 2=1: Time aiding available, TIME_ACCURACY valid;

Bit 2=0: Time aiding status has not changed

The SLC may or may not request for aiding based on this availability mask. Once the aiding response is sent to the SLC, the SLC may not use the new aiding if the uncertainty level of the new aiding is not as good as SLC's internal information.

FORCED_AIDING_REQ_MASK: Mask to indicate the type of aiding that the CP would like to force the SLC to re-request

Bit 0=1: Position aiding source has changed, SLC shall re-request for new aiding;

Bit 1=1: Frequency aiding source has changed, SLC shall re-request for new aiding;

Bit 2 = 1: SLC shall re-request for new time aiding

- This mask indicates the type(s) of aiding that the SLC shall request again. The SLC shall re-request regardless of the uncertainty level of the new aiding, but shall accept and use the aiding response only if the uncertainty is better than what the SLC has internally when the SLC is not navigating.
- When the SLC is navigation, the SLC may accept the aiding with better uncertainty. For example, if SLC is navigating with a 2D-position with no GPS week number, when a forced time and position aiding re-request comes in, the SLC shall request for time and position (using Time Transfer Request and Approximate MS Position Request). The SLC will only accept and use the GPS week number, and the height information in the new aiding. However, if the SLC is navigating with full knowledge of time, when a forced time aiding comes in, the SLC will request for time aiding, but it will not use the new time aiding.

EST_HOR_ER and EST_VER_ER: These parameters have the same definitions as the ones in Table 5.169.

REL_FREQ_ACC: This parameter has the same definition as the ones in Table 5.176.

TIME_ACCURACY_SCALE: Scale factor for the time accuracy

This represents the scale factor used to encode the time accuracy. TIME_ACCURACY_SCALE =0 => time_scale = 1.0 TIME_ACCURACY_SCALE =1 => time_scale = 0.125 TIME_ACCURACY_SCALE =0xFF => time accuracy unknown All other values are reserved.

TIME_ACCURACY: Time accuracy

This is the time accuracy of the aiding.

If time_scale (obtained from TIME_ACCURACY_SCALE) is 1.0, Table 5.172 shall be used to get the time accuracy.

If time_scale (obtained from TIME_ACCURACY_SCALE) is 0.125, Table 5.173 shall be used to get the time accuracy.

A value of 0xFF means "unknown accuracy"

5.56 Ephemeris Status Request - Message ID 212, Sub ID 1

MID (Hex)	0xD4
MID (Dec)	212
Message Name in Code	MID_STATUS_REQ
SID (Hex)	0x01
SID (Dec)	1
SID Name in Code	EPH_REQ

Table 5.137: Ephemeris Status Request - Message ID 212, Sub ID 1

Field	Bytes	Scale	Unit
Message ID	1		
Message Sub ID	1		

Table 5.138: Ephemeris Status Request Message

5.57 Almanac Request - Message ID 212, Sub ID 2

MID (Hex)	0xD4
MID (Dec)	212
Message Name in Code	MID_STATUS_REQ
SID (Hex)	0x02
SID (Dec)	2
SID Name in Code	ALM_REQ

Table 5.139: Almanac Request - Message ID 212, Sub ID 2

Field	Bytes	Scale	Unit
Message ID	1		
Message Sub ID	1		

Table 5.140: Almanac Request Message

5.58 Broadcast Ephemeris Request - Message ID 212, Sub ID 3

MID (Hex)	0xD4
MID (Dec)	212
Message Name in Code	MID_STATUS_REQ
SID (Hex)	0x03
SID (Dec)	3
SID Name in Code	B_EPH_REQ

Table 5.141: Broadcast Ephemeris Request - Message ID 212, Sub ID 3

Field	Bytes	Scale	Unit
Message ID	1		
Message Sub ID	1		
EPH_RESP_TRIGGER	2	N/A	N/A
NUM_SVS	1		
The structure of auxiliary navigation model parameters below repeats a number of times as indicated by the NUM_SVS field.			
EPH_INFO_FLAG	1	N/A	N/A
SV_PRN_NUM	1	N/A	N/A
GPS_WEEK	2	N/A	N/A
TOE	2	16	Seconds

Table 5.142: Broadcast Ephemeris Request Message

EPH_RESP_TRIGGER: Broadcast Ephemeris Response Message Trigger(s)

This field is designed to specify how the Broadcast Ephemeris Response Message(s) should be triggered with the following definition.

Bit 0 (LSB): 1 = output the available broadcast ephemeris once if the available broadcast ephemeris is newer than the one specified by valid GPS_WEEK and TOE (EPH_INFO_FLAG = 1). When GPS_WEEK and TOE are not valid (EPH_INFO_FLAG = 0), output the available broadcast ephemeris once

Bit 1: 1 = output broadcast ephemeris according to rules specified in Bit 0, then output broadcast ephemeris only when the broadcast ephemeris is updated (not necessarily changed)

Bit 2: 1 = output broadcast ephemeris according to rules specified in Bit 0, then output broadcast ephemeris only when the broadcast ephemeris is changed

Bit 3 to Bit 15: (MSB) Reserved

Only 1 out of the following three bits - Bit 0, Bit 1 and Bit 2 - may be set at one time.

NUM_SVS: Number of satellites

This is the number of satellites for which broadcast ephemeris is being requested with this message.

EPH_INFO_FLAG: Broadcast Ephemeris Information Validity Flag

This field should be set to 1 if the following fields from SV_PRN_NUM to TOE are valid. This field should be set to 0 if the following fields from SV_PRN_NUM to TOE are NOT valid.

SV_PRN_NUM: Satellite PRN Number

This field should be set to the value of the PRN number for which the broadcast ephemeris information is valid. It is represented as an unsigned binary value in the range from 1 to 32. When EPH_INFO_FLAG is set to 0, this field should be set to 0.

GPS_WEEK: Broadcast Ephemeris Reference Week

This field should be set to the value of GPS week number of the broadcast ephemeris. When EPH_INFO_FLAG is set to 0, this field should be set to 0.

TOE: Broadcast Ephemeris Reference Time

This field should be set to the value of TOE of the broadcast ephemeris. When EPH_INFO_FLAG is set to 0, this field should be set to 0.

5.59 Time Frequency Approximate Position Status Request - Message ID 212, Sub ID 4

MID (Hex)	0xD4
MID (Dec)	212
Message Name in Code	MID_STATUS_REQ
SID (Hex)	0x04
SID (Dec)	4
SID Name in Code	TIME_FREQ_APPROX_POS_REQ

Table 5.143: Time Frequency Approximate Position Status Request - Message ID 212, Sub ID 4

Field	Bytes	Scale	Unit
Message ID	1		
Message Sub ID	1		
REQ_MASK	1		

Table 5.144: Time Frequency Approximate Position Status Request Message

REQ_MASK: Request mask

Bit 0 (LSB): {0,1} => {Time status not requested, Time (gps week number and tow) status requested}

Bit 1 (LSB): {0,1} => {Time accuracy status not requested, Time accuracy status requested}

Bit 2: {0,1} => {Frequency status not requested, Frequency status requested}

Bit 3: {0,1} => {ApproximatePosition status not requested, ApproximatePosition status requested}

5.60 Channel Load Query - Message ID 212, Sub ID 5

MID (Hex)	0xD4
MID (Dec)	212
Message Name in Code	MID_STATUS_REQ
SID (Hex)	0x05
SID (Dec)	5
SID Name in Code	CH_LOAD_REQ

Table 5.145: Channel Load Query - Message ID 212, Sub ID 5

Field	Bytes	Scale Factor	Unit
Message ID	1		
Message Sub ID	1		
PORT	1		
MODE	1		

Table 5.146: Channel Load Query Message

PORT: Serial Port A or B

The CP sets this field to the port number you want to query the load:

0 = SiRF port A

1 = SiRF port B

Any other value has no meaning.

MODE: Response Mode

The CP sets this field according to Table 5.147. If the periodic mode is enabled, the Channel load response is output once per second.

Values	Description
0x00	Turn off sending periodic message ⁽¹⁾
0x01	Turn on sending periodic message ⁽²⁾
0x02	Send message just once
0x03 to 0xFF	Reserved

Table 5.147: MODE Field

⁽¹⁾ No specific acknowledge nor further Channel Load Response message shall be sent after reception of this message.

⁽²⁾ periodic response is sent every second.

5.61 Client Status Request - Message ID 212, Sub ID 6

MID (Hex)	0xD4
MID (Dec)	212
Message Name in Code	MID_STATUS_REQ
SID (Hex)	0x06
SID (Dec)	6
SID Name in Code	CLIENT_STATUS_REQ

Table 5.148: Client Status Request - Message ID 212, Sub ID 6

Field	Bytes	Scale Factor	Unit
Message ID	1		
Message Sub ID	1		

Table 5.149: Client Status Request Message

5.62 OSP Revision Request - Message ID 212, Sub ID 7

MID (Hex)	0xD4
MID (Dec)	212
Message Name in Code	MID_STATUS_REQ
SID (Hex)	0x07
SID (Dec)	7
SID Name in Code	OSP_REV_REQ

Table 5.150: OSP Revision Request - Message ID 212, Sub ID 7

Field	Bytes	Scale Factor	Unit
Message ID	1		
Message Sub ID	1		

Table 5.151: OSP Revision Request Message

5.63 Serial Port Setting Request - Message ID 212, Sub ID 8

MID (Hex)	0xD4
MID (Dec)	212
Message Name in Code	MID_STATUS_REQ
SID (Hex)	0x08
SID (Dec)	8
SID Name in Code	SERIAL_SETTINGS_REQ

Table 5.152: Serial Port Setting Request - Message ID 212, Sub ID 8

Field	Bytes	Scale Factor	Unit
Message ID	1		
Message Sub ID	1		
BAUD_RATE	4		
DATA_BITS	1		
STOP_BIT	1		
PARITY	1		
PORT	1		
Reserved	1		

Table 5.153: Serial Port Setting Request Message

BAUD_RATE: The CP sets this field to the required baud rate.

Current baud rates supported are 4800, 9600, 19200, 38400, 57600, and 115200 bps. Any other value is illegal and is not supported. The baud rate is coded as its equivalent binary value:

Example 1: 4800 bps is coded as 000012C0 in hexadecimal equivalent.

Example 2: 115200 bps is coded 0001C200 in hexadecimal equivalent.

Important Note:

Warning note for 4e: Operation at speeds below 38400 bps carries a risk of dropped messages when using SGEE.

DATA_BITS: Represents how many data bits are used per character.

STOP_BIT: Stop bit length

For example, 1 = 1 stop bit.

PARITY: None = 0, Odd = 1, Even = 2

PORT: Serial Port A or B

The CP sets this value to the port number that is being configured. 0 = port A, 1 = port B. Any other value has no meaning.

5.64 TX Blanking Request - Message ID 212, Sub ID 9

MID (Hex)	0xD4
MID (Dec)	212
Message Name in Code	MID_STATUS_REQ
SID (Hex)	0x09
SID (Dec)	9
SID Name in Code	TX_BLANKING_REQ

Table 5.154: TX Blanking Request - Message ID 212, Sub ID 9

Field	Bytes	Scale Factor	Unit
Message ID	1		
Message Sub ID	1		
COMMAND	1		
AIR_INTERFACE	1		
MODE	1		
Reserved	4		

Table 5.155: TX Blanking Request Message

COMMAND: Message command

Valid values are 0 or 1:

0 = a command to enable the receiver to start TX Blanking

1 = a command to stop TX Blanking

AIR_INTERFACE: Air interface

This parameter indicates the air interface for which the SLC should perform the TX blanking for. The value is "0", which represent the GSM air interface. All other values are currently invalid.

MODE: TX Blanking Mode

This parameter indicates TX Blanking Mode the receiver should do.

Values	Description
0x00	Reserved
0x01	Required for GSM in SiRFstar IV products
0x02 to 0xFF	Reserved

Table 5.156: MODE Field

5.65 Session Opening Request - Message ID 213, Sub ID 1

MID (Hex)	0xD5
MID (Dec)	213
Message Name in Code	MID_SESSION_CONTROL_REQ
SID (Hex)	0x01
SID (Dec)	1
SID Name in Code	SESSION_OPEN_REQ

Table 5.157: Session Opening Request - Message ID 213, Sub ID 1

Field	Bytes	Scale	Unit
Message ID	1		
Message Sub ID	1		
SESSION_OPEN_REQ_INFO	1		

Table 5.158: Session Opening Request Message

SESSION_OPEN_REQ_INFO: Session open request information

This field shall be set to an appropriate value as specified in Table 5.159.

Value	Description
0x00 to 0x70	Reserved
0x71	Session opening request
0x72 to 0x7F	Reserved
0x80	Session resume requested
0x81 to 0xFF	Reserved

Table 5.159: SESSION_OPEN_REQ_INFO Field

5.66 Session Closing Request - Message ID 213, Sub ID 2

MID (Hex)	0xD5
MID (Dec)	213
Message Name in Code	MID_SESSION_CONTROL
SID (Hex)	0x02
SID (Dec)	2
SID Name in Code	SESSION_CLOSE_REQ

Table 5.160: Session Closing Request - Message ID 213, Sub ID 2

Field	Bytes	Scale	Unit
Message ID	1		
Message Sub ID	1		
SESSION_CLOSE_REQ_INFO	1		

Table 5.161: Session Closing Request Message

SESSION_CLOSE_REQ_INFO: Session closing request information

This field shall be set to an appropriate value as specified in Table 5.162.

Value	Description
0x00	Session Closing requested
0x01 to 0x7F	Reserved
0x80	Session Suspend requested
0x81 to 0xFF	Reserved

Table 5.162: SESSION_CLOSE_REQ_INFO Field

5.67 Hardware Configuration Response - Message ID 214

MID (Hex)	0xD6
MID (Dec)	214
Message Name in Code	MID_HW_CONFIG_RESP

Table 5.163: Hardware Configuration Response - Message ID 214

The Hardware Configuration Response message is output by the CP after startup when receives the hardware config request message from the SLC. After each startup and the hardware config request message is received, a Hardware Configuration Response message should be sent.

Field	Bytes	Scale	Unit
Message ID	1		
HW_CONFIG	1		
NOMINAL_FREQ	5		
NW_ENHANCE_TYPE	1		

Table 5.164: Hardware Configuration Response Message

HW_CONFIG: Hardware configuration information

This field shall be set to an appropriate value as specified in Table 5.165.

Bits in HW_CONFIG	Value	CONFIGURATION
Bit 1(LSB)	0: No 1: Yes	Precise Time Transfer Availability ⁽¹⁾
Bit 2	0: CP → SLC 1: CP ↔ SLC	Precise Time Transfer direction between CP and SLC
Bit 3	0: No 1: Yes	Frequency Transfer Availability
Bit 4	1: No Counter 0: Counter	Frequency Transfer Method
Bit 5	1: Yes 0: No	RTC Availability
Bit 6	1: Internal to GPS 0: External to GPS	RTC for GPS
Bit 7	0: No 1: Yes	Coarse Time Transfer Availability ⁽¹⁾
Bit 8	0: Reference clock is on 1: Reference clock is off	Valid only if Bit 4 is '0' Reference Clock Status for "Counter" type Frequency Transfer

Table 5.165: HW_CONFIG Field

⁽¹⁾ Either "Precise Time Transfer" or "Coarse Time Transfer" can be available for a hardware configuration, but not both simultaneously.

NOMINAL_FREQ: Nominal CP Frequency

If, in HW_CONFIG Bit 3 is set to '1' and Bit 4 is set to '0' (counter method), the CP shall set this field to the absolute frequency value of the clock derived from CP by division and delivered to the SLC for counter frequency measurement. The resolution is in 10^{-3} Hz. The format is unsigned binary over 40 bits. The range is from 0.001Hz to 1.0995GHz. Otherwise, the CP shall set this field to all '0's.

NW_ENHANCE_TYPE: Network Enhancement Type

The CP shall use this field to inform the SLC which network enhanced features are available.

NW_ENHANCE_TYPE	Description
Bit 0	Reserved
Bit 1	Reserved
Bit 2	0 = AUX_NAVMODEL Aiding is NOT supported 1 = AUX_NAVMODEL Aiding is supported
Bit 3	0 = NAVBit Subframe 1, 2, and 3 Aiding is NOT supported 1 = NAVBit Subframe 1, 2, and 3 Aiding is supported
Bit 4	0 = NavBit Subframe 4 and 5 Aiding is NOT supported 1 = NavBit Subframe 4 and 5 Aiding is supported
Bit 5	Reserved
Bit 6	Reserved
Bit 7	Reserved

Table 5.166: NW_ENHANCE_TYPE Field

Note:

Network providers tend to support these enhancement types consistently in their coverage zone. Therefore, it is sufficient to specify the supported types at the initial configuration time here. When roaming into a different provider's network seamlessly in a single navigation session, the support configuration might change. If the new network does not support certain types that were originally declared as supported in the NW_ENHANCE_TYPE field here, the change becomes visible in the first position Navbit request response message if the SLC requested it.

5.68 Approximate MS Position Response - Message ID 215, Sub ID 1

MID (Hex)	0xD7
MID (Dec)	215
Message Name in Code	MID_AIDING_RESP
SID (Hex)	0x01
SID (Dec)	1
SID Name in Code	APPROX_MS_POS_RESP

Table 5.167: Approximate MS Position Response - Message ID 215, Sub ID 1

The Approximate MS Position Response message is output in response to Approximate MS Position Request message.

Field	Bytes	Scale	Unit
Message ID	1		
Message Sub ID	1		
LAT	4		
LON	4		
ALT	2		
EST_HOR_ER	1		
EST_VER_ER	2		
USE_ALT_AIDING	1		

Table 5.168: Approximate MS Position Response Message

LAT: Approximate MS Latitude

The CP sets this field to the Approximate MS Latitude in units of $180/2^{32}$ degrees in a range from -90 degrees to $+90 \times (1-2^{-31})$ degrees

LON: Approximate MS Longitude

The CP shall set this field to the Approximate MS Longitude in units of $360/2^{32}$ degrees in a range from -180 degrees to $+180 \times (1-2^{-31})$ degrees.

ALT: Approximate MS Altitude

The CP shall set this field to the approximate MS altitude in units of 0.1 meters in the range of -500 meters to $+6053.5$ meters, in Unsigned Binary Offset coding. The formula to apply is:

$$ALT(\text{in m}) = B \times 0.1 - 500$$

where B is the unsigned binary value of the ALT field from 0 to 65535. All zeros represents -500m , all ones represents $+6053.5\text{m}$.

EST_HOR_ER: Estimated Horizontal Error

The CP sets this field using the estimated error in the Approximate MS location. The error corresponds to radius of the maximum search domain the CP requires the SLC to search and is encoded according to Table 5.169.

Exponent X	Mantissa Y	Index value $I = Y + 16$ X	Floating Point Value f_i	Estimated Horizontal Error (meters)
0000	0000	0	24	< 24
0000	0001	1	25.5	$24 \leq \sigma < 25.5$
X	Y	$2 \leq I \leq 253$	$24 \cdot (1 + Y/16) \cdot 2^X$	$f_{i-1} \leq \sigma < f_i$
1111	1110	254	1474560	$1425408 \leq \sigma < 1474560$
1111	1111	255	Not Applicable	≥ 1474560

Table 5.169: EST_HOR_ER Field

EST_VER_ER: Estimated Vertical Error

The CP sets this field using the estimated vertical error in the Approximate MS location. The error corresponds to the standard deviation of the error in MS altitude in units of 0.1 meters in the range of 0 meters to 6553.5 meters, in Unsigned Binary Offset coding. Apply the formula:

$$EST_VER_ER \text{ (in m)} = V \times 0.1$$

where V is the unsigned binary value of the EST_VER_ER field from 0 to 65535. All zeros represents 0m, all ones represents +6553.5m.

USE_ALT_AIDING: Use Altitude Aiding

If the least significant bit of this byte is 1 then the altitude aiding is to be used, otherwise not.

5.69 Time Transfer Response - Message ID 215, Sub ID 2

MID (Hex)	0xD7
MID (Dec)	215
Message Name in Code	MID_AIDING_RESP
SID (Hex)	0x02
SID (Dec)	2
SID Name in Code	TIME_TX_RESP

Table 5.170: Time Transfer Response - Message ID 215, Sub ID 2

The Time Transfer Response message is output in response to Time Transfer Request message.

Depending on the hardware configuration, this message can be returned along with a hardware timing pulse (Precise Time Transfer mode) or without hardware timing pulse (Coarse Time Transfer mode). The SLC will know which case is implemented by checking the HW_CONFIG field in the Hardware Configuration Response message. Given the high resolution of the GPS_TIME field, the timing pulse can be sent any time convenient for the CP, provided the GPS_TIME is reported in the Time Transfer Response message consistently.

Field	Bytes	Scale	Unit
Message ID	1		
Message Sub ID	1		
TT_TYPE	1		
GPS_WEEK_NUM	2		
GPS_TIME	5		
DELTAT.UTC	3		
TIME_ACCURACY	1		

Table 5.171: Time Transfer Response Message

TT_TYPE: Time Transfer Type

If the Coarse Time Transfer method is used, this field is set to all zeros. If the Precise Time Transfer method is used, this field is set to all 1s.

GPS_WEEK_NUM: GPS Week Number

The GPS Week Number is the absolute Week number and not rolled over to Modulo 1024. The GPS shall set this field to the value of the current GPS Week Number

GPS_TIME: GPS Time

The SLC shall set this field to the time of the week in Units of 1 microsecond. This time shall be the GPS time valid at the preceding time pulse (for Precise Time Transfer mode), or at the time of the transmission of the message (for Coarse Time Transfer mode). The values range from 0 to 604800 seconds.

DELTA_TUTC: GPS Time to UTC Time Correction

Correction in milliseconds to apply to the full GPS time (counted from GPS zero time point) to get UTC time from same zero time point. The formula to apply is: $TUTC = T_{GPS} - DELTA_TUTC$. The format is in two's complement, in units of 1ms, in the range from -8388.608 seconds to +8388.607 seconds.

TIME_ACCURACY: Time Transfer Accuracy

The CP shall set this field equal to the estimated accuracy of the time in this message. This field will be used to set the maximum search domain the SLC will search.

Note:

The SLC only guarantees to search in a domain just large enough to encompass the search uncertainty engendered by the TIME_ACCURACY field, but not beyond. It is CP's responsibility to choose this field value large enough.

The TIME_ACCURACY is one-sided: the SLC shall consider that the actual GPS time lies in the interval between $GPS_TIME - TIME_ACCURACY$ and $GPS_TIME + TIME_ACCURACY$.

If the Coarse Time Transfer is used (see TT_TYPE field), this field shall be in units of 1 milliseconds and encoded as in Table 5.172.

If the Precise Time Transfer is used (see TT_TYPE field), this field shall be in units of 1 microsecond and encoded as in Table 5.173

Exponent X	Mantissa Y	Index value $I = Y + 16$ X	Floating Point Value f_i	Estimated Horizontal Error (meters)
0000	0000	0	1.0	< 1.0
0000	0001	1	1.0625	$1.0 < \sigma < 1.0625$
X	Y	$2 \leq I \leq 253$	$1.0 (1 + Y/16) \cdot 2^X$	$f_{i-1} \leq \sigma < f_i$
1111	1110	254	61440	$59392 \leq \sigma < 61440$
1111	1111	255	Not Applicable	≥ 61440

Table 5.172: TIME_ACCURACY Field - Coarse Time Transfer Method

Exponent X	Mantissa Y	Index value $I = Y + 16$ X	Floating Point Value f_i	Estimated Horizontal Error (meters)
0000	0000	0	0.125	< 0.125
0000	0001	1	0.1328125	$0.125 < \sigma < 0.1328125$
X	Y	$2 \leq I \leq 253$	$0.125 (1 + Y/16) \cdot 2^X$	$f_{i-1} \leq \sigma < f_i$
1111	1110	254	7680	$7424 \leq \sigma < 7680$
1111	1111	255	Not Applicable	≥ 7680

Table 5.173: TIME_ACCURACY Field - Precise Time Transfer Method

5.70 Frequency Transfer Response - Message ID 215, Sub ID 3

MID (Hex)	0xD7
MID (Dec)	215
Message Name in Code	MID_AIDING_RESP
SID (Hex)	0x03
SID (Dec)	3
SID Name in Code	FREQ_TX_RESP

Table 5.174: Frequency Transfer Response - Message ID 215, Sub ID 3

The Frequency Transfer Response message is output in response to Frequency Transfer Request message.

Note:

The frequency offset returned in this message is the CP clock error from the nominal value, scaled to the GPS L1 frequency; it is not the SLC clock error.

Field	Bytes	Scale	Unit
Message ID	1		
Message Sub ID	1		
SCALED_FREQ_OFFSET	2		
REL_FREQ_ACC	1		
TIME_TAG	4		
REF_CLOCK_INFO	1		
NOMINAL_FREQ	5 ⁽¹⁾		

Table 5.175: Frequency Transfer Response Message

⁽¹⁾ This field is presented only if Bit 4 of REF_CLOCK_INFO is '1'

SCALED_FREQ_OFFSET: SCALED_Frequency Offset (in Hz)

The CP shall set the bits in this field equal to the relative frequency difference between the theoretical and the real value of the CP clock, multiplied by the L1 frequency (1575.42 Mhz), in units of Hertz. If the theoretical value is higher than the real one, the value shall have a positive sign. The range of values shall be from -2^{14} Hz to $+2^{14}-1$ Hz. The encoding shall be in two's complement. Example: if the nominal CP clock is 10Mhz, and the real CP clock frequency is 9.999975Mhz, the relative frequency difference is +2.5ppm, and the value of the SCALED_FREQ_OFFSET field is: $2.5e-6 \cdot 1575.42e6 = 3938.6$ Hz which shall be rounded to the closest integer number of Hz, and coded as 0x0F63.

REL_FREQ_ACC: Relative Frequency Offset Accuracy

The CP shall set this field based on the estimated accuracy of the frequency offset.

Note:

The SLC only guarantees to search in a domain just large enough to encompass the search uncertainty engendered by the REL_FREQ_ACC field, but not beyond. It is CP's responsibility to choose this field value large enough.

The REL_FREQ_ACC is one-sided: the SLC shall consider that the actual scaled frequency lies in the interval between SCALED_FREQ_OFFSET – REL_FREQ_ACCxL1 and SCALED_FREQ_OFFSET+ REL_FREQ_ACCxL1 where L1=1575.42 MHz.

Encoding is according to Table 5.176.

Exponent X	Mantissa Y	Index value I= Y + 16 X	Floating Point Value f_i	Estimated Horizontal Error (meters)
0000	0000	0	0.00390625	< 0.00390625
0000	0001	1	0.004150390625	$0.00390625 < \sigma < 0.004150390625$
X	Y	$2 \leq I \leq 253$	$0.00390625(1 + Y/16) \cdot 2^X$	$f_{i-1} \leq \sigma < f_i$
1111	1110	254	240	$232 \leq \sigma < 240$
1111	1111	255	Not Applicable	≥ 240

Table 5.176: REL_FREQ_ACC Field

TIME_TAG: Time Tag of the measurement contents of the Frequency response message

The CP shall set this field to the time of the beginning of the period over which the contents of this message are valid. The time tag shall be seconds elapsed since the beginning of the current GPS week in Unsigned Binary coding of 32bits. The resolution of the time tag message will be 1ms. When time tag is not available (in the case where precise time transfer did not precede frequency transfer), the CP shall set the TIME_TAG field as follows.

- Set to 0xFFFFFFFF indicates that the contents of the message are valid from the time of reception forward and will not change until notified with another Frequency Response message. Note the CP must ensure that the clock is on and stable prior to sending the Frequency Transfer Response message with the TIME_TAG field set to 0xFFFFFFFF.
- Set to 0xFFFFFFFF to inform the SLC that this message is invalid.

Note:

The rollover of the GPS_WEEK_NUM will be handled by SLC.

REF_CLOCK_INFO: Reference clock information for frequency transfer message

This is used to provide additional information about the clock used.

Bits in REF_CLOCK_INF	Description
Bit 1 (LSB)	Bit1 = 0 implies that this frequency transfer message is related to the reference clock input to the counter (and thus use of counter method) Bit1 = 1 implies that this frequency transfer message is related to the SLC clock
Bit 2	Valid only if the frequency transfer method is counter Bit 2 = 0: Reference clock is on Bit 2 = 1: Reference clock is off
Bit 3	Valid only if the frequency transfer method is counter Bit 3 = 0: Don't request to turn off reference clock Bit 3 = 1: Request to turn off reference clock
Bit 4	Bit 4 = 0: NOMINAL_FREQ field is not included in this message Bit 4 = 1: NOMINAL_FREQ field is included in this message
Bit 5 to Bit 7	Reserved
Bit 8	Build numbers up to and including 4.0.1: Reserved Build numbers 4.0.2 and later: Bit 8 = 0: Update internal frequency values if needed Bit 8 = 1: Force update internal frequency values to transferred data

Table 5.177: REF_CLOCK_INFO Field

NOMINAL_FREQ: Nominal CP Frequency

The CP sets this field to the absolute frequency value of the clock derived from CP by division and delivered to the SLC for counter frequency measurement. The resolution is in 10^{-3} Hz. The format is unsigned binary over 40 bits. The range is from 0.001Hz to 1.0995GHz. Otherwise, the CP sets this field to all zeros.

5.71 Nav Subframe 1_2_3 Aiding Response - Message ID 215, Sub ID 4

MID (Hex)	0xD7
MID (Dec)	215
Message Name in Code	MID_AIDING_RESP
SID (Hex)	0x04
SID (Dec)	4
SID Name in Code	SET_NBA_SF1_2_3

Table 5.178: Nav Subframe 1_2_3 Aiding Response - Message ID 215, Sub ID 4

This message is in response to the Nav Bit Aiding Request Message ("NBA_REQ").

Field	Length (bits)	Units
Message ID	8	
Message Sub ID	8	
NUM_SVS	8	
The following fields are repeated a number of times as specified by the value in the NUM_SVS field above.		
SUBF_1_2_3_FLAG	8	N/A
SAT_PRN_NUM	8	N/A
SUBF_1_2_3	904	N/A

Table 5.179: Nav Subframe 1_2_3 Aiding Response Message

NUM_SVS: Number of satellites

This is the number of satellites for which ephemeris status parameters are given by this message.

SUBF_1_2_3_FLAG: Subframe 1, 2, and 3

Flag If set to "0x00", SAT_PRN_NUM and SUBFRAME_1_2_3 fields are invalid and must be set to zero. If set to "0x01", SAT_PRN_NUM and SUBFRAME_1_2_3 fields are valid.

SAT_PRN_NUM: Satellite PRN number

This field contains satellite PRN number for which SUBF_1_2_3 is valid. It is represented as an unsigned binary value in the range from 1 to 32, where the binary value of the field conveys the satellite PRN number.

SUBF_1_2_3: Subframe 1, 2 and 3

This field contains subframe 1, 2 and 3 of the navigation message bits for the satellite specified by SV_PRN_NUM, in that order transmitted by the satellite. The most significant bit of the first byte shall contain the first bit of Subframe 1. There should be 900 valid bits. Therefore, the least significant 4 bit of the last byte shall be set to 0's.

5.72 Nav Subframe 4_5 Aiding Response - Message ID 215, Sub ID 5

MID (Hex)	0xD7
MID (Dec)	215
Message Name in Code	MID_AIDING_RESP
SID (Hex)	0x05
SID (Dec)	5
SID Name in Code	SET_NBA_SF4_5

Table 5.180: Nav Subframe 4_5 Aiding Response - Message ID 215, Sub ID 5

This message is in response to the Nav Bit Aiding Request Message ("NBA_REQ"). There could be one or two such messages in response to a single NBA_REQ message, which will always request SF45 data for all satellites.

Generally, a single SF45_data set applies for all satellites and then, a single response message carries the SF45 data for all satellites. But, at least one day of the week, there are two versions of the Almanac are being broadcast, each of them applicable to two disjunctive sets of satellites. In these cases there are two response messages, and the SAT_LINK bitmaps in them should complement one another to cover all satellites.

Field	Length (bits)	Units
Message ID	8	
Message Sub ID	8	
SAT_LIST	32	
The following fields are repeated 25 times.		
FRAME_NUM	8	N/A
SUBF_4_5	600	N/A

Table 5.181: Nav Subframe 4_5 Aiding Response Message

SAT_LIST: Satellite List

This is a bitmap representing the satellites for which SUBF_4_5 are valid. If SUBF_4_5 are valid for the satellite represented by a bit of this field, CP shall set that bit to 1. The LSB (Bit 0) of this field represents satellite PRN number 1. The MSB (Bit 31) of this field represents satellite PRN 32.

Note:

SAT_LIST include all satellites for which SUBF_4_5 in this message are valid, whether they were specified in the NBA_REQ Navbit aiding request message or not.

FRAME_NUM: Frame number

This field shall be set to the frame number for which the data in SUBF_4_5 is valid for. The frame number is the GPS frame number, within the 12.5 minute of the GPS superframe. The value range is 1 to 25 where the binary value of the field conveys the GPS frame number. The CP shall set this field to 0 if the data in SUBF_4_5 is invalid.

SUBF_4_5: Subframe 4 and 5

This field contains subframe 4 and 5 of the navigation message bits in the order transmitted by the satellite. The most significant bit of the first byte shall contain the first bit of the subframe 4. There should be 600 valid bits.

5.73 OSP ACK/NACK/ERROR Notification - Message ID 216, SID 1

MID (Hex)	0xD8
MID (Dec)	216
Message Name in Code	MID_MSG_ACK_IN
SID (Hex)	0x01
SID (Dec)	1
SID Name in Code	ACK_NACK_ERROR

Table 5.182: OSP ACK/NACK/ERROR Notification - Message ID 216, SID 1

There were no existing messages for autonomous ACK/NACK input, therefore this message is intended for both autonomous and aided cases. For the autonomous case, certain fields are not applicable and will be zeroed out.

Field	Bytes	Scale	Unit
Message ID	1		
Message Sub ID	1		
Echo Message ID	1		
Echo Message Sub ID	1		
ACK/NACK/ERROR	1		
Reserved	2		

Table 5.183: ACK/NACK/ERROR Notification Message

Value	Description
0x00	Acknowledgement
0x01 – 0xF9	Reserved
0xFA	Message ID and/or Message Sub ID not recognized
0xFB	Parameters cannot be understood by the recipient of the message
0xFC	OSP Revision Not Supported
0xFD	CP does not support this type of NAV bit aiding (0 during autonomous operation)
0xFE	CP does not accept ephemeris status response (0 during autonomous operation)
0xFF	Non-acknowledgement

Table 5.184: ACK/NACK/ERROR Fields

5.74 Reject - Message ID 216, Sub ID 2

MID (Hex)	0xD8
MID (Dec)	216
Message Name in Code	MID_MSG_ACK_IN
SID (Hex)	0x02
SID (Dec)	2
SID Name in Code	REJECT

Table 5.185: Reject - Message ID 216, Sub ID 2

Field	Bytes	Scale	Unit
Message ID	1		
Message Sub ID	1		
REJ_MESS_ID	1		
REJ_MESS_SUB_ID	1		
REJ_REASON	1		

Table 5.186: Reject Message

REJ_MESS_ID: Message ID of Rejected Message

REJ_MESS_SUB_ID: Message Sub ID of Rejected Message

REJ_REASON: Reject Reason

Bit Number	Bit Value	Description
Bit 1 (LSB)	1 = true, 0 = false	(Reserved)
Bit 2	1 = true, 0 = false	Not Ready
Bit 3	1 = true, 0 = false	Not Available
Bit 4	1 = true, 0 = false	Wrongly formatted message(1)
Bit 5	1 = true, 0 = false	No Time Pulse during Precise Time Transfer
Bit 6		Unused
Bit 7-8	0	Reserved

Table 5.187: REJ_REASON Field

5.75 Set GPS TOW Assist - Message ID 217, Sub ID 7

MID (Hex)	0xD3
MID (Dec)	211
Message Name in Code	MID_SET_AIDING
SID (Hex)	0x07
SID (Dec)	7
SID Name in Code	SET_GPS_TOW_ASSIST

Table 5.188: Set GPS TOW Assist - Message ID 217, Sub ID 7

Field	Length (nr of bits)	Scale	Unit
Message ID	8		
Message Sub ID	8		
NUM_SVS	8		
The structure of the GPS TOW assistance parameters below repeats a number of times indicated by the NUM_SVS field.			
TOW_ASSIST_SV_PRN_NUM	8	N/A	N/A
TLM_MSG	16(14)	N/A	N/A
TOW_ASSIST_INFO (This field contains the Anti-Spoof, Alert and TLM Reserved parameters)	8(1+1+2)	N/A	N/A

Table 5.189: Set GPS TOW Assist Message

NUM_SVS: Number of satellites

This is the number of satellites for which GPS TOW assistance data is being given with this message.

TOW_ASSIST_SV_PRN: Satellite PRN Number

PRN number of the satellite that the GPS_TOW_ASSIST information belongs to. The value 0 indicates that the corresponding GPS_TOW_ASSIST parameters are not valid.

TLM_MSG: Telemetry work Telemetry word broadcast by the specified satellite

TOW_ASSIST_INFO Additional TOW Assist Information.

Bit 3 corresponds to the 1 bit Anti-Spoof parameter broadcast by the specified satellite.

Bit 2 corresponds to the 1 bit Alert parameter broadcast by the specified satellite.

Bit 1-0 (LSB) corresponds to the 2 bit TLM Reserved parameter broadcast by the specified satellite.

5.76 Power Mode Request - Message ID 218, Sub IDs 1, 2, 3, 4

MID (Hex)	0xDA
MID (Dec)	218
Message Name in Code	MID_PWR_MODE_REQ
SID (Hex)	Listed below
SID (Dec)	Listed below
SID Name in Code	Listed below

Table 5.190: Power Mode Request - Message ID 218, Sub IDs 1, 2, 3, 4

APM_REQ: Request to transition to Advanced Power Management mode

When sent in a full power mode, a direct transition is requested to the Advanced Power Management low power mode. When sent from any other low power mode, first a default transition is performed to full power mode and then, immediately a transition from the full power mode to the Advanced Power Management low power mode is performed. In either case, a single Power Mode Response message will confirm this message.

MPM_REQ: Request to enable transition to Micro Power Management mode

When sent in a full power mode, enabling a direct transition is requested to the Micro Power Management low power mode as soon as sufficient ephemeris data is available and a valid navigation position solution is calculated at near zero user velocity. When sent from any other low power mode, first a default transition is performed to full power mode and then, immediately a transition is enabled from the full power mode to the Micro Power Management low power mode as described above is performed. In either case, a single Power Mode Response message will confirm this message.

TP_REQ: Request to transition to Trickle Power Management mode

When sent in a full power mode, a direct transition is requested to the Trickle Power Management low power mode. When sent from any other low power mode, first a default transition is performed to full power mode and then, immediately a transition from the full power mode to the Trickle Power Management low power mode is performed. In either case, a single Power Mode Response message will confirm this message.

PTF_REQ: Request to transition to Push-To-Fix Power Management mode

When sent in a full power mode, a direct transition is requested to the Push-To-Fix Power Management low power mode. When sent from any other low power mode, first a default transition is performed to full power mode and then, immediately a transition from the full power mode to the Push-To-Fix Power Management low power mode is performed. In either case, a single Power Mode Response message will confirm this message.

FP_MODE_REQ: Request to transition to Full Power mode

When sent in a any of the low power modes, the current low power mode is cancelled and a direct transition is requested to the full power mode.

The scope of this message and the rules of overriding other power mode setting values that may have already been stored are described in Section 7.18.

The message description for each SID follows.

5.76.1 SID 0x00 (0) FP_MODE_REQ

Field	Bytes	Scale	Unit
Message ID	1		
Message Sub ID	1		

When this message is received, any low power (LP) mode which is currently active is disabled and full power mode is entered.

5.76.2 SID 0x01 (1) APM REQ

Field	Bytes	Scale	Unit
Message ID	1		
Message Sub ID	1		
NUM_FIXES	1		
TBF	1		sec
POWER_DUTY_CYCLE	1	*0.2	%
MAX_HOR_ERR	1		

Field	Bytes	Scale	Unit
MAX_VERT_ERR	1		
PRIORITY	1		
MAX_OFF_TIME	4		msec
MAX_SEARCH_TIME	4		msec
TIME_ACC_PRIORITY	1		
Reserved			

Table 5.191: Power Mode Request Message - Sub ID 1

NUM_FIXES: Number of requested APM cycles

Valid range is 0-255. A value of 0 indicated that continuous APM cycles are requested. The default value is zero.

TBF: Time between fixes

Requested time between fixes. 1 – 180sec. In SLC, if this value is equal or less than 10 sec, the POWER_DUTY_CYCLE parameter is disregarded and a trickle power mode is engaged where the TBF value also derives the "On Time" length, as shown in the table below:

Time Between Fixes (sec)	On Time (msec)
1	300
2	400
3	400
4	400
5	500
6	600
7	700
8	800
9	900
10	900

Table 5.192: TBF Cycle Time Derived On Time Period Length

POWER_DUTY_CYCLE: Duty cycle of the APM mode

The CP shall set this field to the power duty cycle desired. The values in this field will range from 1 to 20. 1 shall represent a 5% duty cycle and 20 shall represent a 100%. The default value is 50%.

MAX_HOR_ERR: Maximum requested horizontal error

The maximum requested horizontal position error, in unit of 1 meter. The value of 0x00 indicates "No Maximum". The range of HORI_ERROR_MAX is from 1 meter to 255 meters. The SiRF Client shall try to provide a position with horizontal error less than this specified value in more than 95% of the cases.

MAX_VERT_ERR: Maximum requested vertical error

The maximum requested vertical position error according to the table below. The SiRF Client shall try to provide a position with vertical error less than this specified value in more than 95% of the cases.

Value	Position Error
0x00	< 1 meter
0x01	< 5 meters
0x02	< 10 meters
0x03	< 20 meters
0x04	< 40 meters
0x05	< 80 meters
0x06	<160 meters
0x07	No Maximum
0x08-0xFF	Reserved

Table 5.193: Maximum Vertical Error

PRIORITY: Specifies if time or power duty has priority

0x01 = Time between two consecutive fixes has priority

0x02 = Power duty has higher priority

Bits 2-7 reserved for expansion

MAX_OFF_TIME: Maximum time for sleep mode

Default value is 30s. When the receiver is unable to acquire satellites for a TP cycle, it returns to sleep mode for this period of time before it tries again.

MAX_SEARCH_TIME: Maximum satellite search time

Default value is 120s. When the receiver is unable to reacquire at the start of a cycle, this parameter determines how long it will try to reacquire for. After this time expires, the unit returns to sleep mode for the value set in the MAX_OFF_TIME field. Entering a value of 0 for this field makes max search time disabled such that when the receiver attempts to reacquire continuously. When a value of 0 is entered for the MAX_SEARCH_TIME, the value entered in the MAX_OFF_TIME field is N/A and ignored.

TIME_ACC_PRIORITY: Time/Accuracy Priority

0x00 No priority imposed (default)

0x01 MAX_SEARCH_TIME has higher priority

0x02 MAX_HOR_ERR has higher priority

0x03-0xFF Reserved

Reserved: Byte reserved for future use

Note:

The Position Request OSP message and the APM request message both specify QoS parameters and time between fixes. The Position Request parameter values overrides the QoS value in the APM request. After the sequence of responses to the Position Request has been completed, the original APM QoS values become valid again.

5.76.3 SID 0x02 (2) MPM REQ

Field	Bytes	Scale	Unit
Message ID	1		
Message Sub ID	1		
Reserved	4		

Table 5.194: Power Mode Request Message - Sub ID 2

Reserved: Byte reserved for future use.

5.76.4 SID 0x03 (3) TP REQ

Field	Bytes	Scale	Unit
Message ID	1		
Message Sub ID	1		
DUTY_CYCLE	2	*10	%
ON_TIME	4		msec
MAX_OFF_TIME	4		msec
MAX_SEARCH_TIME	4		msec

Table 5.195: Power Mode Request Message - Sub ID 3

DUTY_CYCLE: Percent time on

Desired time to be spent tracking with full power. A duty cycle of 1000 (100%) means continuous operation. When the duty cycle is set to 100% the on-time has no effect. The default value is 50%.

ON_TIME: Actual time on

The value range is 100 – 900 msec. When the cycle time is 1 second, ON_TIME should be specified as less than 700 ms. For any other cycle times, the ON_TIME field value should be specified as less than or equal to 900 ms. The TBF time is derived from the values specified here in the ON_TIME and in the DUTY_CYCLE fields. If the resulting TBF value is too low and not supported, the request is rejected with an error message. When the specified ON_TIME and DUTY_CYCLE values can not be enforced to get a fix, power management reverts back to full power mode, until the signal conditions improve again to meet the specified ON_TIME and DUTY_CYCLE values.

MAX_OFF_TIME: Maximum time for sleep mode

Default value is 30s. When the receiver is unable to acquire satellites for a TP cycle, it returns to sleep mode for this period of time before it tries again.

MAX_SEARCH_TIME: Maximum satellite search time

Default value is 120s. When the receiver is unable to reacquire at the start of a cycle, this parameter determines how long it will try to reacquire for. After this time expires, the unit returns to sleep mode for the value set in the MAX_OFF_TIME field. Entering a value of 0 for this field makes max search time disabled such that when the receiver attempts to reacquire continuously. When a value of 0 is entered for the MAX_SEARCH_TIME, the value entered in the MAX_OFF_TIME field is N/A and ignored.

Note:

In trickle power mode, the parameters of this request may contradict with the similar parameters defined in the POS_REQ message. Therefore, the responses to the POS_REQ request may get suspended while in trickle power mode in which case only the MID 2 “Measure Navigation Data Out” SSB PVT messages are generated using TP mode.

5.76.5 SID 0x04 (4) PTF REQ

Field	Bytes	Scale	Unit
Message ID	1		
Message Sub ID	1		
PTF_PERIOD	4		sec
MAX_SEARCH_TIME	4		msec
MAX_OFF_TIME	4		msec

Table 5.196: Power Mode Request Message - Sub ID 4

PTF_PERIOD: Push-To-Fix cycle time in seconds

Default value is 1800s. Value range: 10 – 7200 sec.

MAX_SEARCH_TIME: Maximum satellite search time

Default value is 120s. When the receiver is unable to reacquire at the start of a cycle, this parameter determines how long it will try to reacquire for. After this time expires, the unit returns to sleep mode for the value set in the PTF_PERIOD field. Entering a value of 0 for this field makes max search time disabled such that when the receiver attempts to reacquire continuously.

MAX_OFF_TIME: Maximum time for sleep mode

The longest period in msec for which the receiver will deactivate due to the MAX_SEARCH_TIME timeout. When the receiver is unable to acquire satellites for a cycle, it returns to sleep mode for this period of time before it tries again. Default value is 30000ms. Value range: 1000 – 180000 msec.

Note:

In push-to-fix power mode, the parameters of this request may contradict with the similar parameters defined in the POS_REQ message. Therefore, the responses to the POS_REQ request may get suspended while in trickle power mode in which case only the MID 2 Measure Navigation Data Out SSB PVT messages are generated using TP mode.

5.77 Hardware Control Input - Message ID 219

This message ID is reserved for future hardware control features, including VCTCXO and on/off signal configuration. Although two SIDs are specified in the master MID list, they are only placeholders to show which features would use this MID and there can be additions/subtractions to the

MID (Hex)	0xDB
MID (Dec)	219
Message Name in Code	MID_HW_CTRL_IN
SID (Hex)	TBD
SID (Dec)	TBD
SID Name in Code	TBD

Table 5.197: Hardware Control Input - Message ID 219

Field	Bytes	Scale	Unit
Message ID	1		
Message Sub ID	1		
Message details TBD			

Table 5.198: Hardware Control Input Message

5.78 CW Configuration - Message ID 220, Sub ID 1

CW Configuration message allows for control (enable/disable) of specific hardware and software features of the CW Controller. Scanning can be disabled or set to run the automatic scan progression as specified in the system design. Filtering can be disabled, forced to just the 2MHz filter or the OFFT notch filter, or set to automatic.

MID (Hex)	0xDC
MID (Dec)	220
Message Name in Code	MID_CW_INPUT
SID (Hex)	0x01
SID (Dec)	1
SID Name in Code	CW_CONFIG

Table 5.199: CW Configuration - Message ID 220, Sub ID 1

Field	Bytes	Unit	Description
Message ID	U1		Message ID (0xDC)
Message Sub ID	U1		Sub ID (0x01)
Configuration Mode	U1		Configuration Mode U1 Enumeration of configuration modes: 0: Enable scan, enable filtering 1: Enable scan, use OFFT 2: Enable scan, use 2MHz 3: Enable scan, no filter 4: Disable scan, disable filtering 254: Factory Scan (not for 4t, reserved only) 255: Disable scan, disable filtering. Use only complex 8f ₀ .

Table 5.200: CW Configuration Message

The SLC responds to this message with an ACK/NACK/ERROR 0x4B output message.

Note:

The MID 150 Switch Operating Modes message always overrides these configuration settings. This CW configuration message is received and processed only if the SLC is in *normal* operating mode as defined in the Mode field of the MID 150 message. The CW controller configuration settings are cleared ONLY through factory reset Xo (Msg ID 128).

5.79 TCXO Learning Input - Message ID 221, Sub ID 0, 1, 2, 3

Message Name	TCXO_LEARNING
Input or Output	Input
MID (Hex)	0xDD
MID (Dec)	221
Message Name in Code	MID_TCXO_LEARNING_IN
SID (Hex)	See below
SID (Dec)	See below
SID Name in Code	See below

Table 5.201: TCXO Learning Input - Message ID 221, Sub ID 0, 1, 2, 3

SID Field	Description	Inclusion in Builds
0x00	Clock Model Output Control	All builds
0x01	Clock Model Data Base	All builds
0x02	Clock Model TCXO Temperature Table	Xo Test Builds Only
0x03	Clock Model Test Mode Control	Xo Test Builds Only

Table 5.202: TCXO Learning Input SID Descriptions

Messages marked as "Xo Test Builds Only" in the above table are missing in standard builds for products to be shipped to customers. These messages are present in special test builds only made for the purpose of testing the TCXO features.

5.79.1 TCXO Learning Clock Model Output Control - Message ID 221, Sub ID 0

Message Name	TCXO_LEARNING
Input or Output	Input
MID (Hex)	0xDD
MID (Dec)	221
Message Name in Code	MID_TCXO_LEARNING_IN
SID (Hex)	0x00
SID (Dec)	0
SID Name in Code	CLOCK MODEL OUTPUT CONTROL

Table 5.203: TCXO Learning Clock Model Output Control - Message ID 221, Sub ID 0

Name	Bytes	Binary (Hex)		Unit	Ascii (Dec)		Description
		Scale	Example		Scale	Example	
Message ID	U1					221	TCXO Learning In
Sub ID	U1					0	Clock Model Output Control The following fields are Bit Masks for message 0x5D output enabling. The bit position corresponds to the sID for 0x5D where bit 0 = sID 0 If the sID is not defined it is ignored. All output can be disabled by setting both lists to 0.
One Time SID List	U2						One Time sID List
Continuous SID List	U2						Continuous SID List
Output Request	U2						Requested control for Output sIDs. Bit 0: 0 = TRec Msg (0x5D,4) outputs current value only 1 = TRec Msg (0x5D,4) outputs all queued values
spare	U2						

Table 5.204: Clock Model Output Message

5.79.2 TCXO Learning Clock Model Data Base Input - Message ID 221, Sub ID 1

Message Name	TCXO_LEARNING
Input or Output	Input
MID (Hex)	0xDD
MID (Dec)	221
Message Name in Code	MID_TCXO_LEARNING_IN
SID (Hex)	0x01
SID (Dec)	1
SID Name in Code	CLOCK_MODEL_DATA_BASE

Table 5.205: TCXO Learning Clock Model Data Base Input - Message ID 221, Sub ID 1

Name	Bytes	Binary (Hex)		Unit	Ascii (Dec)		Description
		Scale	Example		Scale	Example	
Message ID	U1					221	TCXO Learning In
Sub ID	U1					1	Clock Model Data Base
Source							Bit mask indicating source of the clock model. 0x0 = NOT_SET 0x1 = ROM 0x2 = DEFAULTS 0x4 = MFG 0x8 = TEST_MODE 0x10 = FIRST_NAV
Aging Rate Uncertainty	U1			Ppm /year	0.1	10	Aging rate of uncertainty
Initial Offset Uncertainty	U1			ppm	0.1	10	Initial Frequency offset of the TCXO
Spare1	U1						
Clock Drift	S4			ppb	1	60105	Clock drift
Temp Uncertainty	U2			ppm	0.01	50	Temperature uncertainty
Manufacturing Week Number	U2			GPS Week #	1	1465	TCXO Manufacturing week number in full GPS weeks
Spare2	U4						

Table 5.206: Clock Model Data Base Input Message

5.79.3 TCXO Learning Temperature Table Input - Message ID 221, Sub ID 2

This message is missing in standard builds for products to be shipped to customers, and present in special test builds only made for the purpose of testing the TCXO features.

Message Name	TCXO_LEARNING
Input or Output	Input
MID (Hex)	0xDD
MID (Dec)	221
Message Name in Code	MID_TCXO_LEARNING_IN
SID (Hex)	0x02
SID (Dec)	2
SID Name in Code	TEMPERATURE_TABLE

Table 5.207: TCXO Learning Temperature Table Input - Message ID 221, Sub ID 2

Name	Bytes	Binary (Hex)		Unit	Ascii (Dec)		Description
		Scale	Example		Scale	Example	
Message ID	U1					221	TCXO Learning In
Sub ID	U1					2	TCXO Temperature Table
Counter	U4						Counter updates by 1 for each output. Rolls over on overflow.
Offset	S2			ppb	1	-331	Frequency offset bias of the table from the CD default
Global Min	S2			ppb	1	-205	Minimum XO error observed
Global Max	S2			ppb	1	442	Maximum XO error observed
First Week	U2			GPS Week #	1	1480	Full GPS week of the first table update
Last Week	U2			GPS Week #	1	1506	Full GPS week of the last table update
LSB	U2			ppb	1	4	Array LSB Scaling of Min[] and Max[]

Name	Bytes	Binary (Hex)		Unit	Ascii (Dec)		Description
		Scale	Example		Scale	Example	
Aging Bin	U1				1	37	Bin of last update
Aging Up Count	S1				1	4	Aging up or down count accumulator
Bin Count	U1						Count of bins filled
Spare2	U1						
Min []	1 * 64			Ppb * LSB			Min XO error at each temp scaled by LSB
Max[]	1 * 64			Ppb * LSB			Max XO error at each temp scaled by LSB

Table 5.208: TCXO Learning Temperature Table Input Message

5.79.4 TCXO Learning Test Mode Control - Message ID 221, Sub ID 3

This message is missing in standard builds for products to be shipped to customers, and present in special test builds only made for the purpose of testing the TCXO features.

Message Name	TCXO_LEARNING
Input or Output	Input
MID (Hex)	0xDD
MID (Dec)	221
Message Name in Code	MID_TCXO_LEARNING_IN
SID (Hex)	0x03
SID (Dec)	3
SID Name in Code	TEST_MODE_CONTROL

Table 5.209: TCXO Learning Test Mode Control - Message ID 221, Sub ID 3

Name	Bytes	Binary (Hex)		Unit	Ascii (Dec)		Description
		Scale	Example		Scale	Example	
Message ID	U1					221	TCXO Learning In
Sub ID	U1					3	Clock Model Test Mode Control
TM Enable / Disable	U1				1	1	Bit Field for control of TCXO Test Mode. Bit 0: 0 = Rtc Cal will use Host updates 1 = Rtc Cal will ignore Host updates Bit 1: 0 = New TRec readings will update Temperature Table 1 = Ignore updates to the Temperature Table
spare1	U1						
spare2	U2						

Table 5.210: Test Mode Control Message

5.80 Reserved - Message ID 228

SiRF proprietary

5.81 Extended Ephemeris - Message ID 232

Used by GSW2 (2.5 or above), SiRFXTTrac (2.3 or above), and GSW3 (3.2.0 or above), and GSWLT3 software.

5.81.1 Extended Ephemeris Proprietary - Message ID 232, Sub ID 1

Output Rate: Depending on the Client Location Manager (CLM)

Example:

- A0A201F6 – Start Sequence and Payload Length (variable)

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1		E8		232
Message Sub ID	1		01		Ephemeris input
SiRF Proprietary Ephemeris Format	500				Content proprietary

Table 5.211: Extended Ephemeris Proprietary - Message ID 232, Sub ID 1

5.81.2 Format - Message ID 232, Sub ID 2

This message polls ephemeris status on up to 12 satellite PRNs. In response to this message, the receiver sends Message ID 56, Message Sub ID 3.

Name	Bytes	Description
Message ID	1	Hex 0xE8, Decimal 232
Message Sub ID	1	2-Poll Ephemeris Status
SVID Mask	4	Bitmapped Satellite PRN ⁽¹⁾

Table 5.212: Format - Message ID 232, Sub ID 2

⁽¹⁾ SVID Mask is a 32-bit value with a 1 set in each location for which ephemeris status is requested. Bit 0 represents PRN 1, ..., Bit 31 represents PRN 32. If more than 12 bits are set, the response message responds with data on only the 12 lowest PRNs requested.

Note:

Payload length: 6 bytes

5.81.3 ECLM Start Download - Message ID 232, Sub ID 22

This message is sent from Host EE Downloader to the SLC to indicate that the host EE downloader is initiating the SGEE download procedure.

Example:

A0 A2 00 02 E8 16 00 FE B0 B3 - Message

A0 A2 00 02 - Start Sequence and Payload Length (2 bytes)

E8 16 - Payload

00FEB0B3 - Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1U		E8		Decimal 232
Sub Message ID	1U		16		20: Start Download

Table 5.213: ECLM Start Download - Message ID 232, Sub ID 22

Success/failure response upon completion of the command: MID 0x38 ,
SID 0x20.

5.81.4 ECLM File Size - Message ID 232, Sub ID 23

This message is sent from Host EE Downloader to the SLC to indicate that the host EE downloader is initiating the size of the SGEE file to be downloaded.. The table below contains the input values for the following example:

Sub Message ID = 23, File Length = 10329

Example:

A0 A2 00 06 E8 17 00 00 28 59 01 80 B0
B3 - Message

A0A20006 - Start Sequence and Payload Length (6 bytes)

E8 17 00 00 28 59 - Payload

01 80 B0 b3 - Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1U		E8		Decimal 232
Sub Message ID	1U		17		23 : SID ECLM File Size
File Length	4U		00 00 28 59		Length of the SGEE File to be downloaded

Table 5.214: ECLM File Size - Message ID 232, Sub ID 23

Success/failure response upon completion of the command: MID 0x38 ,
SID 0x20

5.81.5 ECLM Packet Data - Message ID 232, Sub ID 24

This message is used to send the SGEE data from host downloader to the GPS Receiver to be processed by CLM modules and saved in NVM.

Table 5.215 contains the input values for the following example:

Sub Message ID = 24, SGEE Data

Example:

A0 A2 00 26 E8 18 00 01 00 20 62 12 31 06 03 02 07 D9 07 07 00 00 39 6D 8F 12
00 00 00 00 00 00 01 2D 9A E7 05 02 FF FE 28 05 07 E6 B0 B3 - Message



A0 A2 00 26 - Start Sequence and Payload Length (6+ packet length bytes)

E8 18 00 01 00 20 62 12 31 06 03 02

07 D9 07 07 00 00 39 6D 8F 12 00 00 00 00 00 01 2D 9A E7 05 02 FF FE 28 05 -Payload

07 E6 B0 B3 - Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1U		E8		Decimal 232
Sub Message ID	1U		18		24 : SGEE Packet Data SubMsgId
Packet Sequence Number	2U		00 01		Packet Sequence number of the current packet Starting from 1
Packet Length	2U		0020		Length of the sgee data in current packet
Packet Data	Packet Length		62 12 31 06 03 02 07 d9 07 07 00 00 39 6d 8f 12 00 00 00 00 00 01 2d 9a e7 05 02 ff fe 28 05		SGEE Data of length indicated in Packet Length of the message.

Table 5.215: ECLM Packet Data - Message ID 232, Sub ID 24

Success/failure response upon completion of the command: MID 0x38 ,
SID 0x20

5.81.6 Get EE Age - Message ID 232, Sub ID 25

This message is sent to GPS Receiver to get the age of extended ephemeris stored in GPS Receiver.

Table 5.216 contains the input values for the following example:

Sub Message ID = 25, Number of Sat = 1, Prn Num = 1

Example:

A0 A2 00 13 E8 19 01 01 00 00 00 00 00 00 00
00 00 00 00 00 00 00 00 01 03 B0 B3 - Message

A0 A2
00 13 - Start Sequence and Payload Length (19 bytes)

E8 19 01 01 00 00 00 00 00 00 00 00 00 00 00 00 00 00 - Payload

01 03 B0 B3 - Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1U		E8		Decimal 232
Sub Message ID	1U		19		25 : Get EE Age
prnNum;	1U		01		Prn Number
ephPosFlag	1U		00		
eePosAge	2U		0000		
cgeePosGPSWeek	2U		0000		
cgeePosTOE	2U		0000		
ephClkFlag	1U		00		
eeClkAge	2U		0000		
cgeeClkGPSWeek	2U		0000		
cgeeClkTOE	2U		0000		
Pad	1U		00		

Table 5.216: Get EE Age - Message ID 232, Sub ID 25

Success response upon completion of the command is acknowledged with– SSB Message ID 56, Sub Msg ID 0x21 along with EE Age of the satellite(s).

Failure response upon completion of the command is acknowledged with “Nack” using Command Negative Acknowledgement MID 0x38 , SID 0x20.

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1U		0xE8		Decimal 232
Sub Message ID	1U		0x1B		Request for file content specified by NVM ID
Sequence No	2U		0x00 0x01		Sequence number of message
NVM ID	1U		0x03		Storage ID 01: SGEE file 02: CGEE file 03: BE File
Blocks	1U		0x01		Number of Blocks to read
Size	2U		0x00 0xb0		Size of each block
Offset	4U		0x00 0x00 0x00 0x00		Offset of each block in given storage file
Data	(summation of all sizes)U		00 2e 00 23 06 e0 67 03 00 21 00 23 06 e0 67 03 00 00 00 00 00 00 00 00 00 00 2a 00 23 06 e0 67 03 00 3e 00 23 06 e0 67 03 00		File Content

Table 5.218: ECLM Host File Content - Message ID 232, Sub ID 27

Note:

Payload length: (6+size*Blocks+4*Blocks+ summation of all sizes) bytes

5.81.9 ECLM Host Ack/Nack - Message ID 232, Sub ID 28

This is the response message to the Output Message ID 56 with SubMsgID's 35, or 36.

Following is an example of Ack to message 56, subId 35 (ECLM Update file content).

Example:

```
0xA0 0xA2 0x00 0x06
    0xE8 0x1C 0x38 0x25 0x00 0x00
0x01 0x61 0xB0 0xB3 - Message
```

A0A20006 - Start Sequence and Payload Length (6 bytes)

0161B0B3 - Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1U		0xE8		Decimal 232
Sub Message ID	1U		0x1C		ECLM Host Ack/ Nack
Ack Msg Id	1U		0x38		Ack Message Id 56
Ack Sub Id	1U		0x25		Ack Sub Id, ECLM Update file content 0x25
Ack/Nack	1U		0x00		0 = Ack
Ack Nack Reason	1U		0x00		ECLM_SUCCESS = 0, ECLM_SPACE_UNAVAILABLE = 1 ECLM_PKT_LENGTH_INVALID = 2, ECLM_PKT_OUTPUT_OF_SEQ = 3, ECLM_DOWNLOAD_SGEE_NONE_WFILE = 4, ECLM_DOWNLOAD_OAD_CORRUPT_FILE_ERROR = 5, ECLM_DOWNLOAD_OAD_GENERIC_FAILURE = 6, ECLM_API_GENERIC_FAILURE = 7

Table 5.219: ECLM Host Ack/Nack - Message ID 232, Sub ID 28

5.81.10 EE Storage Control Input - Message ID 232, Sub ID 253

This message determines where to store extended ephemeris. This message is supported only for GSD4e and for products beyond. The scope of this message and the rules of overriding other settings of this value that may have already been stored are described in Section 7.18.

Message Name	EE Storage Control
Input or Output	Input
MID (Hex)	0xE8
MID (Dec)	232
Message Name in Code	MID_EE_INPUT
SID (Hex)	0xFD
SID (Dec)	253
SID Name in Code	EE_STORAGE_CONTROL

Table 5.220: EE Storage Control Input - Message ID 232, Sub ID 253

Name	Bytes	Binary (Hex)		Unit	ASCII(Dec)		Description
		Scale	Example		Scale	Example	
Message ID	1		0xE8			232	Message ID
Sub ID	1		0xFD			253	Sub ID
EE Storage Control	1						See bit-field table below

Table 5.221: EE Storage Control Input Message

Bit Field	Description
[1:0]	00 = storage available on host (default) 01 = I2C EEROM provided for GSD4e access 10 = store to parallel FLASH 11 = no storage
[7:2]	Reserved

Table 5.222: EE Storage Control Input Message Bit-Fields

5.81.11 Disable CGEE Prediction - Message ID 232, Sub ID 254

This message is sent to GPS Receiver to disable CGEE prediction after specified number of seconds. Ack/Nack will be received indicating success/failure.

Table 5.223 contains the input values for the following example:

Example:

A0A20006e8fefeffffff05E2B0B3 - Message

a0 a2 - Start Sequence

00 06 e8 fe ff ff ff ff - Payload

05 e2 b0 b3 - Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	e.g.		
Message ID	1U		0xE8		Decimal 232
Sub Message ID	1U		0xFE		254: Disable CGEE prediction
Time	4U		0xff 0xff 0xff 0xff	Seconds	0x00000000 = Immediately disable 0xffffffff = Permanently enable Any other number = Disable prediction after given number of seconds

Table 5.223: Disable CGEE Prediction

5.81.12 Extended Ephemeris Debug - Message ID 232, Sub ID 255

Example:

- A0A20006 – Start Sequence and Payload Length (6 bytes)
- E8FF01000000 – Payload
- 01E8B0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1		E8			232
Message Sub ID	1		FF			255-EE Debug
DEBUG_FLAG	4					Proprietary

Table 5.224: Extended Ephemeris Debug - Message ID 232, Sub ID 255

5.81.13 Test Mode Configuration Request - Message ID 232, Sub ID 255

This message already exists from SSB and is being kept as is. Since it is a previously existing message and is untouched by the conversion of SSB->OSP, it is not documented in this manual. Details of MID and SID are mentioned here for reference.

MID (Hex)	0xE8
MID (Dec)	232
Message Name in Code	MID_SSB_EE_INPUT
SID (Hex)	0xFF
SID (Dec)	255
SID Name in Code	SSB_EE_DEBUG

Table 5.225: Test Mode Configuration Request - Message ID 232, Sub ID 255

Refer to SSB documentation on the CSR and SiRF websites: www.csr.com and www.sirf.com

5.82 Set GRF3i+ IF BW Mode - Message ID 233, Sub ID 1

This message allows the user to set the IF bandwidth for GRF3i+. The SubMsgID for this message is fixed to 0x01.

Table 5.226 contains the input values for the following example:

Sub Message ID = 0x1, GRF3i+ Bandwidth Mode Selection = 0x1

Example:

- A0A20003 – Start Sequence and Payload Length (3 bytes)
- E90101 – Payload
- 00EBB0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1U		E9		Decimal 233
Message Sub ID	1U		01		01: Set GRF3i+ IF Bandwidth Mode
GRF3i+ IF Bandwidth Mode Selection	1U		01		0 = Wideband Mode 1 = Narrowband Mode [default]

Table 5.226: Set GRF3i+ IF BW Mode - Message ID 233, Sub ID 1
Note:

GRF3i+ IF Bandwidth Mode would be internally saved to NVM. This message would be acknowledged to indicate SUCCESS/FAILURE.

SUCCESS: would be acknowledged with "Ack: MID_GRF3iPlusParams" using Command Acknowledgment – SSB Message ID 11.

FAILURE: would be acknowledged with "Rejected: MID_GRF3iPlusParams" using Command Negative Acknowledgment – SSB Message ID 12.

5.83 Set GRF3i+ Normal/Low Power RF Mode - Msg ID 233, Sub ID 2

This message allows user to set the RF power mode to normal or low. The Sub ID for this message is fixed to 0x02.

Table 5.227 contains the input values for the following example:

Sub Message ID = 0x2, GRF3i+ power mode =0x1

Example:

- A0A20003 – Start Sequence and Payload Length (3 bytes)
- E90201 – Payload
- 00ECB0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1U		E9		Decimal 233
Sub Message ID	1U		02		02: Set GRF3i+ power mode
GRF3i+ power mode	1U		01		0 = Normal power [default] 1 = Low power

Table 5.227: Set GRF3i+ Normal/Low Power RF Mode - Msg ID 233, Sub ID 2
Note:

GRF3i+ power mode would be internally saved to NVM.

This message would be acknowledged to indicate SUCCESS/FAILURE.

SUCCESS: would be acknowledged with "Ack: MID_GRF3iPlusParams" using Command Acknowledgment – SSB Message ID 11.

FAILURE: would be acknowledged with "Rejected: MID_GRF3iPlusParams" using Command Negative Acknowledgment – SSB Message ID 12. Poll GRF3i+ IF

5.84 Bandwidth Mode - Message ID 233, Sub ID 10

This message allows user to poll the IF bandwidth mode for GRF3i+.

The Sub Message ID for this message is fixed to 0x0A.

Table 5.228 contains the input values for the following example:

Sub Message ID = 0x0A

Example:

- A0A20002 – Start Sequence and Payload Length (2 bytes)
- E90A - Payload

Name	Bytes	Binary (hex)		Unit	Description
		Scale	Example		
Message ID	1U		E9		Decimal 233
Sub ID	1U		0A		0A: Poll GRF3i+ IF bandwidth mode

Table 5.228: Bandwidth Mode - Message ID 233, Sub ID 10

Note:

This message would be acknowledged to indicate SUCCESS/FAILURE.


SUCCESS: would be acknowledged with *Ack: MID_GRF3iPlusParams* using Command Acknowledgment – SSB Message ID 11.

FAILURE: would be acknowledged with *Rejected: MID_GRF3iPlusParams* using Command Negative Acknowledgment – SSB Message ID 12.

A corresponding output message (Message ID: 233 with SubMsgID 0xFF) with parameters status would also be sent as a response to this query message.

5.85 Sensor Control Input - Message ID 234, Sub IDs 1 and 2

The Location Manager software will be implemented on the Tracker and the Host processor as shown by a block diagram in Figure 5.1 below. MEMS sensor data acquisition, limited error checking and packaging of sensor data into a message will occur in the Measurement Engine (tracker). The rest of the sensor data processing will be completed on the host processor. A sensor configuration message will be sent from the host processor to the Measurement or Location Engine at the time of startup. This message will describe the sensor set connected to the sensor I2C port on the Measurement or Location Engine, and the process of initialization and data acquisition for each the sensors connected to the I2C port. This mechanism will enable the customer to select the sensor set to be attached to I2C port of Measurement or Location Engine chip. The data acquisition software in the Measurement Engine will conduct limited error checking and packaging of the sensor data into a message which would be sent back to the host.

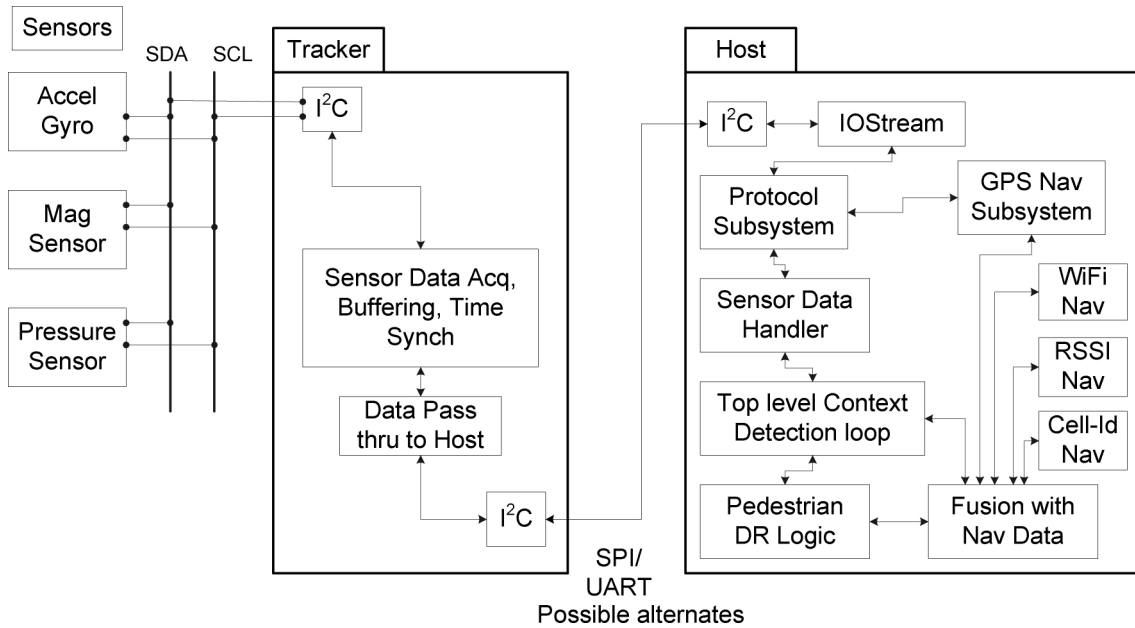
Figure 5.1: Sensor Control Architecture Block Diagram

A sensor configuration message will be sent from the host processor to the Measurement or Location Engine at the time of startup. This message will describe the sensor set connected to the I2C port on the Measurement or Location Engine, the process of initialization and data acquisition for each the sensors connected to the tracker chip. This mechanism will enable the customer to select the sensor set to be attached to I2C port on in the Measurement or Location Engine.

Message Name	SENSOR_CONTROL
Input or Output	Input
MID (Hex)	0xEA
MID (Dec)	234
Message Name in Code	MID_SensorControl
SID (Hex)	Listed below
SID (Dec)	Listed below
SID Name in Code	Listed below

Table 5.229: Sensor Control Input - Message ID 234, Sub IDs 1 and 2

Bit Field	Description
0x01	SENSOR_CONFIG
0x02	SENSOR_SWITCH

Table 5.230: Sensor Control Input SID Descriptions

Each sensor control input message sent by the Host is responded to by a MID_MSG_ACK_OUT, ACK_NACK_ERROR SID message.

Message Name	SENSOR_CONTROL
Input or Output	Input
MID (Hex)	0xEA
MID (Dec)	234
Message Name in Code	MID_SensorControl
SID (Hex)	0x01
SID (Dec)	1
SID Name in Code	SENSOR_CONFIG

Table 5.231: Sensor Control Input - Message ID 234, Sub IDs 1

Sensor configuration message is generated on the Host and sent across to the Measurement or Location Engine in order to provide the configuration information to the sensor data acquisition logic for the sensor(s) attached to I2C DR port.. The sensor configuration information will be stored in a configuration file on the Host. This file will be read by the host application at startup, then a sensor configuration message (SSB) is formed and sent to the Nav thread running on the host. The Host application will create the sensor configuration MEI message which then will be sent to the Measurement Engine. The SSB message will contain additional information, such as zero point and scale factor for each sensor, which does not need to be sent to the Measurement Engine. This information will be extracted on the Host and stored on appropriate structures for use by the sensor data processing logic running on the Host.

Name	Bytes	Binary (Hex)		Unit	Ascii (Dec)		Description
		Scale	Example		Scale	Example	
Message ID	U1		0xEA			234	SENSOR_CONTROL
Sub ID	U1		0x01			1	SENSOR_CONFIGI
NUM_SENS	U1					1	Number of sensors
I2C_SPEED_SET	U1					3	I2C bus speed setting
SDA_SENS1	U2					24	Slave Device Address for Sensor 1
SENSR_TYPE_SEN1	U1					1	Sensor Type for Sensor 1
SEN_INIT_TIME1	U1			ms	10	0	Sensor 1 initialization period
NUM_BYTES_RES_SENS1	U1					198	Number of Bytes to be read from Register 1 and bit resolution in data read
SAMP_RATE1	U1					6	Sample Rate for Sensor 1
SND_RATE1	U1					3	Sending rate of Sensor 1 data back to the Host
DECM_METHOD1	U1					0	Data decimation method setting
ACQ_TIME_DELAY1	U1			micro seconds	10	32	Acquisition time delay for Sensor1
NUM_SEN_READ_REG1	U1					1	Number of registers to read sensor data from

Name	Bytes	Binary (Hex)		Unit	Ascii (Dec)		Description
		Scale	Example		Scale	Example	
MEASUREMENT_MODE1	U1						Measurement Mode: 0 - auto (Sensor configured) 1 - Forced (SW controlling)
READ_OPR_REG1_SEN1	U1					1	Read operation method for Register 1 for Sensor 1
SENS_DATA_READ_ADD1	U1					0	Register 1 address from which to read Sensor 1 data
... Only one sensor registers to be read for data ...							
LO_PWR_REG_SEN1	U1					13	Register to put Sensor 1 into Low Power mode
LO_PWR_MODE_SET1	U1					0	Setting for above register to effect Low Power Mode
NRML_PWR_MODE_SET1	U1					64	Setting for above register to effect normal power consumption mode
NUM_INIT_READ_REG_SEN1	U1					2	Number of registers to read sensor specific data from Sensor 1
INIT_READ_REG1	U1					12	Register 1 address to read at time of initialization
NUM_BYTES_REG1	U1					1	Nr of bytes to read from Register 1 at initialization
INIT_READ_REG2	U1					13	Register 2 address to read at time of initialization

Name	Bytes	Binary (Hex)		Unit	Ascii (Dec)		Description	
		Scale	Example		Scale	Example		
NUM_BYTES_REG2	U1					1	Nr of bytes to read from Register 2 at initialization	
.....End of init registers (only 2)details for sensor 1.....								
NUM_CNTRL_REG_SEN1	U1					2	Nr of Control registers for Sensor 1 to configure	
REG_WRITE_DELAY1	U1			ms	1	0	Time delay between two consecutive register writes	
CNTRL_REG1	U1					12	Control Register 1 address for Sensor 1	
CNTRL_REG1_SET	U1					227	Register 1 setting to be sent to Sensor 1	
CNTRL_REG2	U1					13	Control Register 2 address for Sensor 1	
CNTRL_REG2_SET	U1					64	Register 2 setting to be sent to Sensor 1	
.....End of ctrl registers (only 2) details for Sensor 1.....								
SDA_SENS2	U1	NOT USED. ONLY ONE SENSOR ATTACHED CURRENTLY						Slave dev addr for Sensor 2
SENSR_TYPE_SEN2	U1						Sensor Type of Sensor 2	
SEN_INIT_TIME2	U1						Sensor 1 initialization period	
...	...							

Name	Bytes	Binary (Hex)		Unit	Ascii (Dec)		Description	
		Scale	Example		Scale	Example		
SEN_DATA_PROC_RATE	U1			Hz	1	1	Sensor data processing rate	
ZERO_PT_SEN1	U2					248	Zero Point Value for Sensor 1	
SF_SEN1	U2					410	Scale Factor (sensitivity) for Sensor 1	
ZERO_PT_SEN2	U2	NOT USED. ONLY ONE SENSOR ATTACHED CURRENTLY						Zero Point Value for Sensor 2
SF_SEN2	U2						Scale Factor (sensitivity) for Sensor 2	
...	...							

Table 5.232: Sensor Control Input Message - Sub ID 1

NUM_SENS: Number of Sensor in the sensor set connected to DR sensor I²C port of GSD4t

I2C_SPEED_SET: I2C bus speed setting.

The values for the bus speed setting are as follows:

0 - Low Speed

1- Standard

2 - Fast Mode

3 - Fast mode Plus

4- High speed.

Sensor with the lowest speed setting in the sensor set determines the speed mode for all sensors. SDA_SENS1 Slave Device Address for Sensor 1. This supports 10 bit addressing.

SENSR_TYPE_SEN1: Sensor Type for Sensor 1.

The value for this setting is as follows:

1 - Accelerometer

2 – Magnetic sensor

3 – Pressure sensor

4 – Gyroscope

5 – Accelerometer + Gyroscope

6 – Accelerometer + Magnetic sensor

7 – Gyroscope + Magnetic sensor

8 - Accelerometer + Magnetic sensor + Gyro

SEN_INIT_TIME1: Sensor1 initialization period after power-up (milliseconds X 10)

This is the amount of time which should be allowed before sensor is ready.

NUM_BYTES_RES_SENS1: Number of Bytes to be read from Register 1, sensor 1 (bit 2-4). Number of bytes would be 2, 4, 6 based on 1, 2 or 3 sensor axes.

Resolution for each axis (upper 4 bits, 5-8). This value can range from 9 through 16.

Data type is unsigned or signed 2's complement (bit 1). This can take value 0 or 1.

SAMP_RATE1: Sample Rate for Sensor 1 (Hertz).

The values for this setting are as follows:

1 - 1Hz

2 - 2Hz

3 - 5Hz

4 - 10 Hz

5 - 25Hz

6 - 50Hz

7 – 100Hz

8 through 15 – reserved

SND_RATE1: Rate (units Hertz) at which Sensor 1 data is sent back to Host.

The values for this setting are as follows:

1 - 1Hz

2 - 2Hz

3 - 5Hz

4 - 10 Hz

5 - 25Hz

6 - 50Hz

7 - 100Hz

8 through 15 - reserved.

SND_RATE cannot be greater than SAMP_RATE.

DECM_METHOD1: Data decimation method setting. The values for this setting are as follows:

0 - raw

1 - averaging

2 - sliding median

3 - reserved1

4 - reserved2

ACQ_TIME_DELAY1: Acquisition time delay for Sensor 1 (microsecond X 10).

Time period between triggering the sensor data acquisition and the sensor read operation.

NUM_SEN_READ_REG1: Number of registers to read sensor data from READ_OPR_REG1_SEN1

Read operation method for Register 1 for Sensor 1. 0 - means read only from SENS_DATA_READ_ADD. Other values mean Write with repeated start read.

MEASUREMENT_MODE1

Measurement modes for sensor 1.

0 - means Auto mode.

1 - means Forced mode.

READ_OPR_REG1_SEN1: Read operation method for Register 1 for Sensor 1.

Read Operation Bit Definition:

Bit7 ~ Bit4: Number of Right Shift before sending to host

Bit3 ~ Bit2: Reserved

Bit1: Endian, 0 - big, 1 - little

Bit0: Read mode, 0 - read only, 1 - write with repeated start read

SENS_DATA_READ_ADD1: Register 1 address from which Sensor 1 data will be read

SENS_DATA_READ_ADD2: Register 2 address from which sensor 1 data will be read

... ..

LO_PWR_REG_SEN1: Register to put Sensor 1 into Low Power mode

LO_PWR_MODE_SET1: Setting for LO_PWR_REG_SEN1 to affect Low Power Mode for Sensor 1

NRML_PWR_MODE_SET1: Setting for LO_PWR_REG_SEN1 to affect normal power consumption mode for Sensor 1

NUM_INIT_READ_REG_SEN1: Number of registers to read sensor specific data from Sensor 1 at the time of initialization

If the value is set to 0, then no register addresses would be specified.

INIT_READ_REG1: Register 1 address to be read at time of initialization

NUM_BYTES_REG1: Number of bytes to read from Register 1 at initialization

INIT_READ_REG2: Register 2 address to be read at time of initialization

NUM_BYTES_REG2: Number of bytes to read from Register 2 at initialization

... ..

NUM_CNTRL_REG_SEN1: Number of Control registers for Sensor 1 which need to be configured.

Configuration of the control registers takes place at the time of initialization of sensors.

REG_WRITE_DELAY1: Time delay (milliseconds) between two consecutive register writes

CNTRL_REG1: Control Register 1 address for Sensor 1

CNTRL_REG1_SET: Register 1 setting to be sent to Sensor 1.

If the setting is 0xFF then CNTRL_REG1 address is to be used as a write command only.

CNTRL_REG2: Control Register 2 address for Sensor 1

Register 2 setting to be sent to Sensor 1. If the setting is 0xFF then CNTRL_REG2 address is to be used as a write command only.

CNTRL_REG1_SET

... .. (This is the start of description of second sensor in the message)

SDA_SENS2: Slave Device Address for Sensor 2

SENSR_TYPE_SEN2: Sensor Type:

- 1 - Accelerometer
- 2 - Magnetic sensor
- 3 - Pressure sensor
- 4 - Gyroscope
- 5 - Accelerometer + Gyroscope
- 6 - Accelerometer + Magnetic sensor
- 7 - Gyroscope + Magnetic sensor
- 8 - Accelerometer + Magnetic sensor + Gyro

SEN_INIT_TIME2: Sensor 2 initialization period after power-up (milliseconds X 10)

... ..

SEN_DATA_PROC_RATE: Sensor data processing rate (in Hertz)

This is rate at which sensor data will be processed on Host. Range: 1 - 256 Hz. This value can not be higher than SND_RATE.

ZERO_PT_SEN1: Zero Point Value for Sensor 1

This is the bias value which will be subtracted from the sensor data measurement (in ADC counts) for sensor 1

SF_SEN1: Scale Factor (sensitivity) for Sensor 1

The expression used for converting the sensor measurement in ADC counts to Engineering units is Sensor 1 measurement = (sensor 1 ADC counts - ZERO_PT_SEN1) / SF_SEN1

ZERO_PT_SEN2: Zero Point Value for Sensor 2

SF_SEN2: Scale Factor (sensitivity) for Sensor 2

... ..

Note:

- This is a variable length message. The message payload length will be contained in the header of the message.
- **SAMP_RATE:** For the first release we plan on supporting 50 Hz as the highest sampling rate. The other samples rates which will be supported are 25 Hz, 10 Hz, 5 Hz, 2 Hz, 1 Hz, and 0.5 Hz.
- **SND_RATE:** For the first implementation, the highest rate at which data can be sent from GSD4t to Host is 25 Hz. Also, SND_RATE cannot be higher than SAMP_RATE.
- **LO_PWR_MODE_SET1:** If a sensor does not have the capability to switch to low power mode, then, LO_PWR_REG_SEN1, LO_PWR_MODE_SET1 and NRML_PWR_MODE_SET1 will contain 0x0.
- The data acquisition software on GSD4t has following limitations for the maximum number of registers for each sensor : Maximum number of sensor data read registers NUM_SEN_READ_REG = 12
Maximum number of initialization data registers NUM_INIT_READ_REG_SE = 12
Maximum number of Control registers NUM_CNTRL_REG_SEN = 32
- . The maximum number of Bytes read from initialization data read register NUM_BYTES_REG = 20

Message Name	SENSOR_CONTROL
Input or Output	Input
MID (Hex)	0xEA
MID (Dec)	234
Message Name in Code	MID_SensorControl
SID (Hex)	0x02
SID (Dec)	2
SID Name in Code	SENSOR_SWITCH

Table 5.233: Sensor Control Input Message - Sub ID 2

This message sent from Host to the Measurement or Location Engine will turn the attached, entire sensor set OFF/ ON anytime after the configuration message has been sent. This message would be logged along with sensor data for post processing in NavOffline.

Name	Bytes	Binary (Hex)		Unit	Ascii (Dec)		Description
		Scale	Example		Scale	Example	
Message ID	U1		0xEA			234	SENSOR_CONTROL
Sub ID	U1		0x02			2	SENSOR_SWITCH
STATE_SENSOR_SET	U1						Bit 0: 0 - turn sensor set OFF 1 - turn sensor set ON Bit 1: 0 - turn the receiver state change notifications OFF 1 - turn the receiver state change notifications ON Bits 2-7: Reserved.

Table 5.234: Sensor Switch Message

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
CH 6 PRN ⁽⁵⁾	1 U		04			4
CH 7 PRN ⁽⁵⁾	1 U		00			0
CH 8 PRN ⁽⁵⁾	1 U		00			0
CH 9 PRN ⁽⁵⁾	1 U		00			0
CH 10 PRN ⁽⁵⁾	1 U		00			0
CH 11 PRN ⁽⁵⁾	1 U		00			0
CH 1 2PRN ⁽⁵⁾	1 U		00			0

Table 6.1: Measure Navigation Data Out - Message ID 2

- (1) For further information see Table 6.2 and Table 6.3. Note that the Degraded Mode positioning mode is not supported in GSW3.2.5 and newer
- (2) HDOP value reported has a maximum value of 50.
- (3) For further information see Table 6.4.
- (4) GPS week reports only the ten LSBs of the actual week number.
- (5) PRN values are reported only for satellites used in the navigation solution.

Note:

Binary units scaled to integer values must be divided by the scale value to receive true decimal value (i.e., decimal $X_{vel} = \text{binary } X_{vel} \div 8$).

Mode 1 of Message ID 2 is a bit-mapped byte with five sub-values. Table 6.2 shows the location of the sub-values and Table 6.3 shows the interpretation of each sub-value.

Bit	7	6	5	4	3	2	1	0
Bit(s) Name	DGPS	DOP-Mask	ALTMODE		TPMODE	PMODE		

Table 6.2: Mode 1

Bit(s) Name	Name	Value	Description
PMODE	Position mode	0	No navigation solution
		1	1-SV solution (Kalman filter)
		2	2-SV solution (Kalman filter)
		3	3-SV solution (Kalman filter)
		4	> 3-SV solution (Kalman filter)
		5	2-D point solution (least squares)
		6	3-D point solution (least squares)
		7	Dead-Reckoning ⁽¹⁾ solution (no satellites)

Bit(s) Name	Name	Value	Description
TPMODE	TricklePower mode	0	Full power position
		1	TricklePower position
ALTMODE	Altitude mode	0	No altitude hold applied
		1	Holding of altitude from KF
		2	Holding of altitude from user input
		3	Always hold altitude (from user input)
DOPMASK	DOP mask status	0	DOP mask not exceeded
		1	DOP mask exceeded
DGPS	DGPS status	0	No differential corrections applied
		1	Differential corrections applied

Table 6.3: Mode 1 Bitmap Information

⁽¹⁾ In standard software, Dead Reckoning solution is computed by taking the last valid position and velocity and projecting the position using the velocity and elapsed time.

Mode 2 of Message ID bit-mapped byte information is described in Table 6.4.

Bit	Description
0 ⁽¹⁾	1 = sensor DR in use 0 = velocity DR if PMODE sub-value in Mode 1 = 7; else check Bits 6 & 7 for DR error status
1 ⁽²⁾	If set, solution is validated (5 or more SVs used) ⁽³⁾
2	If set, velocity DR timeout
3	If set, solution edited by UI (e.g., DOP Mask exceeded)
4 ⁽⁴⁾	If set, velocity is invalid
5	Altitude hold mode: 0 = enabled 1 = disabled (3-D fix only)
7,6 ⁽⁵⁾	Sensor DR error status: 00 = GPS-only navigation 01 = DR in calibration 10 = DR sensor errors 11 = DR in test mode

Table 6.4: Mode 2 Bitmap

- ⁽¹⁾ Bit 0 is controlled by the acquisition hardware. The rest of the bits are controlled by the tracking hardware, except that in SiRFstarIII receivers, bit 2 is also controlled by the acquisition hardware.
- ⁽²⁾ Bit 1 set means that the phase relationship between the I and Q samples is being tracked.
- ⁽³⁾ From an unvalidated state, a 5-SV fix must be achieved to become a validated position. If the receiver continues to navigate in a degraded mode (less than 4 SVs), the validated status remains. If navigation is lost completely, an unvalidated status results.
- ⁽⁴⁾ Bit 4 set means that the Doppler corrections have been made so that the phase between the I and Q samples is stable.
- ⁽⁵⁾ Generally, bit 6 cannot be set at the same time other bits are set. However, some firmware versions use the special case of setting

Note:

Mode 2 of Message ID 2 is used to define the Fix field of the Measured Navigation Message View. It should be used only as an indication of the current fix status of the navigation solution and not as a measurement of TTFF.

6.3 True Tracker Data – Message ID 3

Defined as True Tracker data, but not yet implemented.

6.4 Measured Tracker Data Out - Message ID 4

Output Rate: 1 Hz

Table 6.5 lists the message data format for the measured tracker data.

Example:

- A0A200BC – Start Sequence and Payload Length
-
- 04036C0000937F0C0EAB46003F1A1E1D1D191D1A1A1D1F1D59423F1A1A . . . - Payload
- B0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		04			4
GPS Week ⁽¹⁾	2 S		036C			876
GPS TOW	4 U	S*100	0000937F	sec	S÷100	37759
Chans	1 U		0C			12
1st SVid	1 U		0E			14
Azimuth	1 U	Az*[2/3]	AB	deg	³ [2/3]	256.5
Elev	1 U	E1*2	46	deg	³ 2	35
State	2 D		003F	Bitmap ⁽²⁾		63
C/N0 1	1 U		1A	dB-Hz		26
C/N0 2	1 U		1E	dB-Hz		30
C/N0 3	1 U		1D	dB-Hz		0
C/N0 4	1 U		1D	dB-Hz		0
C/N0 5	1 U		19	dB-Hz		0
C/N0 6	1 U		1D	dB-Hz		0
C/N0 7	1 U		1A	dB-Hz		0
C/N0 8	1 U		1A	dB-Hz		0
C/N0 9	1 U		1D	dB-Hz		
C/N0 10	1 U		1F	dB-Hz		
2nd SVid	1 U		1D			29
Azimuth	1 U	Az*[2/3]	59	deg	³ [2/3]	89
Elev	1 U	E1*2	42	deg	³ 2	66
State	2 D		003F	Bitmap ⁽²⁾		63
C/N0 1	1 U		1A	dB-Hz		26
C/N0 2	1 U		1A	dB-Hz		63
...						
1st SVid, Azimuth, Elevation, State, and C/N0 1-10 values are repeated for each of the 12 channels						

Table 6.5: Measured Tracker Data Out - Message ID 4

⁽¹⁾ GPS week number is reported modulo 1024 (ten LSBs only).

⁽²⁾ For further information, see Table 6.6 for state values for each channel.

Bit	Description When Bit is Set to 1
0 ⁽¹⁾	Acquisition/re-acquisition has been completed successfully
1 ⁽²⁾	The integrated carrier phase is valid – delta range in Message ID 28 is also valid
2	Bit synchronization has been completed
3	Subframe synchronization has been completed
4 ⁽³⁾	Carrier pullin has been completed (Costas lock)
5	Code has been locked
6 ⁽⁴⁾ ⁽⁵⁾	Multiple uses. See footnotes.
7	Ephemeris data is available
8-15	Reserved

Table 6.6: State Values for Each Channel

- ⁽¹⁾ Bit 0 is controlled by the acquisition hardware. The rest of the bits are controlled by the tracking hardware except in SiRFstarIII receivers, where bit 2 is also controlled by the acquisition hardware.
- ⁽²⁾ Bit 1 set means that the phase relationship between the I and Q samples is being tracked. When this bit is cleared, the carrier phase measurements on this channel are invalid.
- ⁽³⁾ Bit 4 set means that the Doppler corrections have been made so that the phase between the I and Q samples is stable.
- ⁽⁴⁾ Most code versions use this bit to designate that a track has been lost. Generally, bit 6 cannot be set at the same time other bits are set. However, some firmware versions use the special case of setting all bits 0-7 to 1 (0xFF) to indicate that this channel is being used to test the indicated PRN for an auto or cross correlation. When used in this way, only 1 or 2 channels will report state 0xFF at any one time.
- ⁽⁵⁾ In some code versions, this bit is used to denote the presence of scalable tracking loops. In those versions, every track will have this bit set. When that is the case, there will be no reports for tracks being tested for auto- and cross-correlation testing as it will be done in another part of the code and not reported in this field.

6.5 Raw Tracker Data Out - Message ID 5

This message is not supported by the SiRFstarII or SiRFstarIII architecture.

6.6 Software Version String (Response to Poll) – Message ID 6

This message has a variable length from 1 to 81 bytes.

Output Rate: Response to polling message

Example:

- A0A2001F – Start Sequence and Payload Length (1-81 bytes)
- 06322E332E322D475358322D322E30352E3032342D4331464C4558312E32 – Payload
- 0631B0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		06			6
Character [80]	1 U		(1)			(2)

Table 6.7: Software Version String (Response to Poll) – Message ID 6

- ⁽¹⁾ Payload example is shown above.
- ⁽²⁾ 2.3.2-GSW2-2.05.024-C1FLEX1.2

Note:

Convert ASCII to symbol to assemble message (i.e., 0x4E is 'N'). Effective with version GSW 2.3.2, message length was increased from 21 to 81 bytes to allow for up to an 80-character version string.

6.7 Clock Status Data (Response to Poll) - Message ID 7

This message is output as part of each navigation solution. It tells the actual time of the measurement (in GPS time), and gives the computed clock bias and drift information computed by the navigation software.

Control of this message is unique. In addition to being able to control it using the message rate commands, it also acts as part of the "Navigation Library" messages controlled by bit 4 of the Reset Configuration Bit Map field of message ID 128. When navigation library messages are enabled or disabled, this message is enabled or disabled. It is also enabled by default whenever a system reset occurs.

Output Rate: 1Hz or response to polling message

Example:

- A0A20014 – Start Sequence and Payload Length (20 bytes)
- 0703BD0215492408000122310000472814D4DAEF – Payload
- 0598B0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		07			7
Extended GPS Week	2 U		03BD			957
GPS TOW	4 U	*100	02154924	s	÷100	349494.12
SVs	1 U		08			8
Clock Drift	4 U		00012231	Hz		74289
Clock Bias	4 U		00004728	ns		18216
Estimated GPS Time	4 U		14D4DAEF	ms		349493999

Table 6.8: Clock Status Data (Response to Poll) - Message ID 7

Field	Description
Extended GPS Week	GPS week number is reported by the satellites with only 10 bits. The receiver extends that number with any higher bits and reports the full resolved week number in this message.
GPS TOW	Seconds into the current week, accounting for clock bias, when the current measurement was made. This is the true GPS time of the solution.
SVs	Total number of satellites used to compute this solution.
Clock Drift ⁽¹⁾	Rate of change of the Clock Bias. Clock Drift is a direct result of the GPS crystal frequency, so it is reported in Hz.
Clock Bias	This is the difference in nanoseconds between GPS time and the receiver's internal clock. In different SiRF receivers this value has different ranges, and as the computed bias approaches the limit of the range, the next measurement interval will be adjusted to be longer or shorter so that the bias remains in the selected range.
Estimated GPS Time ⁽²⁾	This is the GPS time of the measurement, estimated before the navigation solution is computed. Due to variations in clock drift and other factors, this will normally not equal GPS TOW, which is the true GPS time of measurement computed as part of the navigation solution.

Table 6.9: Detailed Description of Message ID 7 Fields

⁽¹⁾ Clock Drift in SiRF receivers is directly related to the frequency of the GPS clock, derived from the GPS crystal. From the reported frequency, you can compute the GPS clock frequency, and you can predict the next clock bias. Clock drift also appears as a Doppler bias in Carrier Frequency reported in Message ID 28.

⁽²⁾ Estimated GPS time is the time estimated when the measurements were made. Once the measurements were made, the GPS navigation solution was computed, and true GPS time was computed. Variations in clock drift and measurement intervals generally make the estimate slightly wrong, which is why GPS TOW and Estimated GPS time typically disagree at the microsecond level.

For detailed information about computing GPS clock frequency, see Section A.2.

6.8 50 BPS Data - Message ID 8

Output Rate: Approximately every six seconds for each channel

Example:

- A0A2002B – Start Sequence and Payload Length (43 bytes)
- 08001900C0342A9B688AB0113FDE2D714FA0A7FFFACC5540157EFFEEDFFFA80365A867FC67708BEB5860F4 – Payload
- 15AAB0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		08			8
Channel	1 U		00			0
SV ID	1 U		19			25
Word[10]	4 U					

Table 6.10: 50 BPS Data - Message ID 8

6.9 CPU Throughput - Message ID 9

Output Rate: 1 Hz

Example:

- A0A20009 – Start Sequence and Payload Length (9 bytes)
- 09003B0011001601E5 – Payload
- 0151B0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		09			9
SegStatMax	2 U	*186	003B	ms	³ 186	0.3172
SegStatLat	2 U	*186	0011	ms	+186	0.0914
AveTrkTime	2 U	*186	0016	ms	+186	0.1183
Last Millisecond	2 U		01E5	ms		485

Table 6.11: CPU Throughput - Message ID 9

6.10 Error ID Data – Message ID 10

Output Rate: As errors occur

Message ID 10 messages have a different format from other messages. Rather than one fixed format, there are several formats, each designated by an error ID. However, the format is standardized as indicated in Table 6.12. The specific format of each error ID message follows.

Name	Bytes	Description
Message ID	1 U	Message ID number - 10
Error ID	2 U	Sub-message type
Count	2 U	Count of number of 4-byte values that follow
Data[n]	4 U	Actual data for the message, n is equal to Count

Table 6.12: Error ID

6.10.1 Error ID: 2

Code Define Name: ErrId_CS_SVParity

Error ID Description: Satellite subframe # failed parity check.

Example:

- A0A2000D – Start Sequence and Payload Length (13 bytes)
- 0A000200020000000100000002 – Payload
- 0011B0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		0A			10
Error ID	2 U		0002			2
Count	2 U		0002			2
Satellite ID	4 U		00000001			1
Subframe No	4 U		00000002			2

Table 6.13: Error ID: 2

Name	Description
Message ID	Message ID number
Error ID	Error ID (see Error ID description above)
Count	Number of 32 bit data in message
Satellite ID	Satellite pseudo-random noise (PRN) number
Subframe No	The associated subframe number that failed the parity check. Valid subframe number is 1 through 5.

Table 6.14: Error ID: 2 Message Description

6.10.2 Error ID: 9

Code Define Name: ErrId_RMC_GettingPosition

Error ID Description: Failed to obtain a position for acquired satellite ID.

Example:

- A0A20009 – Start Sequence and Payload Length (9 bytes)
- 0A0009000100000001 – Payload
- 0015B0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		0A			10
Error ID	2 U		0009			9
Count	2 U		0002			2
Satellite ID	4 U		00000001			1

Table 6.15: Error ID: 9 Message

Name	Description
Message ID	Message ID number
Error ID	Error ID (see Error ID description above)
Count	Number of 32 bit data in message
Satellite ID	Satellite pseudo-random noise (PRN) number

Table 6.16: Error ID: 9 Message Description

6.10.3 Error ID: 10

Code Define Name: ErrId_RXM_TimeExceeded

Error ID Description: Conversion of Nav Pseudo Range to Time of Week (TOW) for tracker exceeds limits: Nav Pseudo Range > 6.912e5 (1 week in seconds) || Nav Pseudo Range < -8.64e4.

Example:

- A0A20009 – Start Sequence and Payload Length (9 bytes)
- 0A000A000100001234 – Payload
- 005BB0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		0A			10
Error ID	2 U		000A			10
Count	2 U		0001			1
Pseudorange	4 U		00001234			4660

Table 6.17: Error ID: 10 Message

Name	Description
Message ID	Message ID number
Error ID	Error ID (see Error ID description above)
Count	Number of 32 bit data in message
Pseudorange	Pseudo range

Table 6.18: Error ID: 10 Message Description

6.10.4 Error ID: 11

Code Define Name: ErrId_RXM_TDOPOverflow

Error ID Description: Convert pseudorange rate to Doppler frequency exceeds limit.

Example:

- A0A20009 – Start Sequence and Payload Length (9 bytes)
- 0A000B0001xxxxxxxx – Payload
- xxxxB0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		0A			10
Error ID	2 U		000B			11
Count	2 U		0001			1
Doppler Frequency	4 U		xxxxxxxx			xxxxxxxx

Table 6.19: Error ID: 11 Message

Name	Description
Message ID	Message ID number
Error ID	Error ID (see Error ID description above)
Count	Number of 32 bit data in message
Doppler Frequency	Doppler frequency

Table 6.20: Error ID: 11 Message Description

6.10.5 Error ID: 12

Code Define Name: ErrId_RXM_ValidDurationExceeded

Error ID Description: Satellite ephemeris age has exceeded 2 hours (7200 s).

Example:

- A0A2000D – Start Sequence and Payload Length (13 bytes)
- 0A000C0002xxxxxxxxxxxxxxxxxxxx – Payload
- xxxxB0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		0A			10
Error ID	2 U		000C			12
Count	2 U		0002			2
Satellite ID	4 U		xxxxxxx			xxxxxxx
Age of Ephemeris	4 U		aaaaaaaa	sec		aaaaaaaa

Table 6.21: Error ID: 12 Message

6.10.7 Error ID: 4097 (0x1001)

Code Define Name: ErrId_MI_VCOClockLost

Error ID Description: VCO lost lock indicator.

Example:

- A0A20009 – Start Sequence and Payload Length (9 bytes)
- 0A1001000100000001 – Payload
- 001DB0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		0A			10
Error ID	2 U		1001			4097
Count	2 U		0001			1
VCOLost	4 U		00000001			1

Table 6.25: Error ID: 4097 Message

Name	Description
Message ID	Message ID number
Error ID	Error ID (see Error ID description above)
Count	Number of 32 bit data in message
VCOLost	VCO lock lost indicator. If VCOLost != 0, then send failure message

Table 6.26: Error ID: 4097 Message Description

6.10.8 Error ID: 4099 (0x1003)

Code Define Name: ErrId_MI_FalseAcqReceiverReset

Error ID Description: Nav detect false acquisition, reset receiver by calling NavForceReset routine.

Example:

- A0A20009 – Start Sequence and Payload Length (9 bytes)
- 0A1003000100000001 – Payload
- 001FB0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		0A			10
Error ID	2 U		1003			4099
Count	2 U		0001			1
InTrkCount	4 U		00000001			1

Table 6.27: Error ID: 4099 Message

Name	Description
Message ID	Message ID number
Error ID	Error ID (see Error ID description above)
Count	Number of 32 bit data in message
InTrkCount	False acquisition indicator. If InTrkCount < = 1, then send failure message and reset receiver

Table 6.28: Error ID: 4099 Message Description

6.10.9 Error ID: 4104 (0x1008)

Code Define Name: ErrId_STRTP_SRAMCksum

Error ID Description: Failed SRAM checksum during startup.

- Four field message indicates receiver control flags had checksum failures.
- Three field message indicates clock offset checksum failure or clock offset value is out of range.
- Two field message indicates position and time checksum failure forces a cold start.

Example:

- A0A2xxxx – Start Sequence and Payload Length (21, 17 or 11 bytes)
- 0A10080004xxxxxxxxxxxxxxxx00000000cccccccc – Payload
- xxxxB0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		0A			10
Error ID	2 U		1008			4104
Count	2 U		0004 or 0003 or 0002			4 or 3 or 2
Computed Receiver Control Checksum	4 U		xxxxxxx			xxxx
NVRAM Receiver Control Checksum	4 U		aaaaaaaa			aaaa
NVRAM Receiver Control OpMode	4 U		00000000			0

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
NVRAM Receiver Control Channel Count	4 U		cccccccc			cccc
Compute Clock Offset Checksum	4 U		xxxxxxxx			xxxx
NVRAM Clock Offset Checksum	4 U		aaaaaaaa			aaaa
NVRAM Clock Offset	4 U		bbbbbbbb			bbbb
Computed Position Time Checksum	4 U		xxxxxxxx			xxxx
NVRAM Position Time Checksum	4 U		aaaaaaaa			aaaa

Table 6.29: Error ID: 4104 Message

Name	Description
Message ID	Message ID number
Error ID	Error ID (see Error ID description above)
Count	Number of 32 bit data in message
Computed Receiver Control Checksum	Computed receiver control checksum of SRAM.Data.Control structure CntrlChkSum.
NVRAM Receiver Control Checksum	NVRAM receiver control checksum stored in SRAM.Data.DataBuffer. CntrlChkSum.
NVRAM Receiver Control OpMode	NVRAM receiver control checksum stored in SRAM.Data.Control.OpMode. Valid OpMode values are as follows: OP_MODE_NORMAL = 0 OP_MODE_TESTING = 0x1E51 OP_MODE_TESTING2 = 0x1E52 OP_MODE_TESTING3 = 0x1E53

Name	Description
NVRAM Receiver Control Channel Count	NVRAM receiver control channel count in SRAM.Data.Control.ChannelCnt. Valid channel count values are 0-12
Compute Clock Offset Checksum	Computed clock offset checksum of SRAM.Data.DataBuffer.clkOffset.
NVRAM Clock Offset Checksum	NVRAM clock offset checksum of SRAM.Data.DataBuffer.clkChkSum
NVRAM Clock Offset	NVRAM clock offset value stored in SRAM.Data.DataBuffer.clkOffset
Computed Position Time Checksum	Computed position time checksum of SRAM.Data.DataBuffer.postime[1]
NVRAM Position Time Checksum	NVRAM position time checksum of SRAM.Data.DataBuffer.postimeChkSum[1]

Table 6.30: Error ID: 4104 Message Description

6.10.10 Error ID: 4105 (0x1009)

Code Define Name: ErrId_STRTP_RTCTimeInvalid

Error ID Description: Failed RTC SRAM checksum during startup. If one of the double buffered SRAM.Data.LastRTC elements is valid and RTC days is not 255 days, the GPS time and week number computed from the RTC is valid. If not, this RTC time is invalid.

Example:

- A0A2000D – Start Sequence and Payload Length (13 bytes)
- 0A10090002xxxxxxxxxxxxxxxx – Payload
- xxxxB0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		0A			10
Error ID	2 U		1009			4105
Count	2 U		0002			2
TOW	4 U		xxxxxxx	sec		xxxx
Week Number	4 U		aaaaaaaa			aaaa

Table 6.31: Error ID: 4105 Message

Name	Description
Message ID	Message ID number
Error ID	Error ID (see Error ID description above)
Count	Number of 32 bit data in message
TOW	GPS time of week in seconds. Range 0 to 604800 seconds
Week Number	GPS week number

Table 6.32: Error ID: 4105 Message Description

6.10.11 Error ID: 4106 (0x100A)

Code Define Name: ErrId_KFC_BackupFailed_Velocity

Error ID Description: Failed saving position to NVRAM because the ECEF velocity sum was greater than 3600.

Example:

- A0A20005 – Start Sequence and Payload Length (5 bytes)
- 0A100A0000 – Payload
- 0024B0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		0A			10
Error ID	2 U		100A			4106
Count	2 U		0000			0

Table 6.33: Error ID: 4106 Message

Name	Description
Message ID	Message ID number
Error ID	Error ID (see Error ID description above)
Count	Number of 32 bit data in message

Table 6.34: Error ID: 4106 Message Description

6.10.12 Error ID: 4107 (0x100B)

Code Define Name: ErrId_KFC_BackupFailed_NumSV

Error ID Description: Failed saving position to NVRAM because current navigation mode is not KFNav and not LSQFix.

Example:

- A0A20005 – Start Sequence and Payload Length (5 bytes)
- 0A100B0000 – Payload
- 0025B0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		0A			10
Error ID	2 U		100B			4107
Count	2 U		0000			0

Table 6.35: Error ID: 4107 Message

Name	Description
Message ID	Message ID number
Error ID	Error ID (see Error ID description above)
Count	Number of 32 bit data in message

Table 6.36: Error ID: 4107 Message Description

6.10.13 Error ID: 8193 (0x2001)

Code Define Name: ErrId_MI_BufferAllocFailure

Error ID Description: Buffer allocation error occurred. Does not appear to be active because uartAllocError variable never gets set to a non-zero value in the code.

Example:

- A0A20009 – Start Sequence and Payload Length (9 bytes)
- 0A2001000100000001 – Payload
- 002DB0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		0A			10
Error ID	2 U		2001			8193
Count	2 U		0001			1
uartAllocError	4 U		00000001			1

Table 6.37: Error ID: 8193 Message

Name	Description
Message ID	Message ID number
Error ID	Error ID (see Error ID description above)
Count	Number of 32 bit data in message
uartAllocError	Contents of variable used to signal UART buffer allocation error

Table 6.38: Error ID: 8193 Message Description

6.10.14 Error ID: 8194 (0x2002)

Code Define Name: ErrId_MI_UpdateTimeFailure

Error ID Description: PROCESS_1SEC task was unable to complete upon entry. Overruns are occurring.

Example:

- A0A2000D – Start Sequence and Payload Length (13 bytes)
- 0A200200020000000100000064 – Payload
- 0093B0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		0A			10
Error ID	2 U		2002			8194
Count	2 U		0002			2
Number of in process errors	4 U		00000001			1
Millisecond errors	4 U		00000064			100

Table 6.39: Error ID: 8194 Message

Name	Description
Message ID	Message ID number
Error ID	Error ID (see Error ID description above)
Count	Number of 32 bit data in message
Number of in process errors	Number of one-second updates not complete on entry
Millisecond errors	Millisecond errors caused by overruns

Table 6.40: Error ID: 8194 Message Description

6.10.15 Error ID: 8195 (0x2003)

Code Define Name: ErrId_MI_MemoryTestFailed

Error ID Description: Failure of hardware memory test.

Example:

- A0A20005 – Start Sequence and Payload Length (5 bytes)
- 0A20030000 – Payload
- 002DB0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		0A			10
Error ID	2 U		2003			8195
Count	2 U		0000			0

Table 6.41: Error ID: 8195 Message

Name	Description
Message ID	Message ID number
Error ID	Error ID (see Error ID description above)
Count	Number of 32 bit data in message

Table 6.42: Error ID: 8195 Message Description

6.10.16 Error ID: 8196 (0x2004)

Code Define Name: ErrID_WatchDogOrExceptionCondition

This message notifies a PVT product host of a watchdog time-out or processor exception in the receiver. The consistent accumulation of these notification messages by the host can be used to produce statistics for:

- Reliability measurement and analysis
- Troubleshooting purposes

For the GSD4e, it enables the host to determine if the patch RAM needs reloading. The watch-dog event and also some exception events are indications of potential corruption in the patch RAM. This message enables the host to initiate the patch download protocol.

Typically, upon the receipt of this message, the host polls the software version of the receiver, and the typical response contains the actual patch status of the receiver. The host then compares this status with the last applied patch according to the patch maintenance value stored in the host. If the software version response does not indicate the up-to-date patch status, the host initiates the (re)load of the required patch according to the latest patch maintenance value stored in the host.

Example:

- A0A2001D – Start Sequence and Payload Length (29 bytes)
- 0A20040006050000000024505352463136302C572C312C302A35410D0A – Payload
- 0422B0B3 – Message Checksum and End Sequence

Note:

This message is **not** supported for the GSD4t or earlier products.

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1		04			10
Error ID	2		2004			8196
Count (n)	2					
Condition Code	1		05			5
Exception Code	4		00000000			3
NMEA String	n*4-5					

Table 6.43: Error ID: 8196 Message

Name	Description
MID (Hex)	0x0A
MID (Dec)	10
Message Name in Code	SSB_ERROR
Error ID (Hex)	0x2004
Error ID (Dec)	8196
Error ID in Code	ErrID_WatchDogOrExceptionCondition

Table 6.44: Error ID: 8196 Message Description

Condition Code

The bit value assignments of the condition code byte are specified in Table 6.45. The Corrupted Patch RAM Detected bit value should ideally be consistent with the results of a subsequent SW Version Response message analysis performed by the host, while matching the patch version stored in the host with the one detected by the receiver in the patch-memory. Such a consistency check, however, could make it safer to reload the patch if needed and it could also provide more complete diagnostic data on the state of the receiver.

Condition Code	Description
xxxxxx01	Watchdog time-out condition
xxxxxx10	Reserved for exception conditions
xxxxx1xx	Corrupted patch-RAM detected
xxxxx0xx	No corrupted patch-RAM detected

Table 6.45: Error ID: 8196 Message Description: Condition Code

Exception Code

This field is reserved for future use. It will enable the host to perform more extensive analysis similar to the watch-dog event notification processing. The actual values of this code are product specific and depend on the processor type applied in the receiver hardware.

NMEA String

This field is the NMEA syntax compliant representation of all the previous fields of the OSP message. This NMEA message is described in the Message ID 160 section of the *NMEA Reference Manual*. The inclusion of the NMEA string in the binary OSP message in this predefined field could simplify the interface between the binary OSP parser and the ASCII NMEA parser of the host software, when the integrity of the receiver is unknown. When the host has a knowledge of the receiver being in an NMEA state as opposed to a binary OSP state but a received message is syntactically not NMEA compliant, a front-end of the receiving parser of the host could check if the beginning of the message is compliant with this binary OSP notification message up to the NMEA String field. If it is, it could simply pass the payload of the NMEA String to the host NMEA parser.

6.11 Command Acknowledgment - Message ID 11

This reply is sent in response to messages accepted by the receiver. If the message being acknowledged requests data from the receiver, the data is sent first, then this acknowledgment.

Starting from SiRFstarIII, a second ACK ID byte is also accepted, bringing the overall payload length to 3bytes. Typically, the first ACK ID is used as the message ID of the received message to be acknowledged, while the second one would identify the Sub ID of that message.

Output Rate: Response to successful input message

This is a successful almanac request (Message ID 0x92) example:

- A0A20002 – Start Sequence and Payload Length (2 bytes)
- 0B92 – Payload
- 009DB0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		0B			11
ACK ID	1 U		92			146

Table 6.46: Command Acknowledgment - Message ID 11

6.12 Command Negative Acknowledgment - Message ID 12

This reply is sent when an input command to the receiver is rejected. Possible causes are: the input message failed checksum, contained an argument that was out of the acceptable range, or that the receiver was unable to comply with the message for some technical reason.

Starting from SiRFstarIII, a second NACK ID byte is also accepted, bringing the overall payload length to 3bytes. Typically, the first NACK ID is used as the message ID of the received message to be NACKed, while the second one would identify the Sub ID of that message.

Output Rate: Response to rejected input message

This is an unsuccessful almanac request (Message ID 0x92) example:

- A0A20002 – Start Sequence and Payload Length (2 bytes)
- 0C92 – Payload
- 009EB0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		0C			12
N'ACK ID	1 U		92			146

Table 6.47: Command Negative Acknowledgment - Message ID 12

Note:

Commands can be NACKed for several reasons including: failed checksum, invalid arguments, unknown command, or failure to execute command.

6.13 Visible List - Message ID 13

This message reports the satellites that are currently above there are from 6 to 13 satellites visible at any one time.

Output Rate: Updated approximately every 2 minutes

Note:

This is a variable length message. Only the number of visible satellites are reported (as defined by Visible SVs in Table 6.48).

Example:

- A0A2002A – Start Sequence and Payload Length (Variable (2 + 5 times number of visible SVs))
- 0D081D002A00320F009C0032 – Payload
- . . . B0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		0D			13
Visible SVs	1 U		08			8
Ch 1 – SV ID	1 U		10			16
Ch 1 – SV Azimuth	2 S		002A	degrees		42
Ch 1 – SV Elevation	2 S		0032	degrees		50
Ch 2 – SV ID	1 U		0F			15
Ch 2 – SV Azimuth	2 S		009C	degrees		156
Ch 2 – SV Elevation	2 S		0032	degrees		50
...						

Table 6.48: Visible List - Message ID 13

6.14 Almanac Data - Message ID 14

This message is sent in response to the Poll Almanac command, Message ID 146. When Message ID 146 is sent, the receiver responds with 32 individual Message ID 14 messages, one for each of the possible satellite PRNs. If no almanac exists for a given PRN, the data in that message is all zeros.

Output Rate: Response to poll

Name	Bytes	Description
Message ID	1 U	Hex 0x0E (decimal 14)
SV ID	1 U	SV PRN code, hex 0x01..0x02, decimal 1..32
Almanac Week & Status	2 S	10-bit week number in 10 MSBs, status in 6 LSBs (1 = good; 0 = bad)
Data ⁽¹⁾ ⁽²⁾ [12]	2 S	UINT16[12] array with sub-frame data
Checksum	2 S	

Table 6.49: Almanac Data - Message ID 14

⁽¹⁾ The data area consists of an array of 12 16-bit words consisting of the data bytes from the navigation message sub-frame. Table 6.50 shows how the actual bytes in the navigation message correspond to the bytes in this data array. Note that these are the raw navigation message data bits with any inversion removed and the parity bits removed.

⁽²⁾ For a complete description of almanac and Ephemeris data representation for Data[12], see Section A.

Note:

Payload Length: 30 bytes

Navigation Message		Data Array		Navigation Message		Data Array	
Word	Byte	Word	Byte	Word	Byte	Word	Byte
3	MSB	[0]	LSB	7	MSB	[6]	MSB
3	Middle	[0]	MSB	7	Middle	[6]	LSB
3	LSB	[1]	LSB	7	LSB	[7]	MSB
4	MSB	[1]	MSB	8	MSB	[7]	LSB
4	Middle	[2]	LSB	8	Middle	[8]	MSB
4	LSB	[2]	MSB	8	LSB	[8]	LSB
5	MSB	[3]	LSB	9	MSB	[9]	MSB
5	Middle	[3]	MSB	9	Middle	[9]	LSB
5	LSB	[4]	LSB	9	LSB	[10]	MSB
6	MSB	[4]	MSB	10	MSB	[10]	LSB
6	Middle	[5]	LSB	10	Middle	[11]	MSB
6	LSB	[5]	MSB	10	LSB	[11]	LSB

Table 6.50: Byte Positions Between Navigation Message and Data Array

Note:

Message ID 130 uses a similar format, but sends an array of 14 16-bit words for each SV and a total of 32 SVs in the message (almanac for SVs 1..32, in ascending order). For that message, a total of 448 words constitutes the data area. For each of 32 SVs, that corresponds to 14 words per SV. Those 14 words consist of one word containing the week number and status bit (described in Table 6.50 as Almanac Week & Status), 12 words of the same data as described for the data area above, then a single 16-bit checksum of the previous 13 words. The SV PRN code is not included in the message 130 because the SV ID is inferred from the location in the array.

6.15 Ephemeris Data (Response to Poll) - Message ID 15

This message is output in response to the Poll Ephemeris command, Message ID 147. If Message ID 147 specifies a satellite PRN, 1-32, a single Message ID 15 containing the ephemeris for that satellite PRN will be output. If Message ID 147 specifies satellite PRN 0, then the receiver sends as many Message ID 15 messages as it has available ephemerides.

The ephemeris data that is polled from the receiver is in a special SiRF format based on the ICD-GPS-200 format for ephemeris data.

Output Rate: Response to poll

Name	Bytes	Description
Message ID	1 U	Hex 0x0E (decimal 14)
SV ID	1 U	SV PRN code, hex 0x01..0x02, decimal 1..32
Data ⁽¹⁾ [2][45]	2 U	UINT16 [3][15] array with sub-frames 1..3 data

Table 6.51: Ephemeris Data (Response to Poll) - Message ID 15

⁽¹⁾ The data area consists of a 3x15 array of unsigned integers, 16 bits long. The first word of each row in the array ([0][0], [1][0], and [2][0]) contain the SV ID. The remaining words in the row contain the data from the navigation message subframe, with row [0] containing sub-frame 1, row [1] containing sub-frame 2, and row [2] containing sub-frame 3. Data from the sub-frame is stored in a packed format, meaning that the 6 parity bits of each 30-bit navigation message word have been removed, and the remaining 3 bytes are stored in 1.5 16-bit words. Since the first word of the sub-frame, the telemetry word (TLM), does not contain any data needed by the receiver, it is not saved. Thus, there are 9 remaining words, with 3 bytes in each sub-frame. This total of 27 bytes is stored in 14 16-bit words. The second word of the subframe, the handover word (HOW), has its high byte (MSB) stored as the low byte (LSB) of the first of the 16-bit words. Each following byte is stored in the next available byte of the array. Table 6.52 shows where each byte of the sub-frame is stored in the row of 16-bit words.

⁽²⁾ For a complete description of almanac and Ephemeris data representation for Data[45], see Section A.

Note:

Payload Length: 92 bytes

Navigation Message		Data Array		Navigation Message		Data Array	
Word	Byte	Word	Byte	Word	Byte	Word	Byte
2 (HOW)	MSB	[1]	LSB	7	MSB	[9]	MSB
2	Middle	[2]	MSB	7	Middle	[9]	LSB
2	LSB	[2]	LSB	7	LSB	[10]	MSB
3	MSB	[3]	MSB	8	MSB	[10]	LSB
3	Middle	[3]	LSB	8	Middle	[11]	MSB
3	LSB	[4]	MSB	8	LSB	[11]	LSB
4	MSB	[4]	LSB	9	MSB	[12]	MSB

Navigation Message		Data Array		Navigation Message		Data Array	
Word	Byte	Word	Byte	Word	Byte	Word	Byte
4	Middle	[[5]	MSB	9	Middle	[[12]	LSB
4	LSB	[[5]	LSB	9	LSB	[[13]	MSB
5	MSB	[[6]	MSB	10	MSB	[[13]	LSB
5	Middle	[[6]	LSB	10	Middle	[[14]	MSB
5	LSB	[[7]	MSB	10	LSB	[[14]	LSB
6	MSB	[[7]	LSB				
6	Middle	[[8]	MSB				
6	LSB	[[8]	LSB				

Table 6.52: Byte Positions Between Navigation Message and Data Array

Note:

Message ID 149 uses the same format, except the SV ID (the second byte in Message ID 15) is omitted. Message ID 149 is thus a 91-byte message. The SV ID is still embedded in elements [0][0], [1][0], and [2][0] of the data array.

6.16 Test Mode 1 - Message ID 16

This message is output when the receiver is in test mode 1. It is sent at the end of each test period as set by Message ID 150.

Output Rate: Variable – set by the period as specified in Message ID 150

Example:

- A0A20011 – Start Sequence and Payload Length (17 bytes)
- 100015001E000588B800C81B5800040001 – Payload
- 02D8B0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		10			16
SV ID	2 U		0015			21
Period	2 U		001E	sec		30

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Bit Sync Time	2 U		0005	sec		5
Bit Count	2 U		88B8			35000
Poor Status	2 U		00C8			200
Good Status	2 U		1B58			7000
Parity Error Count	2 U		0004			4
Lost VCO Count	2 U		0001			1

Table 6.53: Test Mode 1 - Message ID 16

Field	Description
Message ID	Message ID
SV ID	The number of the satellite being tracked
Period	The total duration of time (in seconds) that the satellite is tracked
Bit Sync Time	The time it takes for channel 0 to achieve the status of 37
Bit Count	The total number of data bits that the receiver is able to demodulate during the test period. As an example, for a 20 second test period, the total number of bits that can be demodulated by the receiver is 12000 (50BPS x 20sec x 12 channels).
Poor Status	This value is derived from phase accumulation time. Phase accumulation is the amount of time a receiver maintains phase lock. Every 100 msec of loss of phase lock equates to 1 poor status count. As an example, the total number of status counts for a 60 second period is 7200 (12 channels x 60 sec x 10 / sec).
Good Status	This value is derived from phase accumulation time. Phase accumulation is the amount of time a receiver maintains phase lock. Every 100 msec of phase lock equates to 1 good status count.
Parity Error Count	The number of word parity errors. This occurs when the parity of the transmitted word does not match the receiver's computed parity.
Lost VCO Count	The number of 1 msec VCO lost lock was detected. This occurs when the PLL in the RFIC loses lock. A significant jump in crystal frequency and/or phase causes a VCO lost lock.

Table 6.54: Detailed Description of Test Mode 1 Data

6.17 Differential Corrections – Message ID 17

Message ID 17 provides the RTCM data received from a DGPS source. The data is sent as a SiRF Binary message and is based on the RTCM SC-104 format. To interpret the data, see *RTCM Recommended Standards for Differential GNSS* by the Radio Technical Commission for Maritime Services. Data length and message output rate vary based on received data.

Field	Description	Example (Hex)	Example (Decimal)
Message ID	1 U	11	17
Data length	2 S	002D	45
Data ⁽¹⁾	variable U		

Table 6.55: Detailed Description of Test Mode 1 Data

⁽¹⁾ Data length and message output rate vary based on received data. Data consists of a sequence of bytes that are "Data length" long.

Note:

Payload length: variable

6.18 OkToSend - Message ID 18

The OkToSend message is sent by a receiver that is in power-saving mode such as TricklePower or Push-to-Fix. It is sent immediately upon powering up, with an argument indicating it is OK to send messages to the receiver, and it is sent just before turning off power with an argument that indicates no more messages should be sent.

Output Rate: Two messages per power-saving cycle

Example:

- A0A20002 – Start Sequence and Payload Length (2 bytes)
- 1200 – Payload
- 0012B0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		12			18
Send Indicator ⁽¹⁾	1 U		00			00

Table 6.56: OkToSend - Message ID 18

⁽¹⁾ 0 implies that CPU is about to go OFF, OkToSend==NO, 1 implies CPU has just come ON, OkToSend==YES

6.19 Navigation Parameters (Response to Poll) - Message ID 19

This message is sent in response to Message ID 152, Poll Navigation Parameters. It reports the current settings of various parameters in the receiver.

Output Rate: Response to Poll (See Message ID 152)

Example:

- A0 A2 00 41 – Start Sequence and Payload Length (65 bytes)
- 13 00 00 00 00 00 00 00 00 01 1E 0F 01 00 01 00 00 00 00 04 00
4B 1C 00 00 00 00 02 00 1E 00 00 00 00 00 00 03 E8 00 00 03
E8 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00 00 – Payload
- 02 A4 B0 B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		13			19
Message Sub ID ⁽¹⁾	1 U		00			
Reserved	2 U		00			0x00
Position Calc Mode ^{(2) (3)}	1 U		01			0x01 ⁽⁴⁾
Altitude Hold Mode ⁽⁵⁾	1 U		00			
Altitude Hold Source ⁽⁵⁾	1 U		00			
Altitude Source Input ⁽⁵⁾	2 S		0000	m		
Degraded Mode ⁽⁵⁾	1 U		00			
Degraded Timeout ⁽⁵⁾	1 U		00	sec		
DR Timeout	1 U		01	sec		
Track Smooth Mode ⁽⁵⁾	1 U		1E			
Static Navigation ⁽⁶⁾	1 U		0F			
3SV Least Squares ⁽⁷⁾	1 U		01			
Reserved	4 U		00000000			
DOP Mask Mode ⁽⁸⁾	1 U		04			
Navigation Elevation Mask ⁽⁹⁾	2 S		004B			
Navigation Power Mask ⁽¹⁰⁾	1 U		1C			
Reserved	4 U		00000000			
DGPS Source ⁽¹¹⁾	1 U		02			

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
DGPS Mode ⁽¹²⁾	1 U		00			
DGPS Timeout ⁽¹²⁾	1 U		1E			
Reserved	4 U		00000000			
LP Push-to-Fix ⁽¹³⁾	1 U		00			
LP On-time ⁽¹³⁾	4 S		000003E8			
LP Interval ⁽¹³⁾	4 S		000003E8			
User Tasks Enabled ⁽⁷⁾	1 U		00			
User Task Interval ⁽⁷⁾	4 S		00000000			
LP Power Cycling Enabled ⁽¹⁴⁾	1 U		00			
LP Max. Acq. Search Time ⁽¹⁵⁾	4 U		00000000	sec		
LP Max. Off Time ⁽¹⁵⁾	4 U		00000000	sec		

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
APM Enabled/ Power Duty Cycle ^{16,17}	1 U		00			
APM Enabled/ Power Duty Cycle ^{(16) (17)}	2 U		0000			
Time Between Fixes ⁽¹⁷⁾	2 U		0000	sec		
Horizontal/ Vertical Error Max ⁽¹⁸⁾	1 U		00	m		
Response Time Max ⁽¹⁷⁾	1 U		00	sec		
Time/Accu & Time/Duty Cycle Priority ⁽¹⁹⁾	1 U		00			

Table 6.57: Navigation Parameters (Response to Poll) - Message ID 19

- (1) 00 = GSW2 definition; 01 = SiRF Binary APM definition; other values reserved.
- (2) The Position Calc Mode field is supported only for the GSD4e product and beyond. When this field is not used and set to zero, no ABP feature is supported and the solution is calculated as if ABS OFF was set.
- (3) The Position Calc Mode field bit-map is: xxxx xxx0 ABP OFF, xxxx xxx1 ABP ON. For a description of ABP, see Table 5.34.
- (4) In order to set the Position Calc Mode value, message ID 136 should be used. The fields of the message 136 can be determined by reading them out using message ID 19 and then, the Position Calc Mode bits can be changed before the message ID 136 is sent out to set the Position Calc Mode. A subsequent message ID 19 can be used again to verify if the settings in the Position Calc Mode are correct.
- (5) These values are set by Message ID 136. See description of values in Table 5.49. Note that Degraded Mode is not supported in GSW3.2.5 and newer.
- (6) These values are set by Message ID 143. See description of values in Table 5.58.
- (7) These parameters are set in the software and are not modifiable via the User Interface.
- (8) These values are set by Message ID 137. See description of values in Table 5.52.
- (9) These values are set by Message ID 139. See description of values in Table 5.56.
- (10) These values are set by Message ID 140. See description of values in Table 5.57.
- (11) These values are set by Message ID 133. See description of values in Table 5.44.
- (12) These values are set by Message ID 138. See description of values in Table 5.54.
- (13) These values are set by Message ID 151. See description of values in Table 5.68.
- (14) This setting is derived from the LP on-time and LP interval.
- (15) These values are set by Message ID 167. See description of values in Table 5.77.
- (16) Bit 7: APM Enabled, 1 = enabled, 0 = disabled; Bits 0-4: Power Duty Cycle, range: 1-20 scaled to 5%, 1 = 5%, 2 = 10%
- (17) Only used in SiRFLoc software.
- (18) These values are set by Message ID 53. See description of values in Table 5.32.
- (19) Bits 2-3: Time Accuracy, 0x00 = no priority imposed, 0x01 = RESP_TIME_MAX has higher priority, 0x02 = HORI_ERR_MAX has higher priority, Bits 0-1: Time Duty Cycle, 0x00 = no priority imposed, 0x01 = time between two consecutive fixes has priority, 0x02 = power duty cycle has higher priority.

Value	Position Error
0x00	<1 meter
0x01	<5 meters
0x02	<10 meters
0x03	<20 meters
0x04	<40 meters
0x05	<80 meters
0x06	<160 meters
0x07	No Maximum (disabled)
0x08 - 0xFF	Reserved

Table 6.58: Horizontal/Vertical Error

6.20 Test Mode 2/3/4 – Message ID 20, 46, 48 (SiRFLoc v2.x), 49 and 55

Table 6.59 describes the SiRF software and test mode 2/3/4 with respect to their respective Message ID.

Software	Test Mode	Message ID
GSW2	2	20
	3/4	46
SiRFDRIve	2	20
	3/4	46
SiRFXTrac	2/3/4	20
SiRFLoc (version 2.x)	4	20, 48 ⁽¹⁾ , and 49
SiRFLoc (version 3.x)	3	46
	4	46, 55
GSW3, GSWLT3	3	46
	4	46, 55

Table 6.59: Test Mode 2/3/4 – Message ID 20, 46, 48 (SiRFLoc v2.x), 49 and 55

⁽¹⁾ This Message ID 48 for Test Mode 4 is not to be confused with Message ID 48 for DR Navigation. Message ID 48 for SiRFLoc will be transferred to a different Message ID in a near future.

Refer to each specific Message ID for more details.

6.21 Test Mode 2/3/4 - Message ID 20

6.21.1 Test Mode 2 - Message ID 20

This is supported by either GSW2, SiRFDRIve, and SiRFXTrac. Test Mode 2 requires approximately 1.5 minutes of data collection before sufficient data is available.

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		14			20
SV ID	2 U		0001			1
Period	2 U		001E	sec		30
Bit Sync Time	2 U		0002	sec		2
Bit Count	2 U		3F70			13680
Poor Status	2 U		001F			31
Good Status	2 U		0D29			3369
Parity Error Counts	2 U		0000			0
Lost VCO Count	2 U		0000			0
Frame Sync Time	2 U		0006	sec		6
C/N0 Mean	2 S	*10	01C6		+10	45.4
C/N0 Sigma	2 S	*10	0005		+10	0.5
Clock Drift Change	2 S	*10	1B0E	Hz	+10	692.6
Clock Drift	4 S	*10	000EB41A	Hz	+10	96361.0

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Reserved	2 S		0000			
Reserved	4 S		00000000			
Reserved	4 S		00000000			
Reserved	4 S		00000000			
Reserved	4 S		00000000			
Reserved	4 S		00000000			

Table 6.60: Test Mode 2 - Message ID 20

Name	Description
Message ID	Message ID number
SV ID	The number of the satellite being tracked
Period	The total duration of time (in seconds) that the satellite is tracked
Bit Sync Time	The time it takes for channel 0 to achieve the status of 37
Bit Count	The total number of data bits that the receiver is able to demodulate during the test period. As an example, for a 20 second test period, the total number of bits that can be demodulated by the receiver is 12000 (50 bps x 20 sec x 12 channels).
Poor Status	This value is derived from phase accumulation time. Phase accumulation is the amount of time a receiver maintains phase lock. Every 100 msec of loss of phase lock equates to 1 poor status count. As an example, the total number of status counts for a 60 second period is 7200 (12 channels x 60 sec x 10 sec)
Good Status	This value is derived from phase accumulation time. Phase accumulation is the amount of time a receiver maintains phase lock. Every 100 msec of phase lock equates to 1 good status count.
Parity Error Count	The number of word parity errors. This occurs when the transmitted parity word does not match the receivers parity check.
Lost VCO Count	The number of 1 msec VCO lost lock was detected. This occurs when the PLL in the RFIC loses lock. A significant jump in crystal frequency and / or phase causes a VCO lost lock.
Frame Sync	The time it takes for channel 0 to reach a 3F status.
C/N0 Mean	Calculated average of reported C/N0 by all 12 channels during the test period.
C/N0 Sigma	Calculated sigma of reported C/N0 by all 12 channels during the test period.
Clock Drift Change	Difference in clock frequency from start and end of the test period.
Clock Drift	Rate of change in clock bias.

Table 6.61: Detailed Description of Test Mode 2 Message ID 20

6.21.2 Test Mode 3 - Message ID 20

This is supported by SiRFXTac only as Message ID 20. Test Mode 3 requires approximately 10 seconds of measurement data collection before sufficient summary information is available.

Example:

- A0A20033 – Start Sequence and Payload Length (51 bytes)
- 140001001E00023F70001F0D29000000000000601C600051B0E000EB41A000000000
00000000000000000000000000000000 – Payload
- 0316B0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		14			20
SV ID	2 U		0001			1
Period	2 U		001E	sec		30
Bit Sync Time	2 U		0002	sec		2
Bit Count	2 U		3F70			13680
Poor Status	2 U		001F			31
Good Status	2 U		0D29			3369
Parity Error Count	2 U		0000			0
Lost VCO Count	2 U		0000			0
Frame Sync Time	2 U		0006	sec		6
C/N0 Mean	2 S	*10	01C6		÷10	45.4
C/N0 Sigma	2 S	*10	0005		÷10	0.5
Clock Drift Change	2 S	*10	1B0E	Hz	÷10	692.6
Clock Drift	4 S	*10	000EB41A	Hz	÷10	96361.0
Bad 1 kHz Bit Count	2 S		0000			
Abs I20 ms	4 S		00000000			
Abs Q1 ms	4 S		00000000			
Reserved	4 S		00000000			
Reserved ⁽¹⁾	4 S		00000000			
Reserved	4 S		00000000			

Table 6.62: Test Mode 3 - Message ID 20

⁽¹⁾ In some later versions of GSW3 (3.2.4 or later) this field is split into two new fields: RTC Frequency 2 U (in Hz) and Reserved 2 U.

Name	Description
Message ID	Message ID number
SV ID	The number of the satellite being tracked
Period	The total duration of time (in seconds) that the satellite is tracked
Bit Sync Time	The time it takes for channel 0 to achieve the status of 37
Bit Count	The total number of data bits that the receiver is able to demodulate during the test period. As an example, for a 20 second test period, the total number of bits that can be demodulated by the receiver is 12000 (50 bps x 20sec x 12 channels).
Poor Status	This value is derived from phase accumulation time. Phase accumulation is the amount of time a receiver maintains phase lock. Every 100 msec of loss of phase lock equates to 1 poor status count. As an example, the total number of status counts for a 60 second period is 7200 (12 channels x 60 sec x 10 sec)
Good Status	This value is derived from phase accumulation time. Phase accumulation is the amount of time a receiver maintains phase lock. Every 100 msec of phase lock equates to 1 good status count.
Parity Error Count	The number of word parity errors. This occurs when the transmitted parity word does not match the receivers parity check.
Lost VCO Count	The number of 1 msec VCO lost lock was detected. This occurs when the PLL in the RFIC loses lock. A significant jump in crystal frequency and / or phase causes a VCO lost lock.
Frame Sync	The time it takes for channel 0 to reach a 3F status.
C/N0 Mean	Calculated average of reported C/N0 by all 12 channels during the test period
C/N0 Sigma	Calculated sigma of reported C/N0 by all 12 channels during the test period

Name	Description
Clock Drift Change	Difference in clock frequency from start and end of the test period
Clock Drift	Rate of change of clock bias
Bad 1 kHz Bit Count	Errors in 1 ms post correlation I count values
Abs I20 ms	Absolute value of the 20 ms coherent sums of the I count over the duration of the test period
Abs Q20 ms	Absolute value of the 20 ms Q count over the duration of the test period
RTC Frequency	The measured frequency of the RTC crystal oscillator, reported in Hertz

Table 6.63: Detailed Description of test Mode 3 Message ID 20

6.21.3 Test Mode 4 - Message ID 20

Supported by SiRFXTac only. For other Test Mode 4 outputs, refer to MID 46.

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		14			20
Test Mode	1 U		4			4
Message Variant	1 U		01			1
SV ID	2 U		0001			1
Period	2 U		001E	sec		30
Bit Sync Time	2 U		0002	sec		2
C/N0 Mean	2 S	*10	01C6		+10	45.4
C/N0 Sigma	2 S	*10	0005		+10	0.5
Clock Drift Change	2 S	*10	1B0E	Hz	+10	692.6
Clock Drift	4 S	*10	000EB41A	Hz	+10	96361.0
I Count Errors	2 S		0003			3
Abs I20ms	4 S		0003AB88			240520
Abs Q1ms	4 S		0000AFF0			45040

Table 6.64: Test Mode 4 - Message ID 20

Note:

Payload length: 29 bytes

Name	Description
Message ID	Message ID number
Test Mode	3 = Testmode 3, 4 = Testmode 4
Message Variant	The variant # of the message (variant change indicates possible change in number of fields or field description)
SV ID	The number of the satellite being tracked
Period	The total duration of time (in seconds) that the satellite is tracked
Bit Sync Time	The time it takes for channel 0 to achieve the status of 37
C/N0 Mean	Calculated average of reported C/N0 by all 12 channels during the test period
C/N0 Sigma	Calculated sigma of reported C/N0 by all 12 channels during the test period
Clock Drift Change	Difference in clock frequency from start and end of the test period
Clock Drift	The internal clock offset
I Count Errors	Errors in 1 ms post correlation I count values
Abs I20 ms	Absolute value of the 20 ms coherent sums of the I count over the duration of the test period
Abs Q1 ms	Absolute value of the 1 ms Q count over the duration of the test period

Table 6.65: Detailed Description of Test Mode 4 Message ID 20

6.22 DGPS Status Format - Message ID 27

Reports on the current DGPS status, including the source of the corrections and which satellites have corrections available.

Output Rate: Every measurement cycle (full power / continuous: 1 Hz)

Example (with SBAS):

- A0A20034 – Start Sequence and Payload Length (52 bytes)
- 1B144444444444007252864A2EC . . . – Payload
- 1533B0B3 – Message Checksum and End Sequence

The above example looks as follows in ASCII format:

27, 1, 4, 4, 4, 4, 4, 4, 4, 4, 4, 4, 4, 4, 0, 0, 7, 594, 8, 100, 10, 748

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		1B			27
DGPS source ⁽¹⁾	1 U		1			
If the DGPS source is Beacon, next 14 bytes are interpreted as follows:						
Beacon Frequency	4 S		0 = 0xFFFF 0 = 190K, 0xFFFF = 599.5K Frequency = (190000)+(100*value)	Hz		
Beacon Bit Rate	1 U		Bits 2 - 0 : 000 25 bits/sec 001 50 bits/sec 010 100 bits/sec 011 110 bits/sec 100 150 bits/sec 101 200 bits/sec 110 250 bits/sec 111 300 bits/sec Bit 4 : modulation (0 = MSK, 1 = FSK) Bit 5 : SYNC type (0 = async, 1 = sync) Bit 6 : broadcast coding (0 = No Coding, 1 = FEC coding)	BPS		

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Status	1 U		Bitmapped 0x01: signal valid 0x02: auto frequency used 0x04: auto bit rate used			Bitmapped 0x
Signal Magnitude	4 S			Internal counts		
Signal Strength	2 S			dB		
SNR	2 S			dB		
If the DGPS source is not Beacon, next 14 bytes are interpreted as follows:						
Correction Age ⁽²⁾ [12]	1 x 12		4	sec		4
Reserved	2					
Remainder of the table applies to all messages, and reports on available corrections						
Satellite PRN Code	1 U		18			SV = 24
DGPS Correction	2 S		24E	meters	100	5.90
The above 3 bytes are repeated a total of 12 times. If less than 12 satellite corrections are available, the unused entries have values of 0.						

Table 6.66: DGPS Status Format - Message ID 27

⁽¹⁾ Possible values for this field are given in Table 6.67. If the GSPS source is set to none, three messages are being sent and then the message is disabled.

⁽²⁾ Correction age is reported in the same order as satellites are listed in the satellite PRN code fields that follow.

DGPS Correction Types	Value	Description
None	0	No DGPS correction type have been selected
SBAS	1	SBAS
Serial Port	2	RTCM corrections
Internal Beacon	3	Beacon corrections (available only for GSW2 software)
Software	4	Software Application Program Interface (API) corrections

Table 6.67: DGPS Correction Types
Note:

This message differs from others in that it has multiple formats. Further, not all SiRF software versions implement all of the features. All versions implement the first 2 bytes and the last 3 x 12 bytes (3 bytes per satellite times 12 satellites) the same. The 14 bytes in between these two sections vary depending on the source of the DGPS information. If the source is an internal beacon, the 14 bytes are used to display information about the beacon itself (frequency, bit rate, etc.). If the source is something other than an internal beacon, some software versions display the age of the corrections while other versions only fill this area with zeroes.

6.23 Navigation Library Measurement Data - Message ID 28

Output Rate: Every measurement cycle (full power / continuous: 1 Hz)

Example:

- A0A20038 – Start Sequence and Payload Length (56 bytes)
- 1C00000660D015F143F62C4113F42F417B235CF3FBE95E468C6964B8FBC582415CF
1C375301734.....03E801F400000000 – Payload
- 1533B0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		1C			28
Channel	1 U		00			0
Time Tag ⁽¹⁾	4 U		000660D0	ms		135000
Satellite ID	1 U		15			20
GPS Software Time ⁽²⁾	8 Dbl		41740B0B48 353F7D	sec		2.492111369 6e+005
Pseudorange ⁽³⁾	8 Dbl		7D3F354A0B 0B7441	m		2.101675663 8e+007
Carrier Frequency	4 Sgl		89E98246	m/s		1.675676757 8e+004
Carrier Phase ⁽⁴⁾	8 Dbl		A4703D4A0B 0B7441	m		2.101675664 0e+007
Time in Track	2 U		7530	ms		10600

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Sync Flags ⁽⁵⁾	1 D		17			23
C/N0 1	1 U		34	dB-Hz	±10	43
C/N0 2	1 U			dB-Hz	±10	43
C/N0 3	1 U			dB-Hz	±10	43
C/N0 4	1 U			dB-Hz	±10	43
C/N0 5	1 U			dB-Hz		43
C/N0 6	1 U			dB-Hz		43
C/N0 7	1 U			dB-Hz		43
C/N0 8	1 U			dB-Hz		43
C/N0 9	1 U			dB-Hz		43
C/N0 10	1 U			dB-Hz		43
Delta Range Interval	2 U		03E801F4	ms		1000
Mean Delta Range Time	2 U		01F4	ms		500
Extrapolation Time ⁽⁶⁾	2 S		0000	ms		
Phase Error Count	1 U		00			0
Low Power Count	1 U		00			0

Table 6.68: Navigation Library Measurement Data - Message ID 28

- (1) Internal time for relative measure only.
- (2) GPS software time minus clock bias = GPS time of measurement.
- (3) Pseudorange does not contain ionospheric, tropospheric or clock corrections
- (4) GSW3 and GSWLT3 software does not report the Carrier Phase.
- (5) In GSW2 software this is sync flags, see Table 6.69. In GSW3 code this field is a duplicate of the State field from Message ID 4. See Table 6.6.
- (6) Reserved for SiRF use with GSW3, GSWLT3, GSW3.0 and above.

Note:

For GPS Software Time, Pseudorange, Carrier Frequency, and Carrier Phase, the fields are floating point (4-byte fields) or double-precision floating point (8-byte fields), per IEEE-754 format. The byte order may have to be changed to be properly interpreted on some computers. Also, GSW3.x and GSWLT3 use the same byte ordering method as the GSW 2.2.0. Therefore, GSW 2.2.0 (and older) and GSW 3.0 (and newer) use the original byte ordering method; GSW 2.3.0 through 2.9.9 use an alternate byte ordering method.

To convert the data to be properly interpreted on a PC-compatible computer, do the following: For double-precision (8-byte) values: Assume the bytes are transmitted in the order of B0, B1, ... , B7. For version 2.2.0 and earlier software, rearrange them to B3, B2, B1, B0, B7, B6, B5, B4. For version 2.3.0 and later software, rearrange them to B7, B6, B5, ... , B0. For single-precision (4-byte) values: Assume bytes are transmitted in the order of B0, B1, B2, B3. Rearrange them to B3, B2, B1, B0 (that is, byte B3 goes into the lowest memory address, B0 into the highest).

With these remappings, the values should be correct. To verify, compare the same field from several satellites tracked at the same time. The reported exponent should be similar (within 1 power of 10) among all satellites. The reported Time of Measurement, Pseudorange and Carrier Phase are all uncorrected values.

Message ID 7 contains the clock bias that must be considered. Adjust the GPS Software time by subtracting clock bias, adjust pseudorange by subtracting clock bias times the speed of light, and adjust carrier phase by subtracting clock bias times speed of light/GPS L1 frequency. To adjust the reported carrier frequency do the following: Corrected Carrier Frequency (m/s) = Reported Carrier Frequency (m/s) – Clock Drift (Hz)*C / 1575420000 Hz. For a nominal clock drift value of 96.25 kHz (equal to a GPS Clock frequency of 24.5535 MHz), the correction value is 18315.766 m/s.

Note:

GPS Software Time – Clock Bias = Time of Receipt = GPS Time. GPS Software Time – Pseudorange (sec) = Time of Transmission = GPS Time. Adjust SV position in Message ID 30 by (GPS Time MID 30 – Time of Transmission) * Vsat.

Bit Fields	Description
[0]	Coherent Integration Time 0 = 2 ms 1 = 10 ms
[2:1]	Synch State 00 = Not aligned 01 = Consistent code epoch alignment 10 = Consistent data bit alignment 11 = No millisecond errors
[4:3]	Autocorrelation Detection State 00 = Verified not an autocorrelation 01 = Testing in progress 10 = Strong signal, autocorrelation detection not run 11 = Not used

Table 6.69: Sync Flag Fields (for GSW2 software ONLY)

Bit Fields	Description
Message ID	Message ID
Channel	Receiver channel number for a given satellite being searched or tracked. Range of 0-11 for channels 1-12, respectively
Time Tag	This is the Time Tag in milliseconds of the measurement block in the receiver software time. Time tag is an internal millisecond counter which has no direct relationship to GPS time, but is started as the receiver is turned on or reset.
Satellite ID	Pseudo-Random Noise (PRN) number.
GPS Software Time	This is GPS Time of Week (TOW) estimated by the software in millisecond
Pseudorange	This is the generated pseudorange measurement for a particular SV. When carrier phase is locked, this data is smoothed by carrier phase.
Carrier Frequency	This can be interpreted in two ways: 1. The delta pseudorange normalized by the reciprocal of the delta pseudorange measurement interval. 2. The frequency from the AFC loop. If, for example, the delta pseudorange interval computation for a particular channel is zero, it can be the AFC measurement, otherwise it is a delta pseudorange computation. ⁽¹⁾
Carrier Phase	For GSW2 software, the integrated carrier phase (meters), which initially is made equal to pseudorange, is integrated as long as carrier lock is retained. Discontinuity in this value generally means a cycle slip and renormalization to pseudorange.
Time in Track	The Time in Track counts how long a particular SV has been in track. For any count greater than zero (0), a generated pseudorange is present for a particular channel. The length of time in track is a measure of how large the pull-in error may be.
Sync Flags	For GSW2, this byte contains two 2-bit fields and one 1-bit field that describe the Autocorrelation Detection State, Synch State and Coherent Integration Time. Refer to Table 6.70 for more details. For GSW3, this field contains a duplicate of the state field of Message ID 4. See Table 6.6 for details. In builds with Scalable Tracking Loops, including SiRFNav that supports GSD3tw hardware, note that some bits are given additional duties or definitions. See specifically bits 1 and 6.
C/N0 1	This array of Carrier To Noise Ratios is the average signal power in dB-Hz for each of the 100-millisecond intervals in the previous second or last epoch for each particular SV being track in a channel. First 100 millisecond measurement
C/N0 2	Second 100 millisecond measurement
C/N0 3	Third 100 millisecond measurement
C/N0 4	Fourth 100 millisecond measurement
C/N0 5	Fifth 100 millisecond measurement
C/N0 6	Sixth 100 millisecond measurement
C/N0 7	Seventh 100 millisecond measurement
C/N0 8	Eighth 100 millisecond measurement

Bit Fields	Description
C/N0 9	Ninth 100 millisecond measurement
C/N0 10	Tenth 100 millisecond measurement
Delta Range Interval	This is the delta-pseudorange measurement interval for the preceding second. A value of zero indicated that the receiver has an AFC measurement or no measurement in the Carrier Frequency field for a particular channel. When carrier phase measurement is impossible, some software versions will report the low-power count threshold in dBHz in this field. See Low Power Counts field description for details.
Mean Delta Range Time	When carrier phase is locked, the delta-range interval is measured for a period of time before the measurement time. By subtracting the time in this field, reported in milliseconds, from the reported measurement time (Time Tag or GPS Software Time) the middle of the measurement interval will be computed. The duration of the measurement interval is double the value in this field. In SiRFstarIII receivers, this value is always 500 since the measurement interval is always 1 second. Because of this fact, the two LSBs have been given new uses in some code versions starting with SiRFNav for GSD3tw. The LSB, bit 0, will be set to 1 whenever a measurement was made in a TricklePower period. Since TricklePower measurements may be made in either of 2 methods, bit 1 will be used to indicate the measurement type. A 1 in bit 1 means the TricklePower measurement was made using Tracking Algorithm, while a 0 means that the measurement was made using the Acquisition/Reacquisition Interpolation Algorithm. These bits are useful only to SiRF and may be ignored by other users.
Extrapolation Time	In GSW2, this is the pseudorange extrapolation time, in milliseconds, to reach the common Time tag value. Reserved for SiRF use in GSW3 and GSWLT3.
Phase Error Count	This is the count of the phase errors greater than 60 degrees measured in the preceding second as defined for a particular channel
Low Power Count	Whenever low power counts occur in a measurement interval, this field will record how many of the 20 ms measurements reported low power. The range of this field is 0 to 50. In SiRFstarIII receivers the low-power threshold is not well defined, but varies under various software versions. For that reason, later versions of software, beginning with SiRFNav for GSD3tw may report the threshold for low power in dBHz. In software implementing this feature, it is necessary to examine bit 1 of the Sync Flags field. When that bit is set, low power counts should not occur. When it is clear, carrier phase tracking is impossible, and the threshold for low power counts will be reported in the Delta Range Interval field. Field Delta Range Interval, Description, add at the end: "In SiRFstarIII later software versions, starting with SiRFNav for the GSD3tw, this field may have a secondary use. When bit 1 of the Sync Flags (or State) field is set to 0, carrier phase tracking is not possible. This field becomes unnecessary and can be used for the second purpose. Since the threshold for declaring a measurement as a low power measurement varies, this field can be used to report that threshold, in dB-Hz. This field reports low-power threshold only when bit 1 of the Sync Flags field is 0.
	Leslie, can you please check this entry? It reads oddly.

Table 6.70: Detailed Description of the Measurement Data

⁽¹⁾ Carrier frequency may be interpreted as the measured Doppler on the received signal. The value is reported in metres per second but can be converted to hertz using the Doppler equation:

$$\text{Doppler frequency} / \text{Carrier frequency} = \text{Velocity} / \text{Speed of light, where Doppler frequency is in Hz; Carrier frequency} = 1,575,420,000 \text{ Hz; Velocity is in m/s; Speed of light} = 299,792,458 \text{ m/s.}$$

Note that the computed Doppler frequency contains a bias equal to the current clock drift as reported in Message ID 7. This bias, nominally 96.250 kHz, is equivalent to over 18 km/s.

6.24 Navigation Library DGPS Data - Message ID 29

Output Rate: Every measurement cycle (full power / continuous: 1 Hz)

Example:

- A0A2001A – Start Sequence and Payload Length (26 bytes)
- 1D000F00B501BFC97C673CAAAAAB3FBFFE1240A0000040A00000 – Payload
- 0956B0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		1D			29
Satellite ID	2 S		000F			15
IOD	2 S		00BF			181
Source ⁽¹⁾	1 U		01			1
Pseudorange Correction	4 Sgl		BFC97C67	m		-1.574109
Pseudorange rate Correction	4 Sgl		3CAAAAAB	m/s		0.020833
Correction Age	4 Sgl		3FBFFE12	sec		1.499941
Reserved	4 Sgl					
Reserved	4 Sgl					

Table 6.71: Navigation Library DGPS Data - Message ID 29

⁽¹⁾ 0 = Use no corrections, 1 = SBAS channel, 2 = External source, 3 = Internal Beacon, 4 = Set Corrections via software

Note:

The fields Pseudorange Correction, Pseudorange Rate Correction, and Correction Age are floating point values per IEEE-754. To properly interpret these in a computer, the bytes must be rearranged in reverse order.

6.25 Navigation Library SV State Data - Message ID 30

The data in Message ID 30 reports the computed satellite position and velocity at the specified GPS time.

Note:

When using Message ID 30 SV position, adjust for difference between GPS Time MID 30 and Time of Transmission (see note in Message ID 28). Ionospheric delay is not included in pseudorange in Message ID 28.

Output Rate: Every measurement cycle (full power / continuous: 1Hz)

Example:

- A0A20053 – Start Sequence and Payload Length (83 bytes)
- 1E15 2C64E99D01 408906C8 – Payload
- 2360B0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		1E			30
Satellite ID	1 U		15			21
GPS Time	8 Dbl		00BF	sec		
Position X	8 Dbl		01	m		
Position Y	8 Dbl		BFC97C67	m		
Position Z	8 Dbl		3CAAAAAB	m		
Velocity X	8 Dbl		3FBFFE12	m/sec		
Velocity Y	8 Dbl			m/sec		
Velocity Z	8 Dbl			m/sec		
Clock Bias	8 Dbl			sec		
Clock Drift	4 Sgl		2C64E99D	s/s		744810909
Ephemeris Flag (see details in Table 3-77)	1 D		01			1
Reserved	4 Sgl					
Reserved	4 Sgl					
Ionospheric Delay	4 Sgl		408906C8	m		1082721992

Table 6.72: Navigation Library SV State Data - Message ID 30

Note:

Each of the 8-byte fields as well as Clock Drift and Ionospheric Delay fields are floating point values per IEEE-754. To properly interpret these in a computer, the bytes must be rearranged. See Section 6.23 for byte orders.

Ephemeris Flag Value	Definition
0x00	No Valid SV state
0x01	SV state calculated from broadcast ephemeris
0x02	SV state calculated from almanac at least 0.5 week old
0x03	Assist data used to calculate SV state
0x04	SV state calculated from almanac less than 0.5 weeks old
0x11	SV state calculated from server-based synthesized ephemeris with age of 1 day

Ephemeris Flag Value	Definition
0x12	SV state calculated from server-based synthesized ephemeris with age of 2 day
0x13	SV state calculated from server-based synthesized ephemeris with age of 3 day
0x14	SV state calculated from server-based synthesized ephemeris with age of 4 day
0x15	SV state calculated from server-based synthesized ephemeris with age of 5 day
0x16	SV state calculated from server-based synthesized ephemeris with age of 6 day
0x17	SV state calculated from server-based synthesized ephemeris with age of 7 day
0x21	SV state calculated from client-based synthesized ephemeris with age of 1 day
0x22	SV state calculated from client-based synthesized ephemeris with age of 2 day
0x23	SV state calculated from client-based synthesized ephemeris with age of 3 day
0x24	SV state calculated from client-based synthesized ephemeris with age of 4 day
0x25	SV state calculated from client-based synthesized ephemeris with age of 5 day
0x26	SV state calculated from client-based synthesized ephemeris with age of 6 day
0x27	SV state calculated from client-based synthesized ephemeris with age of 7 day

6.26 Navigation Library Initialization Data - Message ID 31

Output Rate: Every measurement cycle (full power / continuous: 1 Hz)

Example:

- A0A20054 – Start Sequence and Payload Length (84 bytes)
- 1F....0000000000000001001E000F....00....0000000000F....00....02....043402.....02 – Payload
- 0E27B0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		1F			31
Reserved	1 U					
Altitude Mode ⁽¹⁾	1 U		00			0
Altitude Source	1 U		00			0
Altitude	4 Sgl		00000000	m		0
Degraded Mode ⁽²⁾	1 U		01			1

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Degraded Timeout	2 S		001E	sec		30
Dead-reckoning Timeout	2 S		000F	sec		15
Reserved	2 S					
Track Smoothing Mode ⁽³⁾	1 U		00			0
Reserved	1 U					
Reserved	2 S					
Reserved	2 S					
Reserved	2 S					
DGPS Selection ⁽⁴⁾	1 U		00			0
DGPS Timeout	2 S		0000	sec		0
Elevation Nav. Mask	2 S	2	000F	deg		15
Reserved	2 S					
Reserved	1 U					
Reserved	2 S					
Reserved	1 U					
Reserved	2 S					
Static Nav. Mode ⁽⁵⁾	1 U		00			0
Reserved	2 S					
Position X	8 Dbl			m		
Position Y	8 Dbl			m		
Position Z	8 Dbl			m		

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Position Init. Source ⁽⁶⁾	1 U		02			2
GPS Time	8 Dbl			sec		
GPS Week	2 S		0434			1076
Time Init. Source ⁽⁷⁾	1 U		02	sec		2
Drift	8 Dbl			Hz		
Drift Init. Source ⁽⁸⁾	1 U		02	sec		2

Table 6.73: Navigation Library Initialization Data - Message ID 31

- (1) 0 = Use last know altitude, 1 = Use user input altitude, 2 = Use dynamic input from external source
- (2) 0 = Use direction hold and then time hold, 1 = Use time hold and then direction hold, 2 = Only use direction hold, 3 = Only use time hold, 4 = Degraded mode is disabled. Note that Degraded Mode is not supported in GSW3.2.5 and newer.
- (3) 0 = True, 1 = False
- (4) 0 = Use DGPS if available, 1 = Only navigate if DGPS corrections are available, 2 = Never use DGPS corrections
- (5) 0 = True, 1 = False
- (6) 0 = ROM position, 1 = User position, 2 = SRAM position, 3 = Network assisted position
- (7) 0 = ROM time, 1 = User time, 2 = SRAM time, 3 = RTC time, 4 = Network assisted time
- (8) 0 = ROM clock, 1 = User clock, 2 = SRAM clock, 3 = Calibration clock, 4 = Network assisted clock

Note:

Altitude is a single-precision floating point value while position XYZ, GPS time, and drift are double-precision floating point values per IEEE-754. To properly interpret these values in a computer, the bytes must be rearranged. See the Note in Section 6.23 for byte orders.

6.27 Geodetic Navigation Data - Message ID 41

Output Rate: Every measurement cycle (full power / continuous: 1 Hz)

Example:

- A0 A2 00 5B – Start Sequence and Payload Length (91 bytes)
- 29 00 00 02 04 04 E8 1D 97 A7 62 07 D4 02 06 11 36 61 DA 1A 80
01 58 16 47 03 DF B7 55 48 8F FF FF FA C8 00 00 04 C6 15 00 00
00 00 00 00 00 00 00 00 00 00 00 00 BB 00 00 01 38 00 00 00 00 00
00 6B 0A F8 61 00 00 00 00 00 1C 13 14 00 00 00 00 00 00 00 00
00 00 00 00 08 05 00 – Payload
- 11 03 B0 B3 – Message Checksum and End Sequence

Name	Bytes	Description
Message ID	1 U	Hex 0x29 (decimal 41)
Nav Valid	2 D	<p>0x0000 = valid navigation (any bit set implies navigation solution is not optimal);</p> <p>Bit 0 ON: solution not yet overdetermined⁽¹⁾ (< 5 SVs), OFF: solution overdetermined⁽¹⁾ (> = 5 SV)</p> <p>Bits 1 – 2 : Reserved</p> <p>Bit 3 ON : invalid DR sensor data (This is for SiRFDRive only)</p> <p>Bit 4 ON : invalid DR calibration (This is for SiRFDRive only)</p> <p>Bit 5 ON : unavailable DR GPS-based calibration (This is for SiRFDRive only)</p> <p>Bit 6 ON : invalid DR position fix (This is for SiRFDRive only)</p> <p>Bit 7 ON : invalid heading (This is for SiRFDRive only)</p> <p>Bit 8 ON : Almanac Based Position (ABP) (This is for GSD4e and beyond only)</p> <p>Bits 9 – 10 : Reserved</p> <p>Bit 11 ON : Position can only be derived by reverse EE only (This is for GSD4e and beyond only)</p> <p>Bit 12 : Reserved</p> <p>Bit 13 ON : GPS in text mode (not supported in SiRFstarIV)</p> <p>Bit 14 ON : Tracker is loading (not supported in SiRFstarIV)</p> <p>Bit 15 ON : no tracker data available (This is for SiRFNav only)</p>
Nav type	2 D	<p>Bits 2 – 0 : GPS position fix type</p> <p>000 = no navigation fix</p> <p>001 = 1-SV KF solution</p> <p>010 = 2-SV KF solution</p> <p>011 = 3-SV KF solution</p> <p>100 = 4 or more SV KF solution</p> <p>101 = 2-D least-squares solution</p> <p>110 = 3-D least-squares solution</p> <p>111 = DR solution (see bits 8, 14-15)</p> <p>Bit 3 : TricklePower in use</p> <p>Bits 5 – 4 : altitude hold status</p> <p>00 = no altitude hold applied</p> <p>01 = holding of altitude from KF</p> <p>10 = holding of altitude from user input</p> <p>11 = always hold altitude (from user input)</p> <p>Bit 6 ON : DOP limits exceeded</p> <p>Bit 7 ON : DGPS corrections applied</p> <p>Bit 8 : Sensor DR solution type (SiRFDRive only)</p> <p>1 = sensor DR</p> <p>0 = velocity DR⁽²⁾ if Bits 0 – 2 = 111; else check Bits 14-15 for DR error status</p> <p>Bit 9 ON : navigation solution overdetermined1</p> <p>Bit 10 ON : velocity DR⁽²⁾ timeout exceeded</p> <p>Bit 11 ON : fix has been edited by MI functions</p> <p>Bit 12 ON : invalid velocity</p> <p>Bit 13 ON : altitude hold disabled</p> <p>Bits 15 – 14 : sensor DR error status (SiRFDRive only)</p> <p>00 = GPS-only navigation</p> <p>01 = DR calibration from GPS</p> <p>10 = DR sensor error</p> <p>11 = DR in test</p>

Name	Bytes	Description
Extended Week Number	2 U	GPS week number; week 0 started January 6 1980. This value is extended beyond the 10-bit value reported by the SVs.
TOW	4 U	GPS time of week in seconds x 10 ³
UTC Year	2 U	UTC time and date. Seconds reported as integer milliseconds only
UTC Month	1 U	
UTC Day	1 U	
UTC Hour	1 U	
UTC Minute	1 U	
UTC Second	2 U	
Satellite ID List		
Latitude		In degrees (+ = North) x 10 ⁷
Longitude		In degrees (+ = East) x 10 ⁷
Altitude from Ellipsoid		In meters x 10 ²
Altitude from MSL		In meters x 10 ²
Map Datum ⁽³⁾		See footnote
Speed Over Ground (SOG)		In m/s x 10 ²
Course Over Ground (COG, True)		In degrees clockwise from true north x 10 ²
Magnetic Variation		Not implemented
Climb Rate		In m/s x 10 ²
Heading Rate		deg/s x 10 ² (SiRFDRive only)
Estimated Horizontal Position Error	4 U	EHPE in meters x 10 ²
Estimated Vertical Position Error	4 U	EVPE in meters x 10 ²
Estimated Time Error	4 U	ETE in seconds x 10 ² (SiRFDRive only)
Estimated Horizontal Velocity Error	2 U	EHVE in m/s x 10 ² (SiRFDRive only)
Clock Bias	4 S	In m x 10 ²
Clock Bias Error	4 U	In meters x 10 ² (SiRFDRive only)

Name	Bytes	Description
Clock Drift ⁽⁴⁾	4 S	In m/s x 10 ²
Clock Drift Error	4 U	In m/s x 10 ² (SiRFDRive only)
Distance	4 U	Distance traveled since reset in meters (SiRFDRive only)
Distance error	2 U	In meters (SiRFDRive only)
Heading Error	2 U	In degrees x 10 ² (SiRFDRive only)
Number of SVs in Fix	1 U	Count of SVs indicated by SV ID list
HDOP	1 U	Horizontal Dilution of Precision x 5 (0.2 resolution)
AdditionalModelInfo	1 D	<p>Additional mode information:</p> <p>Bit 0: Map matching mode for Map Matching only 0 = Map matching feedback input is disabled 1 = Map matching feedback input is enabled</p> <p>Bit 1: Map matching feedback received for Map Matching only 0 = Map matching feedback was not received 1 = Map matching feedback was received</p> <p>Bit 2: Map matching in use for Map Matching only 0 = Map matching feedback was not used to calculate position 1 = Map matching feedback was used to calculate position (The following are for SiRFstarIII and beyond only)</p> <p>Bit 3: GPS time and week setting 0 = GPS time and week are not set 1 = GPS time and week are set</p> <p>Bit 4: UTC offset verification by satellite 0 = UTC offset not verified 1 = UTC offset verified</p> <p>Bit 5: SBAS ranging⁽⁵⁾ 0 = SBAS ranging is not used in solution 1 = SBAS ranging is used in solution</p> <p>Bit 6: Enabling Car Bus signal 0 = Car bus signal not enabled 1 = Car bus signal enabled</p> <p>Bit 7: DR direction for SiRFDRive only 0 = Forward 1 = Reserve</p>

Table 6.74: Geodetic Navigation Data - Message ID 41

- ⁽¹⁾ An overdetermined solution (see bit 0 from Nav Valid and bit 9 of Nav Type) is one where at least one additional satellite has been used to confirm the 4-satellite position solution. Once a solution has been overdetermined, it remains so even if several satellites are lost, until the system drops to no-navigation status (Nav Type bits 0-2 = 000).
- ⁽²⁾ Velocity Dead Reckoning (DR) is a method by which the last solution computed from satellite measurements is updated using the last computed velocity and time elapsed to project the position forward in time. It assumes heading and speed are unchanged, and is thus reliable for only a limited time. Sensor DR is a position update method based on external sensors (e.g., rate gyroscope, vehicle speed pulses, accelerometers) to supplement the GPS measurements. Sensor DR is only applicable to SiRFDRive products.
- ⁽³⁾ Map Datum indicates the datum to which latitude, longitude, and altitude relate. 21 = WGS-84, by default. Other values are defined as other datums are implemented. Available datums include: 21 = WGS-84, 178 = Tokyo Mean, 179 = Tokyo Japan, 180 = Tokyo Korea, 181 = Tokyo Okinawa.
- ⁽⁴⁾ To convert Drift m/s to Hz: $\text{Drift (m/s)} \cdot L1(\text{Hz})/c = \text{Drift (Hz)}$.
- ⁽⁵⁾ SBAS ranging is supported starting from build 4.1.0.

Note:

Values are transmitted as integer values. When scaling is indicated in the description, the decimal value has been multiplied by the indicated amount and then converted to an integer. Example: Value transmitted: 2345; indicated scaling: 102; actual value: 23.45.

6.28 Queue Command Parameters - Message ID 43

This message is output in response to Message ID 168, Poll Command Parameters. The response message will contain the requested parameters in the form of the requested message. In the example shown below, in response to a request to poll the static navigation parameters, this message has been sent with the payload of Message ID 143 (0x8F) contained in it. Since the payload of Message ID 143 is two bytes long, this message is sent with a payload 3 bytes long (Message ID 43, then the 2-byte payload of message 143).

Output Rate: Response to poll

This message outputs Packet/Send command parameters under SiRF Binary Protocol.

Example with MID_SET_STAT_NAV message:

- A0A20003 – Start Sequence and Payload Length (Variable length: 3 bytes in the example).
- 438F00 – Payload
- 00D2B0B3 – Message Checksum and End Sequence

Name	Bytes	Scale	Unit	Description
Message ID	1 U			= 0x2B
Polled Msg ID ⁽¹⁾	1 U			= 0x8F (example)
Data ⁽²⁾	Variable ⁽³⁾			Depends on the polled Message ID length

Table 6.75: Queue Command Parameters - Message ID 43

⁽¹⁾ Valid Message IDs are 0x80, 0x85, 0x88, 0x89, 0x8A, 0x8B, 0x8C, 0x8F, 0x97, and 0xAA.

⁽²⁾ The data area is the payload of the message whose Message ID is listed in the Polled Msg ID field. For the specific details of the possible payloads, see the description of that message in Section 5

⁽³⁾ Data type follows the type defined for the Polled Message ID. For example, if the Polled Message ID is 128, see Message ID 128 payload definition in Table 5.34.

6.29 DR Raw Data - Message ID 45

Name	Bytes	Scale	Unit	Description
Message ID	1			= 0x2D
1st 100ms time-tag	4		ms	
1st 100ms ADC2 average measurement	2			
Reserved	2			
1st 100ms odometer count	2			
1st 100ms GPIO input states	1			Bit 0: reverse
2nd 100ms time-tag	4		ms	
2nd 100ms ADC2 average measurement	2			

Name	Bytes	Scale	Unit	Description
Reserved	2			
2nd 100ms odometer count	2			
2nd 100ms GPIO input states	1			Bit 0: reverse
...				
10th 100ms time-tag	4		ms	
10th 100ms ADC2 average measurement	2			
Reserved	2			
10th 100ms odometer count	2			
10th 100ms GPIO input states	1			Bit 0: reverse

Table 6.76: DR Raw Data - Message ID 45
Note:

Payload length: 111 bytes.

This message is only used in the SiRFstarII SiRFDRive software.

6.30 Test Mode 3/4/5/6 - Message ID 46

Message ID 46 is used by GSW2, SiRFDRive, SiRFLoc v3.x, GSW3, GSWLT3, and SLCLT3 software.

Output Rate: Variable – set by the period as defined in Message ID 150.

Example for GSW2, SiRFDRive, SiRFLoc v3.x, and GSW3 software output:

- A0A20033 – Start Sequence and Payload Length (51 bytes)
- 2E0001001E00023F70001F0D29000000000000601C600051B0E000EB41A00000000000000000000000000000000 – Payload
- 0316B0B3 – Message Checksum and End Sequence

Example for GSWLT3 and SLCLT3 software output:

- A0A20033 – Start Sequence and Payload Length
- 2E0001001E00023F70001F0D29000000000000601C600051B0E000EB41A0000000000000000000000800000002F000000 – Payload
- 0316B0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		2E			46
SV ID	2 U		0001			1
Period	2 U		001E	sec		30
Bit Sync Time	2 U		0002	sec		2
Bit Count	2 U		3F70			16420

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Poor Status	2 U		001F			31
Good Status	2 U		0D29			3369
Parity Error Count	2 U		0000			0
Lost VCO Count	2 U		0000			0
Frame Sync Time	2 U		0006	sec		6
C/N0 Mean	2 S	*10	01C6	dB/Hz	÷10	45.4
C/N0 Sigma	2 S	*10	0005	dB/Hz	÷10	0.5
Clock Drift Change	2 S	*10	1B0E	Hz	÷10	692.6
Clock Drift	4 S	*10	000EB41A	Hz	÷10	96361.0
Bad 1 kHz Bit Count ⁽¹⁾	2 S		0000			0
Abs I20 ms ⁽²⁾	4 S		000202D5	Counts		131797
Abs Q20 ms ⁽²⁾	4 S		000049E1	Counts		18913
Phase Lock Indicator ⁽³⁾	4 S		00000000		0.001	0
RTC Frequency ⁽⁴⁾	2 U		8000	Hz		32768
ECLK Ratio ⁽³⁾	2 U		0000		3*Value/ 65535	0 (no ECLK input)
Timer Synch input ⁽³⁾ (bit 7) AGC ⁽³⁾ (bit 0 - 6)	1 D		2F	Timer Synch = True/False AGC = ~0.8 dB per step		TS 0 = no activity and 47 for AGC
Reserved	3 U					

Table 6.77: Test Mode 3/4/5/6 - Message ID 46

⁽¹⁾ Field not filled for GSW3 and GSWLT3 software in Test Mode 3/4.

⁽²⁾ Phase error = (Q20 ms)/(I20 ms).

⁽³⁾ A value of 0.9 to 1.0 generally indicates phase lock

⁽⁴⁾ Only for GSWLT3 and SLCLT3 software

Name	Description
Message ID	Message ID number
SV ID	The number of the satellite being tracked
Period	The total duration of time (in seconds) that the satellite is tracked. This field is not filled for GSW3 and GSWLT3 software in Test Mode 3/4.
Bit Sync Time	The time it takes for channel 0 to achieve the status of 0x37. This field is not filled for GSW3 and GSWLT3 software in Test Mode 3/4.
Bit Count	The total number of data bits that the receiver is able to demodulate during the test period. As an example, for a 20 second test period, the total number of bits that can be demodulated by the receiver is 12000 (50 bps x 20 sec x 12 channels). This field is not filled for GSW3 and GSWLT3 software in Test Mode 3/4.
Poor Status	This value is derived from phase accumulation time. Phase accumulation is the amount of time a receiver maintains phase lock. Every 100 msec of loss of phase lock equates to 1 poor status count. As an example, the total number of status counts for a 60 second period is 7200 (12 channels x 60 sec x 10 100-ms intervals). This field is not filled for GSW3 and GSWLT3 software in Test Mode 3/4.
Good Status	This value is derived from phase accumulation time. Phase accumulation is the amount of time a receiver maintains phase lock. Every 100 msec of phase lock equates to 1 good status count. This field is not filled for GSW3 and GSWLT3 software in Test Mode 3/4.
Parity Error Count	The number of word parity errors. This occurs when the transmitted parity word does not match the receivers parity check. This field is not filled for GSW3 and GSWLT3 software in Test Mode 3/4.
Lost VCO Count	The number of 1 msec VCO lost lock was detected. This occurs when the PLL in the RFIC loses lock. A significant jump in crystal frequency and / or phase causes a VCO lost lock. This field is not filled for GSW3 and GSWLT3 software in Test Mode 3/4.
Frame Sync Time	The time it takes for channel 0 to reach a 0x3F status. This field is not filled for GSW3 and GSWLT3 software in Test Mode 3/4.
C/N0 Mean	Calculated average of reported C/N0 by all 12 channels during the test period.
C/N0 Sigma	Calculated sigma of reported C/N0 by all 12 channels during the test period.
Clock Drift Change	Difference in clock drift from start and end of the test period.
Clock Drift	The measured internal clock drift.
Bad 1 kHz Bit Count	Errors in 1 ms post correlation I count values. This field is not filled for GSW3 and GSWLT3 software in Test Mode 3/4.
Abs 120 ms	Absolute value of the 20 ms coherent sums of the I count over the duration of the test period.

Name	Description
Abs Q20 ms	Absolute value of the 20 ms Q count over the duration of the test period.
Phase Lock Indicator	Absolute value of the 20 ms Q count over the duration of the test period.
RTC Frequency ⁽¹⁾	F(RTC counts/CLCKACQ counts over test interval). 16-bit unsigned integer value of RTC frequency in Hz. Value = 0, no RTC Value = 1 to 65534, 32678±1 = good RTC frequency Value = 65535, RTC frequency = 65535 Hz of higher
ECLK Ratio ⁽¹⁾	F(ECLK counts/CLCKACQ counts over test interval). 16-bit unsigned integer value of scaled value of ratio. Value = 0, no ECLK input 0 < Value < 3, Ratio = 3*Value/65535 Value > 3, Ratio = 65535
Timer Synch ⁽¹⁾	Timer Synch input activity bit Value = 0, no Timer Synch input activity Value = 1, activity
AGC ⁽¹⁾	Automatic Gain Control value Value = 0, gain set to maximum saturated 1 < Value < 62, active gain range Value = 63, gain set to minimum saturated

Table 6.78: Detailed Description of Test Mode 3/4/5/6 - Message ID 46

⁽¹⁾ Supported only by GSWLT3 and SLCLT3 software. When test mode command is issued, test report interval time value and PRN are specified. Reports every interval whether SV signals or not and data is accumulated every interval period. Continuous output until software is reset or unit is restarted.

6.31 Test Mode 4 – Message ID 48 (SiRFLoc v2.x only)

SiRFLoc results from Test Mode 4 are output by Message IDs 48 and 49. Message ID 48 for Test Mode 4 used by SiRFLoc version 2.x only is not to be confused with SiRFDRIve Message ID 48.

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1		30			48
nChannel	1		01			1
Reserved	4		00000000			0
Channel	1		00			0
Satellite ID	1		18			24
Receiver Time Tag	4		000660D0	ms		30995
Pseudorange	4	A	0	m	10	0
Carrier Frequency	4	64	174ADC	m/sec		1526492

Table 6.79: Test Mode 4 – Message ID 48

Note:

Payload Length: 20 bytes

Name	Description
Message ID	Message ID
nChannel	Number of channels reporting
Reserved	Reserved
Channel	Receiver channel number for a given satellite being searched or tracked
Satellite ID	Satellite or Space Vehicle (SV ID number or Pseudo-Random Noise (PRN) number)
Receiver Time Tag	Count of ms interrupts from the start of the receiver (power on) until measurement sample is taken. Millisecond interrupts are generated by the receiver clock
Pseudorange	Generated pseudorange measurement for a particular SV
Carrier Frequency	Can be interpreted in two ways: 1. Delta pseudorange normalized by the reciprocal of the delta pseudorange measurement interval 2. Frequency from the AFC loop. If, for example, the delta pseudorange interval computation for a particular channel is zero, it can be the AFC measurement, otherwise it is a delta pseudorange computation

Table 6.80: Detailed Description of Test Mode 4 Message ID 48

6.32 DR Navigation Status - Message ID 48, Sub ID 1

DR navigation status information (output on every navigation cycle).

Name	Bytes	Description
Message ID	1	= 0x30
Message Sub ID	1	= 0x01
DR navigation	1	0x00 = valid DR navigation; else Bit 0 ON : GPS-only navigation required Bit 1 ON : speed not zero at start-up Bit 2 ON : invalid DR position Bit 3 ON : invalid DR heading Bit 4 ON : invalid DR calibration Bit 5 ON : invalid DR data Bit 6 ON : system in Cold Start Bit 7 : Reserved
DR data	2	0x0000 = valid DR data; else Bit 0 ON : DR gyro subsystem not operational Bit 1 ON : DR speed subsystem not operational Bit 2 ON : DR measurement time < 80 ms Bit 3 ON : invalid serial DR message checksum Bit 4 ON : no DR data for > 2 sec Bit 5 ON : DR data timestamp did not advance Bit 6 ON : DR data byte stream all 0x00 or 0xFF Bit 7 ON : composite wheel-tick count jumped > 255 between successive DR messages Bit 8 ON : input gyro data bits (15) of 0x0000 or 0x3FFF Bit 9 ON : > 10 DR messages received in 1 sec Bit 10 ON : time difference between two consecutive measurements is <= 0 Bits 11 - 15 : Reserved.
DR calibration and DR gyro bias calibration	1	Bits 0 - 3 : 0000 = valid DR calibration; else Bit 0 ON : invalid DR gyro bias calibration Bit 1 ON : invalid DR scale factor calibration Bit 2 ON : invalid DR speed scale factor calibration Bit 3 ON : GPS calibration required but not ready Bits 4 - 6 : 000 = valid DR gyro bias calibration; else Bit 4 ON : invalid DR data Bit 5 ON : zero-speed gyro bias calibration not updated Bit 6 ON : heading rate scale factor <= -1 Bit 7 : Reserved
DR gyro scale factor calibration and DR speed scale factor calibration	1	Bits 0 - 3 : 0000 = valid DR gyro scale factor calibration; else Bit 0 ON : invalid DR heading Bit 1 ON : invalid DR data Bit 2 ON : invalid DR position Bit 3 ON : heading rate scale factor <= -1 Bits 4 - 7 : 0000 = valid DR speed scale factor calibration; else Bit 4 ON : invalid DR data Bit 5 ON : invalid DR position Bit 6 ON : invalid GPS velocity for DR Bit 7 ON : DR speed scale factor <= -1

Name	Bytes	Description
DR Nav across reset and DR position	1	Bits 0 - 1 : 00 = valid DR nav across reset; else Bit 0 ON : invalid DR navigation Bit 1 ON : speed > 0.01 m/s Bit 2 : Reserved Bits 3 - 6 : 0000 = valid DR position; else Bit 3 ON : speed not zero at start-up Bit 4 ON : invalid GPS position Bit 5 ON : system in Cold Start Bit 6 ON : invalid DR data Bit 7 : Reserved
DR heading	1	Bits 0 - 6 : 0000000 = valid DR heading; else Bit 0 ON : speed not zero at start-up Bit 1 ON : invalid GPS position Bit 2 ON : invalid GPS speed Bit 3 ON : GPS did not update heading Bit 4 ON : delta GPS time < 0 and > 2 Bit 5 ON : system in Cold Start Bit 6 ON : invalid DR data Bit 7 : Reserved
DR gyro subsystem and DR speed subsystem	1	Bits 0 - 3 : 0000 = updated DR gyro bias and scale factor calibration; else Bit 0 ON : invalid DR data Bit 1 ON : invalid DR position Bit 2 ON : invalid GPS velocity for DR Bit 3 ON : GPS did not update heading Bits 4 - 6 : 000 = updated DR speed calibration; else Bit 4 ON : invalid DR data Bit 5 ON : invalid DR position Bit 6 ON : invalid GPS velocity for DR Bit 7 : 0 = updated DR navigation state

Name	Bytes	Description
DR Nav state integration ran and zero-speed gyro bias calibration updated	1	Bits 0 - 7 : 00000000 = GPS updated position; else Bit 0 ON : update mode != KF Bit 1 ON : EHPE > 50 Bit 2 ON : no previous GPS KF update Bit 3 ON : GPS EHPE < DR EHPE Bit 4 ON : DR EHPE < 50 Bit 5 ON : less than 4 SVs in GPS navigation Bit 6 ON : no SVs in GPS navigation Bit 7 ON : DR-only navigation required
Updated DR gyro bias/scale factor calibration, updated DR speed calibration, and updated DR Nav state	1	Bits 0 - 3 : 0000 = updated DR gyro bias and scale factor calibration; else Bit 0 ON : invalid DR data Bit 1 ON : invalid DR position Bit 2 ON : invalid GPS velocity for DR Bit 3 ON : GPS did not update heading Bits 4 - 6 : 000 = updated DR speed calibration; else Bit 4 ON : invalid DR data Bit 5 ON : invalid DR position Bit 6 ON : invalid GPS velocity for DR Bit 7 : 0 = updated DR navigation state
GPS updated position	1	Bits 0 - 7 : 00000000 = GPS updated position; else Bit 0 ON : update mode != KF Bit 1 ON : EHPE > 50 Bit 2 ON : no previous GPS KF update Bit 3 ON : GPS EHPE < DR EHPE Bit 4 ON : DR EHPE < 50 Bit 5 ON : less than four SVs in GPS navigation Bit 6 ON : no SVs in GPS navigation Bit 7 ON : DR-only navigation required
GPS updated heading	1	Bits 0 - 6 : 0000000 = GPS updated heading; else Bit 0 ON : update mode != KF Bit 1 ON : GPS speed <= 5 m/s Bit 2 ON : less than 4 SVs in GPS navigation Bit 3 ON : horizontal velocity variance > 1 m ² /s ² Bit 4 ON : GPS heading error >= DR heading error Bit 5 ON : GPS KF not updated Bit 6 ON : incomplete initial speed transient Bit 7 : Reserved
GPS position & GPS velocity	1	Bits 0 - 2 : 000 = valid GPS position for DR; else Bit 0 ON : less than 4 SVs in GPS navigation Bit 1 ON : EHPE > 30 Bit 2 ON : GPS KF not updated Bit 3 : Reserved Bits 4 - 7 : 0000 = valid GPS velocity for DR; else Bit 4 ON : invalid GPS position for DR Bit 5 ON : EHVE > 3 Bit 6 ON : GPS speed < 2 m/s Bit 7 ON : GPS did not update heading.
Reserved	2	Reserved

Table 6.81: DR Navigation Status - Message ID 48, Sub ID 1

Note:

Payload length: 17 bytes

6.33 DR Navigation State - Message ID 48, Sub ID 2

DR speed, gyro bias, navigation mode, direction, and heading (output on every navigation cycle).

Name	Bytes	Scale	Unit	Description
Message ID	1			= 0x30
Message Sub ID	1			= 0x02
DR speed	2	10 ²	m/s	
DR speed error	2	10 ⁴	m/s	
DR speed scale factor	2	10 ⁴		
DR speed scale factor error	2	10 ⁴		
DR heading rate	2	10 ²	deg/s	
DR heading rate error	2	10 ²	deg/s	
DR gyro bias	2	10 ²	deg/s	
DR gyro bias error	2	10 ²	deg/s	
DR gyro scale factor	2	10 ⁴		
DR gyro scale factor error	2	10 ⁴		
Total DR position error	4	10 ²	m	
Total DR heading error	2	10 ²	deg	
DR Nav mode control	1			1 = GPS-only nav required (no DR nav allowed) 2 = GPS + DR nav using default/stored calibration 3 = GPS + DR nav using current GPS calibration 4 = DR-only nav (no GPS nav allowed)
Reverse	1			DR direction: 0 = forward; 1 = reverse
DR heading	2	10 ²	deg/s	

Table 6.82: DR Navigation State - Message ID 48, Sub ID 2

Note:

Payload length: 32 bytes

6.34 Navigation Subsystem - Message ID 48, Sub ID 3

Name	Bytes	Scale	Unit	Description
Message ID	1			= 0x30
Message Sub ID	1			= 0x03
GPS heading rate	2	10 ²	deg/s	
GPS heading rate error	2	10 ²	deg/s	
GPS heading	2	10 ²	deg	
GPS heading error	2	10 ²	deg	
GPS speed	2	10 ²	m/s	
GPS speed error	2	10 ²	m/s	
GPS position error	4	10 ²	m	
DR heading rate	2	10 ²	deg/s	
DR heading rate error	2	10 ²	deg/s	
DR heading	2	10 ²	deg	
DR heading error	2	10 ²	deg	
DR speed	2	10 ²	m/s	
DR speed error	2	10 ⁴	m/s	
DR position error	2	10 ⁴	m	
Reserved	2			

Table 6.83: Navigation Subsystem - Message ID 48, Sub ID 3

Note:

Payload length: 36 bytes.

6.35 DR Gyro Factory Calibration - Message ID 48, Sub ID 6

DR Gyro factory calibration parameters (response to poll).

Name	Bytes	Scale	Unit	Description
Message ID	1			= 0x30
Message Sub ID	1			= 0x06
Calibration	1			Bit 0 : Start gyro bias calibration Bit 1 : Start gyro scale factor calibration Bits 2 - 7 : Reserved
Reserved	1			

Table 6.84: DR Gyro Factory Calibration - Message ID 48, Sub ID 6

Note:

Payload length: 4 bytes.

6.36 DR Sensors Parameters - Message ID 48, Sub ID 7

DR sensors parameters (response to poll).

Name	Bytes	Scale	Unit	Description
Message ID	1			= 0x30
Message Sub ID	1			= 0x07
Base speed scale factor	1		ticks/m	
Base gyro bias	2	10 ⁴	mV	
Base gyro scale factor	2	10 ³	mV/deg/ s	

Table 6.85: DR Sensors Parameters - Message ID 48, Sub ID 7

Note:

Payload length: 7 bytes.

6.37 DR Data Block - Message ID 48, Sub ID 8

1-Hz DR data block (output on every navigation cycle).

Name	Bytes	Scale	Unit	Description
Message ID	1			= 0x30
Message Sub ID	1			= 0x08
Measurement type	1			0 = odometer and gyroscope (always); 1 .. 255 = Reserved
Valid count	1			Count (1 .. 10) of valid DR measurements
Reverse indicator	2			Bits 0 .. 9, each bit: ON = reverse, OFF = forward
1st 100-ms time-tag	4		ms	

Name	Bytes	Scale	Unit	Description
1st 100-ms DR speed	2	10 ²	m/s	
1st 100-ms gyro heading rate	2	10 ²	deg/s	
2nd 100-ms time-tag	4		ms	
2nd 100-ms DR speed	2	10 ²	m/s	
2nd 100-ms gyro heading rate	2	10 ²	deg/s	
...				
10th 100-ms time-tag	4		ms	
10th 100-ms DR speed	2	10 ²	m/s	
10th 100-ms gyro heading rate	2	10 ²	deg/s	

Table 6.86: DR Data Block – Message ID 48, Sub ID 8

Note:

Payload length: 86 bytes.

6.38 DR Package Sensor Parameters - Message ID 48, Sub ID 9

Output message of Sensor Package parameters

Note:

This message is not Supported by SiRFDemoPPC.

The user can enable a one time transmission of this message via the SiRFDemo Poll command for SiRFDRIve. In the SiRFDRIve menu, select *Poll Sensors Parameters*.

Byte	Name	Data Type	Bytes	Unit	Description	Res
1	Message ID	UINT8	1	N/A	= 0x30	
2	Sub-ID	UINT8	1	N/A	= 0x09	
3	Sensors[0] SensorType	UINT8	1	N/A	GYRO_SENSOR = 0x1 ACCELERATION_SENS OR = 0x2	
4	Sensors[0] ZeroRateVolts	UINT32	4	volt s	0 to 5.0 ⁽¹⁾	
8	Sensors[0] MilliVoltsPer	UINT32	4	mill ivol ts	0 to 1000 ⁽²⁾	
12	Sensors[0] ReferenceVoltage	UINT32	4	volt s	0 to 5.0	

Byte	Name	Data Type	Bytes	Unit	Description	Res
16	Sensors[1] SensorType	UINT8	1	N/A	GYRO_SENSOR = 0x1 ACCELERATION_SENSOR = 0x2	
17	Sensors[1] ZeroRateVolts	UINT32	4	volt s	0 to 5.0	
21	Sensors[1] MilliVoltsPer	UINT32	4	millivolts	0 to 1000	
25	Sensors[1] ReferenceVoltage	UINT32	4	volt s	0 to 5.0	
29	Sensors[2] SensorType	UINT8	1	N/A	GYRO_SENSOR = 0x1 ACCELERATION_SENSOR = 0x2	
30	Sensors[2] ZeroRateVolts	UINT32	4	volt s	0 to 5.0	
34	Sensors[2] MilliVoltsPer	UINT32	4	millivolts	0 to 1000	
38	Sensors[2] ReferenceVoltage	UINT32	4	volt s	0 to 5.0	
39	Sensors[3] SensorType	UINT8	1	N/A	GYRO_SENSOR = 0x1 ACCELERATION_SENSOR = 0x2	
43	Sensors[3] ZeroRateVolts	UINT32	4	volt s	0 to 5.0	
47	Sensors[3] MilliVoltsPer	UINT32	4	millivolts	0 to 1000	
51	Sensors[3] ReferenceVoltage	UINT32	4	volt s	0 to 5.0	

Table 6.87: DR Package Sensor Parameters - Message ID 48, Sub ID 9

(1) To restore ROM defaults for ALL sensors, enter the value 0xdeadabba here. You must still include the remainder of the message, but these values will be ignored.

(2) For gyro this is millivolts per degree per second. For the acceleration sensor it is millivolts per metre per second ^ 2

Note:

Payload length: 54 bytes.

6.39 Test Mode 4 – Message ID 49

SiRFLoc results from Test Mode 4 are output by Message IDs 48 and 49. Message ID 48 for Test Mode 4 used by SiRFLoc version 2.x only is not to be confused with SiRFDRive Message ID 48.

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1		31			49
nChannel	1		01			1
Reserved	4		00000000			0
Channel	1		00			0
Satellite ID	1		18			24
Receiver Time Tag	4		000660D0	ms		31085
Carrier Doppler Rate	4	100000	796D	carrier cycles/ 2 ms/10 ms	1048576	271
Carrier Doppler	4	100000	10F	carrier cycles/ 2 ms	1048576	168229578
Carrier Phase	4	400		carrier cycles	1024	94319770
Code Offset	4	181000	FFFFFFFF FC925C	chip	1576960	-224676

Table 6.88: Test Mode 4 – Message ID 49

Note:

Payload Length: 28 bytes

Name	Description
Message ID	Message ID
nChannel	Number of channels reporting
Channel	Receiver channel number for a given satellite being searched or tracked
Satellite ID	Satellite or Space Vehicle (SV ID number or Pseudo-Random Noise (PRN) number
Receiver Time Tag	Count of ms interrupts from the start of the receiver (power on) until measurement sample is taken. Millisecond interrupts are generated by the receiver clock
Carrier Doppler Rate	Carrier Doppler Rate value from the Costas tracking loop for the satellite ID on channel 0
Carrier Doppler	Frequency from the Costas tracking loop for the satellite ID on channel 0
Carrier Phase	Carrier phase value from the Costas tracking loop for the satellite ID on channel 0
Code Offset	Code offset from the Code tracking loop for the satellite ID on channel 0

Table 6.89: Detailed Description of Test Mode 4 Message ID 49

6.40 SBAS Parameters - Message ID 50

Outputs SBAS operating parameter information including SBAS PRN, mode, timeout, timeout source, and SBAS health status.

Output Rate: Every measurement cycle (full power / continuous: 1Hz)

Example:

- A0A2000D – Start Sequence and Payload Length (13 bytes)
- 327A001208000000000000000000 – Payload
- 00C6B0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		0x32			50
SBAS PRN	1 U		0x7A			122
SBAS Mode	1 U		0x00			0
DGPS Timeout	1 U		0x12	sec		18
Flag bits	1 D		0x08			00001000
Spare	8 U		0000000000 00000			

Table 6.90: SBAS Parameters - Message ID 50

Name	Description
Message ID	Message ID number
SBAS PRN	This is the PRN code of the SBAS either selected by the user, the default PRN, or that currently in use 0 = Auto mod SBAS PRN 120 to 138 = Exclusive (set by user)
SBAS Mode	0 = Testing, 1 = Integrity Integrity mode does not accept SBAS corrections if the SBAS satellite is transmitting in a test mode Testing mode accepts and use SBAS corrections even if the SBAS satellite is transmitting in a test mode
DGPS Timeout	Range 0 to 255 seconds. 0 returns to default timeout. 1 to 255 is value set by user. The default value is initially 18 seconds. However, the SBAS data messages may specify a different value. The last received corrections continue to be applied to the navigation solution for the timeout period. If the timeout period is exceeded before a new correction is received, no corrections are applied.
Flag bits	Bit 0: Timeout; 0 = Default 1 = User Bit 1: Health; 0 = SBAS is healthy, 1 = SBAS reported unhealthy and cannot be used Bit 2: Correction; 0 = Corrections are being received and used , 1 = Corrections are not being used because: the SBAS is unhealthy, they have not yet been received, or SBAS is currently disabled in the receiver Bit 3: SBAS PRN; 0 = Default , 1 = User Note: Bits 1 and 2 are only implemented in GSW3 and GSWLT3, versions 3.3 and later
Spare	These bytes are currently unused and should be ignored

Table 6.91: Detailed Description of SBAS Parameters

6.41 Tracker Load Status Report - Message ID 51, Sub ID 6

This message is sent by the SLC asynchronously whenever a tracker load starts or completes.

Message Name	Tracker Code Load Status
Input or Output	Output
MID (Hex)	0x33
MID (Dec)	51
SID (Hex)	0x06
SID (Dec)	6
SID Name in Code	GPS_TRACKER_LOADER_STATE

Table 6.92: Tracker Load Status Report - Message ID 51, Sub ID 6

The Tracker Code Load Status message reports the tracker code loading progress, often at the start of the process and at the end of the process.

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)		Description
		Scale	Example		Scale	Example	
Message ID	1		0x33			51	Message ID
Message Sub ID	1		0x06			6	Message Sub ID
Load State	4		0x00000006			6	0 = Start loading 6 = Load completed
Reserved	4						Reserved for future use
Load Error	4		0x00000000			0	0 = Success Non-Zero = Fail
Time Tag	4	msec	0x1DF1E81B		msec	502392859	System time (ms) at the time of message generation.

Table 6.93: Tracker Load Status Report Message

6.42 1 PPS Time – Message ID 52

Output time associated with current 1 PPS pulse. Each message is output within a few hundred ms after the 1 PPS pulse is output and tells the time of the pulse that just occurred. The Message ID 52 reports the UTC time of the 1 PPS pulse when it has a current status message from the satellites. If it does not have a valid status message, it reports time in GPS time, and so indicates by means of the status field.

This message may not be supported by all SiRF Evaluation receivers

Output Rate: 1 Hz (Synchronized to PPS)

Example:

A0A20013 – Start Sequence and Payload Length (19 bytes)

3415122A0E0A07D3000D000000050700000000 – Payload

0190B0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		34			52
Hour	1 U		15			21
Minute	1 U		12			18
Second	1 U		2A			42
Day	1 U		0E			15

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Month	1 U		0A			10
Year	2 U		07D3			2003
UTCOffsetInt ⁽¹⁾	2 S		000D			13
UTCOffsetFrac ⁽¹⁾	4 U	10 ⁹	00000005	sec	10 ⁹	0.000000005
Status (see Table 3-98)	1 D		7			7
Reserved	4 U		00000000			00000000

Table 6.94: 1 PPS Time – Message ID 52

⁽¹⁾ Difference between UTC and GPS time, integer, and fractional parts. GPS time = UTC time + UTCOffsetInt+UTCOffsetFrac x 10⁻⁹.

Bit Fields	Meaning
0	When set, bit indicates that time is valid
1	When set, bit indicates that UTC time is reported in this message. Otherwise, GPS time
2	When set, bit indicates that UTC to GPS time information is current, (i.e., IONO/UTC time is less than 2 weeks old)
3-7	Reserved

Table 6.95: Status Byte Field in Timing Message

6.43 Test Mode 4 Track Data – Message ID 55

Message ID 55 is used by GSW3, GSWLT3, and SiRFLoc (v3.0 and above) software.

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		37			55
SV ID	2 U		0001			1
Acqclk Lsq	4 U		12345678			12345678
Code Phase	4 U	2 ⁻¹¹	0000	Chips		0
Carrier Phase	4 S	2 ⁻³²	0000	Cycles		0
Carrier Frequency	4 S	0.000476	0000	Hz	0.000476	0
Carrier Acceleration	2 S	0.476	0000	Hz/sec	0.476	0

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Code Corrections	4 S		0000			0
Code Offset	4 S	2 ⁻¹¹	0000	Chips	2 ⁻¹¹	0
MSec Number ⁽¹⁾	2 S	ms	0006	ms	0.001	0.006
Bit Number ⁽¹⁾	4 S	20 ms	01C6	20 ms	0.02	9.08
Reserved	4 U		0000			
Reserved	4 U		0000			
Reserved	4 U		0000			
Reserved	4 U		0000			

Table 6.96: Test Mode 4 – Message ID 55

⁽¹⁾ SiRFLocDemo combines MSec Number and Bit Number for this message output which gives the GPS time stamp.

Note:

Payload Length: 51 bytes

6.44 SGEE Download Output - Message ID 56

These functions are needed to respond to messages requesting download the SGEE data into the SLC Flash and to get the SGEE and EE age from the SLC.

These SGEE file download input messages used message id 232 (MID_EE_INPUT) and the output responses here have message id 56. While the core OSP 56 messages used the literal of SSB_EE for the message ID 56, the SGEE downloader software is using the literal MID_EEGPSTimeInfo.

Different sub-message ids are used to perform different actions as shown below in Table 215

The table below shows the message IDs assigned to the output messages.

MID (Hex)	0x38
MID (Dec)	56
Message Name in Code	SSB_EE (MID_EEGPSTimeInfo)
SID (Hex)	As below
SID (Dec)	As below
SID Name in Code	As below

Table 6.97: SGEE Download Output - Message ID 56

SNo.	Sub-Message ID	Message Name
1.	0x20	ECLM Ack/Nack
2.	0x21	ECLM EE Age
3.	0x22	ECLM SGEE Age
4.	0x23	ECLM Download Initiate Request
5.	0x24	ECLM Erase Storage File
6.	0x25	ECLM Update File Content
7.	0x26	ECLM Request File Content
8.	0x27	ECLM BBRAM Header Data

Table 6.98: Output Messages Sub IDs

6.44.1 ECLM Ack / Nack - Message ID 56, Sub ID 32

This is the response message to the Input Message ID 232, SubMsgID's 22, 23, 24, 25 or 26.

Following is an example of Ack to message 232, subId 22 (ECLM Start Download).

Example:

Ack/Nack for ECLM_StartDownload SubID = 0x16

a0 a2 00 06 38 20 e8 16 00 00 01 56 b0 - Message

A0A20006 - Start Sequence and Payload Length (6 bytes)

3820E8160000 - Payload

0156B0B3 - Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	E.g.		
Message ID	1U		0x38		Decimal 56: SSB_EE (MID_EEGPSTimeInfo)
Sub Message ID	1U		0x20		ECLM Ack/Nack
Ack Msg Id	1U		0xE8		Ack Message Id 232
Ack Sub Id	1U		0x16		Ack Sub Id, ECLM Start Download 0x16
Ack/Nack	1U		00		0 = Ack
Ack Nack Reason	1U		00		ECLM_SUCCESS = 0, ECLM_SPACE_UNAVAILABLE = 1 ECLM_PKT_LEN_INVALID = 2, ECLM_PKT_OUT_OF_SEQ = 3, ECLM_DOWNLOAD_SGEE_NONE_WFILE = 4, ECLM_DOWNLOAD_CORRUPT_FILE_ERROR = 5, ECLM_DOWNLOAD_GENERIC_FAILURE = 6, ECLM_API_GENERIC_FAILURE = 7

Table 6.99: ECLM Ack / Nack Message Fields

6.44.2 ECLM EE Age - Message ID 56, Sub ID 33

This is the response message to the Input Message ECLM Get EE Age with Message ID 56, SubMsgID 25.

Example:

```
For SatID = 2 Message = a0 a2 00 13 38 21 01 02 02 00
00 00 00 00 00 02 00 00 00 00 00 00 00 00 00 60 b0 b3
```

A0A20013 - Start Sequence and Payload Length (19 bytes)

```
38 21 01 02 02 00 00 00 00 00 00 02 00 00
00 00 00 00 00 - Payload
```

00 60 b0 b3 - Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	E.g.		
Message ID	1U		0x38		Decimal 56
Sub Message ID	1U		0x21		Response to ECLM Get EE Age
numSAT ID	U1		01		This field indicates the number of times following fields are present in the message
prnNum;	U1		02		PRN number of satellite for which age is indicated in other fields.
ephPosFlag	U1		02		Ephemeris flag to indicate the type of ephemeris available for the satellite:(Position Age) 0: Invalid ephemeris, not available, 1: BE, 2: SGEE, 3: CGEE
eePosAge	U2		00 00		Age of EE in 0.01 days (Position Age)
cgeePosGPS Week	U2		00 00		GPS week of BE used in the CGEE generation; 0 if ephPosFlag is not set to 3 or set to 0.(Position Age)
cgeePosTOE	U2		00 00		TOE of BE used in the CGEE generation; 0 if ephPosFlag is not set to 3.or set to 0 (Position Age)
ephClkFlag	U1		02		Ephemeris flag to indicate the type of ephemeris available for the satellite:(Clock Age)
eeClkAge	U2		00 00		Age of EE in 0.01 days(Clock Age)
cgeeClkGPS Week	U2		00 00		GPS week of BE used in the CGEE generation; 0 if ephClkFlag is not set to 3 or set to 0.(Clock Age)
cgeeClkTOE	U2		00 00		TOE of BE used in the CGEE generation; 0 if ephClkFlag is not set to 3.or set to 0(Clock Age)

Table 6.100: ECLM EE Age Message Fields

6.44.3 ECLM SGEE Age - Message ID 56, Sub ID 34

This is the response message to the Input Message ECLM Get SGEE Age with Message ID 232, SubMsgID 26 SGEE Age and Prediction Interval has 32 bit length.

Example:

```
a0 a2 00 0a 38 22 00 00 80 ea 00 01 51 80 02
96 b0 b3 - Message
```

A0A2000A -Start Sequence and Payload Length (10 bytes)

```
38 22 00 00 80 ea 00 01 51
80 - Payload
```

02 96 b0 b3 - Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	E.g.		
Message ID	1U		0x38		Decimal 56
Sub Message ID	1U		0x22		Response to ECLM Get SGEE Age
SGEE Age	4U		00 00 80 ea		Age of the Satellite
Prediction Interval	4U		00 01 51 80		Prediction Interval

Table 6.101: ECLM SGEE Age Message Fields

6.44.4 ECLM Download Initiate Request - Message ID 56, Sub ID 35

This request is sent out if new SGEE file need is observed

Example:

```
0xA0 0xA2 0x00 0x07 0x38 0x23 0x01 0x00
0x00 0x00 0x00 0x00 0x5C 0xB0 0xB3 0xA0
0xA2 0x00 0x07 - Start Sequence and Payload Length (7 bytes)
```

```
0x38 0x23 0x01 0x00 0x00
0x00 0x00 - Payload
```

0x00 0x5C 0xB0 0xB3 - Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	E.g.		
Message ID	1U		0x38		Decimal 56
Sub Message ID	1U		0x23		Download initiate request
Start	1U		1		1-start 0-stop
Wait Time	4U		0	Sec	Time in seconds after which downloading should be started

Table 6.102: ECLM Download Initiate Request Message Fields

6.44.5 ECLM Erase Storage File - Message ID 56, Sub ID 36

Erase Storage file specified by NV MID

Example:

A0 A2 00 03 38 24 03 00 5F B0 B3 0xA0 0xA2 0x00 0x03 - Start Sequence and Payload Length (3 bytes)

0x38

0x24 0x03 - Payload

0x00 0x5F 0xB0 0xB3 - Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	E.g.		
Message ID	1U		0x38		Decimal 56
Sub Message ID	1U		0x24		Erase storage file
NV MID	1U		03		01: SGEE file 02: CGEE file 03: BE File

Table 6.103: ECLM Erase Storage File Message Fields

6.44.6 ECLM Update file content - Message ID 56, Sub ID 37

This message is sent to request Update file content of EE file stored on host identified by NV MID

The following gives an example for an SGEE content update message.

Example:

Message =

- A0 A2 - Start Bytes
- 00 13 38 25 03 00 08 00 00 00 b0 00
01 13 00 23 06 E0 67 03 00 - Payload
- 02 9F - Checksum
- B0 B3 - End Bytes

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1U		0x38		Decimal 56
Sub Message ID	1U		0x25		Request to Store file content
NVM ID	1U		0x03		Storage ID (1= SGEE, 2= CGEE, 3 = BE)
Size	2U		0x00 0x08		Size of content
Offset	4U		0x00 0x00 0x00 0xB0		Offset of content in given storage file
Sequence No	2U		0x00 01		Sequence number of message
Data	(size)U		0x13 0x00 0x23 0x06 0xE0 0x67 0x03 0x00		File content

Table 6.104: : ECLM Update file content - Message ID 56, Sub ID 37

Note:

Payload length: (11 + Size) bytes

6.44.7 ECLM Request File Content - Message ID 56, Sub ID 38

Request for specific file content from Host identified by NVMID

Following is example for SGEE message content request.

Example:

```
0xA0 0xA2 0x00 0x0C
      0x38 0x26 0x03 0x00 0x01 0x01 0x00 0xB0
      0x00 0x00 0x00 0x00
0x01 0x13 0xB0 0xB3 - Message
```

A0A2000C - Start Sequence and Payload Length ((6 + 2 * Blocks+ 4 * Blocks) bytes)

01 13 B0 B3 - Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1U		0x38		Decimal 56
Sub Message ID	1U		0x26		Request for file content specified by NVM ID
NVM ID	1U		0x03		Storage ID (1= SGEE, 2= CGEE, 3 = BE)
Sequence No	2U		0x0001		Sequence number of message
Blocks	1U		0x01		Number of Blocks to read
Size	(2*Blocks)U		0x00B0		Size of each block
Offset	(4*Blocks)U		0x00000000		Offset of each block in given storage file
Size and offset fields will repeat for number of Blocks					

Table 6.105: ECLM Request File Content Message Fields

6.45 Extended Ephemeris Data - Message ID 56

Message ID 56 is used by GSW2 (2.5 or above), SiRFXTac (2.3 or above), and GSW3 (3.2.0 or above), and GSWLT3 software.

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		38			56
Message Sub ID	1 U		01			1

Table 6.106: Extended Ephemeris - Message ID 56

Note:

Payload length: variable (2 bytes + Sub ID payload bytes)

6.46 GPS Data and Ephemeris Mask - Message ID 56, Sub ID 1

Output Rate: Six seconds until extended ephemeris is received

Example:

- A0A2000D – Start Sequence and Payload Length (13 bytes)
- 380101091E00000E7402000001 – Payload (Message ID, Message Sub ID, time valid; GPS week = 2334; GPS TOW = 37000 seconds; request flag for satellite 30 and 1)
- 00E6B0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		0x38			56
Message Sub ID	1 U		0x01			1
GPS_TIME_VALID_FLAG	1 U		0x01			1
GPS Week	2 U	1	0x091E			2334
GPS TOW	4 U	10	0x00000E74	sec		3700
EPH_REQ_MASK	4 D		0x02000001			SVs 30 and 1

Table 6.107: GPS Data and Ephemeris Mask - Message ID 56, Sub ID 1

Name	Description
Message ID	Message ID number
Message Sub ID	Message Sub ID number
GPS_TIME_VALID_FLAG	LSB bit 0 = 1, GPS week is valid LSB bit 0 = 0, GPS week is not valid LSB bit 1 = 1, GPS TOW is valid LSB bit 1 = 0, GPS TOW is not valid
GPS Week	Extended week number. Range from 0 to no limit
GPS TOW	GPS Time of Week. Multiply by 10 to get the time in seconds. Range 0 to 604800 seconds.
EPH_REQ_MASK	Mask to indicate the satellites for which new ephemeris is needed MSB is used for satellite 32, and LSB is for satellite 1

Table 6.108: Detailed Description of GPS Data and Ephemeris Mask Parameters

Note:

GSD4e does not provide this message, as only embedded SiRFInstantFix is provided by GSD4e.

6.47 Extended Ephemeris Integrity - Message ID 56, Sub ID 2

Output Rate: Upon host's request

Example:

- A0A2000E – Start Sequence and Payload Length (14 bytes)
- 3802000000400000004000000040 – Payload (Message ID, Message Sub ID, invalid position and clocks for SVID 7, and unhealthy bit for SVID 7)
- 00FAB0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U		0x38			56
Message Sub ID	1 U		0x02			2
SAT_POS_VALIDITY_FLAG	4 D		0x00000040			flag = 1, SV = 7
SAT_CLK_VALIDITY_FLAG	4 D		0x00000040			flag = 1, SV = 7
SAT_HEALTH_FLAG	4 D		0x00000040			flag = 1, SV = 7

Table 6.109: Extended Ephemeris Integrity - Message ID 56, Sub ID 2

Name	Description
Message ID	Message ID number
Message Sub ID	Message Sub ID number
SAT_POS_VALIDITY_FLAG	1 = invalid position found, 0 = valid position SVID 1 validity flag is in LSB and subsequent bits have validity flags for SVIDs in increasing order up to SVID 32 whose validity flag are in MSB
SAT_CLK_VALIDITY_FLAG	1 = invalid clock found, 0 = valid clock SVID 1 validity flag is in LSB and subsequent bits have validity flags for SVIDs in increasing order up to SVID 32 whose validity flag are in MSB
SAT_HEALTH_FLAG	1 = unhealthy satellite, 0 = healthy satellite SVID 1 health flag is in the LSB and subsequent bits have health flags for SVIDs in increasing order up to SVID 32 whose validity flag are in MSB

Table 6.110: Detailed Description of Extended Ephemeris Integrity Parameters

Note:

GSD4e does not provide this message, as only embedded SiRFInstantFix is provided by GSD4e.

6.48 Extended Ephemeris Integrity - Message ID 56, Sub ID 3

This is the ephemeris status response message. It is output in response to Poll Ephemeris Status message Message ID 232, Sub ID 2.

Name	Bytes	Description
Message ID	1	hex 0x38, Decimal 56
Message Sub ID	1	Message Sub ID, 3
The following data are repeated 12 times:		
SVID	1	Satellite PRN, range 0-32
Source	1	Source of this ephemeris ⁽¹⁾
Week	2	Week number for ephemeris
Time of ephemeris	2	toe: effective time of week for ephemeris (seconds / 16, range 0 to 37800)
Integrity	1	Not used
Age	1	Age of ephemeris (days). Bit 0 to 3 contain the age of the ephemeris. Bit 4 and bit 5 are bit-mapped to indicate the source of ephemeris. * When bit 4 is set, the source is server-generated. * When bit 5 is set, the source is client-generated.

Table 6.111: Extended Ephemeris Integrity - Message ID 56, Sub ID 3

⁽¹⁾ Source for ephemeris: 0 = none; 1 = from network aiding; 2 = from SV; 3 = from extended ephemeris aiding

Note:

Payload length: 98 bytes

The Poll Ephemeris Status input message includes a satellite ID mask that specifies the satellite PRN codes to output. This message reports on the ephemeris of the requested satellites, up to a maximum of 12. If more than 12 PRN codes are requested, this message reports on the 12 with the lowest PRN codes. If the receiver does not have data for a requested PRN, the corresponding fields are set to 0. If fewer than 12 satellites are requested, the unused fields in the message are set to 0.

6.49 EE Provide Synthesized Ephemeris Clock Bias Adjustment - Message ID 56, Sub ID 4

Output Rate: Variable

Example:

- A0A20056 – Start Sequence and Payload Length (84 bytes)
- 3804 0170801E000000 00000000000000 00000000000000 00000000000000
00000000000000 00000000000000 00000000000000 00000000000000
00000000000000 00000000000000 00000000000000 00000000000000

(Payload, Message ID, Sub ID, SV_ID, SE_TOE and Clock_Bias_Adjust for 12 satellites).
- 3992B0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)
		Scale	Example		Scale
Message ID	1		0x38		Decimal 56
Message Sub ID	1		0x04		Message Sub_ID for the Ephemeris Extension Message
The following 3 fields are repeated 12 times					
SV_ID	1	1		Dimensionless	SV_ID = 0 means fields SE_TOE and Clock_Bias_Adjust are invalid
SE_TOE	2	2^4		Seconds	The TOE of the synthesized Ephemeris for which the clock bias adjustment is being reported
Clock_Bias_Adjust	4	2^31		Second	Clock bias adjustment (for aff)

Table 6.112: EE Provide Synthesized Ephemeris Clock Bias Adjustment - Message ID 56, Sub ID 4

Note:

GSD4e does not provide this message, as only embedded SiRFInstantFix is provided by GSD4e.

6.50 Verified 50 bps Broadcast Ephemeris and Iono Data - Message ID 56, Sub ID 5

MID (Hex)	0x38
MID (Dec)	56
Message Name in Code	SSB_EE
SID (Hex)	0x05
SID (Dec)	5
SID Name in Code	SSB_EE_X-CORR_FREE

Table 6.113: Verified 50 bps Broadcast Ephemeris and Iono Data - Message ID 56, Sub ID 5

This message sends verified data containing broadcast ephemeris and iono parameters for Ephemeris Extension. The payload of this message is 42 bytes long, similarly to SiRF Binary Message 8, which contains 50 bps data in standard GPS ICD format. The payload here has the following sub-frames:

- Sub-frames 1, 2 and 3 containing broadcast ephemeris data that is verified to be free from cross-correlation and verified to have broadcast ephemeris with good health. These subframes would be sent per SV each time when a new broadcast ephemeris is received and is verified to be free from cross-correlation and in good health.
- Sub-frame 4 containing Klobucher ionospheric model parameters. This would be sent once only.
- Sub-frame 5 will not be present.

Field	Bytes	Scale	Unit
Message ID	U1		
Message Sub ID	U1		
Channel	U1		
SV ID	U1		
Word[10]	U4		

Table 6.114: Verified 50 bps Broadcast Ephemeris and Iono Data Message

6.51 Extended Ephemeris ACK - Message ID 56, Sub ID 255

Output Rate: Variable.

This message is returned when input Message ID 232 Message Sub ID 255 is received. See Section 5 for more details on Message ID 232.

Example:

- A0A20004 – Start Sequence and Payload Length (4 bytes)
- E8FFE8FF – Payload (ACK for Message 232 Message Sub ID 255)
- 03CEB0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Bytes	Example		Scale	Example
Message ID	1 U		E8			232
Message Sub ID	1 U		FF			255
ACK ID	1 U		E8			232
ACK Sub ID	1 U		FF			255

Table 6.115: Extended Ephemeris ACK - Message ID 56, Sub ID 255

Name	Description
Message ID	Message ID number
Message Sub ID	Message Sub ID number
ACK ID	Message ID of the message to ACK
ACK Sub ID	Message Sub ID of the message to ACK

Table 6.116: Detailed Description of Extended Ephemeris ACK Parameters

6.52 Test Mode Configuration Response - Message ID 56, Sub ID 255

This message exists from SSB and is being kept as it is so is not documented in this manual. Details of MID and SID are mentioned here for reference.

MID (Hex)	0x38
MID (Dec)	56
Message Name in Code	SSB_EE
SID (Hex)	0xFF
SID (Dec)	255
SID Name in Code	SSB_EE_ACK

Table 6.117: Test Mode Configuration Response - Message ID 56, Sub ID 255

6.53 Test Mode Output - Message ID 63, Sub ID 7

SSB MID 63 (0x3f), sub ID 7 has been defined to output suspected CW spurs.

This message contains information on four CW spurs, C/N0 estimate and frequency. This message will be output under two circumstances:

- Four CW spurs have been detected. This would completely fill one MID 63. Then, MID 63 is output with the test status set to test in progress.
- When Test Mode 7 has completed. Then, MID 63 is output with the test status indicating test completed. Any remaining CW spurs not yet output will also be included in this message.

Example:

- A0A2001B – Start Sequence and Payload Length (27 bytes)
- 3F07 01 5DF52B05 012C 5DF52D95 0125 00000000 0000
00000000 0000 (Payload, message id, sub-id, test_status, spur1_frequency, . . .).
- 0430B0B3 – Message Checksum and End Sequence

Value	Macro
63 (0x3f, 0x07)	SIRF_MSG_SSB_TEST_MODE_DATA_7

Table 6.118: Test Mode Output - Message ID 63, Sub ID 7

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
test_status	1 U	1	01	n/a		1
spur1_frequency	4 U	1	5DF52B05	Hz		1576348421
spur1_sig_to_noise	2 U	0.1	012C	dB.Hz		30.0

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
spur2_frequency	4 U	1	5DF52D95	Hz		1576349077
spur2_sig_to_noise	2 U	0.1	0125	dB.Hz		29.3
spur3_frequency	4 U	1	00000000	Hz		0
spur3_sig_to_noise	2 U	0.1	0000	dB.Hz		0
spur4_frequency	4 U	1	00000000	Hz		0
spur4_sig_to_noise	2 U	0.1	0000	dB.Hz		0

Table 6.119: Message Structure

Name	Description
test_status	Test Status. See below for details
spur1_frequency	Frequency of detected spur. 0 if not detected. See below for details.
spur1_sig_to_noise	Signal to noise of detected spur. 0 if not detected
spur2_frequency	Frequency of detected spur. 0 if not detected
spur2_sig_to_noise	Signal to noise of detected spur. 0 if not detected
spur3_frequency	Frequency of detected spur. 0 if not detected.
spur3_sig_to_noise	Signal to noise of detected spur. 0 if not detected.
spur4_frequency	Frequency of detected spur. 0 if not detected.
spur4_sig_to_noise	Signal to noise of detected spur. 0 if not detected.

Table 6.120: Detailed Description

6.53.1 Test_status

Value	Description
0	Test in progress
1	Test complete

Table 6.121: Test Status

6.53.2 Spur Frequency

The spur frequency will be the full frequency value. For example, if a CW is detected 100 kHz below L1, the spur frequency will be reported as (1575.42 MHz – 100 kHz) = 1,575,320,000 Hz.

6.54 Navigation Library Messages - Message ID 64

6.54.1 Navigation Library (NL) Auxiliary Initialization Data - Message ID 64, Sub ID 1

MID (Hex)	40
MID (Dec)	64
Message Name in Code	MID_NL_AuxData
SID (Hex)	01
SID (Dec)	1
SID Name in Code	NL_AUX_INIT_DATA

Table 6.122: Navigation Library (NL) Auxiliary Initialization Data - Message ID 64, Sub ID 1

Bytes	Binary (Hex)		Unit	ASCII (Dec)		Description
	Scale	Example		Scale	Example	
1 U		40			64	Message ID
1 U		01			1	Sub ID
4 U		0000015 5	µsec		341	Uncertainty of the initial software time estimate.
2 U		0619			1561	Whole week number of recorded position if initializing from saved position, or zero otherwise.
4 U		000067AA	sec		26538	Time of week of recorded position if initializing from saved position, or zero otherwise.
2 U		0001	100m		1	Horizontal Position Uncertainty, 2dRMS, of the recorded position if initializing from saved position, or zero otherwise.
2 U		0004	m		4	Altitude uncertainty, 1σ, of the recorded position if initializing from saved position, or zero otherwise.
1 U		30			48	Software version of the Tracker.

Bytes	Binary (Hex)		Unit	ASCII (Dec)		Description
	Scale	Example		Scale	Example	
1 U		16			22	ICD version
2 U		0038			56	HW ID
4 U			00F9C57C	Hz	16369020	Default clock rate of the Tracker's internal clock.
4 U			00017FCE	Hz	98254	Default frequency offset of the Tracker's internal clock.
4 U		0000000 6			6	Tracker System Status, see bit field definition.
4 U		0			0	Reserved

Table 6.123: Navigation Library (NL) Auxiliary Initialization Data Message

Bit Number	Field	Description
[0]	Status	0=Good 1=Bad
[1]	Cache	0=Disabled 1=Enabled
[2]	RTC Status	0=Invalid 1=Valid
[3-31]	Reserved	Reserved

Table 6.124: Navigation Library (NL) Auxiliary Initialization Data Bit Fields

6.54.2 Navigation Library (NL) Auxiliary Measurement Data - Message ID 64, Sub ID 2

MID (Hex)	40
MID (Dec)	64
Message Name in Code	MID_NL_AuxData
SID (Hex)	02
SID (Dec)	2
SID Name in Code	NL_AUX_MEAS_DATA

Table 6.125: Navigation Library (NL) Auxiliary Measurement Data - Message ID 64, Sub ID 2

Name	Bytes	Binary (Hex)		Unit	ASCII (Dec)		Description
		Scale	Example		Scale	Example	
Message ID	1 U		40			64	Message ID
Sub ID	1 U		02			2	Sub ID
SV ID	1 U		0E			14	Satellite PRN number
Status	1 U		06			6	General Tracker Status, see bit field definition.
Extended Status	1 U		02			2	Tracker Channel Status, see bit field definition.
Bit Sync Quality	1 U		FF			255	Confidence metric for bit sync.
Time Tag	4 U		DAC9762E	acqc lk		3670636078	Measurement time tag.
Code Phase	4 U		64BB16B9	2^{-11} chips		1689982649	Code Phase
Carrier Phase	4 S		230D018A	L1 cycles		588054922	Carrier Phase
Carrier Frequency	4 S		0C800F43	0.000476 Hz		209719107	Carrier Frequency
Carrier Acceleration	2 S		00000.1	m/s/s		0	Carrier Acceleration (Doppler Rate)
Millisecond number	2 U		0008			8	Millisecond number, range 0 to 19.
Bit number	4 U		0186B15E			25604446	Bit number, range 0 to 30239999.
Code corrections	4 S		0000002E	1 cycle		46	For code smoothing
Smoothed code	4 S		FFFFFF769	2^{-10} cycles		-2199	For PR smoothing
Code offset	4 S		00001900	2^{-11} chips		6400	Code offset

Name	Bytes	Binary (Hex)		Unit	ASCII (Dec)		Description
		Scale	Example		Scale	Example	
Pseudorange Noise (Code Variance if soft tracking)	2 S		002E			46	Pseudorange noise estimate (one sigma). Normalized and left-shifted 16 bits.
Delta Range Quality (AFC Variance if soft tracking)	2 S		0077			119	Delta Range accuracy estimate (one sigma). Normalized and left-shifted 16 bits.
Phase Lock Quality (N/A if soft tracking)	2 S		FFDA			-38	Phase Lock accuracy estimate. Normalized and left-shifted 8 bits.
Milliseconds uncertainty	2 S		0000			0	Not implemented
Sum Abs I	2 U		DD8A			56714	Sum I for this measurement
Sum Abs Q	2 U		0532			1330	Sum Q for this measurement
SV Bit Number	4 S		0186B130			25604400	Bit number of last SV bit available.
Mpath LOS Det Value	2 S		0002			2	Multipath line-of-sight detection value
Mpath Only Det Value	2 S		FFFF			-1	Multipath-only line-of-sight detection value
Recovery Status	1 U		00			0	Tracker Recovery Status, see bit field definition.
SW Time Uncertainty	4 U		00000065	usec		101	SW Time Uncertainty

Table 6.126: Navigation Library (NL) Auxiliary Measurement Data Message

Bit Field	Description
[0]	1 = Trickle Power Active
[1]	1 = Scalable Tracking Loop (STL) Active 0 = HW Tracking Loop (HWTL) Active
[2]	1 = SCL_MEAS Active

Table 6.127: Navigation Library (NL) Auxiliary Measurement Data Status Bit Fields

Bit Field	Description
[0]	Not use
[1]	1 = Subframe sync verified
[2]	1 = Possible cycle slip
[3]	1 = Subframe sync lost
[4]	1 = Multipath detected
[5]	1 = Multipath-only detected
[6]	1 = Weak frame sync done
[7]	Not used

Table 6.128: Navigation Library (NL) Auxiliary Measurement Data Extended Status Bit Field definitions

Bit Field	Description
[0]	1 = Weak Bit Sync (WBS) Active
[1]	1 = False Lock (not implemented)
[2]	1 = Bad PrePos, wrong Bit Sync
[3]	1 = Bad PrePos, wrong Frame Sync (not implemented)
[4]	1 = Bad PrePos, other
[5]	Not used
[6]	Not used
[7]	Not used

Table 6.129: Navigation Library (NL) Auxiliary Measurement Data Recovery Status Bit Fields

6.54.3 Navigation Library (NL) Aiding Initialization - Message ID 64, Sub ID 3

MID (Hex)	40
MID (Dec)	64
Message Name in Code	MID_NL_AuxData
SID (Hex)	03
SID (Dec)	3
SID Name in Code	NL_AUX_AID_DATA

Table 6.130: Navigation Library (NL) Aiding Initialization - Message ID 64, Sub ID 3

Name	Bytes	Binary (Hex)		Unit	ASCII (Dec)		Description
		Scale	Example		Scale	Example	
Message ID	1 U		40			64	Message ID
Sub ID	1 U		03			3	Sub ID
Position X	4 S		FFD700F9	m		-2686727	User Position X in ECEF
Position Y	4 S		FFBE5266	m		-4304282	User Position Y in ECEF
Position Z	4 S		003AC57A	m		3851642	User Position Z in ECEF
Horz Pos Unc	4 U		00007200	m		29184	Horizontal Position Uncertainty, 2 σ
Alt Unc	2 U		0064	m		100	Vertical Position Uncertainty
TOW	4 U		05265C00	msec		86400000	Software Time of Week

Table 6.131: Navigation Library (NL) Aiding Initialization Message

6.55 Message ID 65, Sub ID 192

Example:

A0A2XXXX – Start Sequence and Payload Length (4 bytes)

XXXXB0B3 – Message Checksum and End Sequence

Name	Bytes	Binary (Hex)		Unit	ASCII (Decimal)	
		Scale	Example		Scale	Example
Message ID	1 U	1	41	n/a		65
Sub ID	1U	1	C0			192
gpio_state	2D			Bitmap		

Table 6.132: Message Structure

Name	Description
Message ID	65
Sub ID	192
gpio_state	State of each GPIO, where bit 0 = GPIO 0, bit 1 = GPIO 1, etc.

Table 6.133: Detailed Description

6.56 DOP Values Output - Message ID 66

This message provides all DOP information: GDOP, PDOP, HDOP, VDOP, and TDOP. This message is sent at 1 Hz rate. The DOP values validity is determined by the DOP limit Exceeded flag in the SSB_GEODETTIC_NAVIGATION message. A value of 50 is used for any DOP of value 50 or more, and for invalid values.

MID (Hex)	0x42
MID (Dec)	66
Message Name in Code	SSB_DOP_VALUES

Table 6.134: DOP Values Output - Message ID 66

Field	Bytes	Scale	Unit	Data range (after descaling)	Description
Message ID	1				
gps_tow	4	0.001	sec	0 to 604799.999	GPS time of the week
gdop	2	0.1		0 to 50	Geometric DOP
pdop	2	0.1		0 to 50	Position DOP
hdop	2	0.1		0 to 50	Horizontal DOP
vdop	2	0.1		0 to 50	Vertical
tdop	2	0.1		0 to 50	Time DOP

Table 6.135: DOP Value Output Message

6.57 Measurement Engine - Message ID 68

Message Name	MEAS_ENG_OUTPUT
Input or Output	Output
MID (Hex)	0x44
MID (Dec)	68
Message Name in Code	MID_MEAS_ENG_OUT
SID (Hex)	See below
SID (Dec)	See below
SID Name in Code	See below

Table 6.136: Measurement Engine - Message ID 68

This message wraps the content of another OSP message and outputs it to SiRFLive. The SID of this message equals to the MID of the message to be wrapped. The wrapped content includes the entire target message, comprising the start sequence, payload length, payload content, checksum and end sequence fields, as well.

SID		Description
Hex Value	Decimal Value	
0x04	4	MID_MeasuredTracker
0xE1	225	MID_SiRFOutput
0xFF	255	MID_ASCIIData

Table 6.137: Measurement Engine Output SIDs

Name	Bytes	Binary (Hex)		Unit	ASCII (Dec)		Description
		Scale	Example		Scale	Example	
Message ID	U1						
Sub ID	U1		0xFF			255	The MID of the target message to be wrapped for output. The current value range is: 4, 225, 255.
Target Message	Variable						This is the entire target message including the message header and trailer.

Table 6.138: Measurement Engine Message Fields

6.58 Position Response - Message ID 69, Sub ID 1

MID (Hex)	0x45
MID (Dec)	69
Message Name in Code	MID_POS_MEAS_RESP
SID (Hex)	0x01
SID (Dec)	1
SID Name in Code	POS_RESP

Table 6.139: Position Response - Message ID 69, Sub ID 1

Field		Length (bits)
Message ID		8
Message Sub ID		8
POS_REQ_ID		8
POS_RESULTS_FLAG		8
POSITION_ERROR_STATUS		8
POS_ACC_MET		8
POSITION MAIN SECTION	POS_TYPE	8
	DGPS_COR	8
	MEAS_GPS_WEEK	16
	MEAS_GPS_SECONDS	32
	MEAS_LAT	32
	MEAS_LONG	32
	OTHER SECTIONS	8
Following sections from Horizontal Error to Position Correction are always present, but their validity depends on the value of OTHER_SECTIONS		
HORIZONTAL ERROR SECTION	ER_EL_ANG	8
	MAJ_STD_ER	8
	MIN_STD_ER	8
VERTICAL POSITION SECTION	HEIGHT	16
	HEIGHT_STD_ER	8

Field		Length (bits)
VELOCITY SECTION		
	HOR_VEL	16
	HEADING	16
	VER_VEL	8
	VEL_ER_EL_ANG	8
	VEL_MAJ_STD_ER	8
	VEL_MIN_STD_ER	8
	VER_VEL_STD_ER	8
CLOCK CORRECTION SECTION		
	TIME_REF	8
	CLK_BIAS	16
	CLK_DRIFT	16
	CLK_STD_ER	8
	UTC_OFF	8
POSITION CORRECTION SECTION		
	NB_SV	8
	Two following fields are repeated 16 times, only the first "NB_SV" fields are valid.	
	SV_PRN	8
	C_N0 8 bits INV_WEIGHTS	8

Table 6.140: Position Response Message

POS_REQ_ID: Position/measurement response identifier

This is the POS_REQ_ID (sent in a request) that the returned position/measurements are associated with.

POSITION_RESULTS_FLAG: Position Results flag

If set to "0x00", all fields of the position result section from POSITION_ERROR_STATUS to INV_WEIGHTS are invalid and must be set to zero. No position information (even the "no position" information) is delivered. If set to "0x01", some fields in the position result section are valid.

POSITION_ERROR_STATUS: Position Error Status

If set to 0x00, position information is delivered. POSITION MAIN SECTION is valid, plus other optional fields (see OTHER_SECTIONS field).

If set to any other value, the rest of the position results block is invalid and must be set to all zeros. The non-zero value provides information about the reason of the "no position delivered" information, according to Table 6.141.

Status	Value
Valid Position	0x00
Not Enough satellites tracked ⁽¹⁾	0x01
GPS Aiding data missing (not supported)	0x02
Need more time	0x03
No fix available after full search	0x04
Unused	0x05
Position Reporting Disabled	0x06
Rejected Position Reporting for QoP	0x07
Reserved	0x08-0xff

Table 6.141: POSITION_ERROR_STATUS Field

⁽¹⁾ This case has been added to be compatible with the reporting capabilities defined in the GSM standard. From the document, there is no clear definition when this error case should be reported.

The following list details each situation:

Valid Position: Position is available in the next fields.

Not Enough Satellites tracked: SLC is tracking some satellites already, but not enough to compute a position.

GPS Aiding data missing: Defined but not available aiding information to compute a position with satisfactory QoP.

Need more time: No position was available within the RESP_TIME_MAX requested in the last data message.

No fix available after full search: SLC went through all search strategy once and we could not compute a fix (all cases are covered here).

Position Reporting Disabled: When the QoP specification in the originating POS_REQ can not be met any longer due to a low power transition request with conflicting QoP specification, POS_RESP messages are not generated while in the conflicting low power mode. This might occur after transitioning to trickle power or push-to-fix low power mode.

Rejected Position Reporting for QoP: When the QoP specification in the originating POS_REQ could not be met due to an existing low power mode with conflicting QoP specification, the POS_REQ request is rejected and no POS_RESP messages are generated, even after transitioning out of the current low power mode.

POS_ACC_MET: Position Accuracy Flag

If set to 1 (0) then horizontal error as well as vertical error in the position are estimated to be respectively less (more) than the maximum requested horizontal error and maximum requested vertical error with a confidence level of 95%.

POS_TYPE: Position Type

The SLC shall set this field according to what is shown in Table 98 (x indicates a don't care bit).

POS_TYPE field value	Position Type
'xxxxxx00'	2D
'xxxxxx01'	3D
'xx0xxxxx'	Not a trickle power solution.
'xx10xxxx'	Trickle power solution (QoP ignored)

POS_TYPE field value	Position Type
'x00000xx'	QoP guaranteed
'xxxxx1xx'	Reserved for future use
'xxxx1xxx'	Almanac derived coarse solution
'xx01xxxx'	Reserved for future use
'x1xxxxxx'	Reverse EE candidate
All others'	(Reserved)

Table 6.142: POS_TYPE Field

Almanac derived coarse solution: Position was calculated based on one or more of the SVs having their states derived from almanac parameters as opposed to ephemerides.

Reverse EE candidate: Reverse EE processing may be used for the data provided, which is populated in the measurement section and in the SV state section.

DGPS_COR: DGPS correction type

The SLC shall set this field according to Table 6.143.

DGPS_COR field Value	Correction Type
'00'	No DGPS correction
'01'	Local DGPS correction
'02'	WAAS correction
All others	Other Corrections (Reserved)

Table 6.143: DGPS_COR Field

MEAS_GPS_WEEK: Extended GPS week number

The SLC shall set this field to the extended number of GPS weeks since the beginning of the GPS reference, in binary format, in number of weeks

Note:

For the period from August 21st 1999 23:59.47, UTC time, to around midnight the night between April 7th 2019/ April 8th 2019.

MEAS_GPS_WEEK=GPS_WEEK NUMBER+1024

Where GPS_WEEK NUMBER is the equivalent unsigned binary value of the ten most significant bits of the Z-count found in the GPS satellites broadcast message. The UTC time of the next rollover is given only approximately, as we don't know today how many extra leap seconds will have been introduced between UTC time and TAI time (International Atomic Time).

Note:

The leap seconds are defined as TAI-UTC. TAI-UTC=32s at 08/21/1999.

Note:

As of 11/19/2008: TAI is ahead of UTC by 33 seconds. TAI is ahead of GPS by 19 seconds. GPS is ahead of UTC by 14 seconds.

MEAS_GPS_SECONDS: GPS time in the week when the position was computed

The SLC shall set this field to the number of elapsed seconds since the beginning of the current GPS week, in binary format, in units of 1/1000 seconds, in the range from 0s to 604,799.999 seconds.

MEAS_LAT: Measured Latitude

The SLC shall set this field to the two's complement value of the latitude, in units of 180/232 degrees, in the range from -90 degrees to +90x(1-2⁻³¹) degrees, referenced to the WGS84 reference ellipsoid, counting positive angles north of the equator, and negative angles south of the equator.

MEAS_LONG: Measured Longitude

The SLC shall set this field to the two's complement value of the longitude, in units of 360/232 degrees, in the range from -180 degrees to +180x(1-2⁻³¹) degrees, referenced to the WGS84 reference ellipsoid, counting positive angles East of the Greenwich Meridian, and negative angles West of the Greenwich Meridian.

OTHER_SECTIONS: Indicates the validity status of other sections

The SLC shall indicate what sections are valid in the message. All non valid sections are filled with zeros. OTHER_SECTIONS consists of 8 bits; each of the bits represents one section. The mapping of the bits is listed in the following table. If a section is valid, the SLC shall set the corresponding bit to '1'; otherwise, the SLC shall set the corresponding bit to '0'. See Table 6.144 for detailed specification.

Bits in OTHER_SECTIONS	Value	SECTION
Bit 0 (LSB)	1: Valid 0: Not Valid	Horizontal Error Section
Bit 1	1: Valid 0: Not Valid	Vertical Position Section
Bit 2	1: Valid 0: Not Valid	Velocity Section
Bit 3	1: Valid 0: Not Valid	Clock Correction Section
Bit 4	1: Valid 0: Not Valid	Position Correction Section
Bit 5-7(MSB)	0	(Reserved)

Table 6.144: OTHER_SECTIONS Field

ER_EL_ANG: Error Ellipse Angle

The SLC shall set this field to the binary value of the Error Ellipse major axis angle with respect to True North in WGS84. The units shall be 180/28degrees, with a range from 0 to +180x(1-2⁻⁷) degrees, where 0 degrees is True North, and the angle is measured rotating toward the East.

MAJ_STD_ER: Major Axis Standard Deviation Error

The SLC shall set this field to the Standard Deviation along the axis specified by the ER_EL_ANG field. The GPS shall set this field according to the following table.

Exponent X	Mantissa Y	Index value I= Y + 16 X	Floating Point Value f_i	Estimated Horizontal Error (meters)
0000	0000	0	0.125	< 0.125
0000	0001	1	0.1328125	$0.125 < \sigma < 0.1328125$
X	Y	$2 \leq I \leq 253$	$0.125 (1 + Y/16) \times 2^x$	$f_{i-1} \leq \sigma < f_i$
1111	1110	254	7680	$7424 \leq \sigma < 7680$
1111	1111	255	Not Applicable	≥ 7680

Table 6.145: MAJ_STD_ER Field

MIN_STD_ER: Minor Axis Standard Deviation Error

The SLC shall set this field to the Standard Deviation perpendicular to the axis specified by the ER_EL_ANG field according to the following table.

Exponent X	Mantissa Y	Index value I= Y + 16 X	Floating Point Value f_i	Estimated Horizontal Error (meters)
0000	0000	0	0.125	< 0.125
0000	0001	1	0.1328125	$0.125 < \sigma < 0.1328125$
X	Y	$2 \leq I \leq 253$	$0.125 (1 + Y/16) \times 2^x$	$f_{i-1} \leq \sigma < f_i$
1111	1110	254	7680	$7424 \leq \sigma < 7680$
1111	1111	255	Not Applicable	≥ 7680

Table 6.146: MIN_STD_ER Field Specification

HEIGHT: Height

Units of 0.1 m in the range of -500 m to +6053.5 m with respect to WGS84 reference ellipsoid, in Unsigned Binary Offset coding. The formula to apply is:

$$\text{HEIGHT(in m)} = B \times 0.1 - 500$$

where B is the unsigned binary value of the "HEIGHT" field from 0 to 65535. "all zeros" represents -500m, "all ones" represents +6053.5m.

HEIGHT_STD_ER: Height Standard Deviation Error

The SLC shall set this field to the Vertical Error Standard Deviation as specified in the table below.

Exponent X	Mantissa Y	Index value I= Y + 16 X	Floating Point Value f_i	Estimated Vertical Error (meters)
0000	0000	0	0.125	< 0.125
0000	0001	1	0.1328125	$0.125 < \sigma < 0.1328125$
X	Y	$2 \leq I \leq 253$	$0.125 (1 + Y/16) \times 2^x$	$f_{i-1} \leq \sigma < f_i$
1111	1110	254	7680	$7424 \leq \sigma < 7680$
1111	1111	255	Not Applicable	≥ 7680

Table 6.147: HEIGHT_STD_ER Field

HOR_VEL: Horizontal Velocity

The SLC shall set this field to the horizontal velocity, in units of 0.0625 meters/second, in the range from 0 to 4095 m/s

HEADING: Heading

The SLC shall this field to the velocity heading, in units of 360/216 degrees, in the range from 0 to 360x(1-2-16) degrees. '0' degrees is True North, and the angle increases towards the East.

VER_VEL: Vertical Velocity

The SLC shall set this field to the two's complement value of Vertical Velocity, in units of 0.5m/s in the range from -64m/s to +63.5 m/s.

VEL_ER_EL_ANG: Error Ellipse Angle

The SLC shall set this field to the binary value of the Error Ellipse major axis angle with respect to True North in WGS84. The units shall be 0.75 degrees, with a range from 0 to +180x(1-2⁻⁷) degrees, where 0 degrees is True North, and the angle is measured rotating toward the East.

VEL_MAJ_STD_ER: Major Axis Standard Deviation Error

The SLC shall set this field to the Standard Deviation along the axis specified by the ER_EL_ANG field. The SLC shall set this field according to the table below.

Exponent X	Mantissa Y	Index value I= Y + 16 X	Floating Point Value f_i	Estimated Horizontal Velocity Error (meters/second)
0000	0000	0	0.125	< 0.125
0000	0001	1	0.1328125	$0.125 < \sigma < 0.1328125$
X	Y	$2 \leq I \leq 253$	$0.125 (1 + Y/16) \times 2^x$	$f_{i-1} \leq \sigma < f_i$
1111	1110	254	7680	$7424 \leq \sigma < 7680$
1111	1111	255	Not Applicable	≥ 7680 or unknown

Table 6.148: VEL_MAJ_STD_ER Field

VEL_MIN_STD_ER: Minor Axis Standard Deviation Error

The SLC shall set this field to the Standard Deviation perpendicular to the axis specified by the ER_EL_ANG field. The SLC shall set this field according to the following table.

Exponent X	Mantissa Y	Index value $I = Y + 16$ X	Floating Point Value f_i	Estimated Horizontal Velocity Error (meters/second)
0000	0000	0	0.125	< 0.125
0000	0001	1	0.1328125	$0.125 < \sigma < 0.1328125$
X	Y	$2 \leq I \leq 253$	$0.125 (1 + Y/16) \times 2^X$	$f_{i-1} \leq \sigma < f_i$
1111	1110	254	7680	$7424 \leq \sigma < 7680$
1111	1111	255	Not Applicable	≥ 7680 or unknown

Table 6.149: VEL_MIN_STD_ER Field

VER_VEL_STD_ER: Height Standard Deviation Error

The SLC shall set this field to the Vertical Error Standard Deviation as specified in the table below.

Exponent X	Mantissa Y	Index value $I = Y + 16$ X	Floating Point Value f_i	Estimated Vertical Velocity Error (meters/second)
0000	0000	0	0.125	< 0.125
0000	0001	1	0.1328125	$0.125 < \sigma < 0.1328125$
X	Y	$2 \leq I \leq 253$	$0.125 (1 + Y/16) \times 2^X$	$f_{i-1} \leq \sigma < f_i$
1111	1110	254	7680	$7424 \leq \sigma < 7680$
1111	1111	255	Not Applicable	≥ 7680 or unknown

Table 6.150: VER_VEL_STD_ER Field

TIME_REF: Time reference in clock computation

The SLC shall set this field to '0' to indicate the tie reference is the local clock. '1' value is reserved.

CLK_BIAS: Clock Bias

The SLC shall set this field to the clock bias, in the range from -429.287 seconds to $+429.287$ seconds with a minimum non-zero value of 100ns. A "floating-point" representation is used where the most significant bit is the sign, the following 5 most significant bits constitute the exponent and the 10 least significant bits constitute the mantissa.

With:

S being "0" or "1"

X being the binary value of the exponent field, ($0 \leq X \leq 31$)

Y being the binary value of the mantissa field, ($0 \leq Y \leq 1023$)

The CLOCK_BIAS parameter is given in units of 1 second by the formula:

$$\text{CLK_BIAS} = (-1)^S \cdot 100 \cdot 10^{-9} (1 + Y/1024) \cdot 2^X \text{ seconds}$$

CLK_DRIFT: Clock Drift

The SLC shall set this field to the clock drift in the range of -327.52ppm (or us/s) to $+327.52\text{ ppm}$, with a minimum non-zero value of 0.0025ppm . A "floating-point" representation is used where the most significant bit is the sign, the following 4 most significant represent the exponent, and the 11 least significant bits constitute the mantissa.

With:

S being "0" or "1"

X being the binary value of the exponent field, ($0 \leq X \leq 15$)

Y being the binary value of the mantissa field, ($0 \leq Y \leq 2047$)

The CLOCK_BIAS parameter is given in units of 1 part-per-million (or us/s) by the formula:

$$\text{CLK_DRIFT} = (-1)^S \cdot 5 \cdot 10^{-3} (1 + Y/2048) \cdot 2^X \text{ ppm}$$

CLK_STD_ER: Estimated Time Accuracy.

The SLC shall set this field as defined in Table 6.151.

Exponent X	Mantissa Y	Index value $I = Y + 16$ X	Floating Point Value f_i	Estimated Time Accuracy (Microseconds)
0000	0000	0	0.125	< 0.125
0000	0001	1	0.1328125	$0.125 < \sigma < 0.1328125$
X	Y	$2 \leq I \leq 253$	$0.125 (1 + Y/16) \times 2^X$	$f_{i-1} \leq \sigma < f_i$
1111	1110	254	7680	$7424 \leq \sigma < 7680$
1111	1111	255	Not Applicable	≥ 7680 or unknown

Table 6.151: CLK_STD_ER Field

UTC_OFF: The offset between GPS time and UTC time in units of seconds.

The SLC shall set this field to the value of the offset between GPS time and UTC time at the time of location computation in units of seconds: range of 0-255 seconds.

NB_SV: Number of Satellite Vehicles Currently Tracked

For MS-Based mode, the SLC shall set this field to the number of GPS satellites currently tracked, in the range from 1 to 10, where the binary value of the field conveys the number of satellites.

SV_PRN: Satellite PRN number

For MS-Based mode, the SLC shall set this field to the value of the PRN signal number of the SV which is being tracked. It is represented as an unsigned value in the range from 1 to 32, where the binary value of the field conveys the satellite PRN number.

C_N0: Satellite C/N0

The SLC shall set this field to the C/N0 value in units of 1 dB-Hz in the range from 0 to 60, in Unsigned binary format.

INV_WEIGHTS: Inverse of Weighting Factor in position computation

For MS-Based mode, this field has a dual purpose: -to report whether the satellite is used in the position fix, -if it used in the fix, the value of the inverse weighting factor. If the satellite is not used in the fix, INV_WEIGHTS shall be set to "0". If the satellite is used in the fix, SLC shall set INV_WEIGHTS to the inverse of the weighting factor used for the satellite, in the range from 0.125 to 3968m. A "floating-point" representation is used where the 4 most significant bits constitute the exponent and the 4 least significant bits constitute the mantissa as specified in the table below.

Exponent X	Mantissa Y	Index value $I = Y + 16$ X	Floating Point Value f_i	Inverse Weighting Factor (meters)
0000	0000	0	0.125	< 0.125
0000	0001	1	0.1328125	$0.125 < \sigma < 0.1328125$
X	Y	$2 \leq I \leq 253$	$0.125 (1 + Y/16) \times 2^x$	$f_{i-1} \leq \sigma < f_i$
1111	1110	254	7680	$7424 \leq \sigma < 7680$
1111	1111	255	Not Applicable	≥ 7680 or unknown

Table 6.152: INV_WEIGHTS Field

6.59 Measurement Response - Message ID 69, Sub ID 2

MID (Hex)	0x45
MID (Dec)	69
Message Name in Code	MID_POS_MEAS_RESP
SID (Hex)	0x02
SID (Dec)	2
SID Name in Code	MEAS_RESP

Table 6.153: Measurement Response - Message ID 69, Sub ID 2

Field	Length(bits)
Message ID	8
Message Sub ID	8
POS_REQ_ID	8

Field		Length(bits)
MEASUREMENT SECTION	GPS_MEAS_FLAG	8
	MEAS_ERROR_STATUS	8
	MEAS_GPS_WEEK	16
	MEAS_GPS_SECONDS	32
	TIME_ACCURACY	8
	NUM_SVS	8
	The following fields are repeated a number of times indicated by the value of the NUM_SVS field.	
	SV_PRN	8
	C_N0	8
	SV_DOPPLER	16
	SV_CODE_PHASE_WH	16
	SV_CODE_PHASE_FR	16
	MULTIPATH_INDICATOR	8
	PSEUDORANGE_RMS_ERROR	8

Table 6.154: Measurement Response Message

POS_REQ_ID: Position/measurement request identifier

This is the POS_REQ_ID (sent in a request) that the returned position/measurements are associated with.

GPS_MEAS_FLAG: GPS Measurement Flag

If set to 0x00, all fields of the GPS measurement section from MEAS_ERROR_STATUS to PSEUDORANGE_RMS_ERROR are invalid and must be set to zero. No GPS measurement information is delivered. If set to 0x01, some fields in the GPS measurement section are valid.

MEAS_ERROR_STATUS: GPS Measurement Error Status

If set to 0x00, GPS measurement information is delivered and the MEASUREMENT SECTION is valid. If set to any other value, the MEASUREMENT SECTION is invalid and must be set all zeros. The non zero value provides information about the reason of the "no GPS measurement delivered" information, according to Table 6.155.

MEAS_ERROR_STATUS	Value Description
0x00	Valid GPS Measurements
0x01	No Enough Satellites Tracked
0x02	GPS Aiding Data Missing
0x03	Need More Time
0x04 – 0xFE	Reserved
0xFF	Requested Location Method Not Supported

Table 6.155: MEAS_ERROR_STATUS Field

TIME_ACCURACY: Accuracy of GPS Measurement Time Tag

The SLC shall set this field to the estimated accuracy of GPS measurement time tag according to Table 6.156.

Exponent X	Mantissa Y	Index value $I = Y + 16$ X	Floating Point Value f_i	Inverse Weighting Factor (meters)
0000	0000	0	1.0	< 1.0
0000	0001	1	1.0625	$0.125 < \sigma < 1.0625$
X	Y	$2 \leq I \leq 253$	$1.0 (1 + Y/16) \times 2^X$	$f_{i-1} \leq \sigma < f_i$
1111	1110	254	61440	$59392 \leq \sigma < 61440$
1111	1111	255	Not Applicable	≥ 61440

Table 6.156: TIME_ACCURACY Field

NUM_SVS: Number of Satellite Measurements

The SLC shall set this field to the number of valid GPS measurements included in MEASUREMENT SECTION. It is represented an unsigned value in the range from 1 to 32, where the binary value of the field conveys the number of measurements. The valid value is from 1 to 16.

SV_DOPPLER: Satellite Doppler Measurement

The SLC shall set this field to the two's complement value of the measured Doppler, in units of 0.2 Hz, in the range from -6,553.6 Hz to +6,553.6 Hz.

SV_CODE_PHASE_WH: Satellite Code Phase Measurement – Whole Chips

The SLC shall set this field to the satellite code phase measured as a number of C/A code chips, in units of 1 C/A code chip, in the range from 0 to 1022 chips.

SV_CODE_PHASE_FR: Satellite Code Phase Measurement – Fractional Chips

The SLC shall set this field to the fractional value of the satellite code phase measurement, in units of 2^{-10} of C/A code chips, in the range from 0 to $(2^{-10}-1)/ 2^{-10}$ chips.

MULTIPATH_INDICATOR: Multipath Indicator

The SLC shall set this field to the value shown in Table 6.157.

MULTIPATH_INDICATOR Value	Description
'00000000'	Not Measured
'00000001'	Low, Multipath Error \leq 5 meters
'00000010'	Medium, $5 <$ Multipath Error \leq 43 meters
'00000011'	High, Multipath Error $>$ 43 meters
'00000100' – '11111111'	Reserved

Table 6.157: MULTIPATH_INDICATOR Field

PSEUDORANGE_RMS_ERROR: Pseudorange RMS Error

The SLC shall set this field to the pseudorange RMS error, in the range from 0.5m to 112m. A “floating-point” representation is used where the 3 least significant bits (Bit 0, 1, and 2) constitute the mantissa and Bit 3, 4, and 5 constitute the exponent as specified in Table 6.158.

Exponent X	Mantissa Y	Index value $I = Y + 8$ X	Floating Point Value f_i	Inverse Weighting Factor (meters)
000	000	0	0.5	$P < 0.5$
000	001	1	0.5625	$0.5 < P < 0.5625$
X	Y	$2 \leq I \leq 61$	$0.5 (1 + Y/8) \times 2^X$	$f_{i-1} \leq P < f_i$
111	110	62	112	$104 \leq P < 112$
111	111	63	Not Applicable	$112 \leq P$

Table 6.158: Pseudorange RMS Error Representation

6.60 Ephemeris Status Response - Message ID 70, Sub ID 1

MID (Hex)	0x46
MID (Dec)	70
Message Name in Code	MID_STATUS_RESP
SID (Hex)	0x01
SID (Dec)	1
SID Name in Code	EPH_RESP

Table 6.159: Ephemeris Status Response - Message ID 70, Sub ID 1

The Ephemeris Status Response message is output in response to Ephemeris Status Request message. There is at least one solicited Ephemeris Status Response output message sent in response to a received Ephemeris Status Request input message. Optionally, several more unsolicited Ephemeris Status Response output messages can follow the solicited response message, while the current session is open.

Field	Bytes	Scale	Unit
Message ID	1		
Message Sub ID	1		
GPS_TIME_FLAG	1		
EXTD_GPS_WEEK	2		
GPS_TOW	4		
EPH_STATUS_TYPE	1		
GPS_T_TOE_LIMIT	1		
NUM_SVS	1		
The following structure should repeat a number of times as indicated by the value of the "NUM_SVS" field above.			
SATID	1		
SAT_INFO_FLAG	1		
GPS_WEEK	2		
GPS_TOE	2		
IODE	1		
AZIMUTH	2		
ELEVATION	1		

Table 6.160: Ephemeris Status Response Message

GPS_TIME_FLAG: Flag for the GPS time section

Bit0 -> isExtdGPSWeekValid {0,1} = {FALSE, TRUE}

Bit1 -> isGPSTOWValid {0,1} = {FALSE, TRUE}

EXTD_GPS_WEEK: Extended GPS week number

The SLC shall fill in the current GPS week. This field is only valid if isExtdGPSWeekValid (GPS_TIME_FLAG) is TRUE.

GPS_TOW: GPS time of week

The SLC shall fill in the current GPS time of week in the unit of 0.1 seconds. This field is only valid if isGPSTOWValid (GPS_TIME_FLAG) is TRUE.

EPH_STATUS_TYPE: The type of ephemeris status report

If set to 1 -> Aiding server shall make the decision on what to send. The SLC does not provide parameters from "GPS T-TOE Limit" to the "SatList" structure. The server can send all available in visible list, or all satellites that the server has.

If set to 3, "Status Report" -> The SLC shall fill parameters from "GPS T-TOE Limit" to the "SatList" structure with the current satellite states in SLC. The SLC may fill each SatList element partially or fully based on the information it has about the satellite:

- SATID=0 implies that the SLC has no ephemeris information about the satellite
- SATID only
- SATID with GPS_WEEK, GPS_TOE, IODE
- SATID with GPS_WEEK, GPS_TOE, IODE, AZIMUTH & ELEVATION
- SATID with AZIMUTH and ELEVATION

The CP or the server shall decide on what aiding to send based on this information.

All other values are invalid.

GPS_T_TOE_LIMIT: Tolerance of the TOE age

GPS time of ephemeris time tolerance, in unit of hours. The valid range is from 0 to 10. This parameter is currently set to 2.

NUM_SVS: Number of satellites

This is the number of satellites for which ephemeris status parameters are given by this message.

SATLIST: A structure that contains satellite ephemeris status information

This is a structure containing the following sub-elements This structure can be repeated up to 32 times. SATID The satellite ID (PRN number) A value of zero means SATID is invalid.

SAT_INFO_FLAG: The satellite info flag

If this flag is set to 0, the parameters from GPS_WEEK to ELEVATION are not valid. If bit 0 of this flag is set to 1, the parameters from GPS_WEEK to IODE are valid. If bit 1 of this flag is set to 1, the parameters from AZIMUTH to ELEVATION are valid. Otherwise, the specified parameters are not valid. If bit 2 (SLC_EPH_REQ) is set to 1, the corresponding satellite requires ephemeris aiding as determined by the SLC internal algorithm.

GPS_WEEK: The GPS week number

The GPS week of the ephemeris in SLC for SATID. Value={0...1023} For an invalid satellite, this value should be set to 0.

GPS_TOE: The GPS time of ephemeris

GPS time of ephemeris in hours of the latest ephemeris set contained by the SLC for satellite SATID. For an invalid satellite, this value should be set to 0.

IODE: The issue of data of ephemeris Issue of Data Ephemeris for SATID

For an invalid satellite, this value should be set to 0.

AZIMUTH: Azimuth angle of the GPS satellite

The SLC shall set this field to the azimuth, in units of 1 degree. The valid value is from 0 to 359 degrees. The CP shall set this field to 0xFFFF if the azimuth angle is unknown.

ELEVATION: Elevation angle of the GPS satellite

The SLC shall set this field to the elevation angle, in units of 1 degree. The valid value is form -90 to 90 degrees. The CP shall set this field to 0xFF if the elevation angle is unknown

6.61 Almanac Response - Message ID 70, Sub ID 2

MID (Hex)	0x46
MID (Dec)	70
Message Name in Code	MID_STATUS_RESP
SID (Hex)	0x02
SID (Dec)	2
SID Name in Code	ALM_RESP

Table 6.161: Almanac Response - Message ID 70, Sub ID 2

The Almanac Response message is output in response to Almanac Request message.

Field	Length (nr of Bits)	Scale Factor	Unit
Message ID	8		
Message Sub ID	8		
ALM_DATA_FLAG	8	N/A	N/A
EXTD_GPS_WEEK	16	N/A	weeks
GPS_TOW	32	0.1	seconds
NUM_SVS	8		
The structure of almanac parameters below shall repeat a number of times as indicated by the value of the NUM_SVS field above.			
ALM_VALID_FLAG	8	N/A	N/A
ALM_SV_PRN_NUM	8	N/A	N/A
ALM_WEEK_NUM	16	N/A	N/A
ALM_ECCENTRICITY	16	2^{-21}	dimensionless
ALM_TOA	8	2^{12}	Seconds
ALM_DELTA_INCL	16	2^{-19}	semi-circles
ALM_OMEGADOT	16	2^{-38}	semi-circles/sec.
ALM_A_SQRT	24	2^{-11}	meters
ALM_OMEGA_0	24	2^{-23}	semi-circles
ALM_OMEGA	24	2^{-23}	semi-circles
ALM_M0	24	2^{-23}	semi-circles
ALM_AF0	16	2^{-20}	Seconds
ALM_AF1	16	2^{-38}	sec/sec

Table 6.162: Almanac Response Message

All parameters (from ALM_VALID_FLAG to ALM_AF1) have the same definition as the ones defined in Section 6.1 (AI3 Request) except that ALM_WEEK_NUM is the week number of the corresponding subalmanac.

ALM_DATA_FLAG: Flag for each data section

Bit 0 -> isAlmanacValid {0,1} = {No almanac data, at least one sub-almanac present in the message}

Bit1 -> isExtdGPSWeekValid {0,1} = {FALSE, TRUE}

Bit2 -> isGPSTOWValid {0,1} = {FALSE, TRUE}

EXTD_GPS_WEEK: Extended GPS week number

The SLC shall fill in the current GPS week. This field is only valid if isExtdGPSWeekValid (ALM_DATA_FLAG) is TRUE.

GPS_TOW: GPS time of week

The SLC shall fill in the current GPS time of week in the unit of 0.1 seconds. This field is only valid if isGPSTOWValid (ALM_DATA_FLAG) is TRUE.

NUM_SVS: Number of satellites

This is the number of satellites for which almanac information is being given with this message.

6.62 Broadcast Ephemeris Response - Message ID 70, Sub ID 3

MID (Hex)	0x46
MID (Dec)	70
Message Name in Code	MID_STATUS_RESP
SID (Hex)	0x03
SID (Dec)	3
SID Name in Code	B_EPH_RESP

Table 6.163: Broadcast Ephemeris Response - Message ID 70, Sub ID 3

The Broadcast Ephemeris Response message is output in response to Broadcast Ephemeris Request message.

Field	Length (bits)	Scale Factor	Unit
Message ID			
Message Sub ID			
RESERVED	8	N/A	N/A
IONO_FLAG	8	N/A	N/A
ALPHA_0	8	2 ⁻³⁰	Seconds
ALPHA_1	8	2 ⁻²⁷	sec/semi-circles
ALPHA_2	8	2 ⁻²⁴	sec/(semi-circles) ²
ALPHA_3	8	2 ⁻²⁴	sec/(semi-circles) ³
BETA_0	8	2 ¹¹	Seconds
BETA_1	8	2 ¹⁴	sec/semi-circles
BETA_2	8	2 ¹⁶	sec/(semi-circles) ²
BETA_3	8	2 ¹⁶	sec/(semi-circles) ³
TIME_FLAG	8	N/A	N/A
EXTD_GPS_WEEK	16	1	Week
GPS_TOW	32	0.1	Seconds
NUM_SVS	8		

Field	Length (bits)	Scale Factor	Unit
The following fields are repeated a number of times indicated by the value of the NUM_SVS field above.			
EPH_FLAG	8	N/A	N/A
HEALTH	8	N/A	N/A
GPS_WEEK	16	N/A	N/A
SV_PRN_NUM	8	N/A	N/A
URA_IND	8	N/A	N/A
IODE	8	N/A	N/A
C_RS	16	2^{-5}	Meters
DELTA_N	16	2^{-43}	semi-circles/sec
M0	32	2^{-31}	semi-circles
C_UC	16	2^{-29}	Radians
ECCENTRICITY	32	2^{-33}	N/A
C_US	16	2^{-29}	Radians
A_SQRT	32	2^{-19}	meters
TOE	16	2^4	Seconds
C_IC	16	2^{-29}	Radians
OMEGA_0	32	2^{-31}	semi-circles
C_IS	16	2^{-29}	Radians
ANGLE_INCLINATION	32	2^{-31}	semi-circles
C_RC	16	2^{-5}	Meters
OMEGA	32	2^{-31}	semi-circles
OMEGADOT	32	2^{-43}	semi-circles/sec

Field	Length (bits)	Scale Factor	Unit
IDOT	16	2 ⁻⁴³	semi-circles/sec
TOC	16	2 ⁴	Seconds
T_GD	8	2 ⁻³¹	Seconds
AF2	8	2 ⁻⁵⁵	sec/sec2
AF1	16	2 ⁻⁴³	sec/sec
AF0	32	2 ⁻³¹	Seconds

Table 6.164: Broadcast Ephemeris Response Message

TIME_FLAG: Time parameter validity flag

The SLC shall set this field to 1 if the following fields from EXT_D_GPS_WEEK to GPS_TOW are valid. If the fields are not valid, the SENDER shall set this field and the following fields from EXT_D_GPS_WEEK to GPS_TOW to 0.

EXTD_GPS_WEEK: Extended GPS week number

This is the extended GPS week number of the current time of the current time inside the SLC.

GPS_TOW: GPS time of week

This is the time of week in unit of 0.1 seconds of the current time inside the SLC.

NUM_SVS: Number of satellites

This is the number of satellites for which broadcast ephemeris is being given with this message. This needs to match the NUM_SVS field of the "Broadcast Ephemeris Request" message, for which this is the response pair. Please see *A13 Request* for description of all other fields.

HEALTH: Broadcast Ephemeris Health

This field is used to indicate the health of the satellite. A value of 0 means the satellite is health, a value of 1 means the satellite is unhealthy.

6.63 Time Frequency Approximate Position Status Response - Message ID 70, Sub ID 4

MID (Hex)	0x46
MID (Dec)	70
Message Name in Code	MID_STATUS_RESP
SID (Hex)	0x04
SID (Dec)	4
SID Name in Code	TIME_FREQ_APPROX_POS_RESP

Table 6.165: Time Frequency Approximate Position Status Response - Message ID 70, Sub ID 4

The Time Frequency Approximate Position Status Response message is output in response to Time Frequency Approximate Position Status Request message. Each time a Time Frequency Approximate Position Status Request message is received, a Time Frequency Approximate Position Status Response message or a Reject message should be sent.

Field	Bytes	Scale	Unit
Message ID	1		
Sub Message ID	1		
STATUS_RESP_MASK	1		
GPS_WEEK	2		
GPS_TOW	4		
STATUS_TIME_ACC_SCALE	1		
STATUS_TIME_ACCURACY	1		
STATUS_FREQ_ACC_SCALE	1		
STATUS_FREQ_ACCURACY	1		
STATUS_SCALED_FREQ_OFFSET	2	1	Hz
STATUS_FREQ_TIME_TAG	4		
SLC_HOR_UNC	4		
SLC_VER_UNC	2		
SPARE	8		

Table 6.166: Time Frequency Approximate Position Status Response Message

STATUS_RESP_MASK: status response mask

When Bit 0 (LSB) of this mask is set to 1, GPS_WEEK is valid; 0 otherwise. When Bit 1 of this mask is set to 1, GPS_TOW is valid; 0 otherwise. When Bit 2 of this mask is set to 1, STATUS_TIME_ACC_SCALE and STATUS_TIME_ACCURACY are valid; 0 otherwise. When Bit 3 of this mask is set to 1, STATUS_FREQ_ACC_SCALE and STATUS_FREQ_ACCURACY are valid; 0 otherwise. When Bit 4 of this mask is set to 1, SLC_HOR_UNC is valid; 0 otherwise. When Bit 5 of this mask is set to 1, SLC_VER_UNC is valid; 0 otherwise.

GPS_WEEK: extended GPS week

This is the internal extended GPS week number. GPS_TOW This is the internal GPS_TOW time of the receiver, rounded to the nearest second.

STATUS_TIME_ACC_SCALE: scale factor for the time accuracy status

This represents the scale factor used to encode the internal time accuracy of the receiver.
STATUS_TIME_ACC_SCALE =0 => time_scale = 1.0 STATUS_TIME_ACC_SCALE=1 => time_scale = 0.125
STATUS_TIME_ACC_SCALE=0xFF => internal time accuracy unknown All other values are reserved.

STATUS_TIME_ACCURACY: time accuracy status

This is the internal time accuracy of the receiver. If time_scale (obtained from STATUS_TIME_ACC_SCALE) is 1.0, Table 5.172 shall be used to get the time accuracy. If time_scale (obtained from STATUS_TIME_ACC_SCALE) is 0.125, Table 5.172 shall be used to get the time accuracy. A value of 0xFF means "unknown accuracy"

STATUS_FREQ_ACC_SCALE: scale factor of the frequency accuracy

This represents the scale factor used to encode the internal frequency accuracy of the receiver.
STATUS_FREQ_ACC_SCALE =0 => frequency_scale = 0.00390625 STATUS_FREQ_ACC_SCALE=0xFF => internal frequency accuracy unknown All other values are reserved.

STATUS_FREQ_ACCURACY: frequency accuracy status

This is the internal frequency accuracy of the receiver. If frequency_scale (obtained from STATUS_FREQ_ACC_SCALE) is 0.00390625, Table 5.176 shall be used to get the frequency accuracy. A value of 0xFF means "unknown accuracy"

STATUS_SCALED_FREQ_OFFSET: Scaled frequency offset

This parameter to the scaled frequency offset from its nominal clock drift as measured by the receiver, in Units of 1Hz. This offset is represented as a 16-bit two's complement.

For example, the measured clock drift of receiver is 97000 Hz. This field would be returned as 96250Hz – 97000 = -750Hz.

STATUS_FREQ_TIME_TAG: Time tag of the frequency status

This field shall be set to the time when the frequency status measurement is taken. The unit and encoding of this parameter is the same as TIME_TAG used in Section 5.70.

SLC_HOR_UNC: This field shall be set to the estimated horizontal uncertainty of the internal approximate position.

The unit is 1 meter. A value of 0xFFFFFFFF means "unknown".

SLC_VER_UNC:

This field shall be set to the estimated vertical uncertainty of the internal approximate MS location. The error shall correspond to the standard deviation of the error in MS altitude in units of 0.1 meters in the range of 0 meters to 6553.5 meters, in Unsigned Binary Offset coding. The formula to apply is:

$$EST_VER_ER \text{ (in m)} = V \times 0.1$$

where V is the unsigned binary value of the "EST_VER_ER" field from 0 to 65534. 0x0000 represents 0m, 0xFFFF represents "unknown".

6.64 Channel Load Response - Message ID 70, Sub ID 5

MID (Hex)	0x46
MID (Dec)	70
Message Name in Code	MID_STATUS_RESP
SID (Hex)	0x05
SID (Dec)	5
SID Name in Code	CH_LOAD_RESP

Table 6.167: Channel Load Response - Message ID 70, Sub ID 5

The Channel Load Response message is output in response to Channel Load Request message. Each time a Channel Load Request message is received, a Channel Load Response message, multiple Channel Load Response messages, a Reject message, or no message should be sent. The Channel Load Response messages will be reported at a rate depending on the value of the MODE field in the Channel Load Request message. The reported values shall be calculated as the average during one entire second preceding the message transmission. They will represent a percentage of the total theoretical limit of the port at the current baud rate.

Field	Bytes	Scale	Unit
Message ID	1		
Message Sub ID	1		
PORT	1		
TOTAL_LOAD	1		
NUMBER_OF_CHANNELS	1		
The following two fields should be repeated for "NUMBER_OF_CHANNELS" times			
CHANNEL_LOAD	1		

Table 6.168: Channel Load Response Message

PORT: Serial Port A or B

This field shall be set to the port number for which the load information has been requested. "0" represents the SiRF port A and "1" represents SiRF port B. Any other value has no meaning.

TOTAL_LOAD: Total Load of the Port

This field shall be set to the percentage of the total port bandwidth of the currently opened channels. The value will range from 0 to 100.

NUMBER_OF_CHANNELS: The number of channels with data in message

This field shall be set to the number of logical channels that have load data in the response message. All currently opened channels shall be reported.

CHANNEL_LOAD: Total Load of the logical channel

This field shall be set to the load that the logical channel is using. The value will range from 0 to 100.

6.65 Client Status Response - Message ID 70, Sub ID 6

MID (Hex)	0x46
MID (Dec)	70
Message Name in Code	MID_STATUS_RESP
SID (Hex)	0x06
SID (Dec)	6
SID Name in Code	CLIENT_STATUS_RESP

Table 6.169: Client Status Response - Message ID 70, Sub ID 6

Field	Bytes	Scale	Unit
Message ID	1		
Message Sub ID	1		
STATUS	1		

Table 6.170: Client Status Response Message

STATUS: Client Status

This field shall be set to the appropriate value as specified in Table 6.171.

Bits in STATUS	Description
Bit 7-1: STATUS BITS	'xxxxxx1'0x01: No fix available after full search 'xxxx10x': OK to send (SLC ready to receive message, e.g. wake-up from standby mode) 'xxxx01x': NOT OK to send (SLC not ready to receive message, e.g. in standby mode during trickle power).
Bit 8: EXTENSION BIT	0: no byte extension 1: reserved

Table 6.171: STATUS Field

Bit 7-1: STATUS BITS: This field contains a bit pattern describing

Bit 8: EXTENSION BIT: In the future, this bit will be used as a condition acceptable value is 0 (no extensions)

6.66 OSP Revision Response - Message ID 70, Sub ID 7

MID (Hex)	0x46
MID (Dec)	70
Message Name in Code	MID_STATUS_RESP
SID (Hex)	0x07
SID (Dec)	7
SID Name in Code	OSP_REV_RESP

Table 6.172: OSP Revision Response - Message ID 70, Sub ID 7

Field	Bytes	Scale	Unit
Message ID	1		
Message Sub ID	1		
OSP Revision	1	*10	unitless

Table 6.173: OSP Revision Response Message

The OSP Revision field has a valid range of 1.0 – 25.5. Since there is one byte allotted, the value in this field should be divided by 10 to get the revision number (ex. A value of 10 in this field translates to OSP rev 1.0).

6.67 Serial Port Settings Response - Message ID 70, Sub ID 8

MID (Hex)	0x46
MID (Dec)	70
Message Name in Code	MID_STATUS_RESP
SID (Hex)	0x08
SID (Dec)	8
SID Name in Code	SERIAL_SETTINGS_RESP

Table 6.174: Serial Port Settings Response - Message ID 70, Sub ID 8

The Serial Port Settings Response message is output in response to Serial Port Settings Request message. Each time a Serial Port Settings Request message is received, a Serial Port Settings Response message or a Reject message should be sent.

Field	Bytes	Scale	Unit
Message ID	1		
Message Sub ID	1		
PORT	1		
BAUD_RATE	4		
ACK_NUMBER	1		

Table 6.175: Serial Port Settings Response Message

PORT: Serial Port A or B

This field shall be set to the port number that has been configured. “0” represents the port A and “1” represents the port B. Any other value has no meaning.

BAUD_RATE: Baud Rate

This field shall be set to the desired baud rate. The current baud rates that are supported are 4800, 9600, 19200, 38400, 57600, and 115200. Any other value is illegal and is not supported. The Baud rate shall be coded as its equivalent binary value.

Example 1: “4800 bps” shall be coded as “000012C0” in hexadecimal equivalent.

Example 2: “115200bps” shall be coded “0001C200” in hexadecimal equivalent.

Note:

4e Only: Operation at speeds below 38400 carries risk of dropped messages when using SGEE

ACK_NUMBER: Acknowledge Number

This field can take 2 values only, “1” and “2”. In the serial port settings protocol, two acknowledgements shall be sent, one at the old baud rate (“1”), and the second one at the new baud rate (“2”). This field allows to distinguish between both acknowledges.

6.68 Tx Blanking Response - Message ID 70, Sub ID 9

MID (Hex)	0x46
MID (Dec)	70
Message Name in Code	MID_STATUS_RESP
SID (Hex)	0x09
SID (Dec)	9
SID Name in Code	TX_BLANKING_RESP

Table 6.176: Tx Blanking Response - Message ID 70, Sub ID 9

The Tx Blanking Response message is output in response to Tx Blanking Request message. Each time a Tx Blanking Request message is received, a Tx Blanking Response message should be sent.

Field	Bytes	Scale	Unit
Message ID	1		
Message Sub ID	1		
ACK_NACK	1		
Reserved	1		

Table 6.177: Tx Blanking Response Message

ACK_NACK: Acknowledge or Non-Acknowledge

The value 0 represents ACK, and the value 1 represents NACK. NACK shall be sent if the requested Tx Blanking mode is not supported.

6.69 Sensor Data Output Messages - Message ID 72

MID (Hex)	0x48
MID (Dec)	72
Message Name in Code	MID_SensorData
SID (Hex)	Listed below
SID (Dec)	Listed below
SID Name in Code	Listed below

Table 6.178: Sensor Data Output Messages - Message ID 72

Bit Field	Description
0x01	SENSOR_READINGS
0x02	FACTORY_STORED_PARAMETERS
0x03	RCVR_STATE
0x04	POINT_N_TELL_OUTPUT
0x05	SENSOR_CALIBRATION_PARAMS

Table 6.179: Sensor Control Input Sub IDs

6.69.1 Sensor Data Readings Output - Message ID 72, Sub ID 1

Message Name	SENSOR_DATA
Input or Output	Output
MID (Hex)	0x48
MID (Dec)	72
Message Name in Code	MID_SensorData
SID (Hex)	0x01
SID (Dec)	1
SID Name in Code	SENSOR_READINGS

Table 6.180: Sensor Data Readings Output - Message ID 72, Sub ID 1

The message which is sent from the Measurement Engine to host containing sensor data as described in the table below. This message will be logged such that the sensor data can be post processed in NavOffline.

Name	Bytes	Binary (Hex)		Unit	ASCII (Dec)		Description
		Scale	Example		Scale	Example	
Message ID	U1		0x48			72	SENSOR_DATA
Sub ID	U1		0x01			1	SENSOR_READINGS
SENSOR_ID	U2					24	Identification for sensor
DATA_SET_LENGTH	U1					6	Number of Bytes per sensor data set
NUM_DATA_SET	U1					10	Number of data sets in the message
DATA_MODE	U1					0	0 - Raw, 1 - Average,

Name	Bytes	Binary (Hex)		Unit	ASCII (Dec)		Description
		Scale	Example		Scale	Example	
TIMESTM P1	U4					1163496250	Time stamp for Data set 1
DATA_1_XS1	U1					7	Data for Axis 1 for Set 1 MSB
...	U1					120	Data for Axis 1 for Set 1 LSB
DATA_2_XS1	U1					7	Data for Axis 2 for Set 1 MSB
...	U1					135	Data for Axis 2 for Set 1 LSB
DATA_3_XS1	U1					10	Data for Axis 3 for Set 1 MSB
...	U1					31	Data for Axis 3 for Set 1 LSB
TIMESTM P2	U4					1163823798	Time stamp for Data set 2
DATA_1_XS2	U1					7	Data for Axis 1 for Set 2 MSB
...	U1					127	Data for Axis 1 for Set 2 LSB
DATA_2_XS2	U1					7	Data for Axis 2 for Set 2 MSB
...	U1					143	Data for Axis 2 for Set 2 LSB
DATA_3_XS2	U1					10	Data for Axis 3 for Set 2 MSB
...	U1					31	Data for Axis 3 for Set 2 LSB
...							
TIMESTM P10	U4					1166442866	Time stamp for Data set 10

Name	Bytes	Binary (Hex)		Unit	ASCII (Dec)		Description
		Scale	Example		Scale	Example	
DATA_1_XS10	U1					7	Data for Axis 1 for Set 10 MSB
...	U1					120	Data for Axis 1 for Set 10 LSB
DATA_2_XS10	U1					7	Data for Axis 2 for Set 10 MSB
...	U1					131	Data for Axis 2 for Set 10 LSB
DATA_3_XS10	U1					10	Data for Axis 3 for Set 10 MSB
...	U1					48	Data for Axis 3 for Set 10 LSB

Table 6.181: Sensor Data Readings Output Message Fields

SENSOR_ID: Identification for sensor.

This can be the slave device address of the sensor. This field can support 10 bit addressing.

DATA_SET_LENGTH: Number of Bytes per sensor data set.

Number of bytes would be 2, 4, or 6 based on 1,2, or 3 sensor axes NUM_DATA_SET Number of data sets in the message

DATA_MODE: Date Mode.

Describes if the data is raw or averaged. Bit map is as follows: 0 - Raw, 1 - Average, 2- Sliding median, 3 through 15 – reserved, 16 through 32: Error codes TIMESTMP1 Time stamp for Data set 1. Time stamp is 4 Bytes of AcqClkCount recorded at the time of sampling sensor data.

DATA_1_XS1: Data for Axis 1 for Set 1

...

DATA_1_XS_NXS: Data for Axis (NUM_AXES) for Set 1

TIMESTMP2 : Time stamp for Data set 2.

Time stamp is 4 Bytes of AcqClkCount recorded at the time of sampling sensor data

DATA_2_XS1: Data for Axis 1 for Set 2

... 2 ...

DATA_2_AXIS_NXS: Data for Axis (NUM_AXES) for Set 2

...

TIMESTMP_ND: Time stamp for Data set ND.

Time stamp is 4 Bytes of AcqClkCount recorded at the time of sampling sensor data

DATA_ND_XS1: Data for Axis 1 for Set ND

... 2 ...

DATA_ND_AXIS_NXS: Data for Axis (NUM_AXES) for Set ND

Note:

1. The sensor data message is being sent for each sensor separately.
2. This is a variable length message. The message payload length will be contained in the header of the message.
3. Only ADC counts for sensor measurements are being sent across. Conversion into appropriate units will be performed on the host. Host will have the configuration information with regards to each sensor identified with SENSOR_ID.
4. Time stamp is applied to the sensor data after the data has been read. For example, In case of reading 3-axes accelerometer, time-stamp will be applied to the acceleration data after all three axes have been read.
5. If the DATA_MODE is selected for averaging or sliding median, the applied time stamp would correspond to the time stamp for last sample collected.

6.69.2 Sensor Data Readings Output - Message ID 72, Sub ID 2

Message Name	SENSOR_DATA
Input or Output	Output
MID (Hex)	0x48
MID (Dec)	72
Message Name in Code	MID_SensorData
SID (Hex)	0x02
SID (Dec)	2
SID Name in Code	FACTORY_STORED_PARAMTERS

Table 6.182: Sensor Data Readings Output - Message ID 72, Sub ID 2

This message will only be sent out after sensor initialization if any of the NUM_INIT_REG_READ_SEN_ is a non-zero value in the sensor configuration message received from the Host. This message will transfer a set of parameters that are stored in sensor EPROM at the time of factory testing. These parameters need to be read at the time of sensor module initialization and sent over to Host such that they can be used in subsequent calculations. These parameters also need to be logged such that they can be used in post processing in NavOffline.

Name	Bytes	Binary (Hex)		Unit	ASCII (Dec)		Description
		Scale	Example		Scale	Example	
Message ID	U1		0x48			72	SENSOR_DATA
Sub ID	U1		0x02			2	FACTORY_STORED_PARAMETERS
SENSOR_ID	U2						Sensor ID

Name	Bytes	Binary (Hex)		Unit	ASCII (Dec)		Description
		Scale	Example		Scale	Example	
NUM_INIT_READ_REG_SEN	1						Number of registers to read from Sensor at the time of initialization
NUM_BYTES_REG1	1						Data read from Register 1 address at initialization
DATA_REG1	NUM_BYTES_REG1						Number of bytes read from Register 1 at initialization
NUM_BYTES_REG2	1						Data read from Register 2 address at time of initialization
DATA_REG2	NUM_BYTES_REG2						Number of bytes read from Register 2 at initialization
...							

Table 6.183: Sensor Data Readings Output Message Fields

SENSOR_ID: Identification for sensor.

This identification is the unique slave device address of the sensor. This field can support 10 bit addressing.

NUM_INIT_READ_REG_SEN: Number of registers to read from Sensor at the time of initialization.

NUM_BYTES_REG1: Data read from Register 1 address at time of initialization

DATA_REG1

NUM_BYTES_REG1: Number of bytes read from Register 1 at initialization

NUM_BYTES_REG2: Data read from Register 2 address at time of initialization

DATA_REG2

NUM_BYTES_REG2: Number of bytes read from Register 2 at initialization

6.69.3 Receiver State Output - Message ID 72, Sub ID 3

Message Name	SENSOR_DATA
Input or Output	Output
MID (Hex)	0x48
MID (Dec)	72
Message Name in Code	MID_SensorData
SID (Hex)	0x03
SID (Dec)	3
SID Name in Code	RCVR_STATE

Table 6.184: Receiver State Output - Message ID 72, Sub ID 3

This output message is sent each time the sensory logic perceives a signifying change in the state of the GPS receiver device. This is an unsolicited notification which can be enabled/disabled in the (MID_SensorControl, SENSOR_SWITCH) input message.

Name	Bytes	Binary (Hex)		Unit	ASCII (Dec)		Description
		Scale	Example		Scale	Example	
Message ID	U1		0x48			72	SENSOR_DATA
Sub ID	U1		0x03			3	RCVR_STATE
TIME TAG	U4					12345	Acquisition clock count
RCVR_PHYSICAL_STATE	U1		0x01			1	State of the Receiver: 0 – Unknown 1 – Stationary 2 – Moving 3 – Reserved 1 4 – Reserved 2 5 – Reserved 3

Table 6.185: Receiver State Output Message Fields

6.69.4 Sensor Point and Tell - Message ID 72, Sub ID 4

Message Name	SENSOR_DATA
Input or Output	Output
MID (Hex)	0x48
MID (Dec)	72
Message Name in Code	MID_SensorData
SID (Hex)	0x04
SID (Dec)	4
SID Name in Code	POINT_N_TELL_OUTPUT

Table 6.186: Sensor Point and Tell - Message ID 72, Sub ID 4

This output message is sent out at the rate at which sensor data processing (set in sensor configuration message) is being done. This message can be enabled/disabled in the SENSOR_SWITCH input message.

Name	Bytes	Binary (Hex)		Unit	ASCII (Dec)		Description
		Scale	Example		Scale	Example	
Message ID	U1		0x48			72	SENSOR_DATA
Sub ID	U1		0x04			4	POINT_N_TELL_OUTPUT
TIME TAG	U4					12345	Acquisition clock count
LATITUDE	S4			Degrees			In degrees (+ = North) x 10 ⁷
LONGITUDE	S4			Degrees			In degrees (+ = East) x 10 ⁷
HEADING	U2			Degrees		21100	In degrees x 10 ²

Name	Bytes	Binary (Hex)		Unit	ASCII (Dec)		Description
		Scale	Example		Scale	Example	
PITCH	S2			Degrees		- 9800	In degrees x 10 ²
ROLL	S2					19800	In degrees x 10 ²
HEADING UNCERTAINTY	U2			Degrees			In degrees x 10 ²
PITCH UNCERTAINTY	U2			Degrees			In degrees x 10 ²
ROLL UNCERTAINTY	U2			Degrees			In degrees x 10 ²
CALIBRATION STATUS	U1					0x21	<p>Lower 4bits Magnetic sensor calibration status: COMPASS_CALIB_UNKNOWN - 0, COMPASS_CALIBRATED - 1, COMPASS_CALIB_REQUIRED - 2, COMPASS_MAG_DISTURBED - 3</p> <p>Upper 4bits Accelerometer sensor calibration status: ACCEL_CALIB_UNKNOWN - 0, ACCEL_CALIBRATED - 1, ACCEL_CALIB_REQUIRED - 2.</p> <p>For given example 0x21 –Accelerometer requires calibration and Compass is calibrated.</p>

Table 6.187: Sensor Point and Tell Output Message Fields

6.69.5 Sensor Calibration - Message ID 72, Sub ID 5

Message Name	SENSOR_DATA
Input or Output	Output
MID (Hex)	0x48
MID (Dec)	72
Message Name in Code	MID_SensorData
SID (Hex)	0x05
SID (Dec)	5
SID Name in Code	SENSOR_CALIBRATION_PARAMS

Table 6.188: Sensor Calibration - Message ID 72, Sub ID 5

This message is used to output calibration parameters for the sensor. This is output for each sensor when the calibration parameters are read from NVM. This message is also output every time any sensor is calibrated / recalibrated.

Name	Bytes	Binary (Hex)		Unit	ASCII (Dec)		Description
		Scale	Example		Scale	Example	
Message ID	U1		0x48			72	SENSOR_DATA
Sub ID	U1		0x05			5	SENSOR_CALIBRATION_PARAMS
TIME TAG	U4					12345	Acquisition clock count
OFFSET_X	8					32.544864	Offset value. Default value is 0.
OFFSET_Y	8					53.658447	Offset value. Default value is 0.
OFFSET_Z	8					-216.648940	Offset value. Default value is 0.
SCALE_X	8					1.262020	Scale value. Default value is 1.
SCALE_Y	8					1.000000	Scale value. Default value is 1.
SCALE_Z	8					1.081126	Scale value. Default value is 1.

Table 6.189: Sensor Calibration Output Message Fields

6.70 Approximate MS Position Request - Message ID 73, Sub ID 1

MID (Hex)	0x49
MID (Dec)	73
Message Name in Code	MID_AIDING_REQ
SID (Hex)	0x01
SID (Dec)	1
SID Name in Code	APPROX_MS_POS_REQ

Table 6.190: Approximate MS Position Request - Message ID 73, Sub ID 1

Request approximate MS position.

Field	Bytes	Scale	Unit
Message ID	1		
Sub Message ID	1		

Table 6.191: Approximate MS Position Request Message

6.71 Time Transfer Request - Message ID 73, Sub ID 2

MID (Hex)	0x49
MID (Dec)	73
Message Name in Code	MID_AIDING_REQ
SID (Hex)	0x02
SID (Dec)	2
SID Name in Code	TIME_TX_REQ

Table 6.192: Time Transfer Request - Message ID 73, Sub ID 2

Field	Bytes	Scale	Unit
Message ID	1		
Sub Message ID	1		

Table 6.193: Time Transfer Request Message

6.72 Frequency Transfer Request - Message ID 73, Sub ID 3

MID (Hex)	0x49
MID (Dec)	73
Message Name in Code	MID_AIDING_REQ
SID (Hex)	0x03
SID (Dec)	3
SID Name in Code	FREQ_TX_REQ

Table 6.194: Frequency Transfer Request - Message ID 73, Sub ID 3

Field	Bytes	Scale	Unit
Message ID	1		
Sub Message ID	1		
FREQ_REQ_INFO	1		

Table 6.195: Frequency Transfer Request Message

FREQ_REQ_INFO: Information field about frequency request

The SLC shall set this field according to Table 6.196.

Bits in FREQ_REQ_INFO	Value	Description
Bit 1(LSB)	0 = single request 1 = multiple request	If single request, only one response message is requested. Bit 2 is ignored If multiple request, multiples responses are requested. Depending on Bit 2, this mode shall be turned ON or OFF
Bit 2	1 = ON 0 = OFF	Valid only if Bit 1 is 1: If ON, periodic Frequency Transfer Response mode is turned ON If OFF, periodic Frequency Transfer Response mode is stopped
Bit 3	0 = don't turn off 1 = turn off	0 = Don't turn off reference clock 1 = Turn off reference clock
Bit 4 to 8	0	Reserved

Table 6.196: FREQ_REQ_INFO Field

6.73 Nav Bit Aiding (NBA) Request - Message ID 73, Sub ID 4

MID (Hex)	0x49
MID (Dec)	73
Message Name in Code	MID_AIDING_REQ
SID (Hex)	0x04
SID (Dec)	4
SID Name in Code	NBA_REQ

Table 6.197: Nav Bit Aiding (NBA) Request - Message ID 73, Sub ID 4

This message is requesting the Nav Bit Aiding Response Messages (215 (MID_AIDING_RESP), 4 (SET_NBA_SF1_2_3)) and/or (215, (MID_AIDING_RESP), 5, (SET_NBA_SF4_5)), depending on the value of the NAVBIT_REQ_FLAG bit settings in the parameter block below. The message contains a SECTION_VALIDITY_FLAG field followed by request sections. Each request section has a SECTION_SIZE as the first byte to indicate the number of bytes in the associated section. The existence of SECTION_SIZE, and proper handling of this field by SLC and CP supports forward compatibility.

Field		Length (bits)	Description
SECTION_VALIDITY_FLAG		16	Bit 0: 0 = NAVBIT section is NOT valid 1 = NAVBIT section is valid
NAVBIT SECTION	SECTION_SIZE	8	The size of this section in bytes, including "SECTION_SIZE" field. For this release, SECTION_SIZE should be set to 6.
	SAT_MASK_NAVBIT	32	This is a bitmap representing the satellites for which subframe 1, 2, and 3 NavBit aiding is requested . If SLC requests such NAV bit aiding for the satellite represented by a bit of this field, SLC shall set that bit to '1'. The LSB (Bit 0) of this field represents satellite PRN number 1. The MSB (Bit 31) of this field represents satellite PRN 32.
	NAVBIT_REQ_FLAG	8	Bit 0: 0 => Subframe 1, 2, and 3 are NOT requested 1 => Subframe 1, 2, and 3 are requested Bit 1: 0 => Subframe 4 and 5 are NOT requested 1 => Subframe 4 and 5 are requested Bit 2 – 7: Reserved

Table 6.198: Nav Bit Aiding Request Message

6.74 Session Opening Response - Message ID 74, Sub ID 1

MID (Hex)	0x4A
MID (Dec)	74
Message Name in Code	MID_SESSION_CONTROL_RESP
SID (Hex)	0x01
SID (Dec)	1
SID Name in Code	SESSION_OPEN_RESP

Table 6.199: Session Opening Response - Message ID 74, Sub ID 1

The Session Opening Notification message is output in response to Session Opening Request message. Each time a Session Opening Request message is received, a Session Opening Notification message or a Reject message should be sent.

Field	Bytes	Scale	Unit
Message ID	1		
Message Sub ID	1		
SESSION_OPEN_STATUS	1		

Table 6.200: Verified 50 bps Broadcast Ephemeris Message

SESSION_OPEN_STATUS: Session Open Status

The field shall be set to an appropriate value as specified in Table 6.201.

Value	Description
0x00	Session Opening succeeded
0x01	Session Opening failed
0x02 to 0x7F	Reserved
0x80	Session Resume succeeded
0x81	Session Resume failed
0x82 to 0xFF	Reserved

Table 6.201: SESSION_OPEN_STATUS Field

6.75 Session Closing Notification - Message ID 74, Sub ID 2

MID (Hex)	0x4A
MID (Dec)	74
Message Name in Code	MID_SESSION_CONTROL_RESP
SID (Hex)	0x02
SID (Dec)	2
SID Name in Code	SESSION_CLOSE_RESP

Table 6.202: Session Closing Notification - Message ID 74, Sub ID 2

The Session Closing Notification message is output in response to Session Closing Request message. Each time a Session Closing Request message is received, a Session Closing Notification message or a Reject message should be sent.

Field	Bytes	Scale	Unit
Message ID	1		
Message Sub ID	1		
SESSION_CLOSE_STATUS	1		

Table 6.203: Session Closing Notification Message

SESSION_CLOSE_STATUS: Session closing status.

This field shall be set to an appropriate value as specified in the table below.

Value	Description
0x00	Session closed
0x01	Session closing failed
0x02 to 0x7F	Reserved
0x80	Session suspended
0x81	Session suspension failed
0x82 to 0xFF	Reserved

Table 6.204: SESSION_CLOSE_STATUS Field

6.76 Hardware Configuration Request - Message ID 74

MID (Hex)	0x4A
MID (Dec)	74
Message Name in Code	MID_HW_CONFIG_REQ

Table 6.205: Hardware Configuration Request - Message ID 74

Field	Bytes	Scale	Unit
Message ID	1		

Table 6.206: Hardware Configuration Request Message

6.77 ACK/NACK/ERROR Notification - Message ID 75, Sub ID 1

MID (Hex)	0x4B
MID (Dec)	75
Message Name in Code	MID_MSG_ACK_OUT
SID (Hex)	0x01
SID (Dec)	1
SID Name in Code	ACK_NACK_ERROR

Table 6.207: ACK/NACK/ERROR Notification - Message ID 75, Sub ID 1

Field	Bytes	Scale	Unit
Message ID	1		
Message Sub ID	1		
Echo Message ID	1		
Echo Message Sub ID	1		
ACK/NACK/ERROR	1		
Reserved	2		

Table 6.208: ACK/NACK/ERROR Notification Message

Value	Description
0x00	Acknowledgement
0x01 – 0xF9	Reserved
0xFA	Message ID and/or Message Sub ID not recognized
0xFB	Parameters cannot be understood by the recipient of the message
0xFC	OSP Revision Not Supported
0xFD	CP doesn't support this type of NAV bit aiding (0 during autonomous operation)
0xFE	CP doesn't accept ephemeris status response (0 during autonomous operation)
0xFF	Non-acknowledgement

Table 6.209: ACK/NACK/ERROR Field

Note:

At the time of releasing the 4t product, the support of this message for use by new 4t applications will coexist with the support of the SSB ACK (0x0B) and SSB NACK (0x0C) messages for use by legacy applications of earlier products.

6.78 Software Version Response - Message ID 6

MID (Hex)	0x06
MID (Dec)	6
Message Name in Code	MID_SWVersion

Table 6.210: Software Version Response - Message ID 6

Using pre-existing SSB message (MID 6). This message will need to be modified to include the SiRF customer fields as indicated below. The AI3 format of this message was chosen to exist versus the existing response to poll message since it was a superset of customer and SiRF version IDs whereas the existing SSB message 6 was only SiRF version IDs.

The Software Version Response message is output in response to Software Version Request message. Each time a Software Version Request message is received, a Software Version Response message or a Reject message should be sent.

Field	Bytes	Scale	Unit
Message ID	1		
SIRF_VERSION_ID	[0...80] (variable)		
LENGTH_SIRF_VERSION_ID	1		
LENGTH_CUSTOMER_VERSION_ID	1		
CUSTOMER_VERSION_ID	[0...80] (variable)		

Table 6.211: Software Version Response Message

SIRF_VERSION_ID: SiRF Software Version ID

This field shall be set to the SiRF Software version ID. The ASCII representation of the character string, with the null terminator at the end, will be used. The number of characters (including the null terminator) should equal that set by LENGTH_SIRF_VERSION_ID. For instance, the software version ID string denoted by A would be represented as 0100 0001 0000 0000 (including the null terminator)

LENGTH_SIRF_VERSION_ID: Number of characters in SiRF Version ID

This field shall be set to the length equal to the number of characters in the SIRF_VERSION_ID (including the null terminator). The range shall be from 0 to 80. Any other value has no meaning. For instance, if the SIRF_VERSION_ID is the character string A, then including the null terminator this is 2 bytes long, and hence this field would be represented by 0000 0010 in binary.

LENGTH_CUSTOMER_VERSION_ID: Number of characters in Customer Version ID

This field shall be set to the length equal to the number of characters in the CUSTOMER_VERSION_ID (including the null terminator). The range shall be from 0 to 80. Any other value has no meaning. For instance, if the CUSTOMER_VERSION_ID is the character string A, then including the null terminator this is 2 bytes long, and hence this field would be represented by 0000 0010 in binary.

SIRF_VERSION_ID: SiRF Software Version ID

This field shall be set to the SiRF Software version ID. The ASCII representation of the character string, with the null terminator at the end, will be used. The number of characters (including the null terminator) should equal that set by LENGTH_SIRF_VERSION_ID. For instance, the software version ID string denoted by A would be represented as 0100 0001 0000 0000 (including the null terminator)

CUSTOMER_VERSION_ID: Customer Software Version ID

This field shall be set to the Customer Software version ID. The ASCII representation of the character string, with the null terminator at the end, will be used. The number of characters (including the null terminator) should equal that set by LENGTH_CUSTOMER_VERSION_ID. For instance, the software version ID string denoted by A would be represented as 0100 0001 0000 0000 (including the null terminator)

6.79 Reject - Message ID 75, Sub ID 2

MID (Hex)	0x4B
MID (Dec)	75
Message Name in Code	MID_MSG_ACK_OUT
SID (Hex)	0x02
SID (Dec)	2
SID Name in Code	REJECT

Table 6.212: Reject - Message ID 75, Sub ID 2

Field	Bytes	Scale	Unit
Message ID	1		
Sub Message ID	1		
REJ_MESS_ID	1		
REJ_MESS_SUB_ID	1		
REJ_REASON	1		

Table 6.213: Reject Message

REJ_MESS_ID: Message ID of Rejected Message

REJ_MESS_ID: Message Sub ID of Rejected Message

REJ_REASON: Reject Reason

The answering entity shall set this field to the reason of the reject according to Table 6.214.

Bit Number	Bit Value	Description
Bit 1 (LSB)	1 = true 0 = false	(Reserved)
Bit 2	1 = true 0 = false	Not Ready
Bit 3	1 = true 0 = false	Not Available
Bit 4	1 = true 0 = false	Wrongly formatted message(1)
Bit 5	1 = true 0 = false	No Time Pulse during Precise Time Transfer
Bit 6		Unused
Bit 7-8	"0"	Reserved

Table 6.214: REJ_REASON Field

6.80 Low Power Mode Output - Message ID 77

This message currently only has one SID defined, though the intent is to have more output messages while in low power (LP) modes put under this MID in the future.

6.80.1 Micro Power Mode Error - Message ID 77, Sub ID 1

This message is only output if there is a problem with going into or maintaining Micro Power Mode (MPM).

MID (Hex)	0x4D
MID (Dec)	77
Message Name in Code	MID_LP_OUTPUT
SID (Hex)	0x01
SID (Dec)	1
SID Name in Code	MPM_ERR

Table 6.215: Micro Power Mode Error - Message ID 77, Sub ID 1

Field	Bytes	Scale	Unit
Message ID	1		
Message Sub ID	1		
ERR_REASON	1		
Reserved	4		

Table 6.216: Micro Power Mode Error Message

ERR_REASON: Reason for exiting MPM mode

The exact details are TBD for this message but this byte will be a bit field which points to the reason MPM did not operate as anticipated. More input is needed from Kevin Powell, but these error conditions will include the following:

- Error exceeds preset threshold values
- No navigation

Reserve: Reserved for future use/definition

6.81 Query Response - Message ID 81

This message is in response to the QUERY REQUEST message.

MID (Hex)	0x51
MID (Dec)	81
Message Name in Code	MID_QUERY_RESP

Table 6.217: Query Response - Message ID 81

Field	Bytes	Scale	Unit
Message ID	1		
QUERY_MID	1		
QUERY_SID	1		
ECHO_LENGTH	1		
MSG_ECHO	Variable		

Table 6.218: Query Response Message

QUERY_MID: Message ID for query

Specifies which mode/setting is being queried. If the MID/SID combination sent

QUERY_SID: Sub ID for query

If a particular query requires that a SID be specified, it is in this field. Not all queries require a SID to be specified and therefore if a MID is sent where the SID does not matter, this field is ignored.

ECHO_LENGTH: Number of bytes in the QUERY_ECHO field.

QUERY_ECHO: Echo of the MID and SID specified for the query

Sends back the current settings as known by the client in the message format specified by the MID/SID. Query support is available only for the following MID/SIDs:

QUERY_MID	QUERY_SID	Description
218	Ignored	Determine if we are in a low power mode or full power.

Table 6.219: Query Response Supported Messages

Note:

For the response to be sent to the receiver, it must be awake. Any QUERY_RESPONSE messages sent while the receiver is in standby or hibernate will not be responded to. In this way, receiving a QUERY_RESPONSE message indicates here that the receiver is not in a standby or hibernate low power mode.

6.82 Power Mode Response - Message ID 90

This message is output in response to the MID_PWR_MODE_REQ message. This response echoes back the low power mode which was set and it acknowledges either the completion of the transition to the requested power mode or the failure of the transition by remaining in the original power mode from where the MID_PWR_MODE_REQ request was issued.

MID (Hex)	0x5A
MID (Dec)	90
Message Name in Code	MID_PWR_MODE_RESP
SID (Hex)	Listed below
SID (Dec)	Listed below
SID Name in Code	Listed below

Table 6.220: Power Mode Response - Message ID 90

0x00	0	FP_MODE_RESP
0x01	1	APM_RESP
0x02	2	MPM_RESP
0x03	3	ATP_RESP
0x04	4	PTF_RESP

Table 6.221: SIDs for Power Mode Response Message

The SID value is equal to the SID value in the requesting MID_PWR_MODE_REQ message in this response, whether the transition to this requested new mode was successful or not.

Field	Bytes	Scale	Unit
Message ID	1		
Message Sub ID	1		
ERROR_CODE	1		

Table 6.222: Power Mode Response Error Code Values

Value	Condition
0x00	No error, requested transition performed successfully
0x01	Specified mode is same as current, no transition occurred
0x02	Specified power mode is not supported in current product

Value	Condition
0x03	Unmet preconditions when transitioning to requested mode
0xXY	Invalid ATP_REQ, resulting TBF is too low, not supported
0xXZ	Tranzition to ATP suspended sequence of POS_RESP messages with conflicting QoP
0xXW	Tranzition to PTF suspended sequence of POS_RESP messages with conflicting QoP
0xXN	Tranzition to APM overriding a conflicting QoP specified in a POS_REQ being served
0x04-0xFF	Reserved

Table 6.223: Power Mode Response Error Code Values

6.83 Hardware Control Output - Message ID 91

This message ID is reserved for future hardware control features, including VCTCXO and on/off signal configuration. Although two SIDs are specified in the master MID list, they are only placeholders to show which features would use this MID and there can be additions/subtractions to the

Leslie - some text missing from end of last sentence

MID (Hex)	0x5B
MID (Dec)	91
Message Name in Code	MID_HW_CTRL_OUT
SID (Hex)	TBD
SID (Dec)	TBD
SID Name in Code	TBD

Table 6.224: Hardware Control Output - Message ID 91

Field	Bytes	Scale	Unit
Message ID	1		
Message Sub ID	1		
Message details TBD			

Table 6.225: Hardware Control Output Message

6.84 CW Controller Output - Message ID 92

6.84.1 CW Interference Report - Message ID 92

CW Interference message reports the presence of at most 8 interferences detected as a result of the most recent CW scan or monitor.

MID (Hex)	0x5C
MID (Dec)	92
Message Name in Code	MID_CW_OUTPUT
SID (Hex)	0x01
SID (Dec)	1
SID Name in Code	CW_DATA

Table 6.226: CW Interference Report - Message ID 92

Field	Bytes	Unit	Scale	Description
Message ID	U1			Message ID (0x5C)
Sub ID	U1			Sub ID (0x01)
Frequency 0	U4	Hz		Frequency of peak 0
...				Repeat for each peak
Frequency 7	U4	Hz		Frequency of peak 7
C/No 0	U2	dB-Hz	0.01	Signal to Noise of peak 0
...				Repeat for each peak
C/No 7	U2	dB-Hz	0.01	Signal to Noise of peak 7

Table 6.227: CW Interference Report Message

6.84.2 CW Mitigation Report - Message ID 92, Sub ID 2

CW Mitigation message reports filtering employed to mitigate the effects of the interference

MID (Hex)	0x5C
MID (Dec)	92
Message Name in Code	MID_CW_OUTPUT
SID (Hex)	0x02
SID (Dec)	2
SID Name in Code	CW_FILTER

Table 6.228: CW Mitigation Report - Message ID 92, Sub ID 2

Field	Bytes	Unit	Scale	Description
Message ID	U1			Message ID (0x5C)
Sub ID	U1			Sub ID (0x01)
Sampling Mode	U1			Enumeration of sampling modes: 0: Use complex 8f0, no filter 1: Use complex 2f0, no filter 2: Use 2MHz filter 3: Use OFFT filter
A/D Mode	U1			Enumeration of A/D modes: 0: Use 2-bit A/D 1: Use 4-bit A/D
Center freq bin of freq 0	S1			Center frequency bin of the frequency 0. Range: -128 to 127 When the number of bins field (below) is 0, this field will be 0.
Number of bins for freq 0	U1			Number of bins excised on one side of the center frequency bin. Total number of bins excised = 2 x this number + 1. 0: no bin excised
...				Repeat these two fields above for each frequency.
Center freq bin of freq 7	S1			Center frequency bin of the frequency 7. Range: -128 to 127 When the number of bins field (below) is 0, this field will be 0.
Number of bins for freq 7	U1			Number of bins excised on one side of the center frequency bin. Total number of bins excised = 2 x this number + 1. 0: no bin excised

Table 6.229: CW Mitigation Report Message

6.85 TCXO Learning Output Request - Message ID 93

MID (Hex)	0x5D
MID (Dec)	93
Message Name in Code	MID_TCXO_LEARNING_OUT
SID (Hex)	See below
SID (Dec)	See below
SID Name in Code	See below

Table 6.230: TCXO Learning Output Request - Message ID 93

Bit Field	Description	Inclusion
0x00	Not Used	
0x01	Clock model data base output	In all builds
0x02	Temperature table output	In all builds
0x03	Not Used	
0x04	Temp Recorder output	In Xo Test Builds Only
0x05	EARC output	In Xo Test Builds Only
0x06	RTC alarm output	In Xo Test Builds Only
0x07	RTC calibration output	In Xo Test Builds Only
0x08	Not Used	
0x09	MPM searches output	In Xo Test Builds Only
0x0A	MPM prepos output	In Xo Test Builds Only
0x0B	Micro Nav measurements output	In Xo Test Builds Only
0x0C	TCXO Uncertainty output	In Xo Test Builds Only
0x0D	System time stamps output	In Xo Test Builds Only

Table 6.231: TCXO Learning Output Request Message

Messages marked as “Xo Test Builds Only” in Table 6.231 are missing in standard builds for products to be shipped to customers. These messages are present in special test builds only made for the purpose of testing the TCXO features.

6.85.1 TCXO Learning Clock Model Data Base - Message ID 93, Sub ID 1

MID (Hex)	0x5D
MID (Dec)	93
Message Name in Code	MID_TCXO_LEARNING_OUT
SID (Hex)	0x01
SID (Dec)	1
SID Name in Code	CLOCK_MODEL_DATA_BASE_OUT

Table 6.232: TCXO Learning Clock Model Data Base - Message ID 93, Sub ID 1

Name	Bytes	Binary (Hex)		Unit	ASCII (Dec)		Description
		Scale	Example		Scale	Example	
Message ID	U1					93	TCXO Learning Output
Sub ID	U1					1	Clock model data base output
Source	U1						Bit mask indicating source of the clock model. 0x0 = NOT_SET 0x1 = ROM 0x2 = DEFAULTS 0x4 = MFG 0x8 = TEST_MODE 0x10 = FIRST_NAV
Aging Rate Uncertainty	U1			Ppm /year	0.1	10	Aging rate of uncertainty
Initial Offset Uncertainty	U1			ppm	0.1	10	Initial Frequency offset of the TCXO
Spare	U1						
Clock Drift	S4			ppb	1	60105	Clock drift
Temp Uncertainty	U2			ppm	0.01	50	Temperature uncertainty
Manufacturing Week number	U2			GPS Week #	1	1465	TCXO Manufacturing week number in full GPS weeks
Spare	U4						

Table 6.233: Clock Model Data Base Message

6.85.2 TCXO Learning Temperature Table - Message ID 93, Sub ID 2

MID (Hex)	0x5D
MID (Dec)	93
Message Name in Code	MID_TCXO_LEARNING_OUT
SID (Hex)	0x02
SID (Dec)	2
SID Name in Code	TEMPERATURE_TABLE

Table 6.234: TCXO Learning Temperature Table - Message ID 93, Sub ID 2

Name	Bytes	Binary (Hex)		Unit	ASCII (Dec)		Description
		Scale	Example		Scale	Example	
Message ID	U1					93	TCXO Learning Output
Sub ID	U1					2	Temperature table output
Spare1	U4						
Offset	S2			ppb	1	-331	Frequency offset bias of the table from the CD default
Global Min	S2			ppb	1	-205	Minimum XO error observed
Global Max	S2			ppb	1	442	Maximum XO error observed
First Week	U2			GPS Week #	1	1480	Full GPS week of the first table update
Last Week	U2			GPS Week #	1	1506	Full GPS week of the last table update
LSB	U2			Ppb	1	4	Array LSB Scaling of Min[] and Max[]

Name	Bytes	Binary (Hex)		Unit	ASCII (Dec)		Description
		Scale	Example		Scale	Example	
Aging Bin	U1				1	37	Bin of last update
Aging Up Count	S1				1	4	Aging up / down count accumulator
Bin Count	U1						Count of bins filled
Spare2	U1						
Min []	1 * 64			Ppb * LSB			Min XO error at each temp scaled by LSB
Max[]	1 * 64			Ppb * LSB			Max XO error at each temp scaled by LSB

Table 6.235: TCXO Learning Temperature Table Message

6.85.3 TCXO Learning Temperature Recorder - Message ID 93, Sub ID 4

This message is missing in standard builds for products to be shipped to customers, and present in special test builds only made for the purpose of testing the TCXO features.

MID (Hex)	0x5D
MID (Dec)	93
Message Name in Code	MID_TCXO_LEARNING_OUT
SID (Hex)	0x04
SID (Dec)	4
SID Name in Code	TEMP_RECORDER_MESSAGE

Table 6.236: TCXO Learning Temperature Recorder - Message ID 93, Sub ID 4

Name	Bytes	Binary (Hex)		Unit	ASCII (Dec)		Description
		Scale	Example		Scale	Example	
Message ID	U1					93	TCXO Learning Output
Sub ID	U1					4	Temp recorder output
Current	U4			ms			Time since power on
Time Count RTC 1 sec time tag	U2			sec			RTC One Second Time of the TR value
TR value	U1			C	140/ 256 – 40C		Temperature Recorder value
N Count	U1						TR Queue rec count
Total Count	U1						TR Queue total count
Status	U1						Bit 1: 0 = New TRec readings will update Temperature Table 1 = Ignore updates to the Temperature Table
Seq number	U2						Sequence number counter. Set to 0 at startup, incremented for each output and rollover on overflow

Table 6.237: TCXO Learning Temperature Recorder Message

6.85.4 TCXO Learning EARC - Message ID 93, Sub ID 5

This message is missing in standard builds for products to be shipped to customers, and present in special test builds only made for the purpose of testing the TCXO features.

MID (Hex)	0x5D
MID (Dec)	93
Message Name in Code	MID_TCXO_LEARNING_OUT
SID (Hex)	0x05
SID (Dec)	5
SID Name in Code	EARC

Table 6.238: TCXO Learning EARC - Message ID 93, Sub ID 5

Name	Bytes	Binary (Hex)		Unit	ASCII (Dec)		Description
		Scale	Example		Scale	Example	
Message ID	U1					93	TCXO Learning Output
Sub ID	U1					5	EARC output
Current Time Count	U4			ms			Time since power on
Acqclk lsw	U4						EARC latched time
RTC Wclk Secs	U4						EARC latched RTC Wclk Secs
RTC Wclk Counter	U2			ms			EARC latched RTC Wclk Counter
EARC r0	U2						EARC r0
EARC r1	U2						EARC r1
spare	U2						

Table 6.239: TCXO Learning EARC Message

6.85.5 TCXO Learning RTC Alarm - Message ID 93, Sub ID 6

This message is missing in standard builds for products to be shipped to customers, and present in special test builds only made for the purpose of testing the TCXO features.

MID (Hex)	0x5D
MID (Dec)	93
Message Name in Code	MID_TCXO_LEARNING_OUT
SID (Hex)	0x06
SID (Dec)	6
SID Name in Code	RTC_ALARM

Table 6.240: TCXO Learning RTC Alarm - Message ID 93, Sub ID 6

Name	Bytes	Binary (Hex)		Unit	ASCII (Dec)		Description
		Scale	Example		Scale	Example	
Message ID	U1					93	TCXO Learning Output
Sub ID	U1					6	RTC alarm output
Current Time Count	U4			ms			Time since power on
Acq Clock LSW	U4						Latched Acq clock least significant word
RTC Wclk Secs	U4						Latched RTC Wclk Secs
RTC Wclk Counter	U2						Latched RTC Wclk counter
spare	U2						

Table 6.241: TCXO Learning RTC Alarm Message

6.85.6 TCXO Learning RTC Cal - Message ID 93, ID 7

This message is missing in standard builds for products to be shipped to customers, and present in special test builds only made for the purpose of testing the TCXO features.

MID (Hex)	0x5D
MID (Dec)	93
Message Name in Code	MID_TCXO_LEARNING_OUT
SID (Hex)	0x07
SID (Dec)	7
SID Name in Code	RTC_CAL

Table 6.242: TCXO Learning RTC Cal - Message ID 93, ID 7

Name	Bytes	Binary (Hex)		Unit	ASCII (Dec)		Description
		Scale	Example		Scale	Example	
Message ID	U1					93	TCXO Learning Output
Sub ID	U1					7	RTC calibration output
Current Time Count	U4			ms			Time since power on
ACQ Clock LSW	U4			ns	60.99		ACQ Clock LSW in 60.99 ns resolution
GPS Time Int	U4						Integer part of GPS Time
GPS Time Frac	U4			ns			Fractional part of GPS Time
RTC WClk Sec	U4			sec			RTC WClk Seconds
RTC WClk Ctr	U2			sec	1/ 32768		Rtc Wclk counter
RTC Freq Unc	U2			ppb	1e-3		RTC Freq Unc
RTC / Acq Drift Int	U4						Integer part of RTC Drift RTC

Name	Bytes	Binary (Hex)		Unit	ASCII (Dec)		Description
		Scale	Example		Scale	Example	
Drift Frac	U4						Fractional part of RTC Drift
RTC Time Unc	U4			sec	1e-6		RTC Time Unc
RTC / GPS Drift	I4			Hz	1/L1		RTC / GPS Drift
Xo Freq Offset	U4			Hz	1/L1		XO Frequency offset
GPS Week	U2						
GPS Week Spare	U2						

Table 6.243: TCXO Learning RTC Cal Message

6.85.7 TCXO Learning TBD (Not Used) - Message ID 93, Sub ID 8

MID (Hex)	0x5D
MID (Dec)	93
Message Name in Code	MID_TCXO_LEARNING_OUT
SID (Hex)	0x08
SID (Dec)	8
SID Name in Code	Not used

Table 6.244: TCXO Learning TBD (Not Used) - Message ID 93, Sub ID 8

6.85.8 TCXO Learning MPM Searches - Message ID 93, Sub ID 9

This message is missing in standard builds for products to be shipped to customers, and present in special test builds only made for the purpose of testing the TCXO features.

MID (Hex)	0x5D
MID (Dec)	93
Message Name in Code	MID_TCXO_LEARNING_OUT
SID (Hex)	0x09
SID (Dec)	9
SID Name in Code	MPM_SEARCHES

Table 6.245: TCXO Learning MPM Searches - Message ID 93, Sub ID 9

Name	Bytes	Binary (Hex)		Unit	ASCII (Dec)		Description
		Scale	Example		Scale	Example	
Message ID	U1					93	TCXO Learning Output
Sub ID	U1					9	MPM searches output
Number of records	U1						Number of records
Spare1	U1						
Spare2	U2						
Current Time Count	U4			ms			Time since power on
Acqclk lsw	U4						
following fields are based on number of records							

Name	Bytes	Binary (Hex)		Unit	ASCII (Dec)		Description
		Scale	Example		Scale	Example	
Code Phase record [num]	U4						Code phase
Doppler [num]	I4						
Frequency Code Offset	U4						
Peak Mag	U4			dB-Hz			Peak Magnitude
Status [num]	U2						
SVID [num]	U1						SVID searched
Spare [num]	U1						

Table 6.246: TCXO Learning MPM Searches Message

6.85.9 TCXO Learning MPM Pre-Positioning - Message ID 93, Sub ID 10

This message is missing in standard builds for products to be shipped to customers, and present in special test builds only made for the purpose of testing the TCXO features.

MID (Hex)	0x5D
MID (Dec)	93
Message Name in Code	MID_TCXO_LEARNING_OUT
SID (Hex)	0x0A
SID (Dec)	10
SID Name in Code	MPM_PREPOS

Table 6.247: TCXO Learning MPM Pre-Positioning - Message ID 93, Sub ID 10

Name	Bytes	Binary (Hex)		Unit	ASCII (Dec)		Description
		Scale	Example		Scale	Example	
Message ID	U1					93	TCXO Learning Output
Sub ID	U1					10	MPM prepos output
Number of records	U1						Number of records
Spare1	U1						
Spare2	U2						
Current Time Count	U4			ms			Time since power on
Acqclk lsw	U4						acqclk, lsw
following fields are based on number of records							
Pseudo Range [num]	U4			m			Pseudo Range of the SVID
Pseudo Range Rate [num]	U2			m/s			Pseudo Range Rate of the SVID
SVID [num]	U1						SVIDs searched in MPM search list
Spare [num]							

Table 6.248: TCXO Learning MPM Pre-Positioning Message

6.85.10 TCXO Learning Micro-Nav Measurement - Message ID 93, Sub ID 11

This message is missing in standard builds for products to be shipped to customers, and present in special test builds only made for the purpose of testing the TCXO features.

MID (Hex)	0x5D
MID (Dec)	93
Message Name in Code	MID_TCXO_LEARNING_OUT
SID (Hex)	0x0B
SID (Dec)	11
SID Name in Code	MICRO_NAV_MEASUREMENT

Table 6.249: TCXO Learning Micro-Nav Measurement - Message ID 93, Sub ID 11

Name	Bytes	Binary (Hex)		Unit	ASCII (Dec)		Description
		Scale	Example		Scale	Example	
Message ID	U1					93	TCXO Learning Output
Sub ID	U1					11	Micro Nav measurements output
Number of measurements	U1						Number of measurements in the message
Mode	U1						Operational mode
Spare	U2						
Current Time Count	U4			ms			Time since power on
Acqclk lsw	U4						acqclk, lsw
Time Corr	S4			ms	1e6		Time Correction
Time Corr Unc	U4			ms	1e6		Time Correction Uncertainty
Freq Corr	S2			MHz	1575 0.42		TCXO Oscillator Frequency Correction; Scale by L1
Freq Corr Unc	U2			MHz	1575 0.42		TCXO Oscillator Frequency Correction Uncertainty; Scale by L1
following fields are based on number of measurements							

Name	Bytes	Binary (Hex)		Unit	ASCII (Dec)		Description
		Scale	Example		Scale	Example	
Pseudo	U4			m	10		PR
Range[num]							
Pseudo Range Rate [num]	S2			m/s			PRR
C/No [num]	U2				10		
C/No SVID [num]	U1						SVID
Spare1[num]	U1						
Spare	U1						

Table 6.250: TCXO Learning Micro-Nav Measurement Message

6.85.11 TCXO Learning TCXO Uncertainty - Message ID 93, Sub ID 12

This message is missing in standard builds for products to be shipped to customers, and present in special test builds only made for the purpose of testing the TCXO features.

MID (Hex)	0x5D
MID (Dec)	93
Message Name in Code	MID_TCXO_LEARNING_OUT
SID (Hex)	0x0C
SID (Dec)	12
SID Name in Code	TCXO_UNCERTAINTY

Table 6.251: TCXO Learning TCXO Uncertainty - Message ID 93, Sub ID 12

Name	Bytes	Binary (Hex)		Unit	ASCII (Dec)		Description
		Scale	Example		Scale	Example	
Message ID	U1					93	TCXO Learning Output
Sub ID	U1					12	TCXO Uncertainty
Current Time Count	U4			Ms			Time since power on
Acqclk.lsw	U4						Acqclk.lsw
Frequency	U4			Hz			Clock Drift Frequency
Frequency Uncertainty Nominal	U2			ppb			Nominal Frequency uncertainty = A + T + M
Frequency Uncertainty Full	U2			Ppb			Full Frequency Uncertainty = A + T + M
Temperature Uncertainty Nominal	U2			Ppb			Temperature (T) uncertainty component, nominal
Temperature Uncertainty	U2			Ppb			Temperature (T) uncertainty component, full
Full Aging Uncertainty Nominal	U2			Ppb			Aging (A) uncertainty component, nominal

Name	Bytes	Binary (Hex)		Unit	ASCII (Dec)		Description
		Scale	Example		Scale	Example	
Measurement Uncertainty Nominal	U2			ppb			Measurement (M) uncertainty component, nominal
Measurement Uncertainty Full	U2			ppb			Measurement (M) uncertainty component, full
GPS Week #	U2			GPS Week #			Current GPS Week number of the uncertainty data
Temperature	U1			Deg C	140/ 256 - 40		Raw temperature in 0.549 degrees resolution
Spare	U1						
Spare	U4						

Table 6.252: TCXO Learning TCXO Uncertainty Message

6.85.12 TCXO Learning System Time Stamp - Message ID 93, Sub ID 13

This message is missing in standard builds for products to be shipped to customers, and present in special test builds only made for the purpose of testing the TCXO features.

MID (Hex)	0x5D
MID (Dec)	93
Message Name in Code	MID_TCXO_LEARNING_OUT
SID (Hex)	0x0D
SID (Dec)	13
SID Name in Code	SYSTEM_TIME_STAMP

Table 6.253: TCXO Learning System Time Stamp - Message ID 93, Sub ID 13

Name	Bytes	Binary (Hex)		Unit	ASCII (Dec)		Description
		Scale	Example		Scale	Example	
Message ID	U1					93	TCXO Learning Output
Sub ID	U1					13	System time stamps
Current Time Count	U4			Ms			Time since power on
ACQ Clk msw	U4			ns			Acq Clock Msw
ACQ Clk lsw	U4			ns			Acq Clock Lsw
TOW Int	U4			Sec			Integer part of TOW
TOW Frac Ns	U4			Nsec			Fractional part of TOW
RTC Seconds	U4			sec	1		RTC Seconds
RTC Counter	U2			us	1/ 32768		RTC Counter Value
Clock Bias	I4						Clock Bias, m
Clock Drift	I4						Clock Drift, m/s
Spare	U2						

Table 6.254: TCXO Learning System Time Stamp Message

6.86 SW Toolbox Output - Message ID 178

(Remember, Output means Host to User System.) These messages allow the User System to access Tracker features via the Host. The Host will essentially map the MEI responses from the Tracker to SSB responses for the User System. The mapping is required since a direct pass-through is not always allowed. Some Tracker responses will require a corresponding change to the Host (for example, a change to the Tracker baud rate will necessitate a change at the Host or communication will be lost).

MID (Hex)	0xB2
MID (Dec)	178
Message Name in Code	MID_TrackerIC (see PROTOCOL.H)
SID (Hex)	As below
SID (Dec)	As below
SID Name in Code	As below

Table 6.255: SW Toolbox Output - Message ID 178

6.86.1 Peek/Poke Response- Message ID 178, Sub ID 4

6.86.1.1 Tracker Peek Response (four-byte peek) (unsolicited)

Upon reception of the MEI 0xA0 (Peek Response) from the Tracker, the Host will generate this response for the User System.

Field	Length (bytes)	Description
MID	1	0xB2
SID	1	0x04
Type	1	enumeration 0 = Peek results 10 = eFUSE peek results (4e and beyond only)
Address	4	unsigned integer
Data	4	always four bytes

Table 6.256: Tracker Peek Response (four-byte peek) (unsolicited)

6.86.1.2 Tracker Poke Response (four-byte poke or n-byte poke) (unsolicited)

Upon reception of the MEI 0x81 (Acknowledge for poke) from the Tracker, the Host will generate this response for the User System.

Field	Length (bytes)	Description
MID	1	0xB2
SID	1	0x04
Type	1	enumeration 1 = Poke command received

Table 6.257: Tracker Poke Response (four-byte poke or n-byte poke) (unsolicited)

6.86.1.3 Tracker Peek Response (n-byte peek) (unsolicited)

Upon reception of the MEI 0xA0 (Peek Response) from the Tracker, the Host will generate this response for the user system.

Field	Length (bytes)	Description
MID	1	0xB2
SID	1	0x04
Type	1	enumeration 2 = Multi-peek response 12 = eFUSE multi-peek response (4e and beyond only)
Address	4	unsigned integer Beginning address
Number of Bytes	2	unsigned integer Range: 0 to 1000
Data	Number of Bytes	

Table 6.258: Tracker Peek Response (n-byte peek) (unsolicited)

6.86.2 FlashStore Response - Message ID 178, Sub ID 5

Upon reception of the Bootloader ACK/NAK (for the FS command) from the Tracker, the Host will generate this response for the User System.

Field	Length (bytes)	Description
MID	1	0xB2
SID	1	0x05
Result	4	Zero = Flash write successful Non-zero = Flash write unsuccessful

Table 6.259: FlashStore Response - Message ID 178, Sub ID 5

6.86.3 FlashErase Response - Message ID 178, Sub ID 6

Upon reception of the Bootloader ACK/NAK (for the FE command) from the Tracker, the Host will generate this response for the User System.

Field	Length (bytes)	Description
MID	1	0xB2
SID	1	0x06
Result	4	Zero = Flash erase successful Non-zero = Flash erase unsuccessful

Table 6.260: FlashErase Response - Message ID 178, Sub ID 6

6.86.4 TrackerConfig Response - Message ID 178, ID 7

Upon reception of the MEI 0x81 (Acknowledge for MEI 0x0A) from the Tracker, the Host will generate this response for the User System.

Field	Length (bytes)	Description
MID	1	0xB2
SID	1	0x07

Table 6.261: TrackerConfig Response - Message ID 178, ID 7

6.86.5 MeiToCustomIo Response - Message ID 178, Sub ID 8

Upon reception of the MEI 0x81 (Acknowledge for MEI 0x1F) from the Tracker, the Host will generate this response for the User System.

Field	Length (bytes)	Description
MID	1	0xB2
SID	1	0x08

Table 6.262: MeiToCustomIo Response - Message ID 178, Sub ID 8

Once the custom I/O has been started, note a hard reset will NOT restore the Tracker to the MEI protocol. The custom I/O selection is remembered as long as BBRAM is maintained or, depending on the firmware loaded, external flash memory is used.

6.86.6 SID_Patch Manager Prompt - Message ID 178, Sub ID 144

This message is sent by the 4e to acknowledge a Patch Manager Start Request.

Field	Length (bytes)	Description
MID	1	0xB2
SID	1	0x90
Chip Id	2	4e Chip Id (0x41)
Silicon Id	2	4e Silicon Id (0..15)
ROM Version Code	2	ROM Version code embedded in the 4e code in armstart.s
Patch Revision Code	2	Current version of Patch applied to the Flash/ROM code

Table 6.263: SID_Patch Manager Prompt - Message ID 178, Sub ID 144

Chip Id: This field contains the chip version extracted from 4e chip version register.

Silicon Version: This field contains the silicon version extracted from 4e chip version register.

ROM Version Code: This field indicates a unique version code by which the ROM code running on the Target is identified. Value is interpreted as big endian number.

Patch Revision Code: This field contains the version of Patch Code currently applied to the ROM chip. A value of 0 indicates that no Patch is applied. The value is interpreted as big endian number.

6.86.7 Patch Manager Acknowledgement - Message ID 178, Sub ID 145

This message is sent by the 4e to acknowledge the Host Patch Protocol messages: Patch Memory Load Request and Patch Manager Exit Request. If 4e is acknowledging the Patch Manager Exit Request the Message Sequence Number is set to 0, since there is no Message Sequence Number in the Patch Manager Exit Request.

Field	Length (bytes)	Description
MID	1	0xB2
SID	1	0x91
Message Sequence Number	2	Message Sequence Number
Sub Id Acknowledged	1	The Host Sub Id message being acknowledged
Acknowledge Status	1	Status response

Table 6.264: Patch Manager Acknowledgement - Message ID 178, Sub ID 145

Message Sequence Number: The Sequence No field of the Patch Memory Load Request message being acknowledged. This field is set to 0, when acknowledging the Patch Manager Exit Request.

Sub Id Acknowledged: This field echoes back the Sub Id of the Host message that is being acknowledged.

Acknowledge Status: This field describes the status of the requested operation as in Table 6.265:

Bit 1	Bit 0 (LSB)	Status
1	1	Message successfully received, Operation successful
1	0	Message successfully received, Operation unsuccessful

Table 6.265: Patch Manager Acknowledge Status Bit Fields

6.87 Reserved – Message ID 225

This output message is SiRF proprietary except for Message Sub ID 6.

6.88 Statistics Channel – Message ID 225, Sub ID 6

The message is only used by GSW3, GSWLT3, and SiRFLoc v3.x software and outputs the TTFF, aiding accuracy information and navigation status.

Output Rate: Once after every reset.

Note:

Message ID 225, Sub ID 6 only comes out when the debug messages are enabled. The debug message feature is enabled by either setting the output rate of message 225 using Message ID 166 or by setting bit 5 (enable debug data bit) in the configuration bit map of Message ID 128.

Note:

Message ID 225, Sub ID 6 may not be output when the system is not able to compute a navigation solution. This message is not supported by APM.

Example:

A0A20027 – Start Sequence and Payload Length (39 bytes)

E106 – Message ID and Message Sub ID

Name	Sub Field	Bytes	Binary (Hex)		Unit	ASCII (Decimal)		Range	Invalid Data
			Scale	Example		Scale	Example		
Number of Aided Acquisition Assistance ⁽¹⁾		1 U					0		0x00
Navigation and Position Status Navigation Mode ⁽²⁾		1 D					See Table 6.267		N/A
Position Mode ⁽²⁾		1 D					See Table 6.268		N/A
Status ⁽²⁾		2 D					See Table 6.269 and Table 6.270		N/A
Start Mode ⁽²⁾		1 D					See Table 6.271		N/A
Reserved ⁽¹⁾		1 U							

Table 6.266: Statistic Channel - Message ID 225, Sub ID 6

⁽¹⁾ Valid for GSW only

⁽²⁾ Valid with SiRFLoc only

Bit Fields	Description
0	No Nav
1	Approximate from SV records
2	Time transfer
3	Stationary mode
4	LSQ fix
5	KF nav
6	SiRFDRive
7	DGPS base

Table 6.267: Description of the Navigation Mode Parameters

Bit Fields	Description
0	Least Square (LSQ) mode 0 – no bit sync, approximate GPS time
1	LSQ mode 1 – no bit sync, accurate GPS time
2	LSQ mode 2 – bit sync, no frame sync, approximate GPS time
3	LSQ mode 3 – bit sync, no frame sync, accurate GPS time
4	LSQ mode 4 – bit and frame sync, user time (without aiding) See Table 6.269
5	KF mode – Kalman Filtering
6	No position
7	Not used

Table 6.268: Description of the Position Mode Parameters

Value	Status
0x00	Good solution
0x01	Uncertainty exceeded maximum (UNCER_EXCEED)
0x02	Input information to navigation had error (INPUT_ERR)
0x04	Not sufficient information to have a fix position (UNDER_DETERM)
0x08	Matrix inversion failed (MATR_INVNT)
0x010	LSQ iteration exceeds predefined maximum (ITER_OUT)
0x020	Altitude check failed (ALT_OUT)
0x040	GPS time check failed (TIME_OFF)
0x080	Failure found in measurements (FDI_FAIL)
0x100	DOP exceeded threshold (DOP_FAIL)
0x200	Velocity check failed (VEL_FAIL)

Table 6.269: Description of the Status for Navigation LSQ Fix Mode

Value	Status
0	Solution is good
1	No solution
2	Altitude is out of range
3	Velocity is out of range

Table 6.270: Description of the Status for Navigation KF Mode

Value	Description
0x00	Cold
0x01	Warm
0x02	Hot
0x03	Fast

Table 6.271: Description of the Start Mode

6.89 Statistics Channel – Message ID 225, Message Sub ID 7

This message serves for development purposes only. It is sent only after receiving a MID_POS_REQ 0xD2 message. The content, the format and the enabling conditions are identical to those for the 225, 6 message which is documented in the SSB ICD. The last, “Aiding Flags” field is specific to 225, 7.

Name	Sub Field	Bytes	Binary (Hex)		Unit	ASCII (Dec)	
			Scale	Example		Scale	Example
Message ID		1U		E1			225
Message Sub ID		1U		07			7
TTFF	Since reset	2U			sec	0.1	Range from 0.0 to 6553.5
	Since all aiding received ⁽¹⁾	2U					0
	First nav since reset ⁽¹⁾	2U					0
Position Aiding Error	North ⁽¹⁾	4S					0
	East ⁽¹⁾	4S					0
	Down ⁽¹⁾	4S					0
Time Aiding Error ⁽¹⁾		4S					0
Frequency Aiding Error ⁽¹⁾		2S					0

Name	Sub Field	Bytes	Binary (Hex)		Unit	ASCII (Dec)	
			Scale	Example		Scale	Example
Position Uncertainty	Horizontal ⁽¹⁾	1U					0
	Vertical ⁽¹⁾	2U					0
Time Uncertainty ⁽¹⁾		1U					0
Frequency Uncertainty ⁽¹⁾		1U					0
Number of Aided Ephemeris ⁽²⁾		1U					0
Number of Aided Acquisition Assistance ⁽¹⁾		1U					0
Navigation and Position Status	Navigation Mode	1D					see Table 256, Table 257
	Position Mode	1D					see Table 258
	Status	2D					see Table 259 and Table 260
Start Mode		1D					see Table 261
Aiding Flags ⁽¹⁾		1U					see Table 262
System Clock Drift		4U			Hz		
Reserved		4U					

Table 6.272: Statistics Channel – Message ID 225, Message Sub ID 7

⁽¹⁾ Valid with SiRFLoc only

⁽²⁾ Not currently used

Note:

Payload length: 39 bytes

Bit Field	Description
0	No Nav
1	Approximate from SV records
2	Time transfer
3	Stationary mode

Table 6.273: Description of the Navigation Mode Parameters

Bit Field	Description
4	LSQ fix
5	KF nav
6	SiRFDRive
7	DGPS base

Table 6.274: Description of the Navigation Mode Parameters

Bit Field	Description
0	Least Square (LSQ) mode 0 – no bit sync, approximate GPS time
1	LSQ mode 1 – no bit sync, accurate GPS time
2	LSQ mode 2 – bit sync, no frame sync, approximate GPS time
3	LSQ mode 3 – bit sync, no frame sync, accurate GPS time
4	LSQ mode 4 – bit and frame sync, user time (without aiding) See Table 3-121
5	KF mode – Kalman Filtering
6	No position
7	Not used

Table 6.275: Description of the Position Mode Parameters

Value	Status
0x00	Good solution
0x01	Uncertainty exceeded maximum (UNCER_EXCEED)
0x02	Input information to navigation had error (INPUT_ERR)
0x04	Not sufficient information to have a fix position (UNDER_DETERM)
0x08	Matrix inversion failed (MATR_INVNT)
0x10	LSQ iteration exceeds predefined maximum (ITER_OUT)
0x20	Altitude check failed (ALT_OUT)
0x40	GPS time check failed (TIME_OFF)
0x80	Failure found in measurements (FDI_FAIL)
0x0100	DOP exceeded threshold (DOP_FAIL)
0x0200	Velocity check failed (VEL_FAIL)

Table 6.276: Description of the Status for Navigation LSQ Fix Mode

Value	Status
0	Solution is good
1	No solution
2	Altitude is out of range
3	Velocity is out of range

Table 6.277: Description of the Status for Navigation KF Mode

Value	Description
0x00	Cold
0x01	Warm
0x02	Hot
0x03	Fast

Table 6.278: Description of the Start Mode

Value	Description
0x00	There was NO time transfer
0x01	Precise Time transfer has taken place, with or without aiding
0x02	Coarse Time transfer has taken place, with or without aiding
0x04	External Position Aiding Received and Used
0x08	External Position Aiding Received but Not Used
0x10	External Time Aiding Received and Used
0x20	External Time Aiding Received but Not Used
0x40	External Frequency Aiding Received and Used
0x80	External Frequency Aiding Received but Not Used

Table 6.279: Description of the Aiding Flags (Build Numbers 4.0.2 and later)

6.90 Output GRF3i+ IF Bandwidth Mode - Message ID 233, Sub ID 255

This is the response message to the Input Message "Poll GRF3i+ IF Bandwidth Mode" with Message ID 233, Sub ID 10

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1U		E9		Decimal 233
Sub Message ID	1U		FF		0xFF: Output Message for Message ID 233 with SubMsgID 0x02
Band Mode Status	1U		01		0 = Indicates Wideband 1 = Indicates Narrowband

Table 6.280: Output GRF3i+ IF Bandwidth Mode - Message ID 233, Sub ID 255

Note:

Payload length: 3 bytes

6.91 Output GRF3i+ Normal/Low Power Mode - Message ID 233, Sub ID 254

This is the response message to the Input Message "Output GRF3i+ Normal/Low Power Mode - Message ID 233, Sub ID 254" with Message ID 233, Sub ID 11.

Name	Bytes	Binary (Hex)		Unit	Description
		Scale	Example		
Message ID	1U		E9		Decimal 233
Sub Message ID	1U		FE		0xFE : Output Message for Message ID 233 with SubMsgID 0x0B
Power Mode Status	1U		01		0 = Normal power 1 = Low power

Table 6.281: Output GRF3i+ Normal/Low Power Mode - Message ID 233, Sub ID 254

Note:

Payload length: 3 bytes

6.92 ASCII Development Data Output - Message ID 255

Output Rate: Receiver generated.

Example:

A0A2 – Start Sequence and Payload Length (Length variable)

FF – Payload

. . . . B0B3 – Message Checksum and End Sequence

Field	Type	Length (bytes)	Description
Message ID	U1	1	0xFF
msg_text	U256	256	ASCII string of the message. The actual text length is determined by message length parameter in the header. The msg_text string in this field is not nullterminated.

Table 6.282: ASCII Development Data Output - Message ID 255

Note:

Message ID 255 is output when SiRF Binary is selected and development data is enabled. It can also be enabled by setting its output rate to 1 using Message ID 166. The data output using Message ID 255 is essential for SiRF-assisted troubleshooting support.

The ASCII text output can be enabled or disabled after restart using the restart flags of the initialization message MID 128.

6.93 SiRFDRive Output Messages

6.93.1 Geodetic Navigation State Output - Message ID 29

Number:	0x29
Name:	MID_GeodNavState
Purpose:	Geodetic Navigation State Output Message

Message Length: 91 bytes

Rate: Output at 1Hz

Byte #	Field	Data Type	Bytes	Units	Range	Res
1	Message ID	UINT8	1		0x29	1
2-3	Nav Validity	UINT16	2	Bitmap	Any bits not 0: Nav is Invalid Bit 0=1: GPS Fix Invalid Bit 1=1: EHPE exceeded (reserved) Bit 2=1: EVPE exceeded (reserved) Bit 3=1: DR data Invalid Bit 4=1: DR Cal Invalid Bit 5=1: GPS-based Cal not Available Bit 6=1: DR Pos Invalid Bit 7=1: DR Heading Invalid Bits 8-14: Reserved Bit 15 = 1: No Tracker Data	1
4-5	NAV Mode	UINT16	2	Bitmap	NAV Mode Bits definition ⁽¹⁾ : GPS Fix Type: bits 2-0: SVs Used 000 No NAV 001 1 SV solution 010 2 SV solution 011 3 SV solution (2D) 100 4 or More SV (3D) 101 Least Sq 2D fix 110 Least Sq 3D fix 111 DR solution (0 SV) bit 3 =1: TricklePower On bits 5-4 Altitude hold 00 No Altitude Hold 01 Filter Altitude used 10 Use Altitude used 11 User Forced Altitude	1

Byte #	Field	Data Type	Bytes	Units	Range	Res
4-5 (Continued)					bit 6 = 1: DOP exceeded bit 7 = 1: DGPS corrections bit 8 = 1: Sensor Based DR = 0: if bit 2-0=111, Velocity DR bit 9 = 1: Sol Validated bit 10 = 1: VEL DR Timeout bit 11 = 1: Edited by UI bit 12 = 1: Velocity Invalid bit 13 = 1: Altitude Hold disabled bits 15-14 – SiRFDRive DR status: 00 – GPS Only 01 – Calibrating 10 – DR sensor error 11 – DR Test mode	
6-7	Extended Week Number	UINT16	2	week	0 to 65535	1
8-11	TOW	UINT32	4	sec	0 to 604800.00	0.001
12-13	UTC Year	UINT16	2	year	1980 to 3000	1
14	UTC Month	UINT8	1	month	1 to 12	1
15	UTC Day	UINT8	1	day	1 to 31	1
16	UTC Hour	UINT8	1	hr	0 to 23	1
17	UTC Minute	UINT8	1	min	0 to 59	1
18-19	UTC Second	UINT16	2	sec	0 to 59	0.001
20-23	Satellites in Solution	UINT32	4	Bitmap	Bit 0 = 1: SV1 Bit 1 = 1: SV2 ... Bit 31 = 1: SV32	
24-27	Latitude	INT32	4	deg	-90 to 90	10 ⁻⁷
28-31	Longitude	INT32	4	deg	-180 to 180	10 ⁻⁷
32-35	Altitude from Ellipsoid	INT32	4	meters	-2000 to 100000.0	0.01
36-39	Altitude from MSL ⁽²⁾	INT32	4	meters	-2000 to 100000.0	0.01
40	Map Datum	UINT8	1		0 to 255	
41-42	Speed Over Ground (SOG)	UINT16	2	m/sec	0 to 655	0.01

Byte #	Field	Data Type	Bytes	Units	Range	Res
43-44	Course Over Ground (COG, True) ⁽³⁾	UINT16	2	deg	0 to 360	0.01
45-46	Magnetic Variation (RESERVED)	INT16	2	deg	-90 to 90	0.01
47-48	Climb Rate	INT16	2	m/sec	-300 to 300	0.01
49-50	Heading Rate	INT16	2	deg /sec	-300 to 300	0.01
51-54	Expected Horizontal Position Error (EHPE)	UINT32	4	meters	0 to 6000000	0.01
55-58	Expected Vertical Position Error (EVPE)	UINT32	4	meters	0 to 24000	0.01
59-62	Expected Time Error (ETE)	UINT32	4	meters	0 to 6000000	0.01
63-64	Expected Horizontal Velocity Error (EHVE)	UINT16	2	m/sec	655	0.01
65-68	Clock Bias	INT32	4	meters	0 to -21474837 to 21474837	0.01
69-72	Clock Bias Error	UINT32	4	meters	0 to 6000000	0.01
73-76	Clock Drift	INT32	4	m/sec	-21474837 to 21474837	0.01
77-80	Clock Drift Error	UINT32	4	m/sec	0 to 1000	0.01

Byte #	Field	Data Type	Bytes	Units	Range	Res
81-84	Distance Traveled since RESET	UINT32	4	meters	0 to 4294967295	1
85-86	Distance Traveled error	UINT16	2	meters	65535	1
87-88	Heading Error	UINT16	2	deg	0 to 180	0.01
89	Number of Satellites in Solution	UINT8	1	integer	0 to 12	1
90	HDOP	UINT8	1	integer	0 to 51	0.2
91	Additional Mode Info	UINT8	1	Bitmap	Bit 7: DR direction 0 = forward 1 = reverse Bits 6-3: reserved Bit 2: MMF usage 0 = used in solution 1 = not used in solution Bit 1: MMF received 0 = not received 1 = received Bit 0: MMF mode 0 = disabled 1 = enabled	1

Table 6.283: GeodNavState - Message ID 29

- (1) Bits 15-14 only have meaning when bit 8 is 0.
- (2) Altitude above MSL = Altitude from Ellipsoid – Geoidal Separation
- (3) Also known as Heading(Hdg)

API:

```
typedef struct
{
    UINT16 Valid;
    UINT16 Mode;
    UINT16 Week;
    UINT32 TOW;
    UINT16 UtcYr;
    UINT8 UtcMth;
    UINT8 UtcDay;
    UINT8 UtcHr;
    UINT8 UtcMin;
    UINT16 UtcSec;
    UINT32 SVIDList;
    INT32 Lat;
    INT32 Lon;
    INT32 AltE;
}
```

```

INT32  AltM;
UINT8  Datum;
UINT16 Sog;
UINT16 Hdg;
INT16  MagVar;
INT16  ClmbRte;
INT16  HdRte
UINT32 Ehpe;
UINT32 Evpe;
UINT32 Ete
UINT16 Ehve;
INT32  ClkBias
UINT32 ClkBiasE
INT32  ClkDrift
UINT32 ClkDriftE
UINT32 Trvled;
UINT16 TrvledE
UINT16 HdE;
UINT8  SVIDCnt;
UINT8  HDOP;
UINT8  AdditionalModeInfo;
} MI_GEOD_NAV_STATE;

```

6.93.2 Output Tracker to NAV – ADC/Odometer Data - Message ID 45

Number:	0x2D
Name:	MID_TrkADCODoGPIO
Purpose:	Output Tracker to NAV – ADC/Odometer Data

Message Length: 111 bytes @ 1Hz or 12 bytes @ 10Hz

Rate: 111 bytes @ 1Hz or 12 bytes @ 10Hz

Binary Message Definition:

This message is sent at a rate of 1Hz (default) or 10Hz whenever it is enabled by the control words in the Track Reset message on the GSP2t. Both ADC channels are sampled in a roundrobin fashion at 50Hz whose raw measurements are then averaged every 100mSeconds in the tracker interrupt along with the current odometer counter value and GPIO states. The GSP2t Rev D on-chip ADC is a 14-bit successive approximation two channel ADC outputting signed 16-bit values from -12000 to 28000.

The GSP2eLP with DR option currently only has one ADC input that is sampled at 50Hz and whose raw measurements are then averaged every 100mSeconds in the tracker interrupt along with the current odometer counter and GPIO state. The DR option is a Maxim MAX1240 12-bit ADC on a daughter-board installed on the SDKL. The 12-bit resolution provides unsigned values from 0 to 4095.

On the GSP2t, this message can be transmitted in 1Hz mode or 10Hz mode. On the GSP2eLP, this message is only transmitted in 1Hz mode. In 1Hz mode, there are 10 data measurements blocks in one single message. In 10Hz mode, there is a single data measurement per message.

Byte #	Field	Data Type	Bytes	Units	Range	Res
1	Message ID	UINT8	1	n/a	0x2D	n/a
2 + (n- 1)*11 ⁽¹⁾	currentTime ⁽²⁾	UINT32	4	ms	0-4294967295	n/a
6 + (n- 1)*11 ⁽¹⁾	Gyro adc Avg ⁽³⁾	UINT16 Or INT16	2	n/a	0 to 4095 (GSP2eLP w/ DR option) Or -12000 to 28000 (GSP2t)	n/a
8 + (n- 1)*11 ⁽¹⁾	adc3Avg ⁽⁴⁾	UNIT16 Or INT16	2	n/a	0 (GSP2eLP w/ DR option) Or -12000 to 28000 (GSP2t)	n/a
10 + (n- 1)*11 ⁽¹⁾	odoCount ⁽⁵⁾	UINT16	2	n/a	0 to 65535	n/a
12 + (n- 1)*11 ⁽¹⁾	gpioStat ⁽⁶⁾	UINT8	1	Bitmap	bit 0 – if = 1: Reverse “ON” bits 1 to 7 Reserved	n/a

Table 6.284: TrkADCOdoGPIO - Message ID 45

- ⁽¹⁾ n corresponds to either 1 or 1-10 depending on whether the message comes out a 10Hz (10 messages 1 data set) or 1Hz (1 message 10 data sets)
- ⁽²⁾ Tracker Time, millisecond counts
- ⁽³⁾ Averaged measurement from Gyro input. On the GSP2t, this is the ADC[2] input, on the GSP2eLP, this is the Maxim ADC input
- ⁽⁴⁾ On a GSP2eLP system, there is currently only one ADC input so this field is always 0.
- ⁽⁵⁾ Odometer counter measurement at the most recent 100mSec tracker interrupt. This field will rollover to 0 after 65535
- ⁽⁶⁾ GPIO input states at the most recent 100mSec tracker interrupt

API:

```
#define NUM_OF_DR_RAW 10
typedef struct
{
    UINT32 currentTime;
    UINT16 adc2Avg;
    UINT16 adc3Avg;
    UINT16 odoCount;
    UINT8 gpioStat;
} tADCOdometer;

typedef struct
{
    struct
    {
        tADCOdometer ADCOdometer [NUM_OF_DR_RAW];
    } DrRaw;
} tDrRawData, *tDrRawDataPtr;
```

6.93.3 DR NAV Status - Message ID 48, Sub ID 1

MID Number:	0x30
MID Name:	MID_DrOut
SID Number:	0x01
SID Name:	SID_DrNavStatus
SID Purpose:	DR NAV Status Output Message

Table 6.285: DR NAV Status - Message ID 48, Sub ID 1

Message Length: 20 bytes

Rate: Output at 1Hz

Byte #	Field	Data Type	Bytes	Units	Range	Res
1	Message ID	UINT8	1		0x30	1
2	Sub ID	UINT8	1		0x01	1
3.0 – 3.6	DR Navigation Valid ⁽¹⁾	Bit Map	1	N/A	All bits 0: True Any bits != 0 : False Bit 0 = 1: GPS Only Required Bit 1 = 1: Speed != 0 at startup Bit 2 = 1: DR Position Valid = False Bit 3 = 1: DR Heading Valid = False Bit 4 = 1: DR Calibration Valid = False Bit 5 = 1: DR Data Valid = False Bit 6 = 1: System has gone into Cold Start ⁽²⁾	N/A
3.7	Reserved					

Byte #	Field	Data Type	Bytes	Units	Range	Res
4 -5	DR Data Valid ⁽¹⁾	Bit Map	2	N/A	All bits 0: True Any bits != 0 : False Bit 0 = 1: DR Gyro Subsystem Operational = False Bit 1 = 1: DR Speed Subsystem Operational = False Bit 2 = 1: DR. Measurement Time < 0 Bit 3 = 1: Input serial DR message checksum Invalid Bit 4 = 1: No DR Data for > 2 seconds Bit 5 = 1: DR Data timestamp did not advance Bit 6 = 1: DR data bytes all 0x00 or all 0xFF Bit 7 = 1: Composite wheeltick count jumped by more than 400 between successive DR messages Bit 8 = 1: Input Gyro data bits (15) value of 0x0000 or 0x3FFF Bit 9 = 1: More than 10 DR messages in one second Bit 10 = 1: Delta Time <= 0 Bit 11-15: Reserved ⁽²⁾	N/A
6.0 – 6.3	DR Calibration Valid ⁽¹⁾	Bit Map	1	N/A	All bits 0: True Any bits != 0 : False Bit 0 = 1: DR Gyro Bias Cal Valid = False Bit 1 = 1: DR Gyro Scale Factor Cal Valid = False Bit 2 = 1: DR Speed Scale Factor Cal Valid = False Bit 3 = 1; GPS Calibration is required and is not yet available ⁽²⁾	N/A
6.4 – 6.6	DR Gyro Bias Cal Valid ⁽¹⁾	Bit Map		N/A	All bits 0: True Any bits != 0 : False Bit 0 = 1: DR Data Valid = False Bit 1 = 1: Zero-Speed Gyro Bias Calibration was Updated = False Bit 2 = 1: Heading Rate Scale Factor <= -1 ⁽²⁾	N/A
6.7	Reserved					

Byte #	Field	Data Type	Bytes	Units	Range	Res
7.0 – 7.3	DR Gyro Scale Factor Cal Valid ⁽¹⁾	Bit Map	1	N/A	All bits 0: True Any bits != 0 : False Bit 0 = 1: DR Heading Valid = False Bit 1 = 1: DR Data Valid = False Bit 2 = 1: DR Position Valid = False Bit 3 = 1: Heading Rate Scale Factor <= -1 ⁽²⁾	N/A
7.4 – 7.7	DR Speed Scale Factor Cal Valid ⁽¹⁾	Bit Map		N/A	All bits 0: True Any bits != 0 : False Bit 0 = 1: DR Data Valid = False Bit 1 = 1: DR Position Valid = False Bit 2 = 1: GPS Velocity Valid For Dr = False Bit 3 = 1: DR Speed Scale Factor <= -1 ⁽²⁾	N/A
8.0 – 8.1	DR Nav Valid Across Reset ⁽¹⁾	Bit Map	1	N/A	All bits 0: True Any bits != 0 : False Bit 0 = 1: DR Navigation Valid = False Bit 1 = 1: Speed > 0.1 m/sec ⁽²⁾	N/A
8.2	Reserved					
8.3 – 8.6	DR Position Valid ⁽¹⁾	Bit Map		N/A	All bits 0: True Any bits != 0 : False Bit 0 = 1: Speed != 0 at startup Bit 1 = 1: Valid GPS Position is Required and GPS Position Valid = False Bit 2 = 1: System has gone into Cold Start Bit 3 = 1: DR Data Valid = False ⁽²⁾	N/A
8.7	Reserved					
9.0 – 9.6	DR Heading Valid ⁽¹⁾	Bit Map	1	N/A	All bits 0: True Any bits != 0 : False Bit 0 = 1: Speed != 0 at startup Bit 1 = 1: Valid GPS Position is Required and GPS Position Valid = False Bit 2 = 1: Valid GPS Speed is Required and GPS Speed Valid = False Bit 3 = 1: GPS Updated Heading = False Bit 4 = 1: (Delta GPS Time <= 0.0) (Delta GPS Time >= 2.0) Bit 5 = 1: System has gone into Cold Start Bit 6 = 1: DR Data Valid = False ⁽²⁾	N/A
9.7	Reserved					

Byte #	Field	Data Type	Bytes	Units	Range	Res
10.0 – 10.2	DR Gyro Subsystem Operational ⁽¹⁾	Bit Map	1	N/A	All bits 0: True Any bits != 0 : False Bit 0 = 1: High, Persistent Turn Rate Bit 1 = 1: Low, Persistent Turn Rate Bit 2 = 1: Gyro Turn Rate Residual is Too Large ⁽²⁾	N/A
10.3	Reserved					
10.4 – 10.6	DR Speed Subsystem Operational ⁽¹⁾	Bit Map		N/A	All bits 0: True Any bits != 0 : False Bit 0 = 1: DR Speed Data = 0 when GPS Speed != 0 Bit 1 = 1: DR Speed Data != 0 when GPS Speed = 0 Bit 2 = 1: DR Speed Residual is Too Large ⁽²⁾	N/A
10.7	Reserved					
11.0 – 11.2	DR Nav State Integration Ran ⁽¹⁾	Bit Map	1	N/A	All bits 0: True Any bits != 0 : False Bit 0 = 1: DR Position Valid = False Bit 1 = 1: DR Heading Valid = False Bit 2 = 1: DR Data Valid = False ⁽²⁾	N/A
11.3	Reserved					
11.4 – 11.6	Zero-Speed Gyro Bias Calibration was Updated ⁽¹⁾	Bit Map		N/A	All bits 0: True Any bits != 0 : False Bit 0 = 1: GPS Speed > 0.1 m/sec Bit 1 = 1: Zero Speed During Cycle = False Bit 2 = 1: Zero Speed Previous = False ⁽²⁾	N/A
11.7	Reserved					

Byte #	Field	Data Type	Bytes	Units	Range	Res
12.0 – 12.3	DR Gyro Bias and Scale Factor Calibration was Updated ⁽¹⁾	Bit Map	1	N/A	All bits 0: True Any bits != 0 : False Bit 0 = 1: DR Data Valid = False Bit 1 = 1: DR Position Valid = False Bit 2 = 1: GPS Velocity Valid For DR = False Bit 3 = 1: GPS Updated Heading = False ⁽²⁾	N/A
12.4 – 12.6	DR Speed Calibration was Updated ⁽¹⁾	Bit Map		N/A	All bits 0: True Any bits != 0 : False Bit 0 = 1: DR Data Valid = False Bit 1 = 1: DR Position Valid = False Bit 2 = 1: GPS Velocity Valid For DR= False ⁽²⁾	N/A
12.7	DR Updated the Navigation State ⁽¹⁾	Bit Map		N/A	All bits 0: True Any bits != 0 : False Bit 0 = 1: DR Navigation Valid = False ⁽²⁾	N/A
13.0 – 13.7	GPS Updated Position ⁽¹⁾	Bit Map	1	N/A	All bits 0: True Any bits != 0 : False Bit 0 = 1: Update Mode != KALMAN Bit 1 = 1: EHE too large (i.e. EHE > 10.0) Bit 2 = 1: no previous GPS Kalman update < 4 sats Bit 3 = 1: GPS EHPE > DR EHPE Bit 4 = 1: DR EHPE < 10 even if GPS EHPE < DR EHPE Bit 5 = 1: Less than 4 satellites Bit 6 = 1: 0 satellites Bit 7 = 1: DR NAV Only Required ⁽²⁾	N/A
14.0 – 14.6	GPS Updated Heading ⁽¹⁾	Bit Map	1	N/A	All bits 0: True Any bits != 0 : False Bit 0 = 1: Update Mode != KALMAN Bit 1 = 1: GPS Speed <= 2.0 m/sec Bit 2 = 1: < 4 sats Bit 3 = 1: Horizontal Velocity Variance > 1.0 (m/sec)*(m/sec) Bit 4 = 1: GPS Heading Error >= DR Heading Error * 1.2 Bit 5 = 1: GPS Kalman Filter Updated = False Bit 6 = 1: Initial Speed Transient Complete = False ⁽²⁾	N/A
14.7	Reserved					

Byte #	Field	Data Type	Bytes	Units	Range	Res
15.0 – 15.2	GPS Position Valid for DR ⁽¹⁾	Bit Map	1	N/A	All bits 0: True Any bits != 0 : False Bit 0 = 1: < 4 sats Bit 1 = 1: EHPE > 30 Bit 2 = 1: GPS Updated Position = False ⁽²⁾	N/A
15.3	Reserved					
15.4 – 15.7	GPS Velocity Valid for DR ⁽¹⁾	Bit Map		N/A	All bits 0: True Any bits != 0 : False Bit 0 = 1: GPS Position Valid for DR = False Bit 1 = 1: EHVE > 3 Bit 2 = 1: GPS Speed < 2 m/sec Bit 3 = 1: GPS did not update the Heading ⁽²⁾	N/A
16.0 – 16.1	DWS Heading Rate Scale Factor Calibration Validity	Bit Map	1	N/A	All bits 0: True Any bits != 0 : False Bit 0 : 1 = Heading Rate Scale Factor <= -1.0 Bits 1 – 7: = Reserved	N/A

Byte #	Field	Data Type	Bytes	Units	Range	Res
16.2 – 16.7	Reserved					
17.0 – 17.6	DWS Heading Rate Scale Factor Calibration Was Update	Bit Map	1	N/A	All bits 0: True Any bits != 0 : False Bit 0 : 1 = GPS Heading Rate is not valid Bit 1 : 1 = Absolute value of GPS Heading Rate < 5.0 Bit 2 : 1 = Absolute value of GPS Heading Rate >= 90.0 Bit 3 : 1 = Left Rear Speed SF Cal is not valid Bit 4 : 1 = Right Rear Speed SF Cal is not valid Bit 5 : 1 = Absolute value of prev Rear Axle Hd Rt <= 0.0 Bit 6 : 1 = (GPS Hd Rt * prev Rear Axle Hd Rt) <= 1.0 Bit 7 : = reserved	N/A
17.7	Reserved					
18.0 – 19.7	DWS Speed Scale Factor Calibration Validity	Bit Map	2	N/A	All bits 0: True Any bits != 0 : False Bit 0 : 1 = Right Rear Speed SF <= -1.0 Bit 1 : reserved for RR status Bit 2 : reserved for RR status Bit 3 : reserved for RR status Bit 4 : 1 = Left Rear Speed SF <= -1.0 Bit 5 : reserved for LR status Bit 6 : reserved for LR status Bit 7 : reserved for LR status Bit 8 : 1 = Right Front Speed SF <= -1.0 Bit 9 : reserved for RF status Bit 10: reserved for RF status Bit 11: reserved for RF status Bit 12: 1 = Left Front Speed SF <= -1.0 Bit 13: reserved for LF status Bit 14: reserved for LF status Bit 15: reserved for LF status	N/A
20.0 – 20.5	DWS Speed Scale Factor Cal was updated	Bit Map	1	N/A	All bits 0: True Any bits != 0 : False Bit 0 : 1 = GPS Speed is not valid for DR Bit 1 : 1 = GPS Heading Rate is not valid Bit 2 : 1 = Absolute value of GPS Hd Rate >= 0.23 Bit 3 : 1 = GPS Heading Rate Error >= 0.5 Bit 4 : 1 = Average GPS Speed <= 0.0 Bit 5 : 1 = DR Position is not valid Bits 6 – 7 : reserved	N/A
20.6 – 20.7	Reserved					

Table 6.286: DR NAV Status - Message ID 48, Sub ID 1

CS-12991-01-00 (1) The bit map of the Field variable reports the status. If all the bits in the bit map are zero (0), then the status of the variable = Valid. Otherwise, if any of the bits in the bit map are set = 1, then the status of the variable = Invalid and the individual bits give the reason why. © SiRF Technology, Inc., a CSR plc company 2009-2010 Page 436 of 506

(2) The individual bits are referenced by their offset from the start of the bit map, starting with offset 0 for the LSB of the Least-Significant byte. This material is subject to SiRF's non-disclosure agreement.

API:

```
typedef struct
{
  UINT8 Nav;
  UINT16 Data;
  UINT8 Cal_GbCal;
  UINT8 GsfCal_SsfCal;
  UINT8 NavAcrossReset_Pos ;
  UINT8 Hd;
  UINT8 GyrSubOp_SpdSubOp;
  UINT8 NavStIntRan_ZGbCalUpd;
  UINT8 GbsfCalUpd_SpdCalUpd_UpdNavSt;
  UINT8 GpsUpdPos;
  UINT8 GpsUpdHd;
  UINT8 GpsPos_GpsVel;
  UINT8 DWSHdRtSFCalValid;
  UINT8 DWSHdRtSFCalUpd;
  UINT16 DWSSpdSFCalValid;
  UINT8 DWSSpdSFCalUpd ;
}
MI_DR_NAV_STATUS;
```

6.93.4 DR NAV State - Message ID 48, Sub ID 2

MID Number:	0x30
MID Name:	MID_DrOut
SID Number:	0x02
SID Name:	SID_DrNavState
SID Purpose:	DR NAV State Output Message

Table 6.287: DR NAV State - Message ID 48, Sub ID 2

Message Length: 75 bytes

Rate: Output at 1Hz

Byte #	Field	Data Type	Bytes	Units	Range	Res
1	Message ID	UINT8	1	n/a	0x30	1
2	Sub-ID	UINT8	1	n/a	0x02	1
3 – 4	DR Speed	UINT16	2	m/sec	0 to 655	0.01
5 – 6	DR Speed Error	UINT16	2	m/sec	0 to 655	0.01
7 – 8	DR Speed Scale Factor ⁽¹⁾	INT16	2	n/a	-1 to 3	0.0001
9 – 10	DR Speed Scale Factor Error	UINT16	2	n/a	0 to 3	0.0001
11 – 12	DR Heading Rate	INT16	2	deg/sec	-300 to 300	0.01
13 – 14	DR Heading Rate Error	UINT16	2	deg/sec	0 to 300	0.01
15 – 16	DR Gyro Bias	INT16	2	deg/sec	-300 to 300	0.01
17 – 18	DR Gyro Bias Error	UINT16	2	deg/sec	0 to 300	0.01
19 – 20	DR Gyro Scale Factor ⁽¹⁾	INT16	2	n/a	-1 to 3	0.0001
21 – 22	DR Gyro Scale Factor Error	UINT16	2	n/a	0 to 3	0.0001
23 – 26	Total DR Position Error	UINT32	4	meters	0 to 6000000	0.01
27 – 28	Total DR Heading Error	UINT16	2	deg	0 to 180	0.01

Byte #	Field	Data Type	Bytes	Units	Range	Res
29	DR Nav Mode Control	UINT8	1	Bitmap	bit 0 :1 = GPS-Only Navigation required (No DR NAV Allowed) bit 1: 1 = OK to do DR Nav with default or SRAM calibration bit 2: 1 = DR Nav OK if using current GPS calibration bit 3: 1 = DR Only Navigation	1
30	DR Direction	UINT8	1	boolean	0: forward 1: reverse	1
31 – 32	DR Heading	UINT16	2	deg/sec	0 to 360	0.01
33	SensorPkg	UINT8	1	n/a	0 = Gyro and Odo 1 = Wheel Speed and Odo	1
34 – 35	Odometer Speed	UINT16	2	m/sec		0.01
36 – 37	Odometer Speed Scale Factor ⁽¹⁾	INT16	2	n/a		0.0001
38 – 39	Odometer Speed Scale Factor Error	UINT16	2	n/a		0.0001
40 – 41	Left Front Wheel Speed Scale Factor ⁽¹⁾	INT16	2	n/a		0.0001
42 - 43	Left Front Wheel Speed Scale Factor Error	UINT16	2	n/a		0.0001
44 - 45	Right Front Wheel Speed Scale Factor ⁽¹⁾	INT16	2	n/a		0.0001

Byte #	Field	Data Type	Bytes	Units	Range	Res
46 - 47	Right Front Wheel Speed Scale Factor Error	UINT16	2	n/a		0.0001
48 - 49	Left Rear Wheel Speed Scale Factor ⁽¹⁾	INT16	2	n/a		0.0001
50 - 51	Left Rear Wheel Speed Scale Factor Error	UINT16	2	n/a		0.0001
52 - 53	Right Rear Wheel Speed Scale Factor ⁽¹⁾	INT16	2	n/a		0.0001
54 - 55	Right Rear Wheel Speed Scale Factor Error	UINT16	2	n/a		0.0001
56 - 57	Rear Axle Speed Delta	INT16	2	m/sec		0.01
58 - 59	Rear Axle Average Speed	UINT16	2	m/sec		0.01
60 - 61	Rear Axle Speed Error	UINT16	2	m/sec		0.01
62 - 63	Rear Axle Heading Rate	INT16	2	deg/sec		0.01

Byte #	Field	Data Type	Bytes	Units	Range	Res
64 – 65	Rear Axle Heading Rate Error	UINT16	2	deg/sec		0.01
66 – 67	Front Axle Speed Delta	INT16	2	m/sec		0.01
68 – 69	Front Axle Average Speed	UINT16	2	m/sec		0.01
70 – 71	Front Axle Speed Error	UINT16	2	m/sec		0.01
72 – 73	Front Axle Heading Rate	INT16	2	deg/sec		0.01
74 - 75	Front Axle Heading Rate Error	UINT16	2	deg/sec		0.01

Table 6.288: DR NAV State Message

(¹) Scale Factor is defined: True = Measured / (1 + Scale Factor)

API:

```
typedef struct
{
    UINT16 Spd;
    UINT16 SpdE;
    INT16 Ssf;
    UINT16 SsfE;
    INT16 Hdrte;
    UINT16 HdrteE;
    INT16 Gb;
    UINT16 GbE;
    INT16 Gsf;
    UINT16 GsfE;
    UINT32 TPE;
    UINT16 THE;
    UINT8 NavCtrl;
    UINT8 Reverse;
    UINT16 Hd;
    UINT8 SensorPkg;
    UINT16 OdoSpd;
    INT16 OdoSpdSF;
    UINT16 OdoSpdSFErr;
    INT16 LFWheelSpdSF;
    UINT16 LFWheelSpdSFErr;
    INT16 RFWheelSpdSF;
    UINT16 RFWheelSpdSFErr;
    INT16 LRWheelSpdSF;
    UINT16 LRWheelSpdSFErr;
    INT16 RRWheelSpdSF;
    UINT16 RRWheelSpdSFErr;
    INT16 RearAxleSpdDelta;
    UINT16 RearAxleAvgSpd;
    UINT16 RearAxleSpdErr;
    INT16 RearAxleHdRt;
    UINT16 RearAxleHdRtErr;
    INT16 FrontAxleSpdDelta;
    UINT16 FrontAxleAvgSpd;
    UINT16 FrontAxleSpdErr;
    INT16 FrontAxleHdRt;
    UINT16 FrontAxleHdRtErr;
} MI_DR_NAV_STATE;
```

6.93.5 NAV Subsystems Data - Message ID 48, Sub ID 3

MID Number:	0x30
MID Name:	MID_DrOut
SID Number:	0x03
SID Name:	SID_NavSubSys
SID Purpose:	NAV Subsystems Data Output Message

Table 6.289: NAV Subsystems Data - Message ID 48, Sub ID 3



Message Length: 36 bytes

Rate: Output at 1Hz

Byte #	Field	Data Type	Bytes	Units	Range	Res
1	Message ID	UINT8	1	n/a	0x30	n/a
2	Sub-ID	UINT8	1	n/a	0x03	n/a
3-4	GPS Heading Rate	INT16	2	deg/sec	-300 to 300	0.01
5-6	GPS Heading Rate Error	UINT16	2	deg/sec	0 to 300	0.01
7-8	GPS Heading (True)	UINT16	2	deg	0 to 360	0.01
9-10	GPS Heading Error	UINT16	2	deg	0 to 180	0.01
11-12	GPS Speed	UINT16	2	m/sec	0 to 655	0.01
13-14	GPS Speed Error	UINT16	2	m/sec	0 to 655	0.01
15-18	GPS Position Error	UINT32	4	meters	0 to 6000000	0.01
19-20	DR Heading Rate	INT16	2	deg/sec	-300 to 300	0.01
21-22	DR Heading Rate Error	UINT16	2	deg/sec	0 to 300	0.01

Byte #	Field	Data Type	Bytes	Units	Range	Res
23-24	DR Heading (True)	UINT16	2	deg	0 to 360	0.01
25-26	DR Heading Error	UINT16	2	deg	0 to 180	0.01
27-28	DR Speed	UINT16	2	m/sec	0 to 655	0.01
29-30	DR Speed Error	UINT16	2	m/sec	0 to 655	0.01
31-34	DR Position Error	UINT32	4	meters	0 to 6000000	0.01
35-36	Reserved	UINT16	2	n/a	undefined	n/a

Table 6.290: NAV Subsystems Data Message

API:

```
typedef struct
{
    INT16   GpsHdrRte;
    UINT16  GpsHdrRteE;
    UINT16  GpsHd;
    UINT16  GpsHdE;
    UINT16  GpsSpd;
    UINT16  GpsSpdE;
    UINT32  GpsPose;
    INT16   DrHdrRte;
    UINT16  DrHdrRteE;
    UINT16  DrHd;
    UINT16  DrHdE;
    UINT16  DrSpd;
    UINT16  DrSpdE;
    UINT32  DrPose;
    UINT8   Reserved[2];
} MI_NAV_SUBSYS;
```

6.93.6 Preserved DR Data Validity - Message ID 48, Sub ID 5

MID Number:	0x30
MID Name:	MID_DrOut
SID Number:	0x05
SID Name:	SID_DrValid
SID Purpose:	Preserved DR Data Validity Output Message (RESERVED)

Table 6.291: Preserved DR Data Validity - Message ID 48, Sub ID 5

Message Length: 10 bytes

Rate: Typically output at startup

Byte #	Field	Data Type	Bytes	Units	Range	Res
1	Message ID	UINT8	1	n/a	0x30	n/a
2	Sub-ID	UINT8	1	n/a	0x05	n/a
3-6	Valid ⁽¹⁾	UINT32	4	bitmap	bit 0 ⁽²⁾ : invalid position bit 1: invalid position error bit 2: invalid heading bit 3: invalid heading error bit 4: invalid speed scale factor bit 5: invalid speed scale factor error bit 6: invalid gyro bias bit 7: invalid gyro bias error bit 8: invalid gyro scale factor bit 9: invalid gyro scale factor error bit 10: invalid baseline speed scale factor bit 11: invalid baseline gyro bias bit 12: invalid baseline gyro scale factor bit 13 - 31: reserved	n/a
7-10	Reserved	UINT32	4	n/a	n/a	n/a

Table 6.292: Preserved DR Data Validity Message

- ⁽¹⁾ The bit map of the Field variable reports the status. If all the bits in the bit map are zero (0), then the status of the variable = Valid. Otherwise, if any of the bits in the bit map are set = 1, then the status of the variable = Not Valid, and the individual bits give the reason why.
- ⁽²⁾ The individual bits are referenced by their offset from the start of the bit map, starting with offset 0 for the LSB of the Least-Significant byte.

API:

```
typedef struct
{
    UINT32 Valid;
    UINT32 Reserved;
} MI_DR_VALID;
```

6.93.7 Gyro Factory Calibration Response - Message ID 48, Sub ID 6

MID Number:	0x30
MID Name:	MID_DrOut
SID Number:	0x06
SID Name:	SID_GyrFactCal
SID Purpose:	Gyro Factory Calibration Response Output Message

Table 6.293: Gyro Factory Calibration Response - Message ID 48, Sub ID 6

Message Length: 4 bytes

Rate: Output after successful completion of each calibration stage; can be polled

Byte #	Field	Data Type	Bytes	Units	Range	Res
1	Message ID	UINT8	1	N/A	0x30	N/A
2	Sub-ID	UINT8	1	N/A	0x06	N/A
3	Gyro Factory Calibration Progress ⁽¹⁾	Bit Map	1	N/A	bit 0 = 1: Gyro Bias calibration completed bit 0 = 2: Gyro Scale Factor calibration completed ⁽²⁾ bits 3 –7: Reserved ⁽³⁾	N/A
4	Reserved		1	N/A	N/A	N/A

Table 6.294: Gyro Factory Calibration Response Message

- ⁽¹⁾ The bit map of the Field variable reports the status of each calibration stage. All pertinent bits must be set to Valid before the calibration is considered successful.
- ⁽²⁾ The individual bits are referenced by their offset from the start of the bit map, starting with offset 0 for the LSB of the Least-Significant byte.
- ⁽³⁾ Bit 0 can't equal 2??

API:

```
typedef struct
{
    UINT8 Cal;
    UINT8 Reserved;
} MI_GYR_FACT_CAL;
```

6.93.8 Sensor package parameters - Message ID 48, Sub ID 7

MID Number:	0x30
MID Name:	MID_DrOut
SID Number:	0x07
SID Name:	SID_DrSensParam
SID Purpose:	Sensor package parameters output message

Table 6.295: Sensor package parameters - Message ID 48, Sub ID 7

Message Length: 7 bytes

Rate: Input

Byte #	Field	Data Type	Bytes	Units	Range	Res
1	Message ID	UINT8	1	n/a	0xAC	n/a
2	Sub-ID	UINT8	1	n/a	0x07	n/a
3	Baseline Speed Scale Factor	UINT8	1	ticks/m	1 to 255 (default:4)	1
4-5	Baseline Gyro Bias	UNIT16	2	zero rate Volts	2.0 to 3.0 (default:2.5)	0.0001
6-7	Baseline Gyro Scale Factor	UINT16	2	mV / (deg/sec)	1 to 65 (default: 22)	0.001

Table 6.296: Sensor package parameters Message

API:

```
typedef struct
{
    UINT8 BaseSsf; /* in ticks/m */
    UINT16 BaseGb; /* in zero rate volts */
    UINT16 BaseGsf; /* in mV / (deg/s) */
} MI_DR_SENS_PARAM;
```

6.93.9 DR Data Block Output - Message ID 48, Sub ID 8

MID Number:	0x30
MID Name:	MID_DrOut
SID Number:	0x08
SID Name:	SID_DrDataBlk
SID Purpose:	DR Data Block Output Message

Table 6.297: DR Data Block Output - Message ID 48, Sub ID 8

Message Length: 80 bytes

Rate: Output at 1 Hz

Byte #	Field	Data Type	Bytes	Units	Range	Res
1	Message ID	UINT8	1	N/A	0x30	N/A
2	Sub-ID	UINT8	1	N/A	0x08	N/A
3	Measurement Type ⁽³⁾	UINT8	1	N/A	if = 0, Gyro and Odometer; if= 1, Differential Odometer;(RESERVED) if = 2, Compass and Odometer;(RESERVED)	1
4	Valid measurements in block	UINT8	1	N/A	1 to 10	1
5-6	Backup Flags	UINT16	2	N/A	bits 0 – 9: if set = 1: Backup = True if set = 0: Backup = False ⁽⁴⁾	1
7 + (n- 1)*8 ⁽¹⁾	TimeTag	UINT32	4	msec	0 to 4294967295	1
11 + (n-1)*8 ⁽¹⁾	DR Speed 1	UINT16	2	m/sec	0 to 655	0.01
13 + (n-1)*8 ⁽¹⁾	Gyro Heading Rate or DR Speed 2 (RESERVED) or Magnetic Compass Heading (RESERVED) ⁽³⁾	INT16 or UINT16 (RESERVED) or UINT16 (RESERVED)	2	deg /sec or m/sec (RESERVED) or deg (RESERVED)	-300 to 300 or 0 to 655 (RESERVED) or 0 to 360 (RESERVED)	0.01 or 0.01 (RESERVED) or 0.01 (RESERVED)

Table 6.298: DR Data Block Output Message

⁽¹⁾ n = valid measurement sets in the block.

⁽³⁾ The type of data in the second DR measurement in each set is controlled by the Measurement Type value.

⁽⁴⁾ The bits index points to the corresponding data set; where the data set index goes from 0 to 9.

API:

```
typedef struct
{
    UINT32 Tag;
    UINT16 Data1;
    INT16 Data2;
} MI_DR_10HZ;

typedef struct
{
    UINT8 MeasType;
    UINT8 ValidCnt;
    UINT16 BkupFlgs;
    MI_DR_10HZ Blk[10];
} MI_DR_DATA_BLK;
```

6.93.10 Sensor Package Parameters - Message ID 48, Sub ID 9

MID Number:	0x30
MID Name:	MID_DrOut
SID Number:	0x09
SID Name:	SID_GenericSensorParam
SID Purpose:	Sensor package parameters output message

Table 6.299: Sensor Package Parameters - Message ID 48, Sub ID 9

Message Length: 30 bytes

Rate:

The user can enable a one time transmission of this message via SirfDemo's Poll command for SiRFDRive. In the SiRFDRive menu item select the Poll Sensor's Parameters shown below:

Byte #	Field	Data Type	Bytes	Units	Range	Res
1	Message ID	UINT8	1	N/A	0x30	N/A
2	Sub-ID	UINT8	1	N/A	0x09	N/A
3	Sensors[0].SensorType	UINT8	1	N/A	GYRO_SENSOR = 0x1 ACCELERATION_SENSOR = 0x2	N/A
4 – 5	Sensors[0].ZeroRateVolts	UINT16	2	volts	0 to 5.0 ⁽¹⁾	0.0001
6– 7	Sensors[0].MilliVoltsPer	UINT16	2	millivolts	0 to 1000 ⁽²⁾	0.0001
8 – 9	Sensors[0].ReferenceVoltage	UINT16	2	volts	0 to 5.0	0.0001
10	Sensors[1].SensorType	UINT8	1	N/A	GYRO_SENSOR = 0x1 ACCELERATION_SENSOR = 0x2	N/A
11 – 12	Sensors[1].ZeroRateVolts	UINT16	2	volts	0 to 5.0	0.0001
13 – 14	Sensors[1].MilliVoltsPer	UINT16	2	millivolts	0 to 1000	0.0001
15 – 16	Sensors[1].ReferenceVoltage	UINT16	2	volts	0 to 5.0	0.0001
17	Sensors[2].SensorType	UINT8	1	N/A	GYRO_SENSOR = 0x1 ACCELERATION_SENSOR = 0x2	N/A
18 – 19	Sensors[2].ZeroRateVolts	UINT16	2	volts	0 to 5.0	0.0001

Byte #	Field	Data Type	Bytes	Units	Range	Res
20 – 21	Sensors[2].MilliVolts Per	UINT16	2	millivolts	0 to 1000	0.0001
22 – 23	Sensors[2].ReferenceVoltage	UINT16	2	volts	0 to 5.0	0.0001
24	Sensors[3].SensorType	UINT8	1	N/A	GYRO_SENSOR = 0x1 ACCELERATION_SENSOR = 0x2	N/A
25 – 26	Sensors[3].ZeroRateVolts	UINT16	2	volts	0 to 5.0	0.0001
27 – 28	Sensors[3].MilliVolts Per	UINT16	2	millivolts	0 to 1000	0.0001
29 – 30	Sensors[3].ReferenceVoltage	UINT16	2	volts	0 to 5.0	0.0001

Table 6.300: Sensor Package Parameters Message

⁽¹⁾ To restore ROM defaults for ALL sensors enter the value 0xdeadabba here. You must still include the remainder of the message but these values will be ignored.

⁽²⁾ For gyro this is millivolts per degree per second. For the acceleration sensor it is millivolts per metre per second ^ 2

API:

```
#define MAX_NUMBER_OF_SENSORS 0x4
typedef struct
{
    UINT8  SensorType;
    UINT32 ZeroRateVolts;
    UINT32 MilliVoltsPer
    UINT32 ReferenceVoltage;
}MI_SensorDescriptionType;

typedef struct
{
    MI_SensorDescriptionType Sensors [MAX_NUMBER_OF_SENSORS];
} MI_DR_SENS_PARAM;
```

6.93.11 Generic Sensors Raw Data - Message ID 48, Sub ID 10

MID Number:	0x30
MID Name:	MID_DrOut
Number:	0x0A
Name:	SID_GenericRawOutput
Purpose:	Output raw data from generic sensors

Table 6.301: Generic Sensors Raw Data - Message ID 48, Sub ID 10

Message Length: 152 bytes @ 1Hz or 16 bytes @ 10Hz

Rate: 152 bytes @ 1Hz or 16 bytes @ 10Hz

Byte #	Field	Data Type	Bytes	Units	Range	Res
1	Message ID	UINT8	1	n/a	0x30	n/a
2	Sub-ID	UINT8	1	N/A	0x0A	N/A
3 – 6	[0].CurrentTime	UINT32	4	millisecs	0 to 0xffffffff	n/a
7 – 8	[0].AdcAvg[0]	UINT16	2	raw count	0 to 0xffff	n/a
9– 10	[0].AdcAvg[1]	UINT16	2	raw count	0 to 0xffff	n/a
11 -12	[0].AdcAvg[2]	UINT16	2	raw count	0 to 0xffff	n/a
13 – 14	[0].AdcAvg[3]	UINT16	2	raw count	0 to 0xffff	n/a
15 – 16	[0].OdoCount	UINT16	2	raw count	0 to 0xffff	n/a
17	[0].GPIOStat	UINT8	1	n/a	0 to 0xff	n/a
18- 21	[1].CurrentTime	UINT32	4	millisecs	0 to 0xffffffff	n/a
22 -23	[1].AdcAvg[0]	UINT16	2	raw count	0 to 0xffff	n/a
24 -25	[1].AdcAvg[1]	UINT16	2	raw count	0 to 0xffff	n/a
26 -27	[1].AdcAvg[2]	UINT16	2	raw count	0 to 0xffff	n/a
28 – 29	[1].AdcAvg[3]	UINT16	2	raw count	0 to 0xffff	n/a
30 -31	[1].OdoCount	UINT16	2	raw count	0 to 0xffff	n/a
32	[1].GPIOStat	UINT8	1	n/a	0 to 0xff	n/a
33 – 36	[2].CurrentTime	UINT32	4	millisecs	0 to 0xffffffff	n/a

Byte #	Field	Data Type	Bytes	Units	Range	Res
37 – 38	[2].AdcAvg[0]	UINT16	2	raw count	0 to 0xffff	n/a
39 -40	[2].AdcAvg[1]	UINT16	2	raw count	0 to 0xffff	n/a
41 -42	[2].AdcAvg[2]	UINT16	2	raw count	0 to 0xffff	n/a
43 – 44	[2].AdcAvg[3]	UINT16	2	raw count	0 to 0xffff	n/a
45 -46	[2].OdoCount	UINT16	2	raw count	0 to 0xffff	n/a
47	[2].GPIOStat	UINT8	1	n/a	0 to 0xff	n/a
48- 51	[3].CurrentTime	UINT32	4	millisecs	0 to 0xffffffff	n/a
52 -53	[3].AdcAvg[0]	UINT16	2	raw count	0 to 0xffff	n/a
54 – 55	[3].AdcAvg[1]	UINT16	2	raw count	0 to 0xffff	n/a
56 – 57	[3].AdcAvg[2]	UINT16	2	raw count	0 to 0xffff	n/a
58 -59	[3].AdcAvg[3]	UINT16	2	raw count	0 to 0xffff	n/a
60 -61	[3].OdoCount	UINT16	2	raw count	0 to 0xffff	n/a
62	[3].GPIOStat	UINT8	1	n/a	0 to 0xff	n/a
63 – 66	[4].CurrentTime	UINT32	4	millisecs	0 to 0xffffffff	n/a
67 – 68	[4].AdcAvg[0]	UINT16	2	raw count	0 to 0xffff	n/a
69 – 70	[4].AdcAvg[1]	UINT16	2	raw count	0 to 0xffff	n/a
71 – 72	[4].AdcAvg[2]	UINT16	2	raw count	0 to 0xffff	n/a

Byte #	Field	Data Type	Bytes	Units	Range	Res
73 – 74	[4].AdcAvg[3]	UINT16	2	raw count	0 to 0xffff	n/a
75 – 76	[4].OdoCount	UINT16	2	raw count	0 to 0xffff	n/a
77	[4].GPIOStat	UINT8	1	n/a	0 to 0xff	n/a
78 – 81	[5].CurrentTime	UINT32	4	millisecs	0 to 0xffffffff	n/a
82 – 83	[5].AdcAvg[0]	UINT16	2	raw count	0 to 0xffff	n/a
84 – 85	[5].AdcAvg[1]	UINT16	2	raw count	0 to 0xffff	n/a
86 -87	[5].AdcAvg[2]	UINT16	2	raw count	0 to 0xffff	n/a
88 – 89	[5].AdcAvg[3]	UINT16	2	raw count	0 to 0xffff	n/a
90 – 91	[5].OdoCount	UINT16	2	raw count	0 to 0xffff	n/a
92	[5].GPIOStat	UINT8	1	n/a	0 to 0xff	n/a
93 – 96	[6].CurrentTime	UINT32	4	millisecs	0 to 0xffffffff	n/a
97 -98	[6].AdcAvg[0]	UINT16	2	raw count	0 to 0xffff	n/a
99 - 100	[6].AdcAvg[1]	UINT16	2	raw count	0 to 0xffff	n/a
101 - 102	[6].AdcAvg[2]	UINT16	2	raw count	0 to 0xffff	n/a
103 - 104	[6].AdcAvg[3]	UINT16	2	raw count	0 to 0xffff	n/a
105 – 106	[6].OdoCount	UINT16	2	raw count	0 to 0xffff	n/a
107	[6].GPIOStat	UINT8	1	n/a	0 to 0xff	n/a

Byte #	Field	Data Type	Bytes	Units	Range	Res
108 – 111	[7].CurrentTime	UINT32	4	millisecs	0 to 0xffffffff	n/a
112 – 113	[7].AdcAvg[0]	UINT16	2	raw count	0 to 0xffff	n/a
114 – 115	[7].AdcAvg[1]	UINT16	2	raw count	0 to 0xffff	n/a
116 – 117	[7].AdcAvg[2]	UINT16	2	raw count	0 to 0xffff	n/a
118- 119	[7].AdcAvg[3]	UINT16	2	raw count	0 to 0xffff	n/a
120- 121	[7].OdoCount	UINT16	2	raw count	0 to 0xffff	n/a
122	[7].GPIOStat	UINT8	1	n/a	0 to 0xff	n/a
123- 126	[8].CurrentTime	UINT32	4	millisecs	0 to 0xffffffff	n/a
127- 128	[8].AdcAvg[0]	UINT16	2	raw count	0 to 0xffff	n/a
129 – 130	[8].AdcAvg[1]	UINT16	2	raw count	0 to 0xffff	n/a
131 – 132	[8].AdcAvg[2]	UINT16	2	raw count	0 to 0xffff	n/a
133- 134	[8].AdcAvg[3]	UINT16	2	raw count	0 to 0xffff	n/a
135 – 136	[8].OdoCount	UINT16	2	raw count	0 to 0xffff	n/a
137	[8].GPIOStat	UINT8	1	n/a	0 to 0xff	n/a
138 – 141	[9].CurrentTime	UINT32	4	millisecs	0 to 0xffffffff	n/a

Byte #	Field	Data Type	Bytes	Units	Range	Res
142- 143	[9].AdcAvg[0]	UINT16	2	raw count	0 to 0xffff	n/a
144- 145	[9].AdcAvg[1]	UINT16	2	raw count	0 to 0xffff	n/a
146- 147	[9].AdcAvg[2]	UINT16	2	raw count	0 to 0xffff	n/a
148- 149	[9].AdcAvg[3]	UINT16	2	raw count	0 to 0xffff	n/a
150 – 151	[9].OdoCount	UINT16	2	raw count	0 to 0xffff	n/a
152	[9].GPIOStat	UINT8	1	n/a	0 to 0xff	n/a

Table 6.302: Generic Sensors Raw Data Message

API:

```
#define NUM_OF_DR_RAW 10
#define MAX_NUMBER_OF_SENSORS 0x4

typedef struct
{
    UINT32 currentTime;
    UINT16 adcAvg[MAX_NUMBER_OF_SENSORS];
    UINT16 odoCount;
    UINT8 gpioStat;
} tADCOdometer;

typedef struct
{
    struct
    {
        tADCOdometer ADCOdometer[NUM_OF_DR_RAW];
    } DrRaw;
} tDrRawData, *tDrRawDataPtr;
```

6.93.12 Map Matching Feedback State - Message ID 48, Sub ID 80

MID Number:	0x30
MID Name:	MID_DrOut
SID Number:	0x50
SID Name:	SID_MMFStatus
SID Purpose:	Map Matching Feedback State Output Message

Table 6.303: Map Matching Feedback State - Message ID 48, Sub ID 80

Message Length: 42 bytes

Rate: Output at 1Hz

Byte #	Field	Data Type	Bytes	Units	Range	Res
1	Message ID	UINT8	1	N/A	0x30	N/A
2	Sub-ID	UINT8	1	N/A	0x50	N/A
3 -6	MMF_Status	UINT32	4	bitmap	See "MMF_Status Bit Description" below	0
7 -8	Heading	UINT16	2	deg	0 to 360	0.01
9 -12	Latitude	INT32	4	deg	-90 to 90	10 ⁻⁷
13 -16	Longitude	INT32	4	deg	-180 to 180	10 ⁻⁷
17 -20	Altitude	INT32	4	metre	-2000 to 120000	0.1
21-24	TOW	UINT32	4	sec	0 to 604800.000	0.001
25-26	MMF_Heading	UINT16	2	deg	0 to 360	0.01
27-30	MMF_Latitude	INT32	4	deg	-90 to 90	10 ⁻⁷
31-34	MMF_Longitude	INT32	4	deg	-180 to 180	10 ⁻⁷
35-38	MMF_Altitude	INT32	4	metre	-2000 to 120000	0.1
39-42	MMF_TOW	UINT32	4	sec	0 to 604800.000	0.001

Table 6.304: Map Matching Feedback State Message

This represents what the MMF_Status was for the last received MMF packet.

Assuming Bit 0 is the Least Significant Bit:

Bit #	Name	Description
31	MMF_STATUS_MMF_ENABLED_MASK	Map matching is enabled
30	MMF_STATUS_MMF_CALIBRATION_ENABLED_MASK	Map matching calibration is enabled
29	MMF_STATUS_MMF_RETROLOOP_ENABLED_MASK	Map matching retroloop is enabled
28	MMF_STATUS_GOT_DATA_MASK	Received a MMF packet
27	MMF_STATUS_SYSTEM_ALTITUDE_VALID_MASK	Altitude updated with MMF data
26	MMF_STATUS_SYSTEM_HEADING_VALID_MASK	Heading updated with MMF data
25	MMF_STATUS_SYSTEM_POSITION_VALID_MASK	Position updated with MMF data
24	MMF_STATUS_INVALID_DATA_SIZE_MASK	Incorrect number of data sets inside MMF packet
23	MMF_STATUS_HEADING_OUT_OF_RANGE_MASK	Hdg must 0 to 360 degrees
22	MMF_STATUS_POSITION_DRIFT_MASK	MMF solution failed position drift logic
21	MMF_STATUS_DATA_OVERFLOW_MASK	New MMF packet arrived before prior one used
20	MMF_STATUS_DATA_TOO_OLD_MASK	MMF Data was too old for processing
19	MMF_STATUS_NAV_UPDATED_MASK	Nav was updated with MMF feedback
18	MMF_STATUS_NAV_VALID_MASK	Nav is valid
17	MMF_MI_MALFORMED_INPUT_DATA_MASK	MI_MMF_InputData() found error in data
16	MMF_STATUS_HEADING_ERROR_RATE_TOO_BIG_MASK	MMF packet failed Heading Error logic
15	MMF_STATUS_HEADING_TURN_RATE_TOO_BIG_MASK	MMF packet failed Heading Rate logic
14	MMF_STATUS_SPEED_TOO_LOW_MASK	MMF packet failed Speed logic
13 to 8	undefined	Reserved
7	MMF_BITMAP_RESERVED_TWO_MASK	Copy of MMF packet bitmap register
6	MMF_BITMAP_RESERVED_ONE_MASK	Copy of MMF packet bitmap register

Bit #	Name	Description
5	MMF_BITMAP_ALTITUDE_VALID_MASK	Copy of MMF packet bitmap register
4	MMF_BITMAP_HEADING_VALID_MASK	Copy of MMF packet bitmap register
3	MMF_BITMAP_POSITION_VALID_MASK	Copy of MMF packet bitmap register
2	MMF_BITMAP_ALTITUDE_FORCED_MAS K	Copy of MMF packet bitmap register
1	MMF_BITMAP_HEADING_FORCED_MAS K	Copy of MMF packet bitmap register
0	MMF_BITMAP_POSITION_FORCED_MAS K	Copy of MMF packet bitmap register

Table 6.305: MMF Status Field Bits

API:

```
typedef struct
{
    UINT32 MMF_Status17;
    UINT16 Heading;
    INT32 Latitude;
    INT32 Longitude;
    INT32 Altitude;
    UINT32 TOW;
    UINT16 MMF_Heading;
    INT32 MMF_Latitude;
    INT32 MMF_Longitude;
    INT32 MMF_Altitude;
    UINT32 MMF_TOW;
} MI_MMF_State_Type;
```

6.93.13 SiRF Binary GSA - Message ID 48, Sub ID 100

MID Number:	0x30
MID Name:	MID_DrOut
Number:	0x64
Name:	SID_GSA
Purpose:	Sirf Binary equivalent of NMEA GSA message

Table 6.306: SiRF Binary GSA - Message ID 48, Sub ID 100

Message Length: 32 bytes

Rate: Output when Nav is complete

Byte #	Field	Data Type	Bytes	Units	Range	Res
1	Message ID	UINT8	1	integer	0x30	1
2	Sub-ID	UINT8	1	integer	0x64	1
3	mode1	UINT8	1	integer	1 = Manual-forced to operate in 2D or 3D mode 2 = 2D Automatic- allowed to automatically switch 2D/3D	1
4	mode2	UINT8	1	integer	1 = Fix not available 2 = 2D(<4 SVs used) 3 = 3D(> 3 SVs used)	1
5-8	satellite_used_0_31	UINT32	4	bitmap	Bit 0 = SV 0 Bit 1 = SV 1 ... Bit 31 = SV 31 If bit is set to 1 then SV was used in solution.	1
9-12	satellite_used_32_63	UINT32	4	bitmap	Bit 0 = SV 32 Bit 1 = SV 33 ... Bit 31 = SV 63 If bit is set to 1 then SV was used in solution.	1
13-16	GDOP	FLOAT32	4	metre	Geometric Dilution of Precision	1
17-20	HDOP	FLOAT32	4	metre	Horizontal Dilution of Precision	1
21-24	PDOP	FLOAT32	4	metre	Position Dilution of Precision	1
25-28	TDOP	FLOAT32	4	metre	Time Dilution of Precision	1
29-32	VDOP	FLOAT32	4	metre	Vertical Dilution of Precision	1

Table 6.307: SiRF Binary GSA Message

API:

```
typedef struct
{
    UINT32  satellite_used_0_31;
    UINT32  satellite_used_32_63;
    FLOAT32 GDOP;
    FLOAT32 HDOP;
    FLOAT32 PDOP;
    FLOAT32 TDOP;
    FLOAT32 VDOP;
    UINT8   mode1;
    UINT8   mode2;
} MI_GSA;
```

6.93.14 SiRFDRive NVM at Boot - Message ID 48, Sub ID 105

MID Number:	0x30
MID Name:	MID_DrOut
Number:	0x65
Name:	SID_DR_NVM
Purpose:	Output contents of SiRFDRive NVM at boot. Used to seed offline test runs.

Table 6.308: SiRFDRive NVM at Boot - Message ID 48, Sub ID 105

Message Length: 167 bytes

Rate: Output once at start

Byte #	Field	Data Type	Bytes	Units	Range	Res
1	Message ID	UINT8	1	N/A	0x30	1
2	Sub-ID	UINT8	1	N/A	0x65	1
3-4	SeqNum	INT16	2	integer	2 to 32767	1
5-6	OkAcrossReset	BOOL16	2	boolean	0 = false, 1 = true	1
7-10	DRHeading	FLOAT32	4	degrees	0.0 to 360.0	1
11-14	DRHeadingError	FLOAT32	4	degrees	0.0 to 360.0	1
15-18	DRSpeedError	FLOAT32	4	m/sec	0.0 to 600.018	1
19-22	DRPositionError	FLOAT32	4	metres	0.0 to 6.0e6f	1
23-26	SpeedSf	FLOAT32	4	dimensionless	+/- full res	1
27-30	OdoSpeedSf	FLOAT32	4	dimensionless	+/- full res	1
31-34	HeadingRateBias	FLOAT32	4	deg/sec	+/- full res	1
35-38	HeadingRateSf	FLOAT32	4	dimensionless	+/- full res	1
39-46	HeadingRateSf_SD	DOUBLE64	8	dimensionless	0.0 to +full res	1
47-50	LFSpeedSF	FLOAT32	4	dimensionless	+/- full res	1
51-54	RFSpeedSF	FLOAT32	4	dimensionless	+/- full res	1
55-58	LRSpeedSF	FLOAT32	4	dimensionless	+/- full res	1
59-62	RRSpeedSF	FLOAT32	4	dimensionless	+/- full res	1

Byte #	Field	Data Type	Bytes	Units	Range	Res
63-66	AxleLength	FLOAT32	4	metres	0.0 to 10.0	1
67-70	AxleSep	FLOAT32	4	metres	0.0 to 50.0	1
71-74	AntennaDist	FLOAT32	4	metres	+/- 50.0	1
75-76	FirstHRSFDone	BOOL16	2	boolean	0 = false, 1 = true	1
77-78	DiffWheelSpdCalOK	BOOL16	2	boolean	0 = false, 1 = true	1
79-80	LFSpeedSFCalOk	BOOL16	2	boolean	0 = false, 1 = true	1
81-82	RFSpeedSFCalOk	BOOL16	2	boolean	0 = false, 1 = true	1
83-84	LRSpeedSFCalOk	BOOL16	2	boolean	0 = false, 1 = true	1
85-86	RRSpeedSFCalOk	BOOL16	2	boolean	0 = false, 1 = true	1
87-88	DrNavControl	INT16	2	bitmap	0x1 = GPS_ONLY_REQUIRED 0x2=DR_NAV_WITH_STORED_CAL_OK 0x4 = DR_NAV_REQUIRES_GPS_CAL 0x8 = DR_NAV_ONLY_REQUIRED	1
89-96	RawLonAccel	DOUBLE64	8	m/sec^2	+/- 50.0	1
97- 104	RawLatAccel	DOUBLE64	8	m/sec^2	+/- 50.0	1
105- 112	RawUpAccel	DOUBLE64	8	m/sec^2	+/- 50.0	1
113- 120	YawAngle_rads	DOUBLE64	8	radians	0.0 to (2.0 * PI) ??	10 ⁻⁷
121- 128	YawAngleSD_rads	DOUBLE64	8	radians	0.0 to (2.0 * PI)??	10 ⁻⁷
129- 136	PitchAngle_rads	DOUBLE64	8	radians	0.0 to (2.0 * PI)??	10 ⁻⁷

Byte #	Field	Data Type	Bytes	Units	Range	Res
137- 144	RollAngle_rads	DOUBLE64	8	radians	0.0 to (2.0 * PI)??	10 ⁻⁷
145- 146	Sensor2YawedDone	BOOL16	2	boolean	0 = false, 1 = true	1
147- 148	YawAngleComputed	BOOL16	2	boolean	0 = false, 1 = true	1
149- 150	UserResetWithData	BOOL16	2	boolean	1= User has issued Reset with Data for us to update DR with. 0= No data from user to update DR with.	1
151- 152	ValidDrCal	BOOL16	2	boolean	0 = false, 1 = true	1
153 – 154	OdoSpeedSFCalOk	BOOL16	2	boolean	0 = false, 1 = true	1
155	SensorDataType	UINT8	1	Bus Type	0 = DIRECT_ODO_GYRO_REV 1= NETWORK_ODO_GYRO_REV 2= NETWORK_DIF_PULSES_REV 3=NETWORK_DIF_SPEEDS_REV 4=NETWORK_DIF_ANGLRT_REV 5=NETWORK_ODO_GYRO_NOREV 6 =NETWORK_DIF_PULSES_NOREV 7=NETWORK_DIF_SPEEDS_NOREV 8 =NETWORK_DIF_ANGLRT_NOREV 9=NET_GYRO_ODO_STEER_ACCEL 12= NET_ONE_GYRO_THREE_ACCELS	1
156- 159	CheckSum	UINT32	4	CRC code	0x0 to 0xFFFFFFFF	1
160- 163	Reserved1	UINT32	4	Undefined	Internal use	1
164- 167	Reserved2	UINT32	4	undefined	Internal use	1

Table 6.309: SiRFDRive NVM at Boot Message

API:

```
typedef struct
{
INT16      SeqNum;
BOOL16     OkAcrossReset; // TRUE: DR data can be used after a RESET
                                // FALSE: DR data cannot be used after a RESET

FLOAT32    DRHeading;          // deg
FLOAT32    DRHeadingError;     // deg, 1-sigma
FLOAT32    DRSpeedError;       // m/sec, 1-sigma
FLOAT32    DRPositionError;    // meters, 1-sigma

//
// Odometer data
//
FLOAT32    SpeedSf;            // dimensionless
FLOAT32    OdoSpeedSf;        // dimensionless

//
// Gyro Data
//
FLOAT32    HeadingRateBias;    // deg/sec
FLOAT32    HeadingRateSf;      // dimensionless
DOUBLE64   HeadingRateSf_SD;  // dimensionless

//
// Differential Wheel Speed Data
//
FLOAT32    LFSpeedSF; // Left Front Wheel Speed Scale Factor,
                                // dimensionless
FLOAT32    RFSpeedSF; // Right Front Wheel Speed Scale Factor,
                                // dimensionless
FLOAT32    LRSpeedSF; // Left Rear Wheel Speed Scale Factor,
                                // dimensionless
FLOAT32    RRSpeedSF; // Right Rear Wheel Speed Scale Factor,
                                // dimensionless
FLOAT32    AxleLength; // Length of rear axle, meters
FLOAT32    AxleSep;    // Distance from rear to front axle, meters
                                // (positive forward)
FLOAT32    AntennaDist; // Distance from rear axle to GPS antenna,
                                //meters (positive forward)
BOOL16     FirstHRSFDone; // Indicates First Heading Rate Scale Factor
                                // estimate was done
BOOL16     DiffWheelSpdCalOK; // Indicates whether DWS calibration has been
                                // successful
BOOL16     LFSpeedSFCalOk; // Indicates whether individual speed has been
                                // calibrated
BOOL16     RFSpeedSFCalOk; // Indicates whether individual speed has been
                                // calibrated
BOOL16     LRSpeedSFCalOk; // Indicates whether individual speed has been
                                // calibrated
BOOL16     RRSpeedSFCalOk; // Indicates whether individual speed has been
                                // calibrated
INT16      DrNavControl; // GPS Only, DR with Stored Cal, or DR with GPS Cal
DOUBLE64   RawLonAccel;
```

```

DOUBLE64 RawLatAccel;
DOUBLE64 RawUpAccel;
DOUBLE64 YawAngle_rads ;           // radians
DOUBLE64 YawAngleSD_rads;         // radians
DOUBLE64 PitchAngle_rads;         // radians
DOUBLE64 RollAngle_rads;          // radians

BOOL16   Sensor2YawedDone;
BOOL16   YawAngleComputed;
BOOL16   UserResetWithData; //TRUE = User has issued Reset with Data
                                     // for us to update DR with
                                     //FALSE = No data from user to update DR
                                     // with

BOOL16   ValidDrCal;
BOOL16   OdoSpeedSFCalOk;
UINT8    SensorDataType;           //Need to remember Bus Type Across reset
UINT32   CheckSum;

} tDrRamData, *tDrRamDataPtr;

```

6.93.15 GPIO State - Message ID 65, Sub ID 129

MID Number:	0x41
MID Name:	MID_DrIn
Number:	0x81
Name:	MID_GPIO_State

Table 6.310: GPIO State - Message ID 65, Sub ID 129

Message Length: 4 bytes

Rate: Output at 1Hz

Byte #	Field	Data Type	Bytes	Units	Range	Res
1	Message ID	UINT8	1	n/a	0x41	1
2	Sub-ID	UINT8	1	n/a	0x81	1
3-4	gpio_state	UINT16	2	bitmap	Bit 0 is GPIO 0 Bit 1 is GPIO 1 ... Bit 15 is GPIO 15	1

Table 6.311: GPIO State Message

API:

```
UINT16
gpio_state;
```

6.93.16 Car Bus Data to NAV - Message ID 172, Sub ID 9

MID Number:	0xAC
MID Name:	MID_DrIn
SID Number:	0x09
SID Name:	SID_InputCarBusData
SID Purpose:	Output Car Bus Data to NAV

Table 6.312: Car Bus Data to NAV - Message ID 172, Sub ID 9

Message Length: 22 to 182 bytes

Rate: Input at 1Hz

Byte #	Field	Data Type	Bytes	Units	Range	Res
1	Message ID	UINT8	1	N/A	0xAC	N/A
2	Sub-ID	UINT8	1	N/A	0x09	N/A
3	Sensor Data Type (SDT)	UINT8	1	N/A	0-127 1: Gyro, Speed Data, and Reverse 2: 4 Wheel Pulses, and Reverse 3: 4 Wheel Speed, and Reverse 4: 4 Wheel Angular Speed, and Reverse 5: Gyro, Speed Data, NO Reverse 6: 4 Wheel Pulses, NO Reverse 7: 4 Wheel Speed, NO Reverse 8: 4 Wheel Angular Speed, NO Reverse 9: Gyro, Speed Data, Reverse, Steering Wheel Angle, Longitudinal Acceleration, Lateral Acceleration 10: Yaw Rate Gyro, Downward Acceleration (Z), Longitudinal Acceleration (X), Lateral Acceleration (Y) 10-127: Reserved	N/A
4	Number of Valid data sets	UINT8	1	N/A	0-11	N/A
5	Reverse Bit Map N/A for SDT = 10	UINT16	2	N/A	Bit-wise indication of REVERSE status corresponding to each sensor data set, i.e. bit 0 corresponds to the first data set, bit 1 corresponds to the second data set, etc.	N/A

Byte #	Field	Data Type	Bytes	Units	Range	Res
7+(N- 1)* 16 ⁽¹⁾	Valid Sensor Indication	UINT8	1	N/A	Valid/Not Valid indication for each one of the 4 possible sensor inputs in a individual data set; when a particular bit is set to 1 the corresponding data is Valid, when the bit is set to 0 the corresponding data is NOT valid. Bit 0 corresponds to Data Set Time Tag Bit 1 corresponds to Odometer Speed Bit 2 corresponds to Data 1 Bit 3 corresponds to Data 2 Bit 4 corresponds to Data 3 Bit 5 corresponds to Data 4 Bits 6-7 : Reserved	N/A
8+(N- 1)* 16 ⁽¹⁾	Data Set Time Tag	UINT32	4	msec	0-4294967295	1
12+ (N- 1)*16 ⁽¹⁾	Odometer Speed (also known as VSS) N/A for SDT = 10	UINT16	2	m/sec	0 to 100	0.01
14+(N- 1)* 16 ⁽¹⁾	Data 1 (Depends on SDT)	INT16	2	(Depends on (SDT))	(Depends on (SDT))	(Depends on (SDT))
	SDT = 1,5, 9,10: Gyro Rate			Deg/sec	-120 to 120	0.01
	SDT = 2, 6: Right Front Wheel Pulses			N/A	4000	1
	SDT = 3, 7: Right Front Wheel Speed			m/sec	0 to 100	0.01
	SDT = 4, 8: Right Front Wheel Angular Speed			rad/sec	-327.67 to 327.67	0.01

Byte #	Field	Data Type	Bytes	Units	Range	Res
16+(N- 1)* 16 ⁽¹⁾	Data 2 (Depends on SDT)	INT16	2	(Depends on (SDT))	(Depends on (SDT))	(Depends on (SDT))
	SDT = 1: N/A			N/A	N/A	N/A
	SDT =2 , 6: Left Front Wheel Pulses			N/A	4000	1
	SDT = 3, 7: Left Front Wheel Speed			m/sec	0 to 100	0.01
	SDT = 4, 8: Left Front Wheel Angular Speed			rad/sec	-327.67 to 327.67	0.01
	SDT = 9: Steering Wheel Angle			deg	-720 to 720	0.05
	SDT = 10: Downwards Acceleration			m/sec ²	-15 to 15	0.001

Byte #	Field	Data Type	Bytes	Units	Range	Res
18+(N- 1)* 16 ⁽¹⁾	Data 3 (Depends on SDT)	INT16	2	(Depends on (SDT))	(Depends on (SDT))	(Depends on (SDT))
	SDT = 1: N/A			N/A	N/A	N/A
	SDT = 2, 6: Right Rear Wheel Pulses			N/A	4000	1
	SDT = 3, 7: Right Rear Wheel Speed			m/sec	0 to 100	0.01
	SDT = 4, 8: Right Rear Wheel Speed			rad/sec	-327.67 to 327.67	0.01
	SDT = 9,10:Longitudinal Acceleration			m/sec ²	-15 to 15	0.001

Byte #	Field	Data Type	Bytes	Units	Range	Res
20+(N- 1)* 16 ⁽¹⁾	Data 4 (Depends on SDT)	INT16	2	(Depends on (SDT))	(Depends on (SDT))	(Depends on (SDT))
	SDT = 1: N/A			N/A	N/A	N/A
	SDT = 2, 6: Left Rear Wheel Pulses			N/A	4000	1
	SDT = 3, 7: Left Rear Wheel Speed			m/sec	0 to 100	0.01
	SDT = 4, 8: Left Rear Wheel Speed			rad/sec	-327.67 to 327.67	0.01
	SDT = 9,10: Lateral Acceleration			m/sec ²	-15 to 15	0.001
22+(N- 1)* 16 ⁽¹⁾	Reserved	UINT8	1	N/A	N/A	N/A

Table 6.313: Car Bus Data to NAV Message

⁽¹⁾ N indicates the number of valid data sets in the message

API:

```
typedef struct
{
    UINT8    ValidSensorIndication;
    UINT32   DataSetTimeTag;
    UINT16   OdometerSpeed;
    INT16    Data1;
    INT16    Data2;
    INT16    Data3;
    INT16    Data4;
    UINT8    Reserved;
} tCarSensorData;

typedef struct
{
    UINT8          SensorDataType;
    UINT8          NumValidDataSets;
    UINT16         ReverseBitMap;
    tCarSensorData CarSensorData[11];
} tCarBusData;
```


6.94 ACK/NACK for Push Aiding Availability

Removed. There is no need for a separate ACK/NACK for this message. No additional information was proposed here from the ACK/NACK message in Section 6.77.

7 Message Processing Procedures

7.1 Message Flow

7.1.1 Typical Message Flow in Stand-Alone Mode

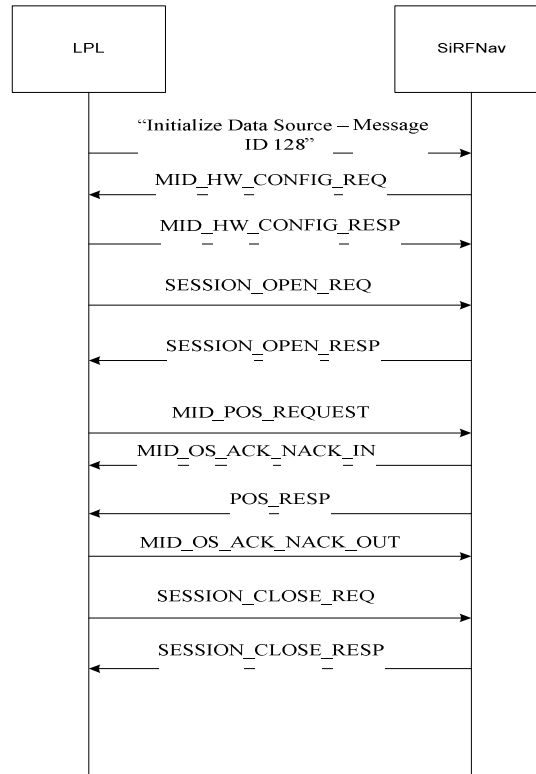

G-TW-0000000.0.0

Figure 7.1: Typical Message Flow in Stand-Alone Mode

Figure 7.1 illustrates the message flow between a CP component, such as LPL and an SLC component, such as SiRFNav. This includes restarting the receiver with an “Initialize Data Source” message, exchanging HW configuration information, opening up a session, requesting position data and providing it, and finally, closing the session.

7.1.2 Typical Message Flow in Aided Mode

The overall message flow between CP and SLC interfaces during an aided GPS (AGPS) session is shown in Figure 7.2.

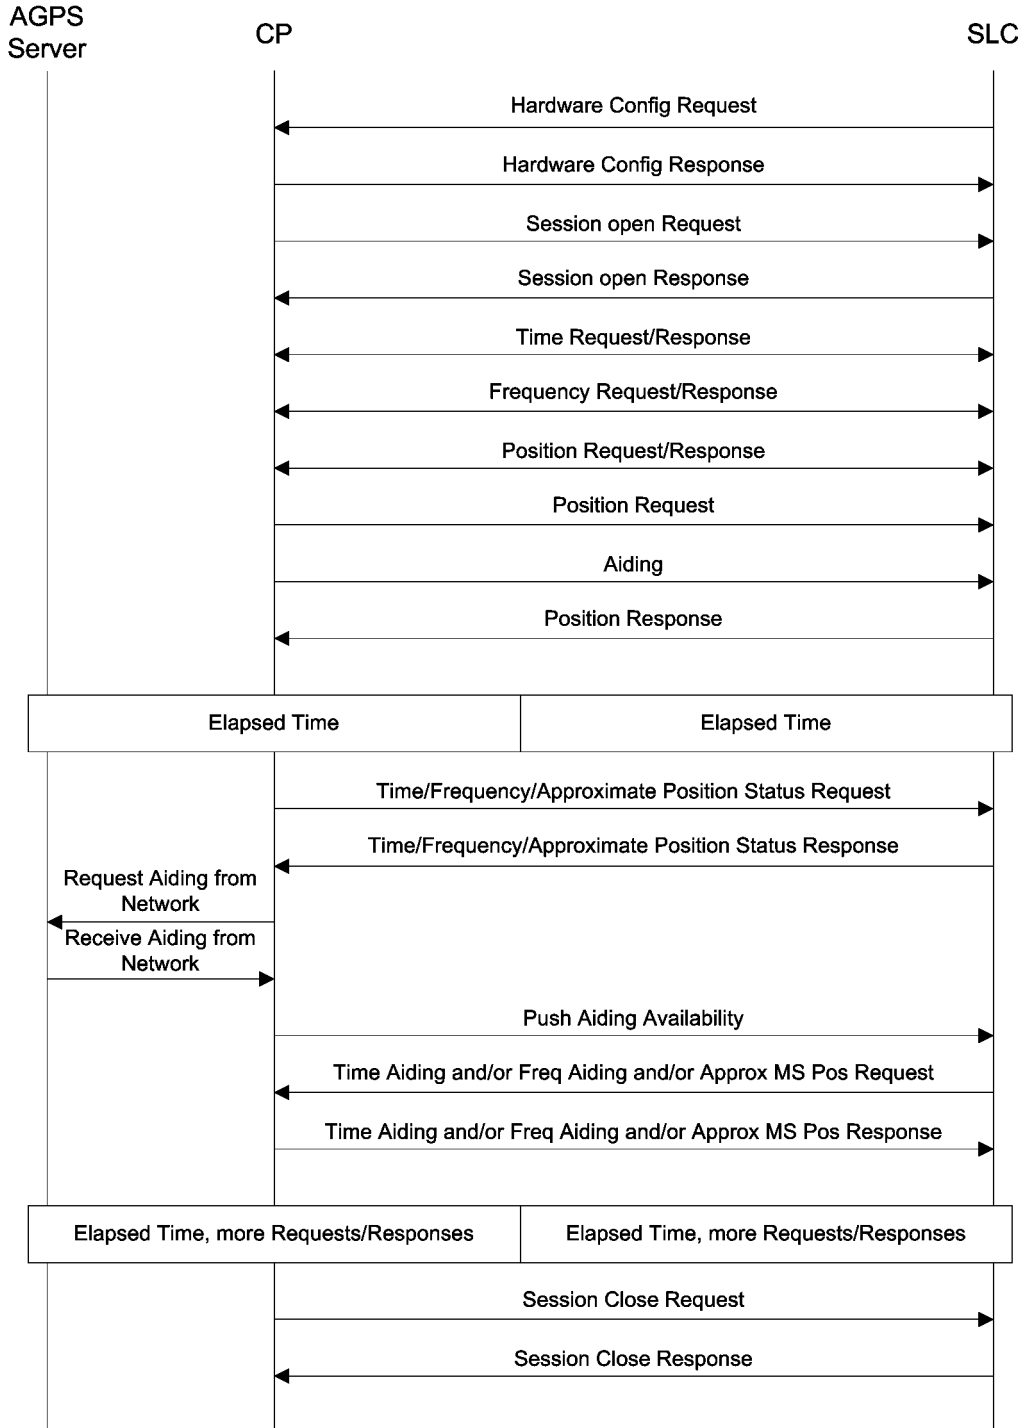


Figure 7.2: Typical Message Flow in Aided Mode


G-TW-0005640.2.2

Similarly to the stand-alone mode, here a GPS session is also defined as the time between when the GPS receiver is started (e.g. power on) and when the GPS module is stopped (e.g. power off). A session is the time between "Session Open Request"/"Session Open Response" and "Session Close Request"/"Session Close Response". Figure 7.2 illustrates an example flow diagram from setting the hardware configuration to closing the session.

Here, aiding is also part of the position request / response message transaction flow. In other scenarios, aiding can also be provided at any time while the session is open. For example, ephemeris can be pushed at any time while the session is open, even as the first step right after the session open is acknowledged. Several other, alternative procedures such as the push-mode aiding procedure, and the time/frequency/approximate position status procedure are described further below in this section. These two procedures provide the CP with more flexibility to give aiding to the SLC during a GPS session.

7.1.3 Typical Low Power Operation

Figure 7.3 below has a typical message sequence described for low power modes.

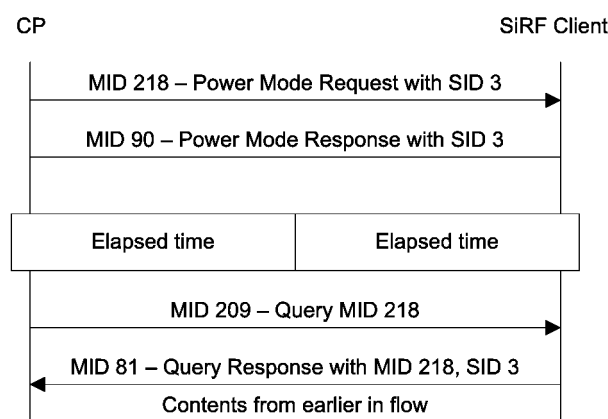

G-TW-0005641.2.2

Figure 7.3: Typical Low Power Operation Message Sequence

7.1.4 Push-Mode Aiding Procedure

Anytime after the first set of Time Transfer Request/Response, Frequency Transfer Request/Response, Approximate MS Position Request/Response (right after "Hardware Configuration Response") and before power down, the CP may push aiding information on the F interface under the following conditions:

1. When the CP obtains improved aiding accuracy: The CP shall start the push-mode aiding procedure when new information about the accuracy of aiding information changes from the previous accuracy. The push-mode aiding procedure is triggered by a "Push Aiding Availability" with appropriate "AIDING_AVAILABILITY_MASK" from the CP.

The SLC shall compare the information in "Push Aiding Availability" with the internal information, and request for the aiding information which is more accurate on the CP side (using "Time Transfer Request", "Frequency Transfer Request", or "MS Approximate Position Request"). If none of the newly available aiding is more accurate than the SLC's internal state, the SLC may not request for aiding from the CP. Special note: The CP should only send this information when accuracy has improved significantly.

2. When the CP detects change of aiding source: If the position or frequency aiding sources have changed (e.g. base-station handover, a new network is entered), the CP may initiate a "forced aiding request" push-mode aiding procedure by sending a "Push Aiding Availability" with the appropriate "FORCED_AIDING_REQ_MASK". The SLC shall re-request aiding information indicated in the mask. If the SLC is not navigating, the SLC should use the new aiding information regardless of the uncertainty level of the new aiding. However, if SLC is navigating, the SLC will only use information which it currently does not have.

In terms of message handling:

Immediately after the reception of the “Push Aiding Availability” message, the SLC shall return a “Push_ACK_NACK” message before comparing the information in the message with its internal accuracy status. The SLC shall set the message to ACK if the SLC receives and understands the message properly. The SLC shall set the message to NACK if the SLC cannot properly understand the message (e.g. wrong parameter fields).

7.1.5 Time/Frequency/Approximate Position Status Procedure

At anytime after the “Hardware Configuration Response”, the CP may query the internal status of the time, frequency and position accuracy from the SLC by sending the message “Time_Frequency_ApproximatePosition Request”. The CP shall request the accuracy it wishes to query by setting the REQ_MASK of the message.

After the SLC receives the “Time_Frequency_ApproximatePosition Request” message, the SLC shall immediately prepare the “Time_Frequency_ApproximatePosition Response” by filling the requested status (accordingly to REQ_MASK) with the current internal status. The STATUS_RESP_MASK in the response message shall match the REQ_MASK exactly. If a status is requested in the REQ_MASK, but the internal status is unknown, the SLC shall set the response status value(s) to “unknown”, and keep the corresponding bit in STATUS_RESP_MASK as 1.

7.2 Message Organization

The Messages are organized by pairs of Request and Response (or Notification) messages. A Request Message can trigger the generation of a single or of a sequence of Response and/or Notification Messages. A requesting entity is allowed to have only one outstanding Request of a given type (specific MESS_ID) at any time. A Request is no longer outstanding as soon as any of the following events occurs:

- A Response or Notification of the corresponding type has been received.
- The elapsed time since the transmission of the request is larger than the current timeout value.

Every Response associated with a Request should be sent back to the requesting entity within the initial timeout delay. If the response did not arrive within the prescribed timeout delay to the requesting entity, the requesting entity can choose to send again the Request, or any other appropriate action. If the requesting entity resends the same request, the timeout value will be doubled from the timeout value used during the previous attempt. At the end of the third attempt without any response received from the other end, no further attempt will be tried. If the requested entity cannot send the response message within the timeout delay, it will retransmit a reject message instead. No response message can be spontaneously sent without having previously received the associated Request for the other entity. There are few exceptions to this general concept of associated Request/Responses pairs:

- Requests with no explicit response


Reset GPS Command: As soon as the SLC receives this message, it shall reset itself. After noting a reset has occurred, the CP sees the hardware config request from the SLC and sends a hardware configuration response. No message has to be sent in reply to the Reset GPS Command.

- Unsolicited Information messages (no request)

SLC Status message: SLC sends this message when one of the events described in the SLC Status event list has occurred. There is no obligation for the CP to act upon their reception.

Error Notification message: SLC sends this message to inform the CP of an error occurrence part of the list predefined for the error notification list. There is no obligation for the CP to act upon their reception.

Illustrating such message organization, Figure 7.4 and Figure 7.5 show how the message request / response and notifications would detail a generic AGPS message flow depicted above in Figure 7.2.

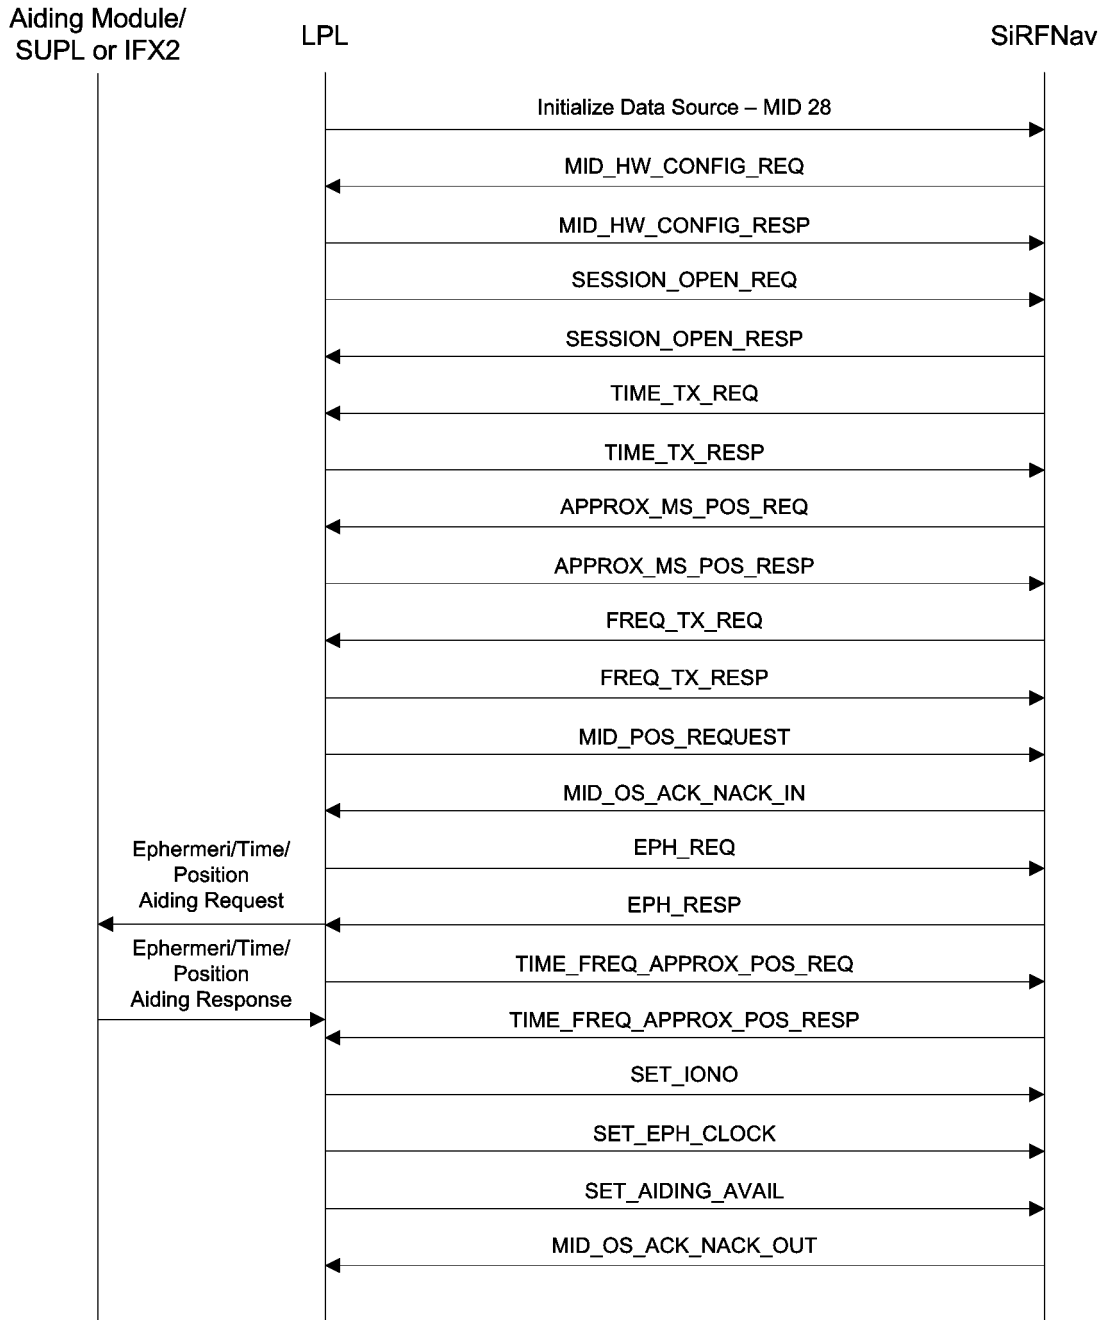

G-TW-0005642.2.2

Figure 7.4: Example Request/Response

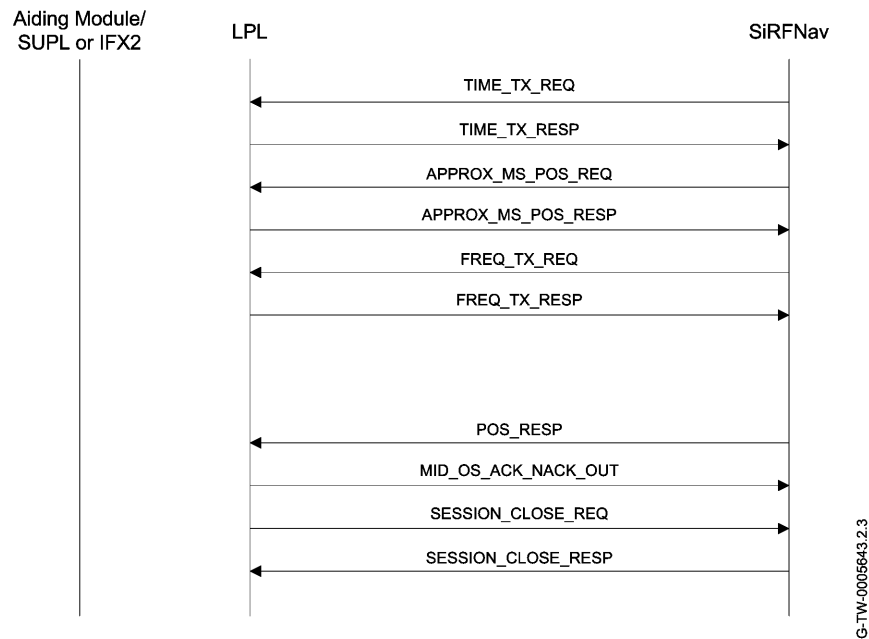


Figure 7.5: Example Notification Message

General Error Handling Procedures on SLC side

- Upon receiving any request, if data is not immediately available, the SLC shall respond with a Reject Message with REJ_REASON set to “not ready”. It will send a response message any time, as soon as the data becomes available.
- Upon receiving any request, if data will not be available and will not be available until the next power cycle, the SLC shall send a Reject message with REJ_REASON set “not available”. No other Response shall be sent afterwards.
- Upon receiving a Reject message with REJ_REASON set to “not available”, the SLC shall not expect any response for this request, and shall not request the same information later on.
- Upon receiving a Reject message with REJ_REASON set to “Wrongly formatted message”, and a request of the rejected message is still pending, the SLC shall send the request once again instantly; otherwise the SLC will take no action.
- Upon receiving a Wrongly Formatted Message, the SLC shall send a “Reject” Message with “REJ_REASON” field set to “Wrongly formatted message” (see Glossary for definition of Wrongly Formatted Messages).
- Upon receiving a message with a reserved MESS_ID (see Table 4.1), the SLC shall send an error notification message with ERROR_REASON field set to “MESS_ID not recognized”.
- Upon receiving an error notification message with ERROR_REASON field set to “MESS_ID not recognized”, the SLC shall silently discard the message.

General Error Handling on CP side

- Upon receiving any request (except HW Configuration Request), if data is not immediately available, the CP shall respond with a Reject Message with REJ_REASON set to “not ready”. It will send a response message any time, as soon as the data becomes available.
- Upon receiving any request (except HW configuration Request), if data will not be available and will not be available until the next power cycle, the CP shall send a Reject message with REJ_REASON set “not available”. No other Response shall be sent afterwards.
- Upon receiving a Reject message with REJ_REASON set to “not available”, the CP shall not expect any response for this request, and shall not Request the same information later on.
- Upon receiving a wrongly formatted query, the CP shall send a Reject message with REJ_REASON set to “Wrongly formatted message”.

- Upon receiving a Reject message with REJ_REASON set to “Wrongly formatted message”, and a request of the rejected message is still pending, the CP shall send the request once again instantly; otherwise the CP will take no action.
- Upon receiving a message with a reserved MESS_ID, the CP shall send an error notification message with ERROR_REASON field set to “MESS_ID not recognized”.
- Upon receiving an error notification message with ERROR_REASON field set to “MESS_ID not recognized”, the CP shall silently discard the message.

7.3 “Reject message” vs. “Error Notification” Messages

There are two methods of error reporting:

- Either a Request cannot be fulfilled, and a “Reject” message is sent instead of the normal Reply message, with an code to identify the reason of the reject; this is a “solicited” error reporting. In this category falls “data not available” or trying to open a session when the session has already been opened.
- Or a condition, not associated to a request arose, and the SLC needs to report the problem to the CP for possible action. The Error Notification message has been introduced specifically for this ; this is an unsolicited error reporting. In this situation falls the incompatibility between Air- Interface revision numbers.

7.4 Error handling

The errors can be classified in three categories:

- The ones sent in a Reject Message, informing the requesting entity that the requested action has not been completed and giving the reason for the non completion. This category usually leads to a correction of the problem and repetition of the request by the requesting entity.
- The ones sent in an Error Notification message, informing the other entity that a change in the environment (but not triggered by a Request) occurred, and needs intervention. In this category falls the Air-interface OSP revision number incompatibility.
- The ones reported in an Error Notification message, informing that some error has occurred, but not destined to the other entity. The other entity will silently discard the message (i.e. do nothing), and will continue the processing. Those messages are meant to be captured by any message collection device connected between communicating entities, and meant to inform of a problem during the integration phase. Wrongly formatted messages fall into this category.

7.5 Message Time-out Procedures

- When the CP sends a “Reject” message with reason as “Data Not Ready”, the SLC shall continuously send the request message every 4 seconds until the response message or the reject message with data not available is received.
- When a response message is not received, the sender of the request message shall re-try the sending of the message up to 3 times, starting after 6 seconds after the initial message, and doubling the time-out value at each retry.

7.6 Power ON/Power OFF

Power ON procedure:

- When the CP needs to start a Geolocation Session, it turns ON the SLC’s power. After Initialization and self-check, the SLC shall send the hardware config request message, which notifies the CP that the SLC is alive, and the message transfer can start. The Power ON sequence also directs the SLC to immediately start the GPS processing, with whatever aiding information is available at the SLC at that time.

Error Recovery on CP side:

- If the hardware config request message is not received within *n* seconds, the CP shall cycle the SLC’s power OFF and ON again. It is to note that CP needs to allow enough time for the SLC to send the hardware config request after power ON (compatible with *n* above), otherwise, the SLC will never start properly.

Note:

The value *n*, above, is product specific and is, therefore, not defined in this document.

Error Recovery on SLC side:

- The SLC shall wait (TIME_OUT at design phase on a case by case basis) seconds after outputting the hardware config request for the CP to send the Hardware Configuration Response message. If the Hardware configuration response never arrives at the SLC, then no session is opened and no aiding requests are sent. The SLC positions autonomously in this case.

Power OFF procedure:

- To power OFF the SLC, after having sent a “Session Closing Request” with “SESSION_CLOSE_REQ_INFO” set to “Session Closing Requested”, the CP shall wait for the “Session Closing Notification” with “SESSION_CLOSE_STATUS” field set to “Session Closed” before turning the power off. The Response message notifies the CP that all context has been saved in non-volatile memory, and that the SLC can be safely turned OFF at any time.

7.7 GPS Soft Reset

Aside from the power cycle, or the hard reset using HW pin, it is possible to reset the GPS function by sending a Reset GPS Command.

GPS Soft Reset Procedure:

- When the CP wants to start a GPS session through software messaging only, it shall send a “Reset GPS Command” message and wait for *n* seconds to receive the hardware config request message.

Note:

The value *n*, above, is product specific and is, therefore, not defined in this document.

- Upon receiving a “Reset GPS Command” message with
 - 2.1 “RESET TYPE” field set to “Hot Reset”, the SLC shall execute a Software Reset without clearing non volatile memory.
 - 2.2 “RESET TYPE” field set to “Cold Reset”, the SLC shall clear stored ephemeris , RTC Time and stored MS location from non volatile memory and then execute a Software Reset.
 - 2.3 “RESET TYPE” field set to “Factory Reset”, the SLC shall clear entire non volatile memory and then execute a Software Reset.

In all of the previous cases, the SLC shall flush the message buffers before restart.

Error Handling:

- If the CP does not receive a “Hardware Configuration Request” Message within the timeout, the CP shall cycle the power.

7.8 Low Power Management

7.8.1 Advanced Power Management (APM)

As described in the message specification sections above, the SiRFstarIV power management also includes a Micropower Management (MPM) mode. This is a more advanced, improved version of the SiRFStarIII power management solution, the flow of which is summarized in this section, below.

The advanced Power Management is a sophisticated power control method applied between successive fixes, and between fixes requirements. It makes the assumption that the CP keeps the “Power ON” all the time on the SLC subassembly. After the CP enables it, it is under SLC’s control. The CP turns the APM mode “ON”, by sending the “Set APM” message; the CP verifies that the command has been executed by checking the APM_STATE field in the “Ack APM” message. In the simplest manner, the SLC can be put to Hibernate mode immediately by the following procedure:

- An OSP session is open (i.e. Session Open Request/Notification have been exchanged)
- The CP sends “Set APM” with APM_ENABLE to be “ON” (other parameters are “don’t cares”, and can be set to POWER_DUTY_CYCLE=1 and TIME_DUTY_PRIORITY=1, for example), and the CP receives “Ack APM”
- The CP sends “Session Close Request”, and receives “Session Close Notification”.

After step 3, the SLC is in hibernate mode

Alternatively, the APM can be turned “ON”, either with priority to power reduction (the SLC shall try to keep the power duty cycle lower or equal to the prescribed value in the “POWER_DUTY_CYCLE” field, possibly by slowing down the fix update rate), or to performance (the SLC shall try to keep up with the periodicity between fixes, possibly by increasing the power consumption) using the “TIME_DUTY_PRIORITY” field.

APM enable procedure:

- The CP shall send a “Set APM” message with APM_ENABLE field set to “1”, POWER_DUTY_CYCLE field set to the desired power consumption (from 1 for 5% , to 20 for 100% of the total power), and TIME_DUTY_PRIORITY field set to “1” for priority to the performance and to “2” for priority for power reduction.
- The SLC shall send an “Ack APM” message with APM_STATE set to “1”.

APM disable Procedure:

- The CP shall send a “Set APM message with APM_ENABLE field set to “0”. The others fields (POWER_DUTY_CYCLE and TIME_DUTY_PRIORITY) are not relevant.
- The SLC shall send an “Ack APM” message with APM_STATE set to “0”.

Error handling

- Fields out of range in the Set APM message:
the SLC shall send a “Reject” message with REJ_REASON set to “Wrongly formatted message”.
- No APM available on this hardware platform

The SLC has no means to find out if the hardware platform is “APM enabled”. Upon reception of a “Set APM” message, the SLC shall return an “Ack APM” message with the APM_STATE field set to the APM_ENABLE field value in the “Set APM” message. However, the expected power reduction will not be achieved.

- APM mode “ON”, but no position can be computed
 - If the SLC goes through the whole search domain without finding satellites or being able to compute a position, the SLC shall send a “no position” result message on the Air-Interface (Airinterface protocol-dependent, and only if this capability is defined). The SLC shall also send a “SLC Status” message on the F interface with STATUS field set to “no fix available after full search”.
 - Upon reception of this message, in order to save power, the CP may, either change the APM configuration, or shut down the SLC altogether.
- CP wants to change the APM mode with APM already enabled

Please see details in the APM document.

7.8.2 TricklePower Operation in DGPS Mode

When in TricklePower mode, serial port DGPS corrections are supported if the firmware supports them in full-power mode. If the CPU can be awakened from sleep mode by the UART receiving data (this feature exists in SiRFstarII receivers, not in SiRFstarIII), then the incoming corrections awaken the receiver, and it stores the incoming data in a buffer and applies them when it awakens. If the receiver cannot be awakened by UART interrupts, messages should only be sent when the receiver has indicated OK to send, or they will be lost.

When in TricklePower mode, the use of SBAS corrections is not supported in any receiver.

7.9 Hardware Configuration

As soon as the SLC is up and running it shall send a hardware config request message. The CP sends the hardware configuration response so that the software will know what the capabilities from the CP are, and won't try to access capabilities that are not present. It will also allow the dynamic change of the HW capabilities from one power cycle to another one.

The hardware config request needs to be the first messages sent from the host. In a tracker product, the hardware config request should be sent at part of the SiRFNav Start/Stop messages (see product's MEI documentation for details). When the product is a PVT, the hardware config request message is still sent from the SLC and should be ignored (i.e. no response sent). Without a hardware config response message received, the OSP will be backwards compatible to SSIII GSW and thus the SLC will operate autonomously.

In this category, there are:

- Time transfer capabilities

The time can be sent by CP to SLC as a H/W signal time tagging a particular event, followed by a “Time Transfer Response” message, indicating what was the time of the H/W event. This is the “Precise Time Transfer” Mode. If no H/W time transfer interface is present, the time can still be transmitted with a lower accuracy as an isolated “Time Transfer Response” message. This is the “Coarse Time Transfer” mode. Whether some time transfer capability is present, and which one if any, is found in the “Hardware Configuration Response” Message. Please note that “Precise Time Transfer” and “Coarse Time Transfer” are exclusive of each other.

- Frequency Transfer Capabilities

The Frequency can be either referred to the SLC clock or to the reference clock input to the counter. The HW_Config shall indicate whether the frequency transfer is counter method or not. Also the frequency transfer response now has a bit which identifies the relation of each frequency transfer message to either SLC clock or the reference clock to the counter. Whether some Frequency transfer capability is present, and which one if any, is found in the “HW_CONFIG” field of the “Hardware Configuration Response” Message. Please note that all Frequency transfer methods are exclusive of each other.

- Nominal Frequency aiding

If a “Counter” type frequency transfer is implemented, HW_CONFIG shall indicate whether the reference clock input to the counter is on or not. SLC shall NEVER read the counter when the reference clock is off. The “NOMINAL_FREQ” field in the “Hardware Configuration Response” Message gives the exact frequency (derived from the CP clock) applied to the counter input. This is necessary to determine the relative frequency error between CP clock and SLC clock from the absolute frequency difference measurement.

Procedure

- At the Power ON, the SLC shall send a hardware config request message.
- Upon receipt of the hardware config request the CP shall send a “Hardware Configuration Response” message describing the implemented hardware capabilities.
- Upon receiving a “Hardware Configuration Response” message, the SLC shall store the hardware capabilities only for the duration of the current power cycle. The subsequent request messages issued by the SLC will depend on HW configuration message. Most notably, time and frequency transfer requests will be issued depending on the contents of the HW configuration message.

Error recovery

- Check the Power ON/Power OFF error recovery section.

7.10 Serial Port management

Depending on the hardware configuration, the SLC has one or two serial ports available for communication. The ports are named “Port A”, “Port B”, up to the number of ports available.

- Only port A is available for all SiRFLoc communications.
- The baud rate settings for port A or port B can be changed through the “Serial Port Settings Request/Response” pair, sent over port A only.
- The baud rate settings shall be stored in non-volatile memory.

Procedure for baud-rate change ON “port A” FROM port A:

Normal procedure

- CP sends a “Serial Port Settings Request” message with PORT field set to “0” , and BAUD_RATE field set to the “new” baud rate on port A. The message is transmitted at the “old” baud rate port A. It is the last message the CP shall transmit at the “old” baud rate on port A.
- Upon reception, the SLC shall flush the message buffer and then acknowledge by sending a “Serial Port Settings Response” message with PORT field set to ‘0’, BAUD_RATE field set to the “new” baud rate, and ACK_NUMBER field set to ‘1’. This message is transmitted at the “old” baud rate on port A. It is the last message sent at the “old” baud rate on the port A. Then the SLC waits one second during which it will transmit no message and accept no message.
- Upon reception of the first “Serial Port Setting Response” message, and within one second after reception, the CP will change the baud-rate settings on its Port. It shall transmit no message, but shall accept incoming messages at the “new” baud rate.
- After the one second delay, the SLC shall send a second “Serial Port Setting Response” message with PORT field set to ‘0’, BAUD_RATE field set to the “new” baud-rate, and ACK_NUMBER set to ‘2’, as an acknowledgement the baud rate has been effectively changed. This message shall be transmitted at the “new” baud rate on port A.
- Upon reception of the second “Serial Port Setting Response” message with ACK_NUMBER set to ‘2’, CP shall resume the normal exchanges using port A at the “new” baud rate.

Error handling:

- 1) If the CP does not receive “Serial Port Setting Response” message with ACK_NUMBER set to ‘1’ within 15 seconds after having sent “Serial Port Setting Request” message, the CP shall “hard reset” the SLC by HW pin, or “power cycle”.
-) if CP does not receive “Serial Port Setting Response” message with ACK_NUMBER set to ‘2’ within 2 seconds from the first “Serial Setting Response” message with ACK_NUMBER set to ‘1’, the CP shall “hard reset” the SLC by HW pin, or power cycle. Then it shall try to communicate at “new” and then “old” baud rate.

Procedure for baud-rate change ON “port B” FROM “port A”:

Normal procedure

- CP flushes the buffer for the outgoing messages on port B, so no more messages shall be transmitted on port B. CP sends a “Serial Port Settings Request” message with PORT field set to “1”, and BAUD_RATE field set to the “new” baud rate on port B. The message is transmitted on port A at the baud rate in use on port A at that time.
- SLC flushes the message buffer on port B and then acknowledges by sending a “Serial Port Settings Response” message with PORT field set to ‘1’, BAUD_RATE field set to the “new” baud rate, and ACK_NUMBER field set to ‘1’. This message is transmitted on port A, at the baud rate in use on port A at that time.
- Then the SLC waits one second during which it will transmit no message and accept no message on port B. The message traffic on port A is unaffected, though.
- After the one second delay, the SLC shall send a second “Serial Port Settings Response” message with PORT field set to ‘1’, BAUD_RATE field set to the “new” baud-rate, and ACK_NUMBER set to ‘2’, as an acknowledgement the baud rate has been effectively changed. This message shall be transmitted on port A, at the baud rate in use on port A at that time. 醜 Upon reception of the second “Serial Port Setting Response” message with ACK_NUMBER set to ‘2’, CP shall resume the normal exchanges on port B, at the “new” baud rate.

Error handling:

- If CP does not receive “Serial Port Settings Response” message with ACK_NUMBER set to ‘1’ within 15 seconds after having sent “Serial Port Settings Request” message, the CP shall “hard reset” the SLC by HW pin, or “power cycle”.
- If CP does not receive “Serial Port Settings Response” message with ACK_NUMBER set to ‘2’ within 2 seconds from the first “Serial Settings Response” message with ACK_NUMBER set to ‘1’, the CP shall “hard reset” the SLC by HW pin, or power cycle.

7.11 Session Opening/Session Closing

After the SLC responded to an incoming HW_CONFIG_REQ message, it is ready to receive a “Session Opening Request” message. The latter message notifies the SLC that the connection with the SLS has been established and that air-interface messages can be exchanged. The SESSION_OPEN_REQ_INFO in the message allows the SLC to determine what “Geolocation Air-Interface protocol” to activate to dialog with the SLS. This allows the use of multi-mode MS’s. A multi-mode MS supports several Geolocation airinterfaces which are determined at the opening of the Geolocation session.

The special case of “request for standalone solution” means that the position request actually comes from MS user whether the user is out of the cell phone coverage area. The special case of “request without air-interface” means that the position request actually comes locally from the MS user but the cell phone can not obtain an air-interface connection, therefore no Geolocation aiding will be available from a remote SLS. The SLC will use all information available except Geolocation messages. The implicit aiding (time transfer, frequency transfer, approximate MS position) might be available, if the MS is in a wireless coverage area, and if the air-interface has the capability to provide the information. The Position Result will be obviously available only locally, and will be returned by a “Position Results” message to the CP (for local display to the MS user).

The “Session Closing Request” message with “SESSION_CLOSE_REQ_INFO” set to “Session Closed Requested” notifies the SLC that the Geolocation air-interface connection has been permanently broken. The SLC shall stop to send “Air-Interface” messages.

Session Opening procedure

When the CP is informed that an air-interface connection has been opened with the SLS or it has received an air-interface message from the SLS, it shall send a “Session Opening Request” message to the SLC, with the “SESSION_OPEN_REQ_INFO” field set to the appropriate air-interface identification.

Upon receiving a “Session Opening Request” message:

- If the SLC can open the session, it shall send a “Session Opening Notification” message with the “SESSION_OPEN_STATUS” field set to “Session Opening Succeeded”. The SLC shall immediately start the “Air-Interface” protocol and messages process.
- If the SLC cannot open the session, it shall send a “Session Opening Notification” message with the “SESSION_OPEN_STATUS” field set to “Session Opening Failed”.
- If the SLC cannot open the session within the timeout, it shall send a “Reject” message with “REJ_REASON” set to “Not ready”.

Session Opening Error Handling

- Upon receiving a Session Opening Request with SESSION_OPEN_REQ_INFO set to a valid opening mode, when the session is already open, the SLC shall send a Session Opening Notification message with SESSION_OPEN_STATUS set to “Session Opening Failed”.
- Upon receiving a “Session Opening Notification” message with “SESSION_OPEN_STATUS” field set to “Session Opening Failed”, the CP shall retry a “Session Opening Request” for at most three times, before declaring SLC failure.

Session Closing Procedure

When the CP is informed that the air-interface connection has been permanently closed, it shall send a “Session Closing Request” message, with the “SESSION_CLOSE_REQ_INFO” field set to “Session Closing Requested”.

Upon receiving a “Session Closing Request” message:

- If the “SESSION_CLOSE_REQ_INFO” field is set to “Session Closing Requested”, the SLC shall stop sending any air-interface message, and shall close the air-interface process. It shall store all information necessary to keep from session to session in the local non-volatile memory.

If this action is safely done within the timeout period, the SLC shall send a “Session Closing Notification” Message with “SESSION_CLOSE_STATUS” field set to “Session Closed”.

If it is not done within the timeout, the SLC shall send a “Reject” message with “REJ_REASON” field set to “Not Ready”.

Session Closing Error Handling

Upon receiving a Session Closing Request with SESSION_CLOSE_REQ_INFO set to “Session Closing requested”, when no session is open, the SLC shall send a Session Closing Notification with SESSION_CLOSE_STATUS set to “Session closing failed”.

7.12 Session Suspend/Session Resume

The CP might know about a transitory situation (like hand-over) where the air-interface connection is temporarily broken. The CP shall notify the SLC of such an occurrence by sending a special “Session Closing Request” message with “SESSION_CLOSE_REQ_INFO” field set to “Session Suspend Requested”. Upon receiving such a message, the SLC will “freeze” the “geolocation air-interface protocol” (meaning that all timeout counters will be stopped).

When the CP knows about the reconnection, it shall send a special "Session Opening Request" with "SESSION_CLOSE_REQ_INFO" field set to "Session Resume Requested". Upon receiving such a message, the SLC will restart the "Geolocation Air-Interface protocol" where it left it after receiving the "Session Closing Request" Message with "Suspend" bit set.

Suspend Procedure

When the CP has been informed that an air-interface connection with the SLS has been temporarily closed, it shall send a "Session Closing Request" message with "SESSION_CLOSE_REQ_INFO" field set to "Session Suspend Requested".

Note:

In parallel with notifying the CP, we assume that the network will have sent a similar "suspend" notification to the MAS that will suspend air-interface activity in the SLS in a similar way.

Upon receiving a "Session Closing Request" message with "SESSION_CLOSE_REQ_INFO" field set to "Session Suspend Requested", the SLC shall "freeze" the air-interface process activity. In particular the timeout counters will be "frozen" at their current values. It shall send back a "Session Closing Notification" message with "SESSION_CLOSE_STATUS" field set to "Session Suspended". If the air-interface was already in a suspend state, the SLC shall still send a "Session Closing Notification" message with "SESSION_CLOSE_STATUS" set to "Session Suspended".

Error Handling

Upon receiving a Session Closing Request with SESSION_CLOSE_REQ_INFO set to "session Suspend requested", when no session is open, the SLC shall send a Session Closing notification with SESSION_CLOSE_STATUS set to "Session suspend failed".

Resume Procedure

When the CP has been informed that an air-interface connection with the SLS has been reestablished, it shall send a "Session Opening Request" message with "SESSION_OPEN_REQ_INFO" field set to "Session Resume Request".

Note:

In parallel with notifying the CP, we assume that the network will have sent a similar "Resume" notification to the MAS which will resume air-interface activity in the SLS in a similar way.

Upon receiving a "Session Opening Request" message with "SESSION_OPEN_REQ_INFO" field set to "Session Resume Request", the SLC shall "unfreeze" the air-interface process activity. In particular the timeout counters will be "reactivated". The SLC shall send a "Session Opening Notification" with the "SESSION_OPEN_STATUS" field set to "Session Resume Succeeded". If the air-interface was not in a suspend state, the SLC shall still send a normal "Session Opening Notification", with the "SESSION_OPEN_STATUS" field set to "Session Resume Succeeded".

7.13 Approximate MS Position Management

To speed up the position computation, The SLC can request from the network its approximate position by the "Approximate MS Position Request/Response" message pair.

The normal procedure is as follows:

- The SLC sends an "Approximate MS Position Request" message.
- The CP sends an "Approximate MS Position Response" message with the LAT, LON, ALT fields set to the best estimate of the MS location, and "EST_HOR_ERR" field set to the maximum radius of the position uncertainty around the given position.

Error handling:

- If the CP does not have the information available (and will not get it even later), it shall send a "Reject" message, with the "REJ_REASON" field set to "Not Available".
- If the CP has no information ready (BUT could get the information eventually), it shall send a "Reject" message, with the "REJ_REASON" field set to "Not Ready"; if the information becomes available later, the CP shall immediately send an "Approximate MS Position Response" message, without waiting for a new request from the SLC.

7.14 Time Transfer

If some form of time transfer is available (as specified by the “Hardware Configuration Message”), the SLC may send “Time Transfer Request” Message. If the CP has access to the time, and depending on the HW_CONFIG word, it will:

- Either send a H/W pulse, then a “Time Transfer Response” Message in case the “Precise Time Transfer” mode has been activated.
- Send a “Time Transfer Response” Message in case the “Coarse Time Transfer” mode has been activated
- Send a Reject message.

All of these options must occur within a predetermined timeout period (defined at design time).

To assist in situations which could arise during the integration period, but should not occur in normal operation several special cases of “Reject” message have been added for situations where:

1. The Hardware Configuration Response has both bits “Precise Time Transfer” and “Coarse Time Transfer” asserted.
2. When a “Precise Time Transfer” mode has been declared in the “Hardware Configuration Response”, a “Time Transfer Response” message is received with TT_TYPE field to all '0's (i.e. of “Coarse” type).
3. Conversely, whereas a “Coarse Time Transfer” mode has been declared in the “Hardware Configuration Response”, a “Time Transfer Response” message is received with TT_TYPE field to all '1's (i.e. of “Precise” type).

In all preceding cases, the SLC shall send a “REJECT” message with REJ_REASON field set to “Wrongly formatted message”.

Time transfer Procedure

Upon receiving a “Time transfer Request” Message

1. If the CP is capable of generating a time pulse (as described in “Hardware Configuration” information), it shall send the time pulse within the timeout from the request message, then the “Time Transfer Response” message, within the timeout counted from the time pulse rising edge. The TT_TYPE field shall be set to “Precise Time Transfer”. The “times” field in the “Time Transfer Response” message shall be set to the GPS time of the rising edge of the pulse; the “accuracy” field shall be set to the appropriate value according to the origin of the time information.
2. If the CP is not capable of generating a time pulse (as described in “Hardware Configuration” information), it shall send a “Time Transfer Response” message, within the timeout counted from the reception of the Request message. The TT_TYPE field shall be set to “Coarse Time Transfer”. The “times” field in the “Time Transfer Response” message shall be set to the approximate GPS time at the time of message transmission; the “accuracy” field shall be set to the appropriate value according to the origin of the time information.

Error Handling

- If the CP either is not capable of giving time, or is not currently ready to give time, the CP shall send a “Reject” Message.
- If the time will not be accessible at all, the CP shall set the “REJ_REASON” field to “Not available”.
- If the CP was not able to provide the information within the timeout, BUT it can eventually provide the information after a sufficient delay, the CP shall set the “REJ_REASON” field to “Not ready” bit.
- Upon receiving a “Time Transfer Response” Message in a “Precise Time Transfer” mode without receiving first a hardware time pulse, or receiving it before the message, the SLC shall send a “Reject” message with “REJ_REASON” field set to “No Time Pulse during Precise Time Transfer”.

7.15 Frequency Transfer

If some form of frequency transfer is available (see “Hardware Configuration”), the SLC shall send “Frequency Transfer Request” Message to start frequency transfer.

If the information is available at the CP, the SLC may either require it once, or periodically from the CP. The periodicity depends on the quality of the CP clock, and will be determined at design time in agreement with SiRF technical team to ensure that the total frequency budget error stays within the limits. This frequency error refers to the error on the CP clock provided to the SLC. Each frequency error measurement from CP will be time tagged or set to FFFFFFFE if time tagging is not available. The relative frequency difference between CP and SLC is directly measured by SLC, or is “zero” in the case where the frequency transfer is referred to the SLC clock. It is important that the time transfer shall occur before the frequency transfer if time tagging is used.

Note:

- Applicable to the frequency counter method only: The SLC internal frequency measurement hardware is designed to measure the frequency of a clock signal derived from the CP clock, NOT the CP clock itself. The CP crystal clock frequency can be between 7MHz and 40MHz. To measure the relative frequency error between CP clock and SLC clock, the SLC needs to know the exact frequency it should receive on its internal frequency input when the CP clock is exactly at its nominal frequency. This nominal frequency value is found in the "NOMINAL_FREQ" field of the "Hardware Configuration Response" Message or the "NOMINAL_FREQ" field of the "Frequency Transfer Response" message.
- There are multiple situations to transfer CP frequency error from CP to SLC. Each one of them uses the SCALED_FREQ_OFFSET, REL_FREQ_ACC and TIME_TAG fields differently. Please refer to the technical application note on frequency transfer for specifics on how to fill out those fields appropriately.
- Applicable to the frequency counter method only: SLC shall read the counter only when the reference clock is on and NEVER read the counter when the reference clock is off. Bit 8 of HW_CONFIG field in "Hardware Configuration Response" message and Bit2 of REF_CLOCK_INFO field in "Frequency Transfer Response" message indicate whether the reference clock input to the counter is on or off.

Single frequency transfer procedure

- The SLC shall send a "Frequency Transfer Request" Message to CP with Bit 1 in "FREQ_REQ_INFO" field set to "single request" or to "multiple request".
- The CP shall reply a single "Frequency Transfer Response" message, with SCALED_FREQ_OFFSET field set to the CP relative frequency difference multiplied by 1575.42MHz, in Hz, and REL_FREQ_ACC in ppm. If the frequency measurements are not reliable then the CP shall set this to 0xFF.
- The CP shall set the TIME_TAG field if time is available, else it will need to set this field to 0xFFFFFFFF to indicate that time transfer is not available
- The CP shall indicate in the CLOCK_REF of the "frequency transfer response" the relation between this frequency transfer message and the clock used. If the message is related to the SLC clock then Bit1 = 1 and if the message is related to the CP clock then Bit1 = 0

Multiple frequency transfers turn ON procedure

- By default, SLC always request multiple frequency transfers. But the actually mode (single vs. multiple) shall be decided with the handset design team.
- It is expected that in the multiple frequency transfer case, precise time transfer precedes the frequency transfer. Otherwise the CP shall set the TIME_TAG field of the "Frequency Transfer Response" message to either 0xFFFFFFFFE or 0xFFFFFFFFF.
- The SLC shall send a "Frequency Transfer Request" Message to CP with Bit 1 in "FREQ_REQ_INFO" field set to "multiple request", and Bit 2 set to "ON"
- If the frequency error is known, the CP shall periodically send a "Frequency Transfer Response" message, with the "SCALED_FREQ_OFFSET" field set to the frequency CP clock error between nominal and real value, in Hz scaled to GPS-L1 frequency. The periodicity of the message depends on the CP clock stability, and shall be determined at design time.
- Each of the frequency transfer message shall have a TIME_TAG field. The CP is responsible to time tag the frequency error measurements in terms of seconds elapsed since the beginning of the current GPS week. The SLC will be responsible for the rollover of the GPS_WEEK_NUM
- Each of the frequency transfer message shall also indicate in the REF_CLOCK_INFO the relation of this frequency transfer message and its relation to the clock. Bit1 = 1 implies that the message is related to the SLC clock and Bit1 = 0 implies that the message is related to the CP clock
- In APM, when the SLC is in full power mode and the reference clock input to the counter is on, the CP shall send "Frequency Transfer Response" message to restart the frequency transfer.

Reference clock turn OFF procedure (applicable to the frequency counter method only)

- If the CP wants to turn off the reference clock, the CP shall send a "Frequency Transfer Response" message with Bit 3 of REF_CLOCK_INFO field is '1'

Upon receiving the "Frequency Transfer Response" message, the SLC shall stop reading frequency counter and send a "Frequency Transfer Request" message to allow turn off reference clock (Bit 3 of FREQ_REQ_INFO = 1). The SLC shall ALWAYS permit the CP to turn off the reference clock.

The CP can turn off reference clock only if a "Frequency Transfer Request" message with Bit 3 of FREQ_REQ_INFO = 1 is received. When the reference clock is turned off, CP shall not send "Frequency Transfer Response" message anymore.

Reference clock turn ON procedure (applicable to the frequency counter method only)

The CP can turn on the reference clock at any time except when the SLC is in sleep mode and then send “Frequency Transfer Response” messages with Bit 2 of REF_CLOCK_INFO field is ‘0’.

Change reference clock procedure (applicable to the frequency counter method only)

- The CP shall send a “Frequency Transfer Response” message with Bit 3 of REF_CLOCK_INFO field is ‘1’, which informs the SLC that the CP wants to turn off the reference clock.
- Upon receiving the “Frequency Transfer Response” message, the SLC shall stop reading frequency counter and send a “Frequency Transfer Request” message to allow turn off reference clock (Bit 3 of FREQ_REQ_INFO = 1).
- Upon receiving the “Frequency Transfer Request” message, the CP turns off reference clock.
- The CP then switches to another reference clock and shall send a “Frequency Transfer Response” message with FREQ_REQ_INFO set to

Bit 2 = 0: reference clock is on

Bit 4 = 1: NOMINAL_FREQ field is presented

and NOMINAL_FREQ field contains nominal frequency, which can be between 7 MHz to 40 MHz.

Multiple frequency transfers turn off procedure

Depending on the application, the SLC may send a request to disable the periodic frequency transfer. To disable the periodic frequency transfer from SLC, it shall send a “Frequency Transfer Request” Message to CP with Bit 1 in “FREQ_REQ_INFO” field set to “multiple request”, and Bit 2 set to “OFF” the CP shall stop to send the periodic “Frequency Transfer Response” message.

General Error Handling

- If the frequency difference between Base Station master clock and CP clock is not known (and will not be known any time), the CP shall send a “Request Rejected” message with “REJ_REASON” field set to “Not available”
- If the frequency difference between Base Station master clock and CP clock is not known (and but can be known eventually), the CP shall send a “Reject” message with “REJ_REASON” field set to “Not Ready”.

7.16 Interoperability between different Air-Interface ICD revision numbers

It can happen that a SLS and SLC with incompatible Air-Interface Revision numbers are put into communication. The way the Air-Interface is build, after SLS and SLC identify the problem by a simple message exchange common to all rev numbers, the Air-Interface message shall be stopped.

In such a case, the SLC must report back to the CP the problem, in order for the CP to take the appropriate action, which is to close the Air-Interface. An Error Notification message has been added to that effect.

Air Interface Revision Incompatibility Reporting Procedure

Upon detecting incompatibility between Air-Interface revision numbers, the SLC shall send an error notification message with the ERROR_REASON field set to “SLC does not support SLS’s Air-Interface revision number”. Upon receiving an error notification message with the ERROR_REASON field set to “SLC does not support SLS’s Air-Interface revision number” (signaling the end of all message exchange over the air), the CP shall close the Air-Interface session.

7.17 Software Version ID

The CP can query the SLC to determine the software version ID that is currently being used. In such instances, the request/response format shall be as outlined in the Software Version Request/Response message descriptions.

A value of zero in the LENGTH_SIRF_VERSION_ID and/or LENGTH_CUSTOMER_VERSION_ID field is valid and indicates that there is no corresponding version name.

Error handling

Fields out of range in the Software Version message:

If the LENGTH_SIRF_VERSION_ID field and/or the LENGTH_CUSTOMER_VERSION_ID field in the Software Version Response has values outside the range of 0-80, then this value and corresponding SIRF_VERSION_ID and/or CUSTOMER_VERSION_ID shall be ignored.

Fields do not match in the Software Version message:

The LENGTH_SIRF_VERSION_ID field and/or the LENGTH_CUSTOMER_VERSION_ID field in the Software Version Response do not match the number of characters in the corresponding SIRF_VERSION_ID and/or CUSTOMER_VERSION_ID. In this case this value and corresponding SIRF_VERSION_ID and/or CUSTOMER_VERSION_ID shall be ignored.

7.18 Configuration Option Selection Storage Control

7.18.1 Levels of Configuration Option Selection Value Storage

Configuration option selection values can be stored at several different levels, depending on the product and on the configuration option setting. But in general, the following levels can be applied for specifying configuration options:

1. Hardcoded in the receiver software at software build time
2. Defined in the eFUSE configuration storage at the end of the manufacturing process
3. Defined in the eFUSE Software Configuration Register, overriding the value provided in the eFUSE configuration storage
4. Stored in BBRAM
5. Stored in SRAM based on settings requested some of the OSP messages.

The next section below describes for the latter configuration setting OSP messages, how to apply the scope and the rules of overriding the configuration selection values already set in the receiver.

7.18.2 Scope and Rules of Configuration Option Storage Control

The scope and rules of the configuration option storage control can be summarized as follows:

1. The setting specified and requested in a OSP configuration option setting message will override any previous setting of this value, whether that setting was from default value in the software, an eFUSE setting, or from previous copy of this message.
 - 1.1 If the setting is controlled by eFUSE settings, this message will override the eFUSE setting.

If the eFUSE setting is mirrored in the eFUSE SW Coonfiguration Register, the contents of this message will be set in the eFUSE SW Coonfiguration Register.
 - 1.2 If the storage control setting is saved in BBRAM, the contents of OSP configuration option setting message will be used to update the BBRAM.
 - 1.3 If neither eFUSE SW Coonfiguration Register nor BBRAM are used in a specific system, the setting will be saved in SRAM.
2. The setting in OSP configuration option setting message will remain valid as long as the specific storage method remains valid.
 - 2.1 For BBRAM, it will persist over resets as long as a factory reset does not reinitialize BBRAM, and as long as backup power is retained for the BBRAM
 - 2.2 For eFUSE SW Configuration Register, it will persist over resets as long as a factory reset does not reinitialize eFUSE SW Configuration Register, and as long as backup power is retained for the eFUSE SW Configuration Register
 - 2.3 For settings saved in SRAM, the setting will persist only until a reset occurs.

7.18.3 Configuration Option Setting Messages in OSP

Different product can support a different portfolio of OSP configuration option setting messages. However, all of them are specified in the OSP ICD and they comprise the following OSP messages:

- The SW Toolbox tracker configuration message, described in section 5.41
- Switching between binary OSP and NMEA messaging modes, described for message ID 129
- Setting message output rates as described for message ID 129 and 166
- Setting EE storage options as described for message ID 232
- Enabling/disabling DGPS for SBAS control as described for message 133
- Selecting mode control parameters for enabling/disabling track smoothing, DR time-out values for report propagation while no-fix outage, etc. as describe for message ID 136
- Enabling/disabling extended ephemeris support as described for message ID 232
- Setting power mode management options as described for message ID 218

8 Protocol Layers

SiRF Binary protocol is the standard interface protocol used by the SiRFstar family of products. This serial communication protocol is designed to provide:

- Reliable transport of messages
- Ease of implementation
- Efficient implementation
- Independence from payload

8.1 Transport Message

Start Sequence	Payload Length	Payload	Message Checksum	End Sequence
0xA0 ⁽¹⁾ , 0xA2	Two-bytes (15-bits)	Up to 2 ¹⁰ -1(<1023)	Two-bytes (15-bits)	0xB0, 0xB3

⁽¹⁾ Characters preceded by "0x" denotes a hexadecimal value. 0xA0 equals 160.

8.2 Transport

The transport layer of the protocol encapsulates a GPS message in two start-of-message characters and two end-of message characters. The values are chosen to be easily identifiable and unlikely to occur frequently in the data. In addition, the transport layer prefixes the message with a 2-byte (15-bit) message length, and adds a 2-byte (15-bit) checksum before the two stop characters. The values of the start and stop characters and the choice of a 15-bit value for length and checksum ensure message length and checksum cannot alias with either the stop or start code.

8.3 Message Validation

The validation layer is part of the transport, but operates independently. The byte count refers to the payload byte length. The checksum is a sum on the payload.

8.4 Payload Length

The payload length is transmitted high order byte first followed by the low byte.

High Byte	Low Byte
≤ 0x7F	Any value

Even though the protocol has a maximum length of (2¹⁵-1) bytes, practical considerations require the SiRF GPS module implementation to limit this value to a smaller number. The SiRF receiving programs, such as SiRFDemo, may limit the actual size to something less than this maximum.

8.5 Payload Data

The payload data follows the payload length. It contains the number of bytes specified by the payload length. The payload data can contain any 8-bit value.

Where multi-byte values are in the payload data, neither the alignment nor the byte order are defined as part of the transport although SiRF payloads uses the big-endian order.

The Message ID tables in Section 5 and Section 6 describe the payload data, variable length and variable data type. The Bytes column contains:

- A number that specifies the number of bytes in each field of the message
- A letter that describes how to interpret the value

Table 8.1 lists the letters and their description.

Letter	Description
D	Discrete – The field consists of a bit mapped value, or subfields of groups of bits that are described in the Description field. Values should be considered unsigned.
S	Signed – The field contains a signed integer value in two's complement format
U	Unsigned – The field contains an unsigned integer value
Dbl	Double precision floating point – See the Note in Section 6.23 for a detailed description of this data type
Sgl	Single precision floating point – See the Note in Section 6.23 for a detailed description of this data type

Table 8.1: Data Types in Bytes Field of Message ID Tables

8.6 Checksum

The checksum is transmitted high order byte first, followed by the low byte.

High Byte	Low Byte
≤ 0x7F	Any value

This is the so-called big-endian order. The checksum is a 15-bit checksum of the bytes in the payload data. The following pseudo code defines the algorithm used:

Let message be the array of bytes to be sent by the transport.
 Let msgLen be the number of bytes in the message array to be transmitted

```

Index = first

checksum = 0

while index < msgLen

    checksum = checksum + message[index]

checksum = checksum AND (215-1)

increment index
  
```


Appendix A GPS Data Representation and Conversion Detail Specification

A.1 GPS Week Reporting

The GPS week number represents the number of weeks that have elapsed since the week of January 6, 1980. Per ICD-GPS-200, the satellites only transmit the 10 LSBs of the week number. On August 22, 1999, the week number became 1024, which was reported by the satellites as week 0. SiRF receivers resolve the reported week number internally. When messages report the week number, that value is either truncated to the 10 LSBs or is called an extended week number (see messages 7 and 41 for examples).

A.2 Computing GPS Clock Frequency

To compute GPS clock frequency, you must know the receiver architecture. For receivers which use a GPS clock frequency of 16.369 MHz (newer SiRFstarII, most SiRFstarIII receivers), Crystal Factor in the below formula is 16. For receivers which use a GPS clock frequency of 24.5535 MHz (older SiRFstarII receivers such as those using GSP2e/LP), the Crystal Factor is 24. Refer to your receiver's data sheet to determine the GPS clock frequency for your receiver.

Clock Frequency = (GPS L1 Frequency + Clock Drift) * Crystal Factor / 1540

For example, in a SiRFstarIII receiver (Crystal Factor = 16), Clock Drift is reported to be 94.315 kHz.

Clock Frequency is: Clock Frequency = (1575.42 MHz + 94.315 kHz) * 16 / 1540 = 16.3689799 MHz

If this is used in a receiver where the GPS TCXO is nominally 16.369 MHz, then this frequency is the actual frequency of the crystal. If another frequency crystal is used, you must account for the frequency conversion factors in the synthesizer to compute the crystal frequency.

To predict clock bias, use the relationships between frequency and velocity. The reported clock drift value can be converted to a velocity using the Doppler formula, since in the SiRF architecture the clock drift value is a bias to the computed Doppler frequency:

Doppler Frequency / Carrier Frequency = Velocity / speed of light

Or:

Velocity = Doppler Frequency / Carrier Frequency * c Next, the velocity can be converted to a time factor by dividing by the speed of light:

Change in Clock Bias = Velocity / c

Combining the above 2 formulae,

Change in Clock Bias = Doppler Frequency / Carrier Frequency

For a Clock Drift of 94.315 kHz as used above,

Change in Clock Bias = 94315 Hz / 1575.42 MHz = 59.867 μ s

Note:

Reported clock bias and clock bias computed using the above formula will likely agree only to within a few nanoseconds because the actual measurement interval may be slightly more or less than an exact second, and the clock drift is only reported to a (truncated) 1 Hz resolution.

A.3 Converting Sirf Message ID 14 (0x0E) and ID 15 (0x0F) into Engineering Units

Note:

It is essential to consult with GPS-ICD documentation to become more familiar with conversions. For more information, see <http://www.navcen.uscg.gov/pubs/gps/icd200/default.htm>

A.4 Message # 14: Almanac Data

Message ID 14 is a packed field of the GPS navigation-message 50bps almanac data stream with the parity stripped out. Only the 24-bits of data are contained in message.

The data follows the format of the 50-bps message, subframe #5, pages 1-24.

"Data" is an array of 12-2byte integers: Data[12]

Only words 3 through 10 of the GPS-50bps Almanac data stream are stored.

The SiRF data aligns with the 24-data bits of the 50bps navigation message described in GPS ICD-200 as follows:

50-bps, 24-bit data word (See GPS ICD 200) Subframe 5 Words 3-10	X (24-bits)
SiRF Data structure per subframe, D[0] -> D[12], 2 byte words	X (16-bits)

W3		W4		W5		W6		W7		W8		W9		W10	
D[0]	D[1]	D[2]	D[3]	D[4]	D[5]	D[6]	D[7]	D[8]	D[9]	D[10]	D[11]				

S: is a signed integer, two's complement, sign bit is MSB.

U: is unsigned integer.

Scale factor (LSB) converts from Integer to scaled Engineering units.

Sign	Conversion	Scale / Units
U	DataID=(D[0]&0xC000)>>14	1
U	SVid = (D[0]&0x3F00)>>8	1
U	Ecc=((D[0]&0x00FF)<<8) ((D[1]&0xFF00)>>8)	2 ⁻²¹
U	Toa = D[1]&0x00FF	2 ⁺²¹ (sec)
S	deltainc = D[2]	2 ⁻¹⁹ (semiCirc)
S	OmegaDot = D[3]	2 ⁻³⁸ (semiCirc/s)
U	SV Health = (D[4]&0xFF00)>>8	1
U	SqrtA =((D[4]&0x00FF)<<16) D[5]	2 ⁻¹¹ (m ^{-1/2})
S	Omega0=(D[6]<<8) ((D[7]&0xFF00)>>8)	2 ⁻²³ (semiCirc)
S	Omega = ((D[7]&0x00FF)<<8) D[8]	2 ⁻²³ (semiCirc)
S	Mo = (D[9]<<8) ((D[10]&0xFF00)>>8)	2 ⁻²³ (semiCirc)
S	Af0=((D[10]& 0x003F)<<5) ((D[11]&0xC000)>>11) (D[11] & 0x0007)	2 ⁻²⁰ (seconds)
S	Af1 = ((D[11] & 0x3FF8) >> 3)	2 ⁻³⁸ (s/s)

A.5 Message # 15: Ephemeris Data

Message ID 15 is a packed field of the GPS navigation-message 50bps data stream, subframes 1,2,3 with the parity stripped out. Only the 24-bits of data are contained in message.

"Data" is an array of 45-2-byte integers, Data[45], or can be thought of as Data[3][15], with:

- Subframe 1 data: Data[0] -> Data[14] Or, Data[0][0] -> Data[0][14]
- Subframe 2 data: Data[15] -> Data[29] Or, Data[1][0] -> Data[1][14]
- Subframe 3 data: Data[30] -> Data[44] Or, Data[2][0] -> Data[2][14]

Only words 2 through 10 of the GPS-50bps data stream are stored.

The SiRF data aligns with the 24-data bits of the 50 bps navigation message described in GPS ICD-200 as follows:

50-bps, 24-bit data word (See GPS ICD 200) Subframe 1,2,3 Words 2-10	X (24-bits)
SiRF Data structure per subframe, D[0] -> D[14], 2 byte words	X (16-bits)

	W2		W3		W4		W5		W6		W7		W8		W9		W10	
D[0]	D[1]	D[2]	D[3]	D[4]	D[5]	D[6]	D[7]	D[8]	D[9]	D[10]	D[11]	D[12]	D[13]	D[14]				

S: is a signed integer, two's complement, sign bit is MSB.

U: is unsigned integer

Scale factor (LSB) converts from Integer to scaled Engineering units.

Subframe 1 = Data[0][0 -> 14] = D[0 -> 14 + i], i=0

Sign	Conversion	Scale / Units
U	SVId = D[i+0] & 0x00FF	1 (prn #)
U	Week# = (D[i+3] & 0xFFC0)>>6	1
U	L2Code = (D[i+3] & 0x0030)>>4	1
U	Health = (D[i+4] & 0xFC00)>>10	1
U	L2Pflag = (D[i+4] & 0x0080)>>7	1
S	TGD = (D[i+10] & 0xFF00)>>8	2 ⁻³¹ (sec)
U	IODC = (D[i+10]&0x00FF) (D[i+4]&0x0300)	1
U	ToC = D[i+11]	2 ⁺⁴ (sec)
S	Af2 = (D[i+12]&0xFF00)>>8	2 ⁻⁵⁵ (sec/sec ²)
S	Af1 = ((D[i+12]&0x00FF)<<8) ((D[i+13]&0xFF00)>>8)	2 ⁻⁴² (sec/sec)
S	Af0 = ((D[i+13]&0x00FF)<<14) ((D[i+14]&0xFFFC)>>2)	2 ⁻³¹ (sec)

Subframe 2 = Data[1][0 -> 14] = D[0 -> 14 + i] i=15

Sign	Conversion	Scale / Units
U	SVId = D[i+0] & 0x00FF	1 (prn #)
U	IODE = (D[i+3]&0xFF00)>>8	1
S	Crs = ((D[i+3]&0x00FF)<<8) ((D[i+4]&0xFF00)>>8)	2 ⁻⁵ (meters)

Sign	Conversion	Scale / Units
S	$\Delta N = ((D[i+4] \& 0x00FF) \ll 8) \mid ((D[i+5] \& 0xFF00) \gg 8)$	2^{-43} (semiCirc/s)
S	$M_o = ((D[i+5] \& 0x00FF) \ll 24) \mid (D[i+6] \ll 8) \mid ((D[i+7] \& 0xFF00) \gg 8)$	2^{-31} (semiCirc)
S	$C_{uc} = ((D[i+7] \& 0x00FF) \ll 8) \mid ((D[i+8] \& 0xFF00) \gg 8)$	2^{-29} (rads)
U	$E = ((D[i+8] \& 0x00FF) \ll 24) \mid (D[i+9] \ll 8) \mid ((D[i+10] \& 0xFF00) \gg 8)$	1
S	$C_{uc} = ((D[i+10] \& 0x00FF) \ll 8) \mid ((D[i+11] \& 0xFF00) \gg 8)$	2^{-29} (rads)
U	$RootA = ((D[i+11] \& 0x00FF) \ll 24) \mid (D[i+12] \ll 8) \mid ((D[i+13] \& 0xFF00) \gg 8)$	2^{-19} (meters) ^{-(1/2)}
U	$Toe = ((D[i+13] \& 0x00FF) \ll 8) \mid ((D[i+14] \& 0xFF00) \gg 8)$	2^{+4} (sec)
U	$FitFlag = (D[i+14] \& 0x0080) \gg 7$ 1 U AODO = $(D[i+14] \& 0x007C) \gg 2$	1

Subframe 3 = Data[1][0 -> 14] = D[0 -> 14 + i] i=30

Sign	Conversion	Scale / Units
U	$SVId = D[i+0] \& 0x00FF$	1 (prn #)
S	$C_{ic} = D[i+3]$	2^{-29} (rads)
S	$\Omega_0 = (D[i+4] \ll 16) \mid D[i+5]$	2^{-31} (semiCirc)
S	$C_{is} = D[i+6]$ 2^{-29} (rads) $S_{i0} = (D[i+7] \ll 16) \mid D[i+8]$	2^{-31} (semiCirc)
S	$C_{rc} = D[i+9]$	2^{-5} (meters)
S	$w = (D[i+10] \ll 16) \mid (D[i+11])$	2^{-31} (semiCirc)
S	$\Omega_{dot} = (d[i+12] \ll 8) \mid ((d[i+13] \& 0xFF00) \gg 8)$	2^{-43} (semiCirc/s)
U	$IODE = (D[i+13] \& 0x00FF)$	1
S	$\dot{I} = (D[i+14] \& 0xFFFC) \gg 22$	2^{-43} (semiCirc/s)

Terms and Definitions

Term	Definition
ACK	ACKnowledge
BBRAM	Battery Backed RAM
CP	Contention Period
CPU	Central Processing Unit
CSR	Cambridge Silicon Radio
DGPS	Differential Global Positioning System
EE	Extended Ephemeris
GPIO	General Purpose Input/Output
MS	Mobile Station
MSB	Most Significant Bit (or Byte)
NAK	Negative AcKnowledge
NAV	Network Allocation Vector
NMEA	National Marine Electronics Association
RRLP	Radio Resource Location Services Protocol
SBAS	Satellite Based Augmentation System
SDK	Software Development Kit
SGEE	Server Generated Extended Ephemeris
SID	Sub ID
SLC	Service Level Connection
SRAM	Static Random Access Memory
SW	Software
TCXO	Temperature Compensated crystal Oscillator
TX	Transmit or Transmitter
UART	Universal Asynchronous Receiver Transmitter