

HISTORY INFORMATION FOR THE FOLLOWING MANUAL:

SERVICE MANUAL

AZ1-K CHASSIS

<u>MODEL NAME</u>	<u>REMOTE COMMANDER</u>	<u>DESTINATION</u>	
KDL-32EX600	RM-YD034	US/CND	
KDL-32EX600	RM-YD034	MX/LATIN AMERICA	
KDL-40EX600	RM-YD034	US/CND	
KDL-40EX600	RM-YD034	MX/LATIN AMERICA	
KDL-46EX600	RM-YD034	US/CND	
KDL-46EX600	RM-YD034	MX/LATIN AMERICA	

ORIGINAL MANUAL ISSUE DATE: 4/2010

REVISION DATE

SUBJECT

4/2010

No revisions or updates are applicable at this time.

TABLE OF CONTENTS

SECTION TITLE	PAGE
Safety-Related Component Warning	3
Safety Check-Out	5
SECTION 1: DIAGRAMS.....	6
1-1. Circuit Boards Location	6
1-2. Printed Wiring Boards and Schematic Diagrams Information	6
1-3. Block Diagrams	8
1-4. Schematics and Supporting Information	9
A Board Schematic Diagram (1 of 20).....	9
A Board Schematic Diagram (2 of 20).....	10
A Board Schematic Diagram (3 of 20).....	11
A Board Schematic Diagram (4 of 20).....	12
A Board Schematic Diagram (5 of 20).....	13
A Board Schematic Diagram (6 of 20).....	14
A Board Schematic Diagram (7 of 20).....	15
A Board Schematic Diagram (8 of 20).....	16
A Board Schematic Diagram (9 of 20).....	17
A Board Schematic Diagram (10 of 20).....	18
A Board Schematic Diagram (11 of 20).....	19
A Board Schematic Diagram (12 of 20).....	20
A Board Schematic Diagram (13 of 20).....	21
A Board Schematic Diagram (14 of 20).....	22
A Board Schematic Diagram (15 of 20).....	23
A Board Schematic Diagram (16 of 20).....	24
A Board Schematic Diagram (17 of 20).....	25
A Board Schematic Diagram (18 of 20).....	26
A Board Schematic Diagram (19 of 20).....	27
A Board Schematic Diagram (20 of 20).....	28
GE3B Board Schematic Diagram (Page 1 of 2) (KDL-32EX600/40EX600 ONLY)	31
GE3B Board Schematic Diagram (Page 2 of 2) (KDL-32EX600/40EX600 ONLY)	32
GE2C Board Schematic Diagram (1 of 2) (KDL-46EX600 ONLY)	34
GE2C Board Schematic Diagram (2 of 2) (KDL-46EX600 ONLY)	35
H2 Board Schematic Diagram.....	37
APPENDIX A: ENCRYPTION KEY COMPONENTS.....	A-1

SAFETY-RELATED COMPONENT WARNING

There are critical components used in LCD color TVs that are important for safety. These components are identified with shading and \triangle mark on the schematic diagrams and the electrical parts list. It is essential that these critical parts be replaced only with the part number specified in the electrical parts list to prevent electric shock, fire, or other hazard.

NOTE: Do not modify the original design without obtaining written permission from the manufacturer or you will void the original parts and labor guarantee.


USE CAUTION WHEN HANDLING THE LCD PANEL

When repairing the LCD panel, be sure you are grounded by using a wrist band.


When installing the LCD panel on a wall, the LCD panel must be secured using the 4 mounting holes on the rear cover.

To avoid damaging the LCD panel:


- do not press on the panel or frame edge to avoid the risk of electric shock.
- do not scratch or press on the panel with any sharp objects.
- do not leave the module in high temperatures or in areas of high humidity for an extended period of time.
- do not expose the LCD panel to direct sunlight.
- avoid contact with water. It may cause a short circuit within the module.
- disconnect the AC adapter when replacing the backlight (CCFL) or inverter circuit.
(High voltage occurs at the inverter circuit at 650Vrms.)
- always clean the LCD panel with a soft cloth material.
- use care when handling the wires or connectors of the inverter circuit. Damaging the wires may cause a short.
- protect the panel from ESD to avoid damaging the electronic circuit (C-MOS).
- during the repair, DO NOT leave the Power On for more than 1 hour while the TV is face down on a cloth.

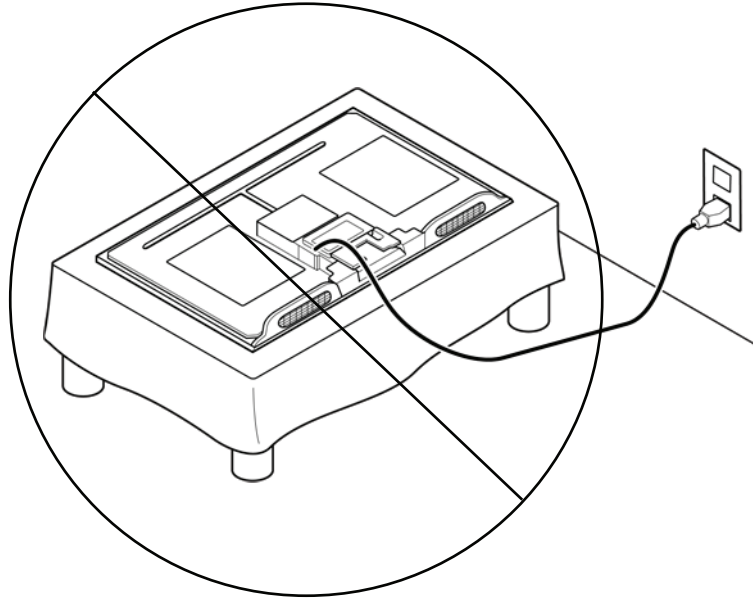

LEAKAGE CURRENT HOT CHECK CIRCUIT

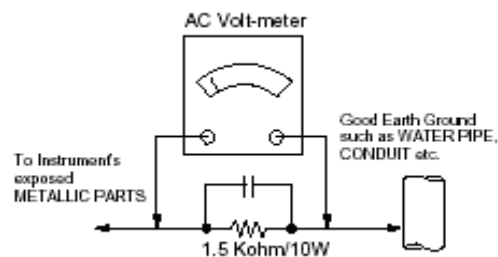

The circuit boards used in these models have been processed using Lead Free Solder. The boards are identified by the LF logo located close to the board designation e.g. H1 etc [see example]. The servicing of these boards requires special precautions to be taken as outlined below.

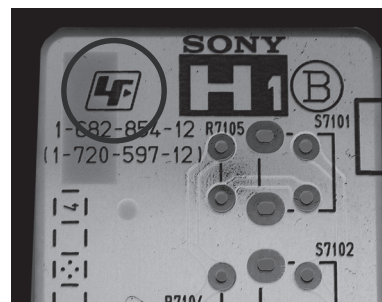

example

It is strongly recommended to use Lead Free Solder material in order to guarantee optimal quality of new solder joints. Lead Free Solder is available under the following part numbers :

Part number	Diameter	Remarks
7-640-005-19	0.3mm	0.25Kg
7-640-005-20	0.4mm	0.50Kg
7-640-005-21	0.5mm	0.50Kg
7-640-005-22	0.6mm	0.25Kg
7-640-005-23	0.8mm	1.00Kg
7-640-005-24	1.0mm	1.00Kg
7-640-005-25	1.2mm	1.00Kg
7-640-005-26	1.6mm	1.00Kg

Due to the higher melting point of Lead Free Solder the soldering iron tip temperature needs to be set to 370 degrees centigrade. This requires soldering equipment capable of accurate temperature control coupled with a good heat recovery characteristics.

For more information on the use of Lead Free Solder, please refer to <http://www.sony-training.com>

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or touching high-wattage resistors.
3. Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators.
4. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
5. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
6. Check the line cords for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
7. Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

Leakage Test

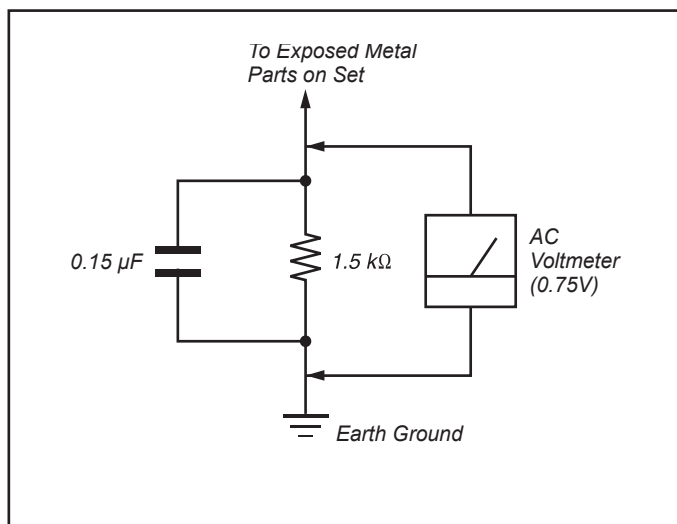


Figure A. Using an AC voltmeter to check AC leakage.

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instructions.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low voltage scale. The Simpson's 250 and Sanwa SH-63TRD are examples of passive VOMs that are suitable. Nearly all battery-operated digital multimeters that have a 2 VAC range are suitable (see Figure A).

How to Find a Good Earth Ground

A cold-water pipe is a guaranteed earth ground; the cover-plate retaining screw on most AC outlet boxes is also at earth ground. If the retaining screw is to be used as your earth ground, verify that it is at ground by measuring the resistance between it and a cold-water pipe with an ohmmeter. The reading should be zero ohms.

If a cold-water pipe is not accessible, connect a 60- to 100-watt trouble-light (not a neon lamp) between the hot side of the receptacle and the retaining screw. Try both slots, if necessary, to locate the hot side on the line; the lamp should light at normal brilliance if the screw is at ground potential (see Figure B).


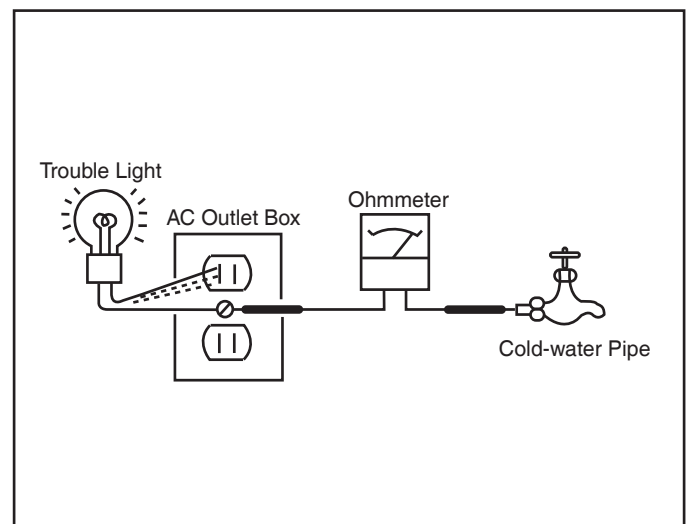


Figure B. Checking for earth ground.

SECTION 1: DIAGRAMS

1-1. CIRCUIT BOARDS LOCATION

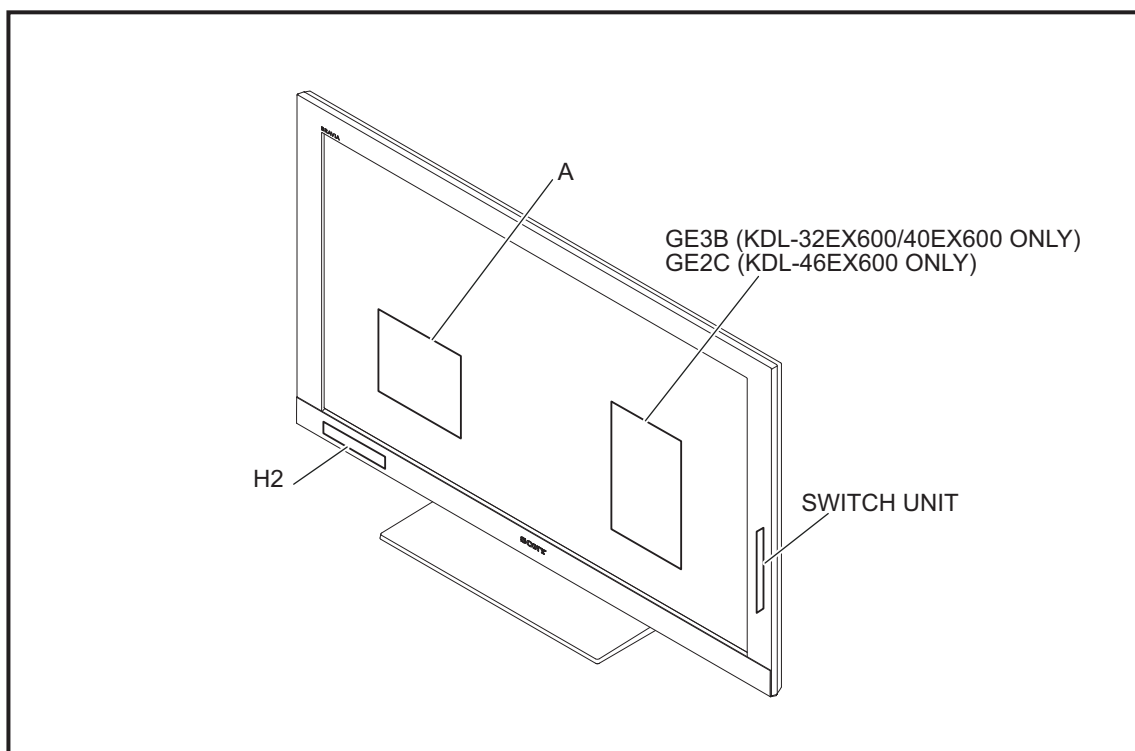

1-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS INFORMATION

All capacitors are in μF unless otherwise noted. pF : μF 50VV or less are not indicated except for electrolytics and tantalums.

All electrolytics are in 50V unless otherwise specified.

All resistors are in ohms. $\text{k}\Omega=1000\Omega$, $\text{M}\Omega=1000\text{k}\Omega$

Indication of resistance, which does not have one for rating electrical power, is as follows: Pitch : 5mm

Rating electrical power : $\frac{1}{4}$ W

$\frac{1}{4}$ W in resistance, $\frac{1}{10}$ W and $\frac{1}{16}$ W in chip resistance.

: nonflammable resistor

: fusible resistor

: internal component

: panel designation and adjustment for repair

: earth ground

: earth-chassis

All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

Readings are taken with a color-bar signal input.

Readings are taken with a $10\text{M}\Omega$ digital multimeter.

Voltages are DC with respect to ground unless otherwise noted.

Voltage variations may be noted due to normal production tolerances.

All voltages are in V.

S : Measurement impossibility.

: B+line.

: B-line. (Actual measured value may be different).

: signal path. (RF)

Circled numbers are waveform references.

The components identified by shading and are critical for safety. Replace only with part number specified.

The symbol indicates a fast operating fuse and is displayed on the component side of the board. Replace only with fuse of the same rating as marked.

Les composants identifiés par un trame et une marque sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Le symbole indique une fusible à action rapide. Doit être remplacé par une fusible de même valeur, comme marqué.

NOTE: The components identified by a red outline and a mark contain confidential information. Specific instructions must be adhered to whenever these components are repaired and/or replaced.
See Appendix A: Encryption Key Components in the back of this manual.

REFERENCE INFORMATION

RESISTOR

: RN METAL FILM
 : RC SOLID
 : FPRD NONFLAMMABLE CARBON
 : FUSE NONFLAMMABLE FUSIBLE
 : RW NONFLAMMABLE WIREWOUND
 : RS NONFLAMMABLE METAL OXIDE
 : RB NONFLAMMABLE CEMENT
 : ※ ADJUSTMENT RESISTOR

CAPACITOR

: TA TANTALUM
 : PS STYROL
 : PP POLYPROPYLENE
 : PT MYLAR
 : MPS METALIZED POLYESTER
 : MPP METALIZED POLYPROPYLENE
 : ALB BIPOLAR
 : ALT HIGH TEMPERATURE
 : ALR HIGH RIPPLE

COIL

: LF-8L MICRO INDUCTOR


Terminal name of semiconductors in silk screen printed circuit (※)

	Device	Printed symbol	Terminal name	Circuit
1	Transistor		Collector Base Emitter	
2	Transistor		Collector Base Emitter	
3	Diode		Cathode Anode	
4	Diode		Cathode Anode (NC)	
5	Diode		Cathode Anode (NC)	
6	Diode		Common Anode Cathode	
7	Diode		Common Anode Cathode	
8	Diode		Common Anode Anode	
9	Diode		Common Anode Anode	
10	Diode		Common Cathode Cathode	
11	Diode		Common Cathode Cathode	
12	Diode		Anode Cathode Anode Cathode	
13	Transistor (FET)		Drain Source Gate	
14	Transistor (FET)		Drain Source Gate	
15	Transistor (FET)		Source Drain Gate	
16	Transistor		Emitter Collector Base	
17	Transistor		C2 B1 E1 E2 B2 C1	
18	Transistor		C1 B2 E2 E1 B1 C2	
19	Transistor		C1 B2 E2 E1 B1 C2	
20	Transistor		C1 B2 E2 E1 B1 C2	
21	Transistor		E2 B1 E1 C2 C1(B2)	
22	Transistor		(B2) B1 E1 E2 C1 C2	
23	Transistor		(B2) E2 E1 B1 C2 C1	
—	Discrete semiconductor			

(Chip semiconductors that are not actually used are included.)


Ver.1.6

1-3. BLOCK DIAGRAMS

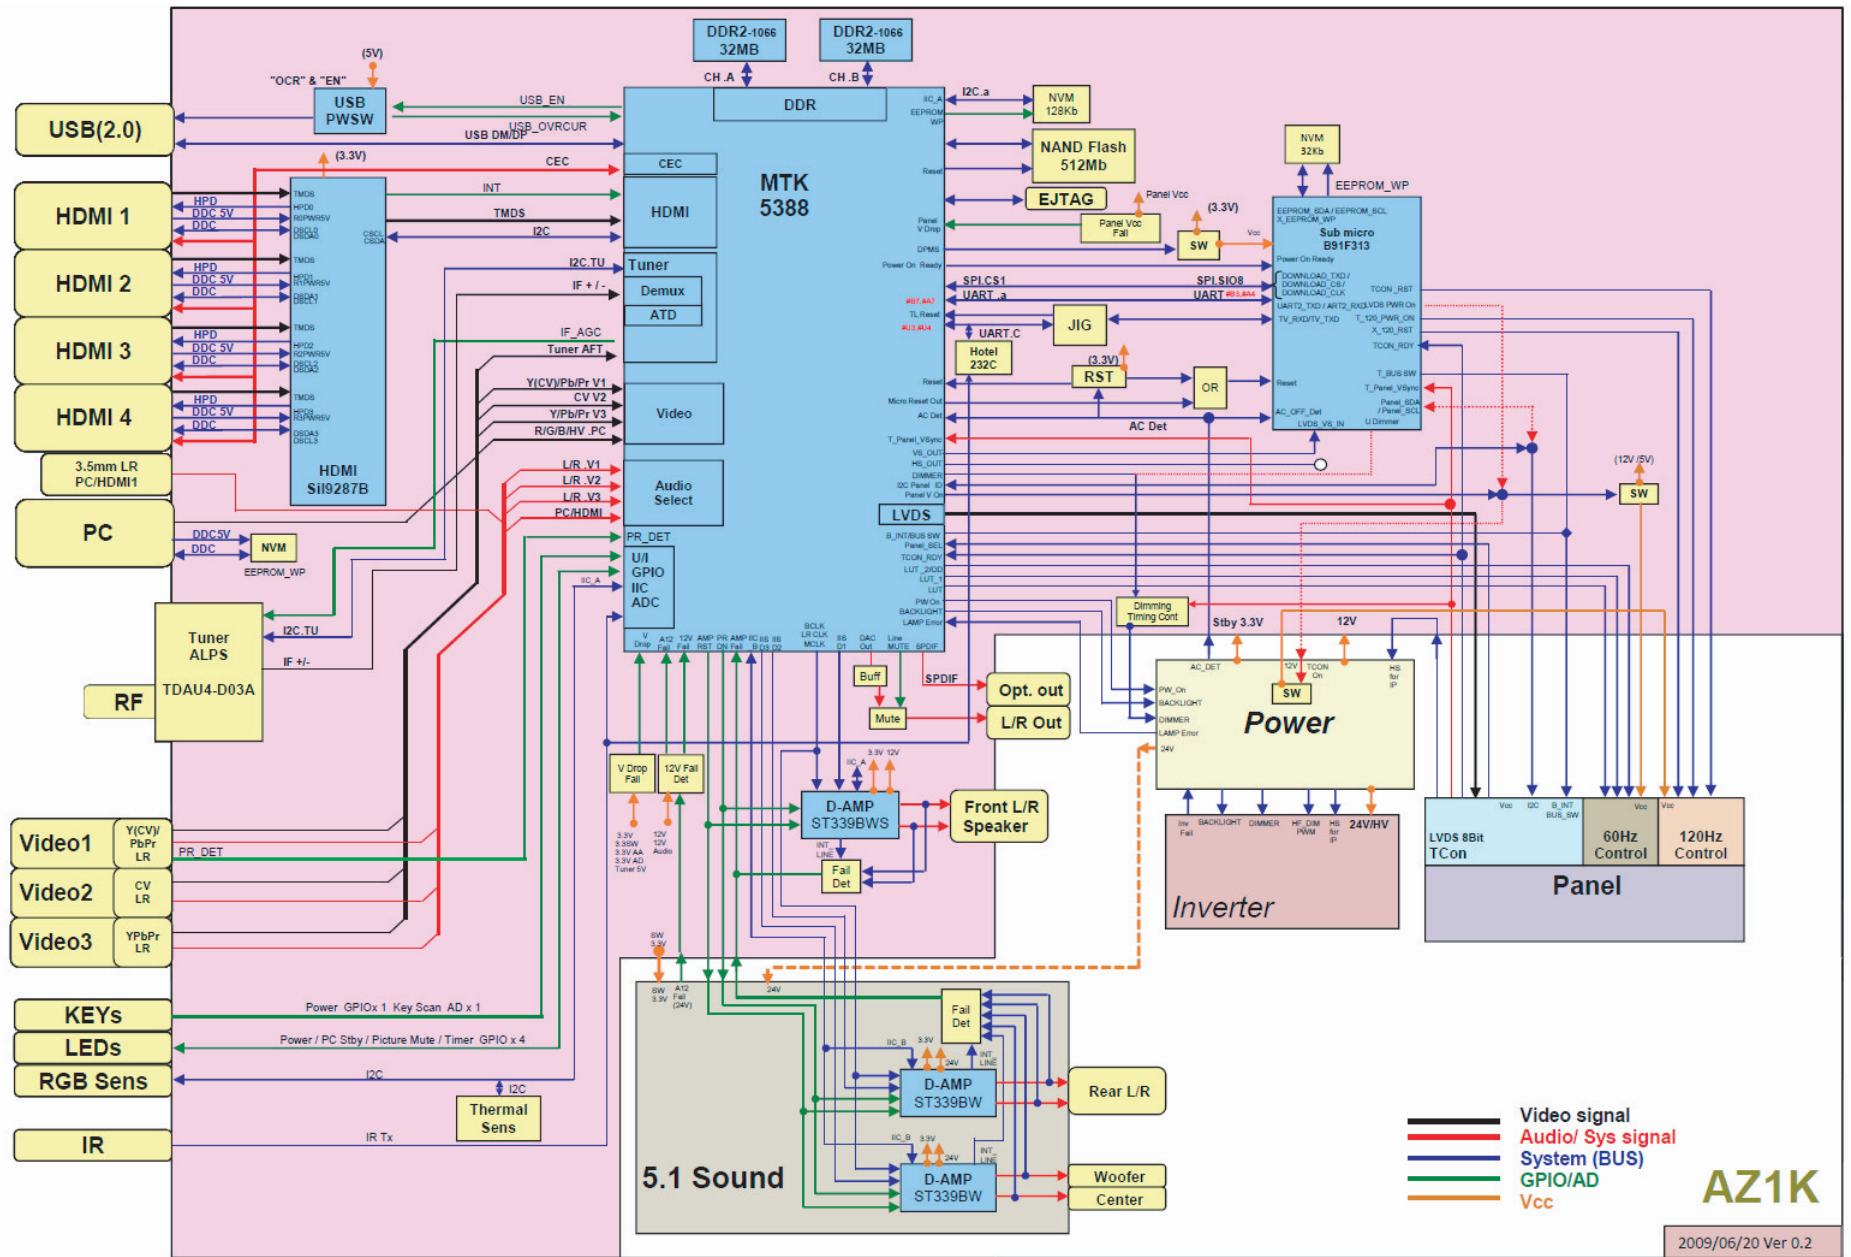


1-4. SCHEMATICS AND SUPPORTING INFORMATION

A BOARD SCHEMATIC DIAGRAM (1 OF 20)

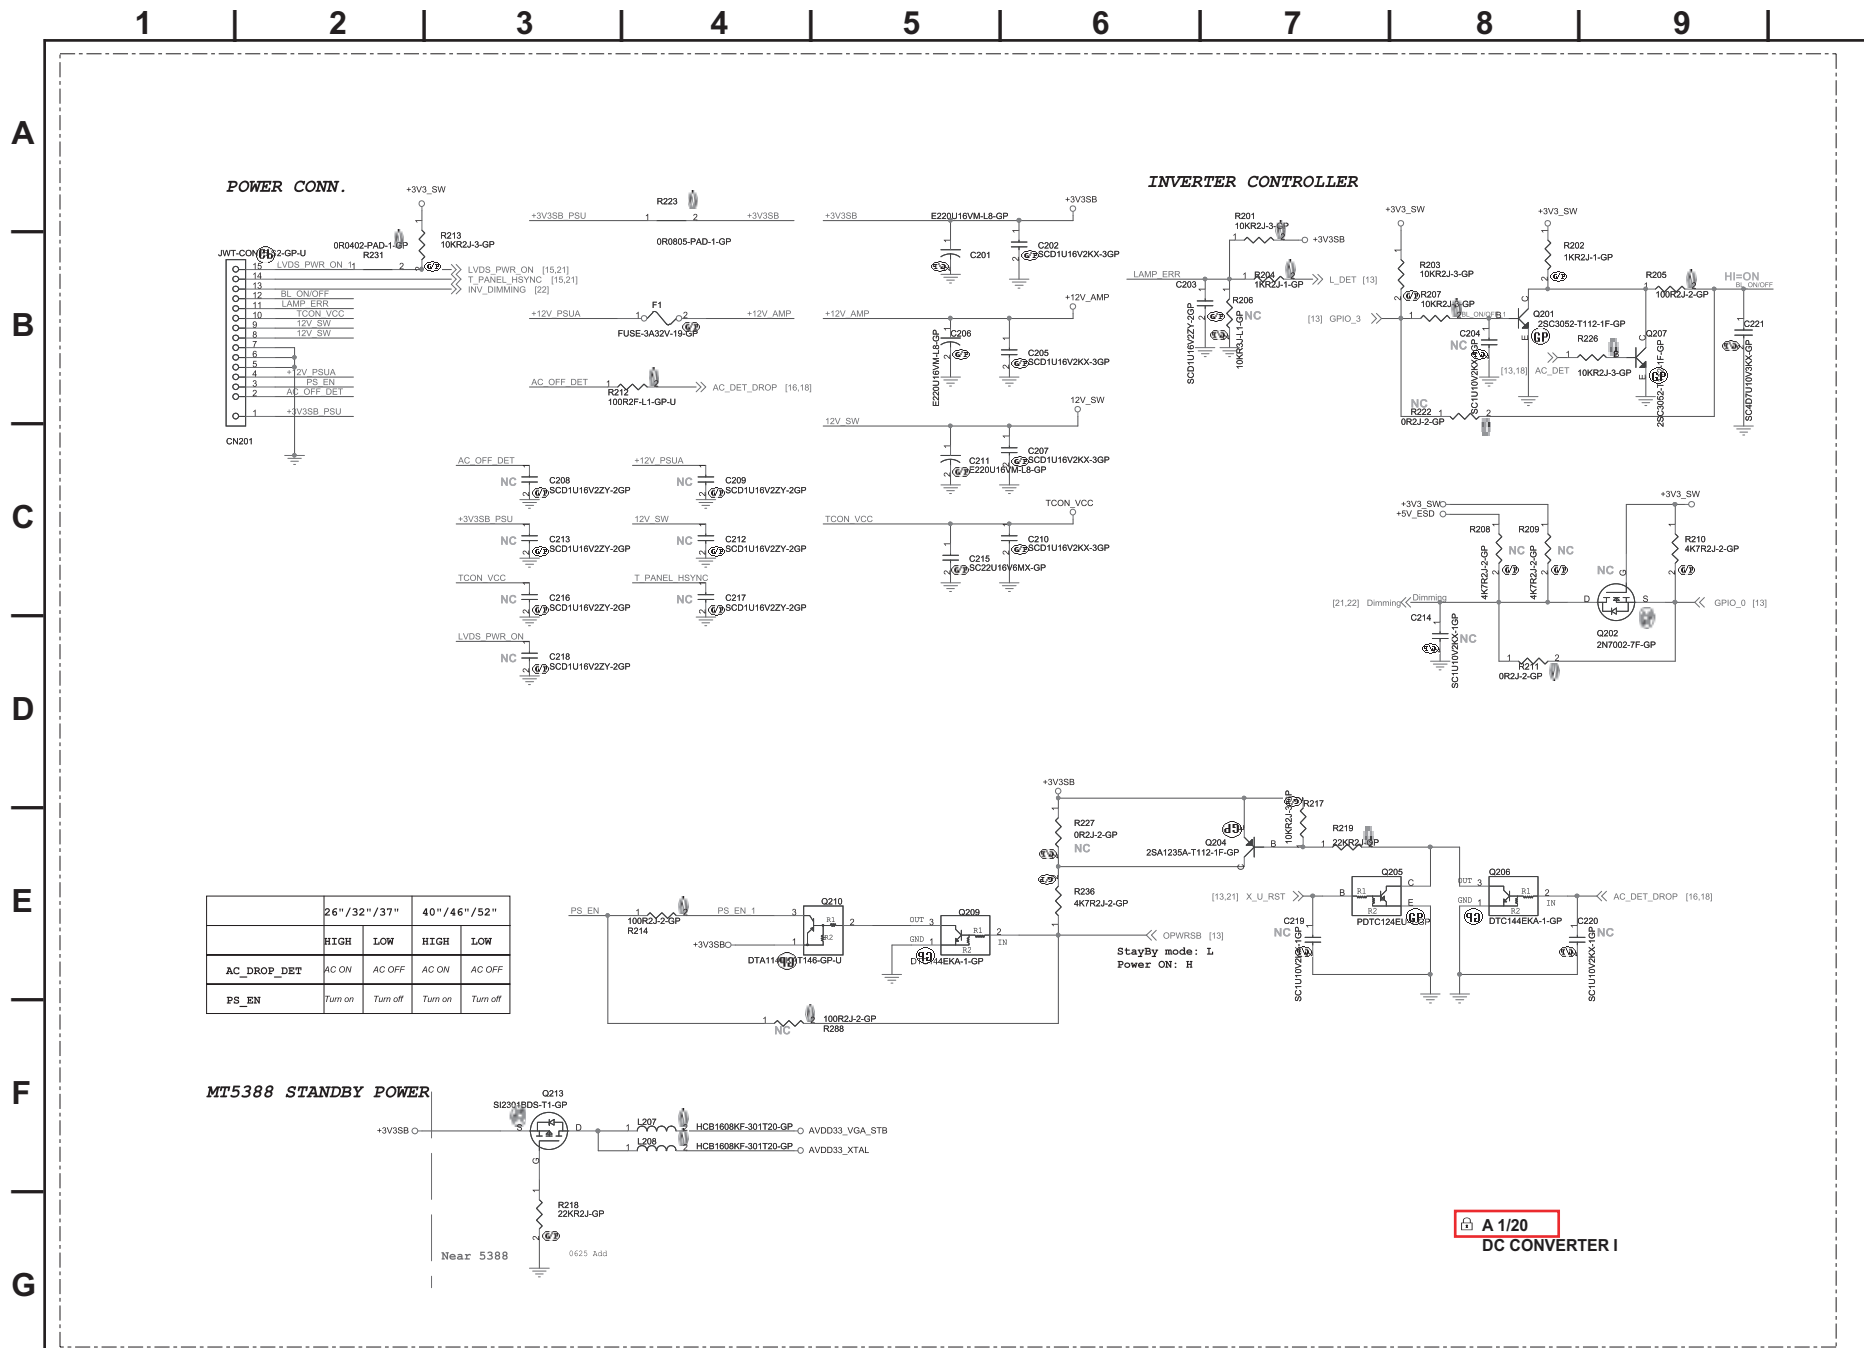


A 1/20
DC CONVERTER I

A BOARD SCHEMATIC DIAGRAM (2 OF 20)

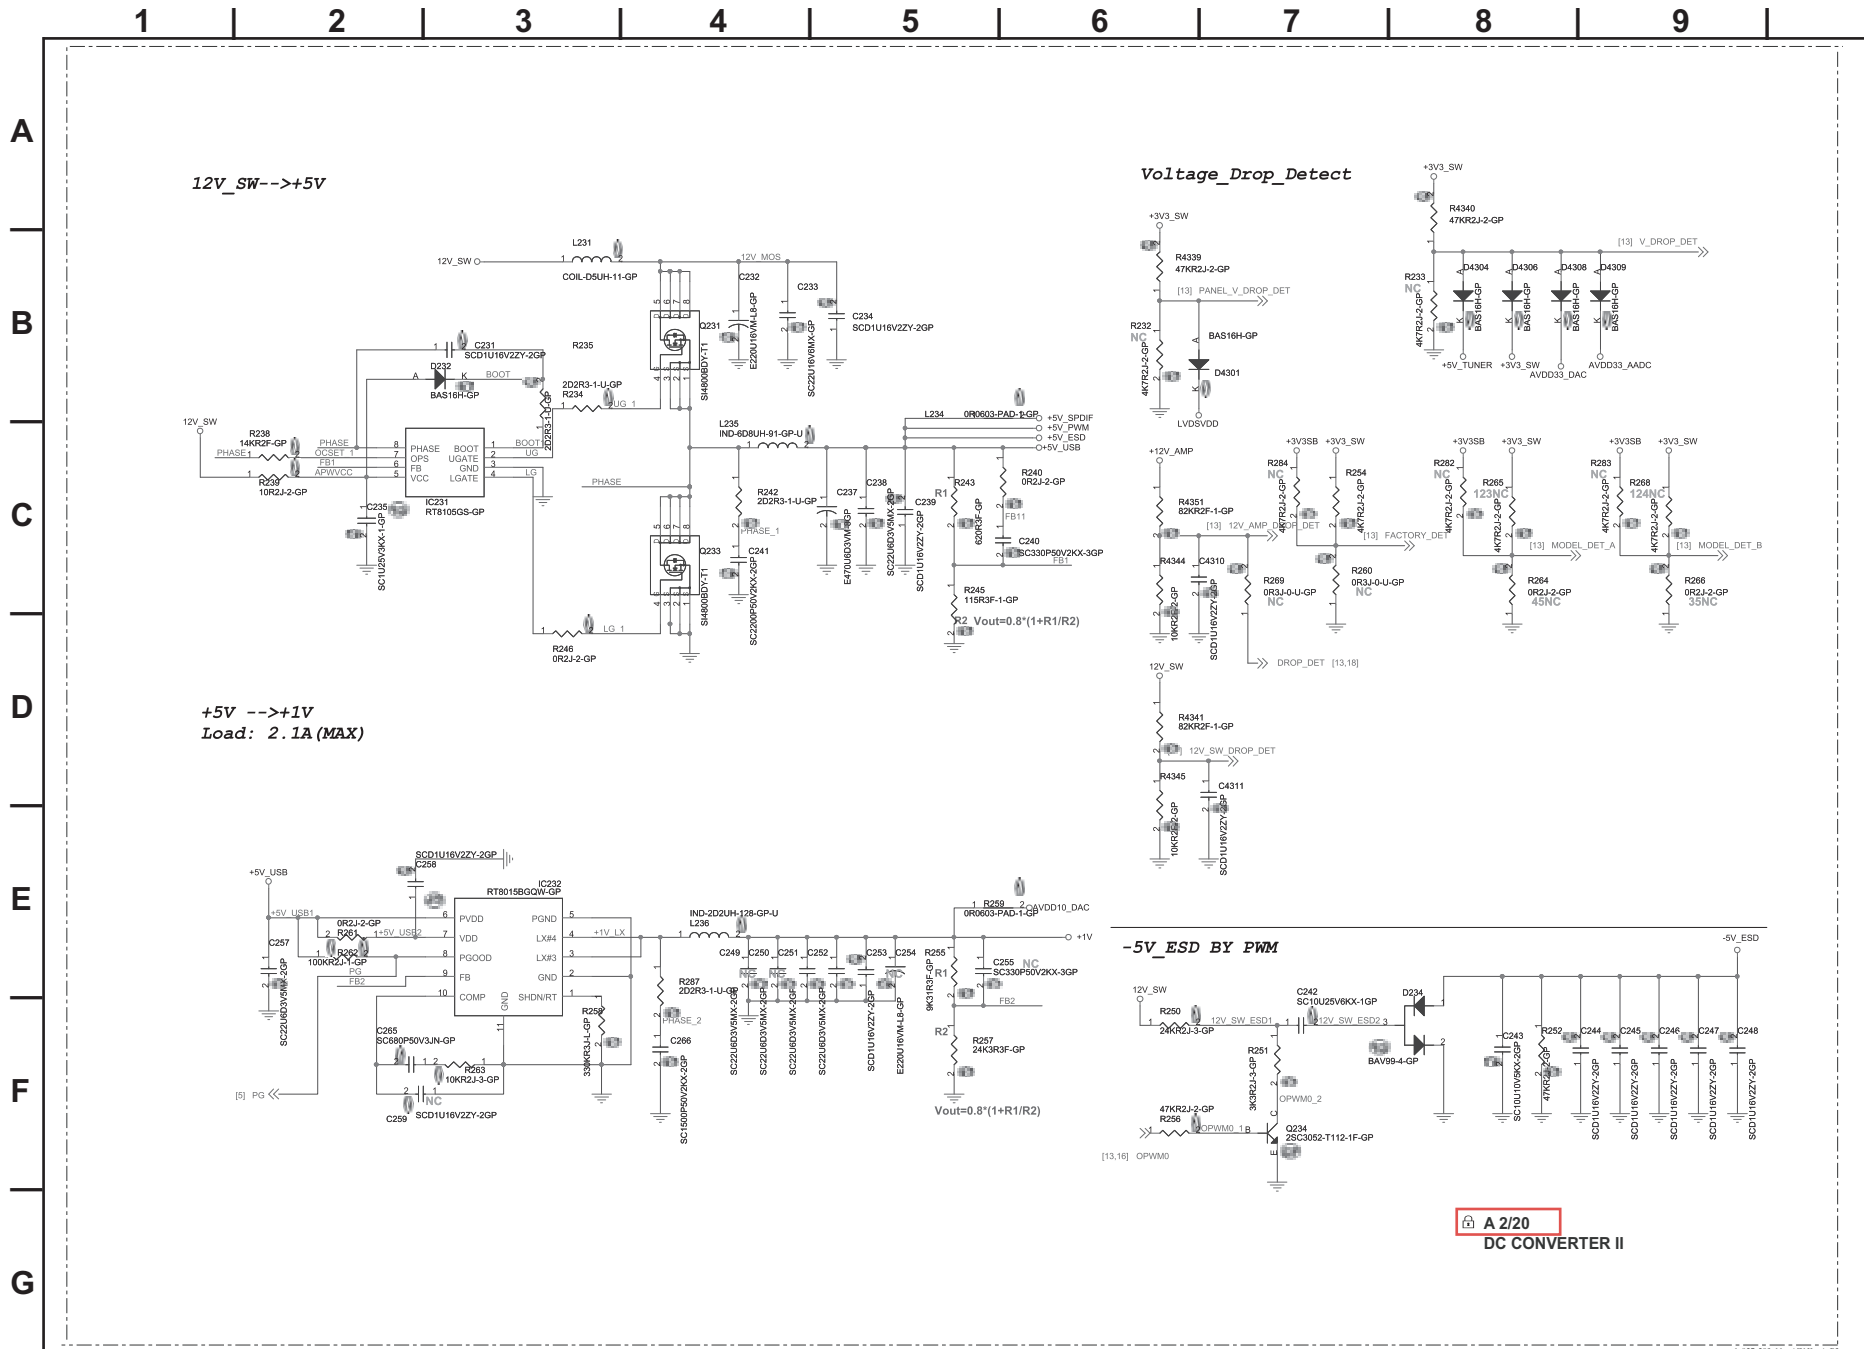


A BOARD SCHEMATIC DIAGRAM (3 OF 20)

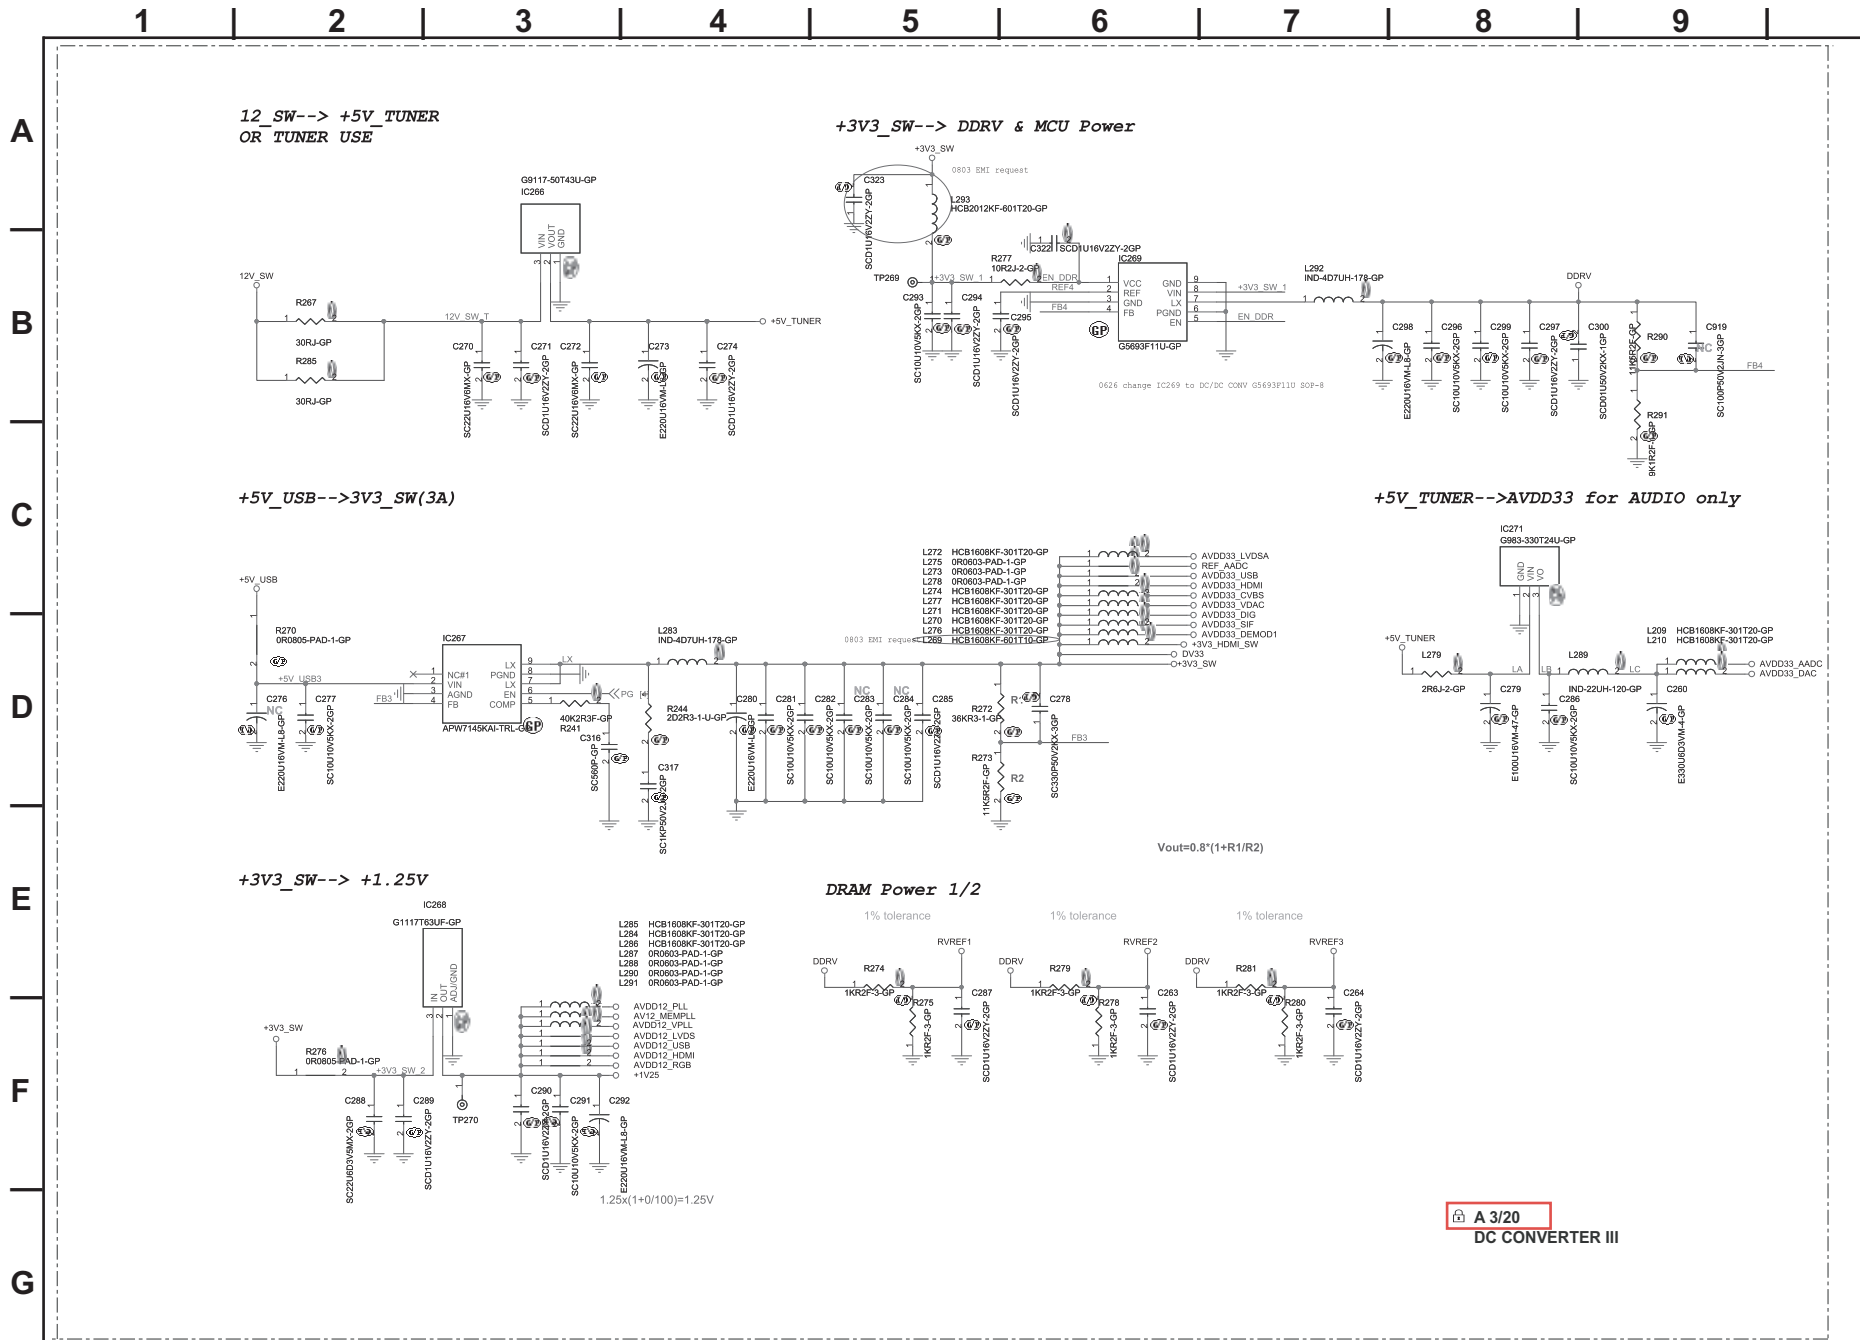


A 3/20
DC CONVERTER III

A BOARD SCHEMATIC DIAGRAM (4 OF 20)

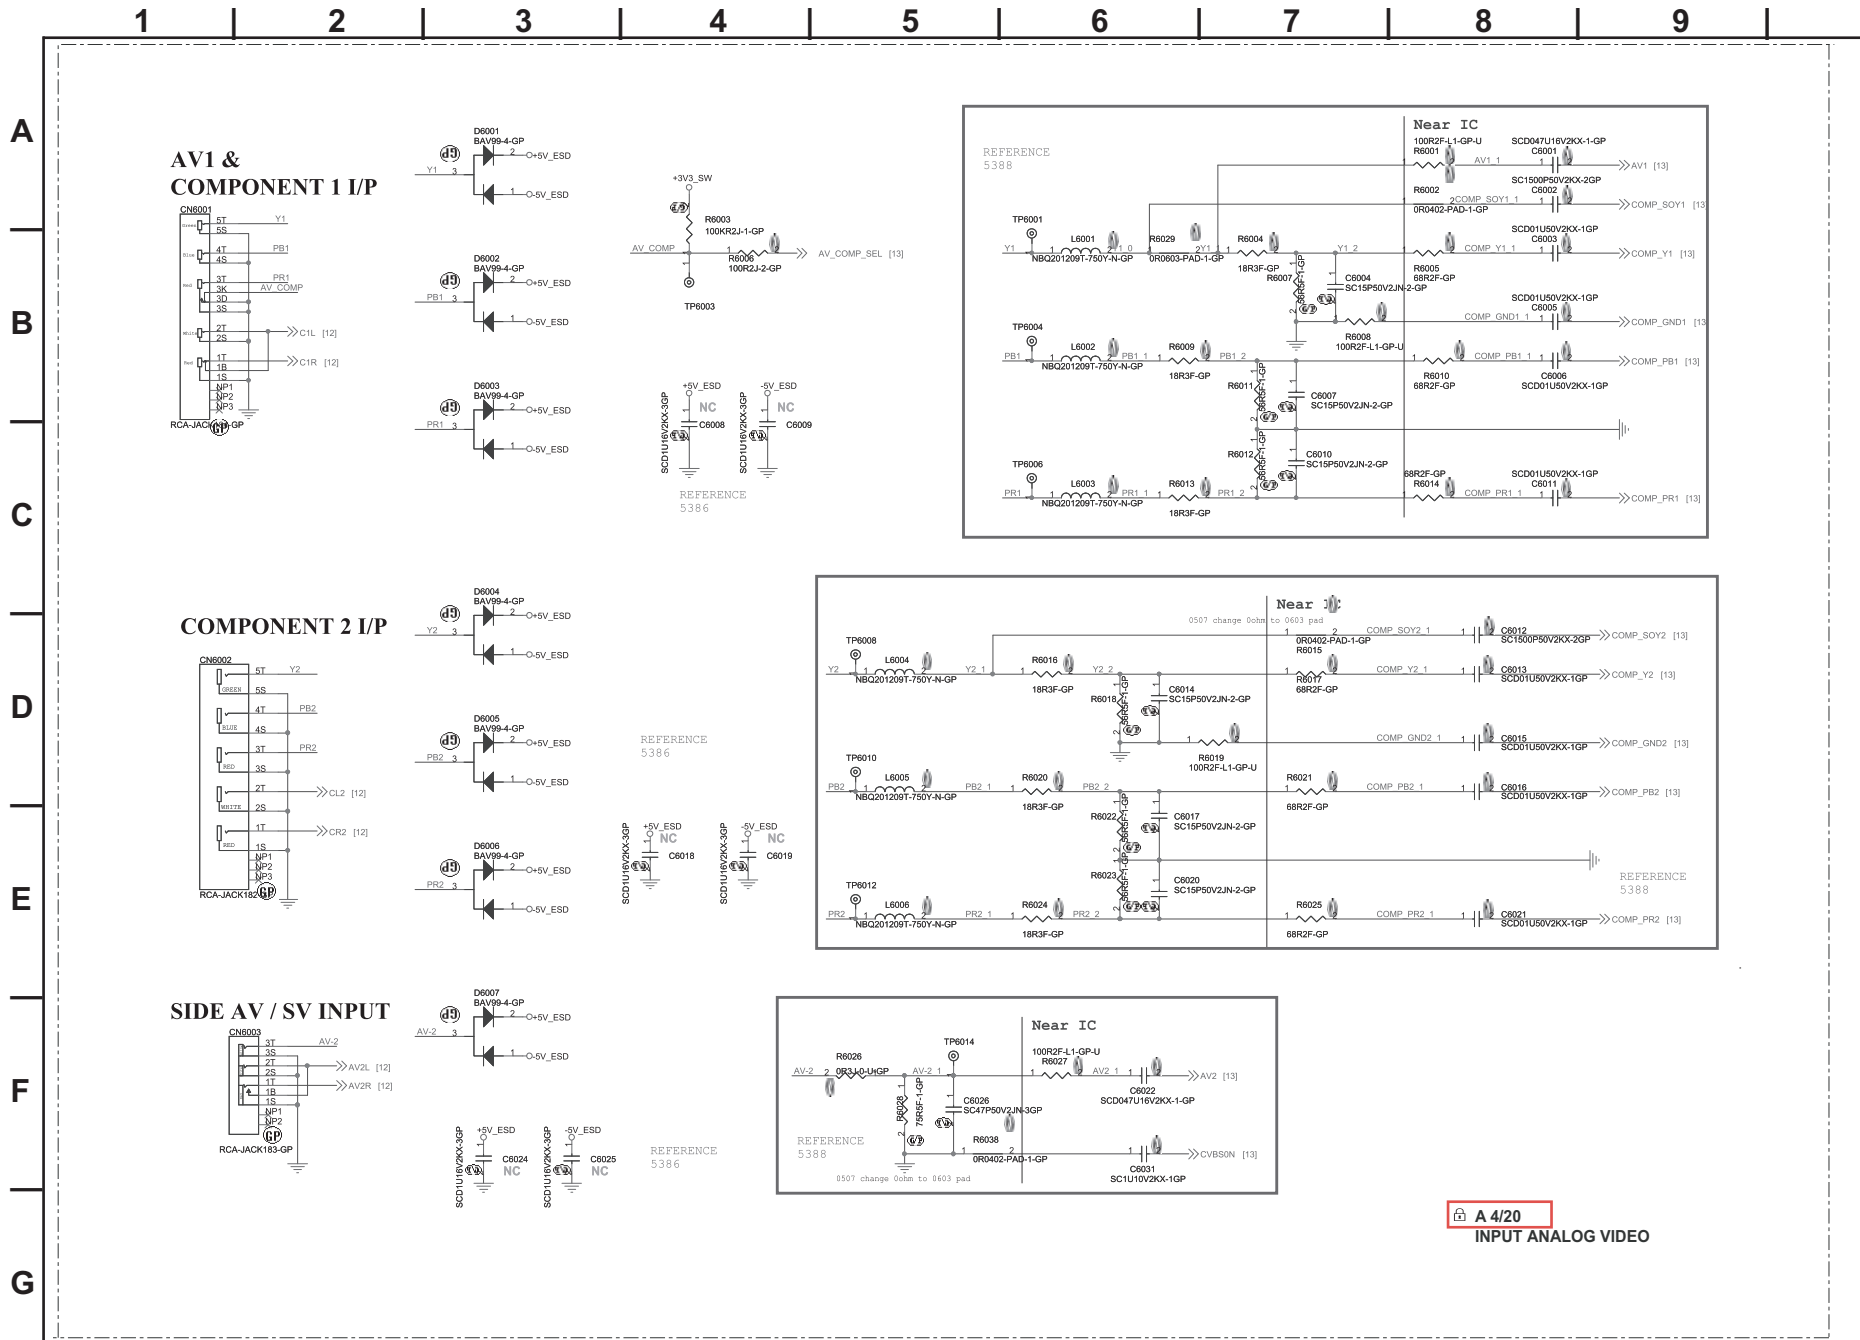

A 4/20
INPUT ANALOG VIDEO

A BOARD SCHEMATIC DIAGRAM (5 OF 20)

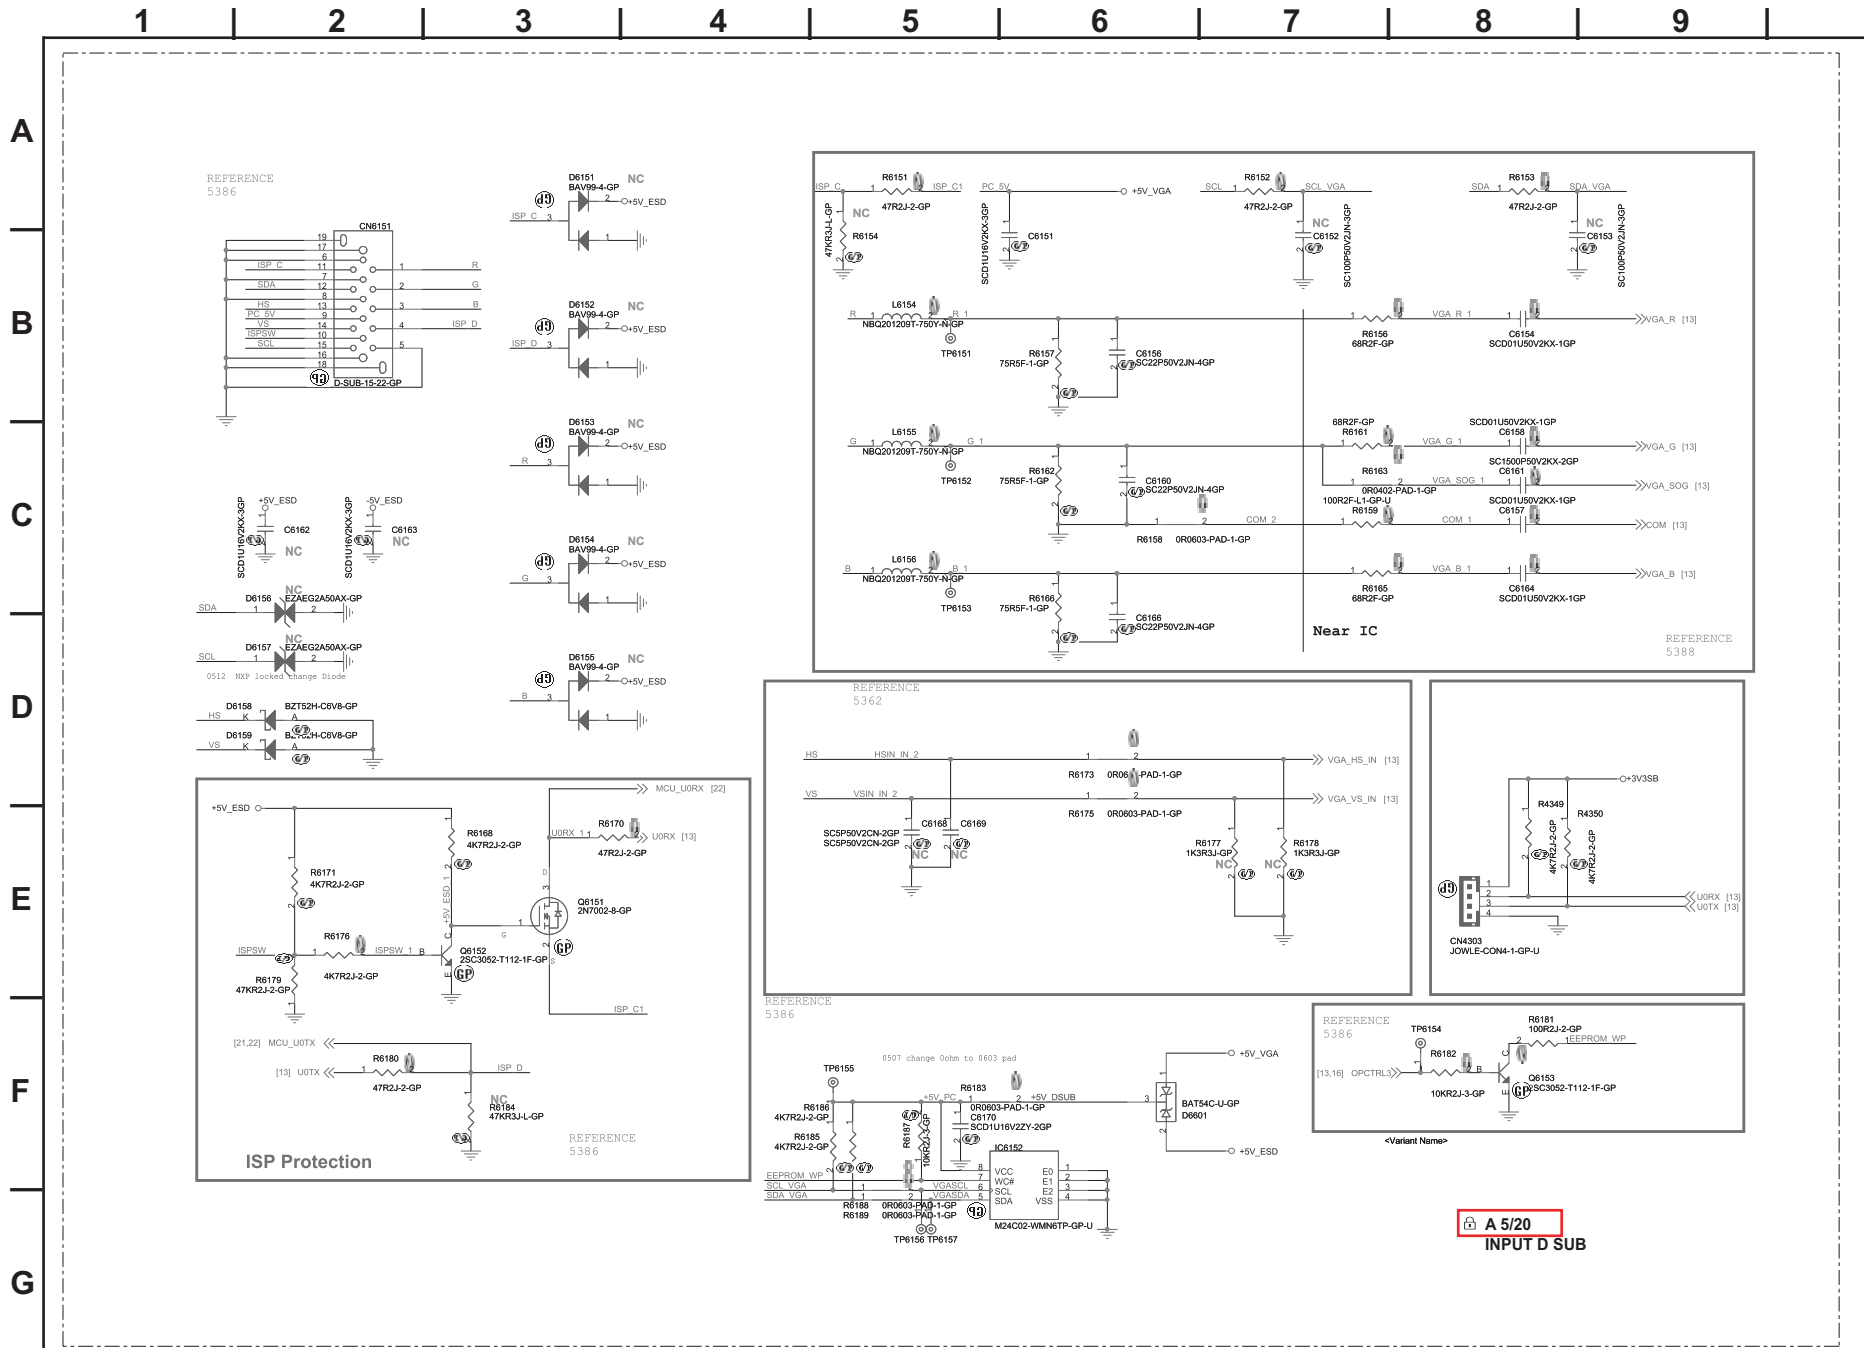


A 5/20
INPUT D SUB





A BOARD SCHEMATIC DIAGRAM (6 OF 20)




HDMI INPUT_4

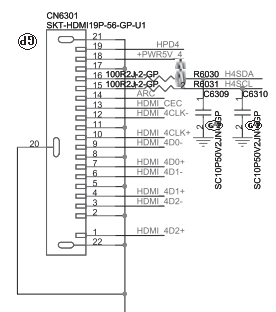





Resistor/capacitor
close to connector

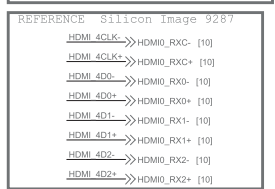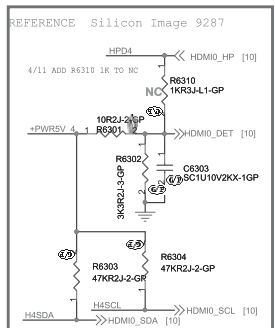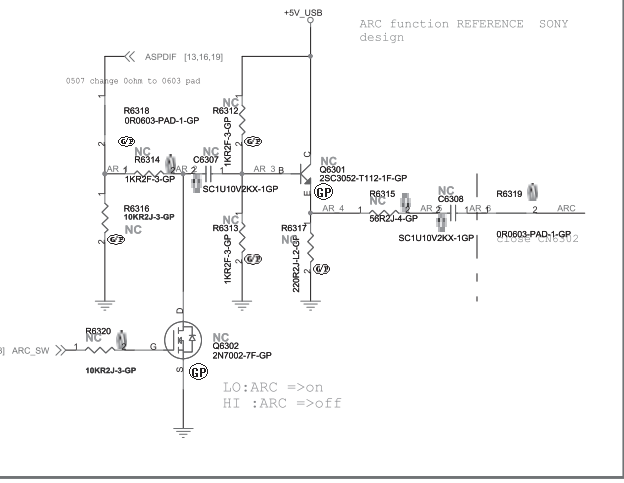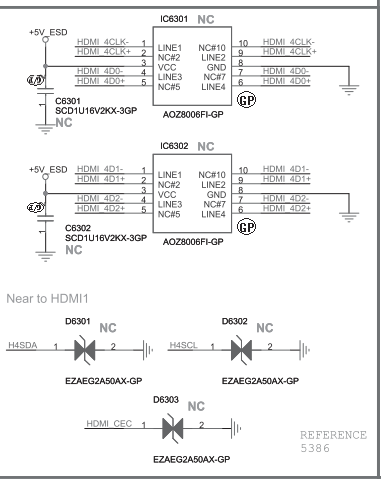

HDMI INPUT_1

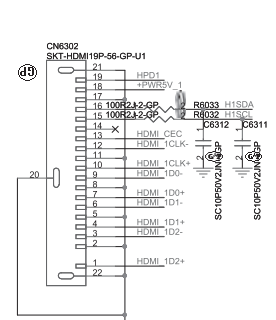


Resistor/capacitor
close to connector

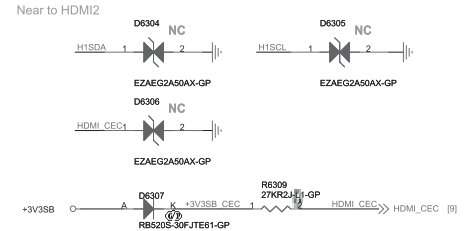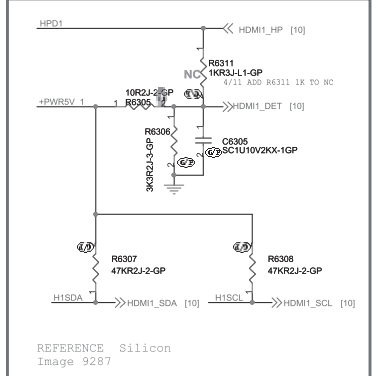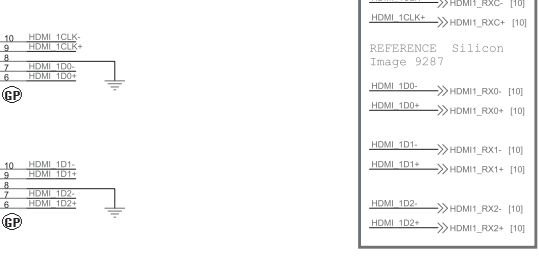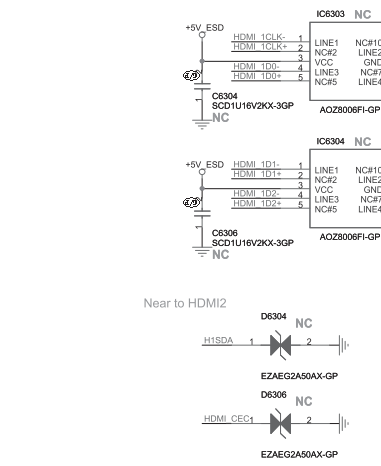


A 6/20
INPUT HDMI I

A BOARD SCHEMATIC DIAGRAM (7 OF 20)

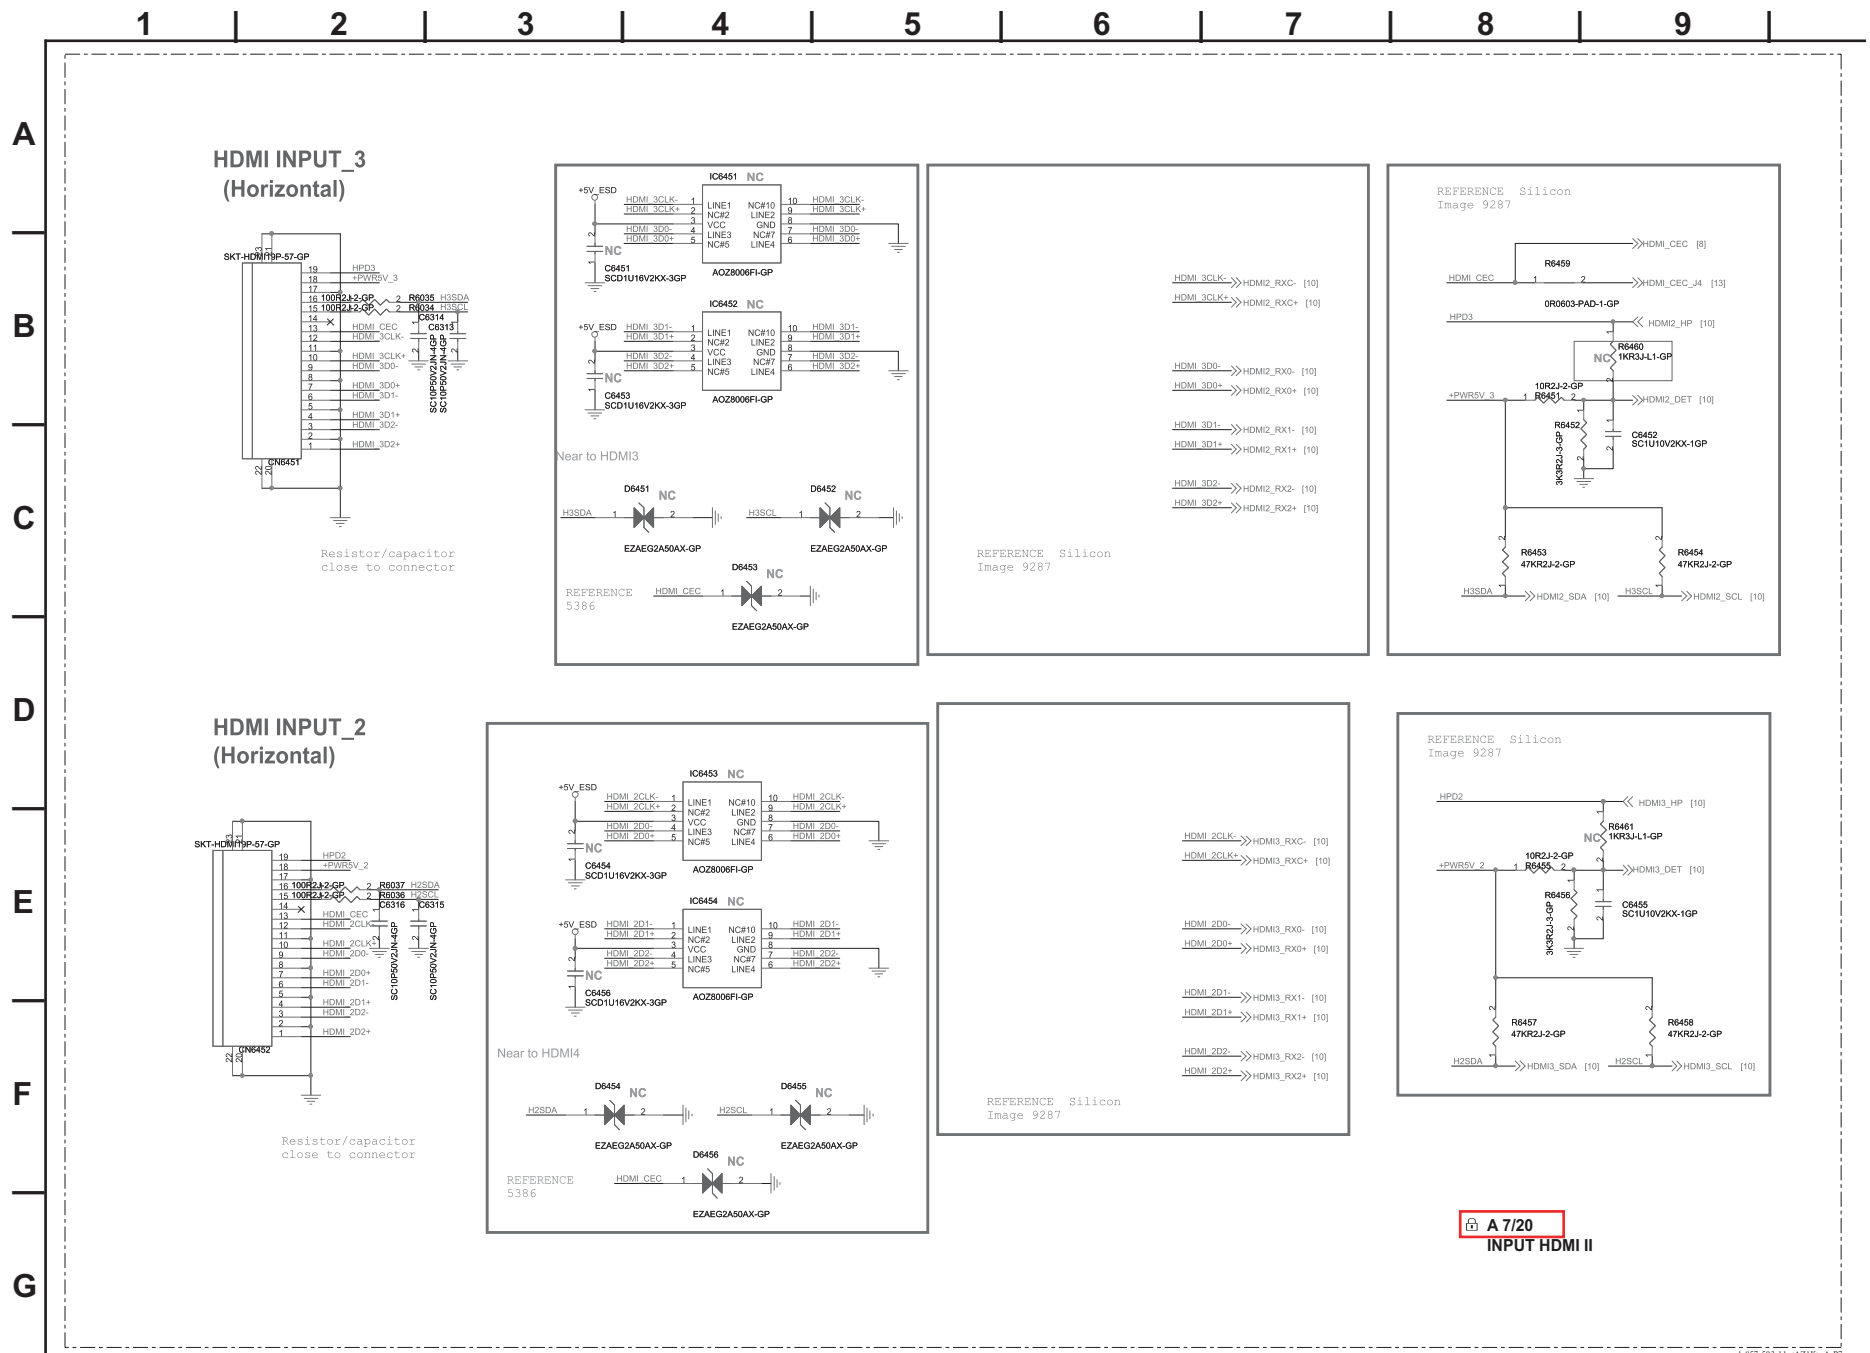


A 7/20
INPUT HDMI II


A BOARD SCHEMATIC DIAGRAM (8 OF 20)

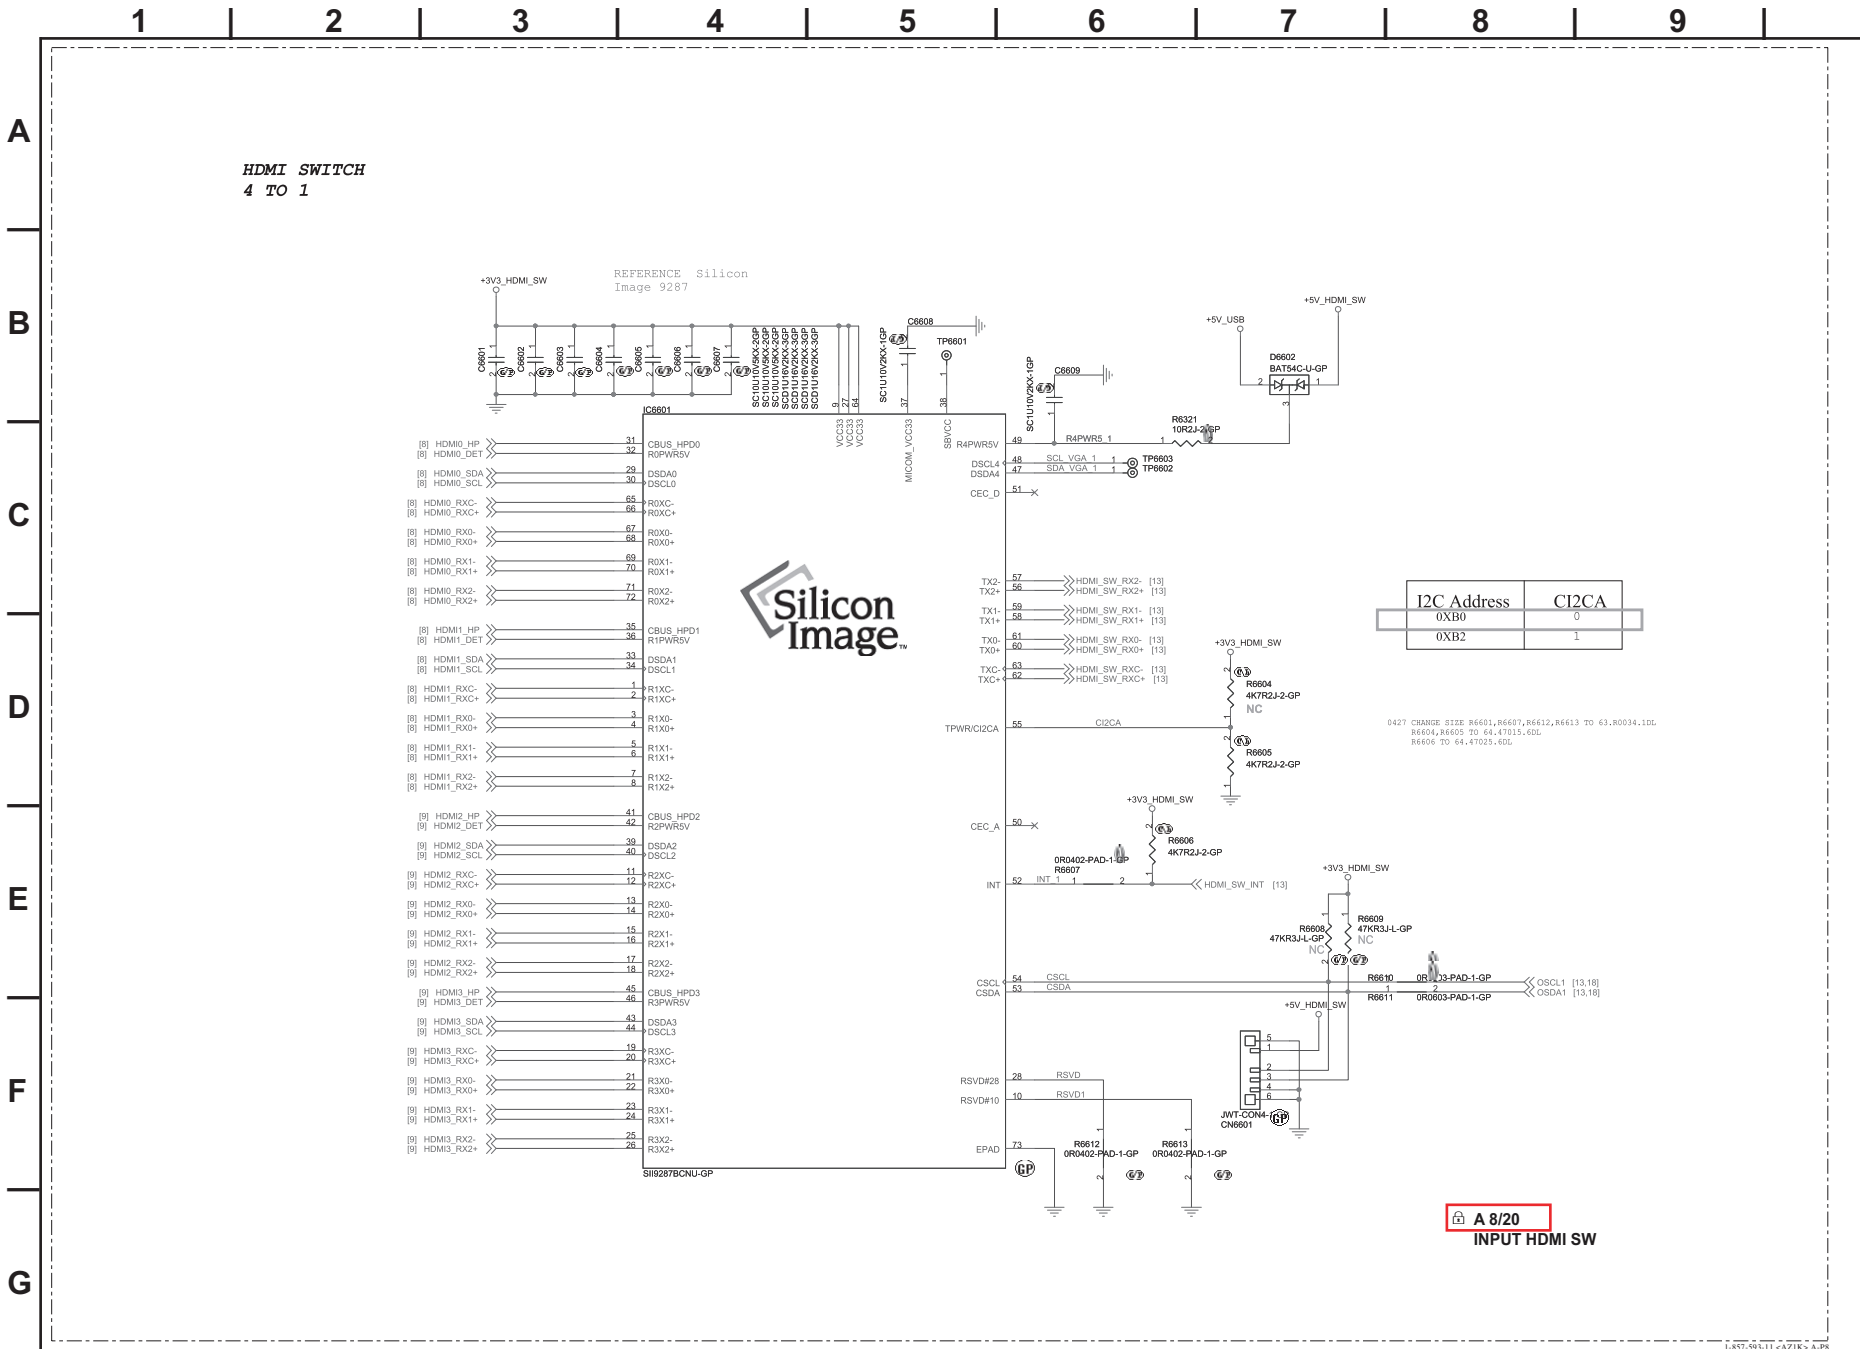

A BOARD SCHEMATIC DIAGRAM (9 OF 20)

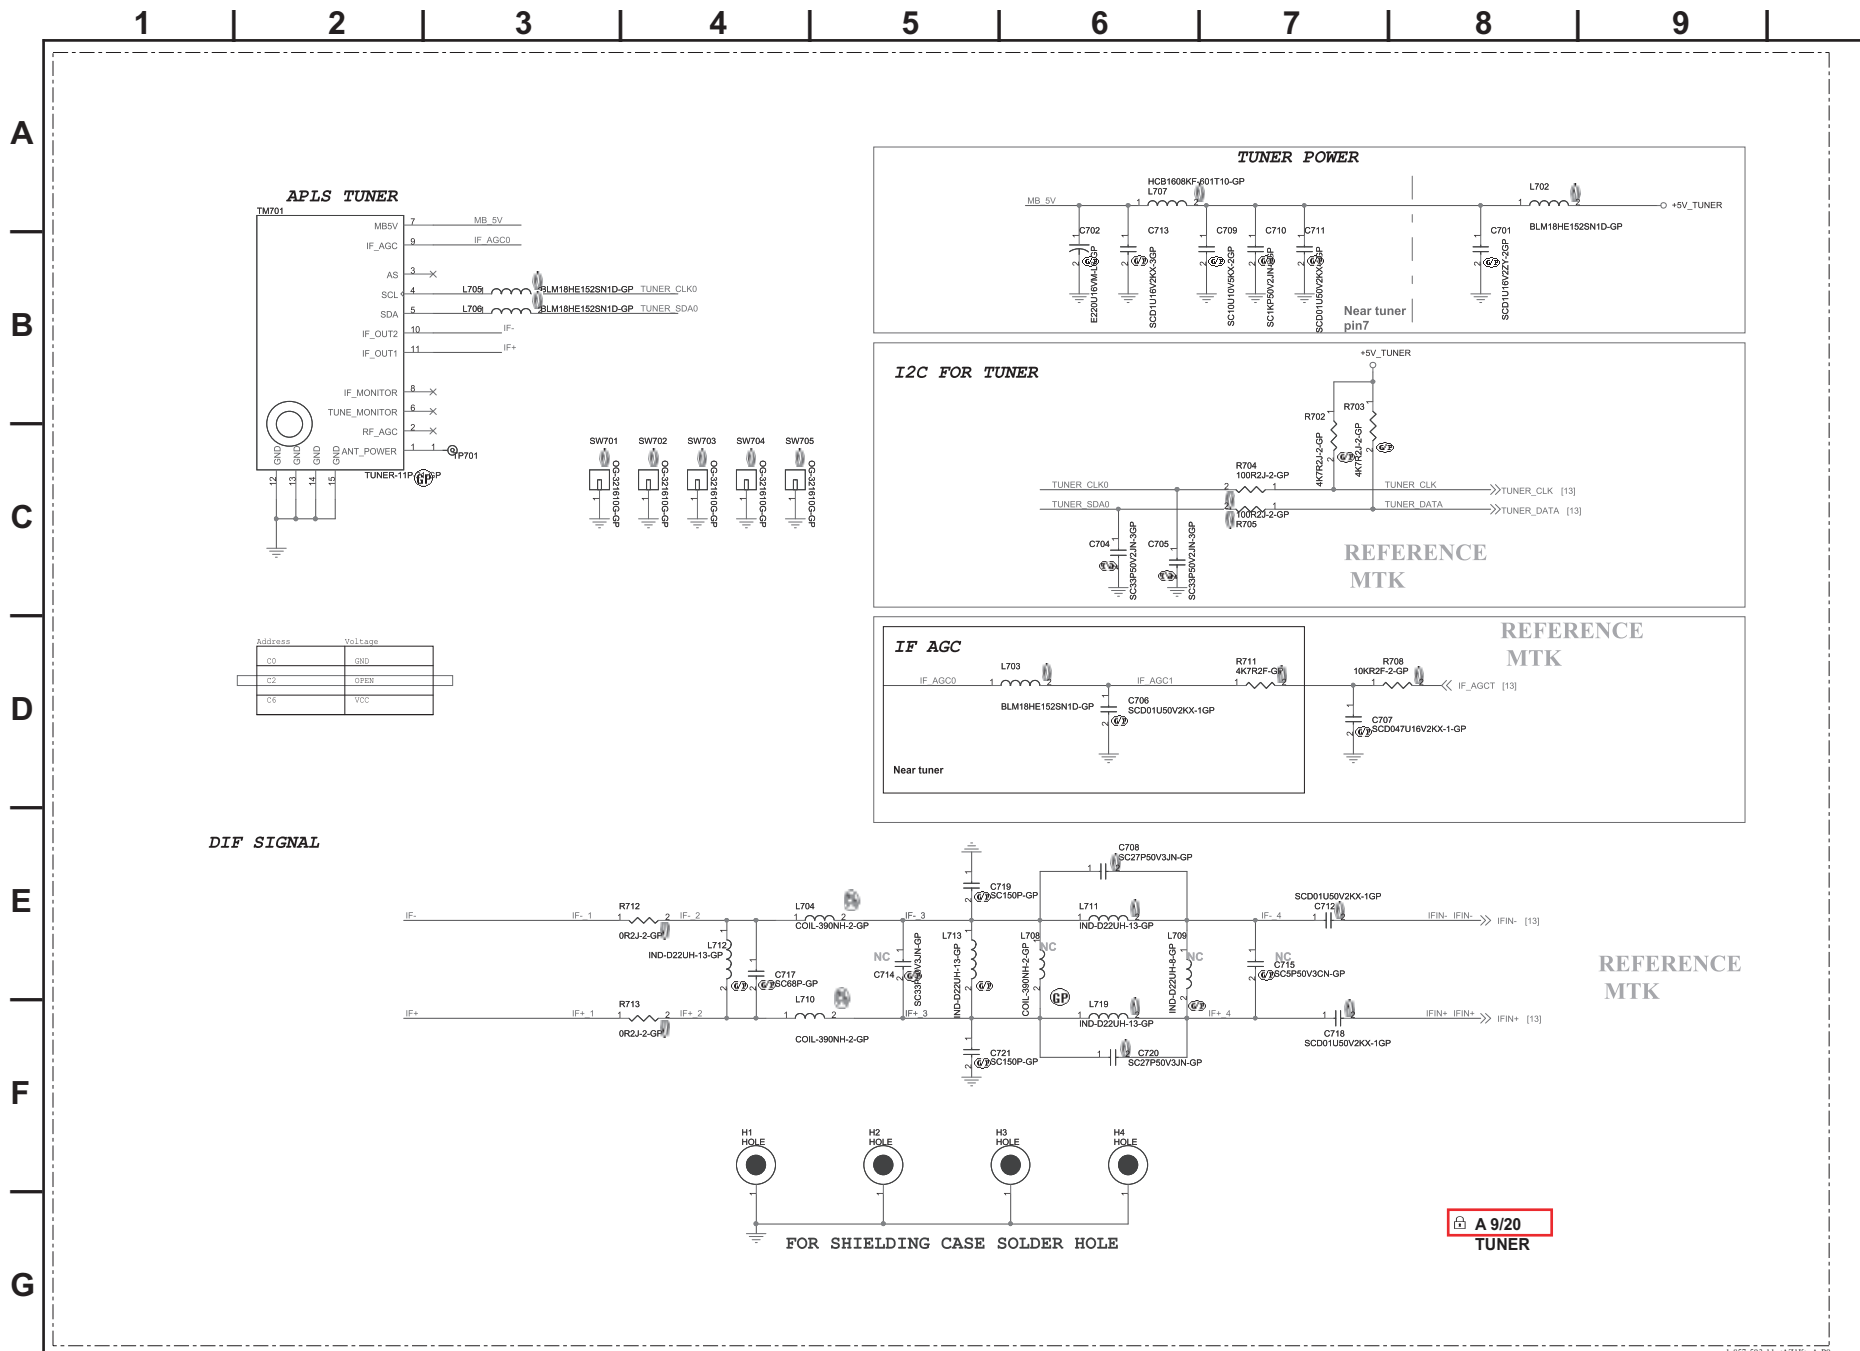


A BOARD SCHEMATIC DIAGRAM (10 OF 20)

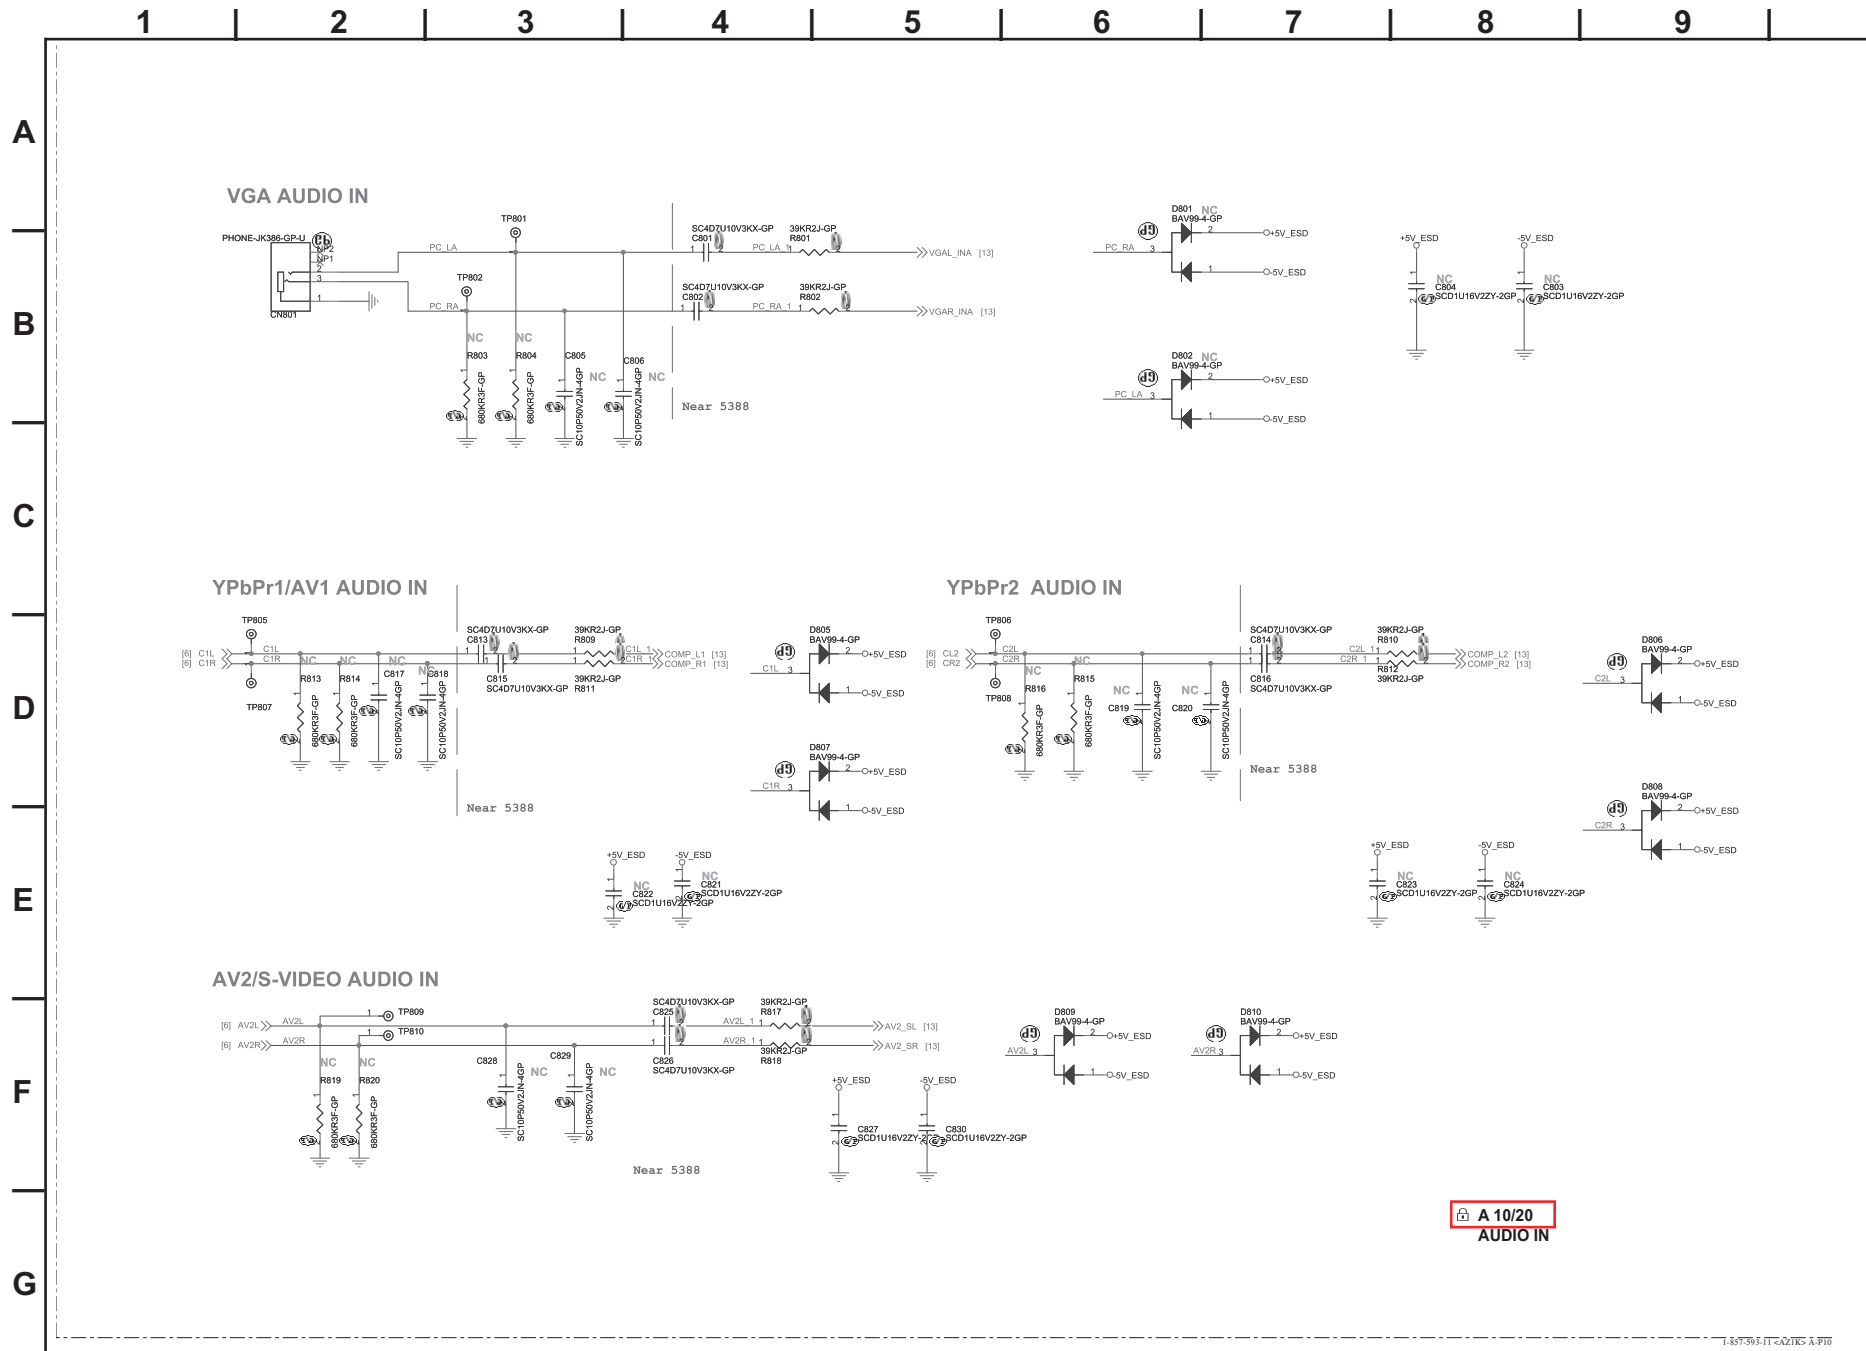


A 10/20
AUDIO IN

A BOARD SCHEMATIC DIAGRAM (11 OF 20)

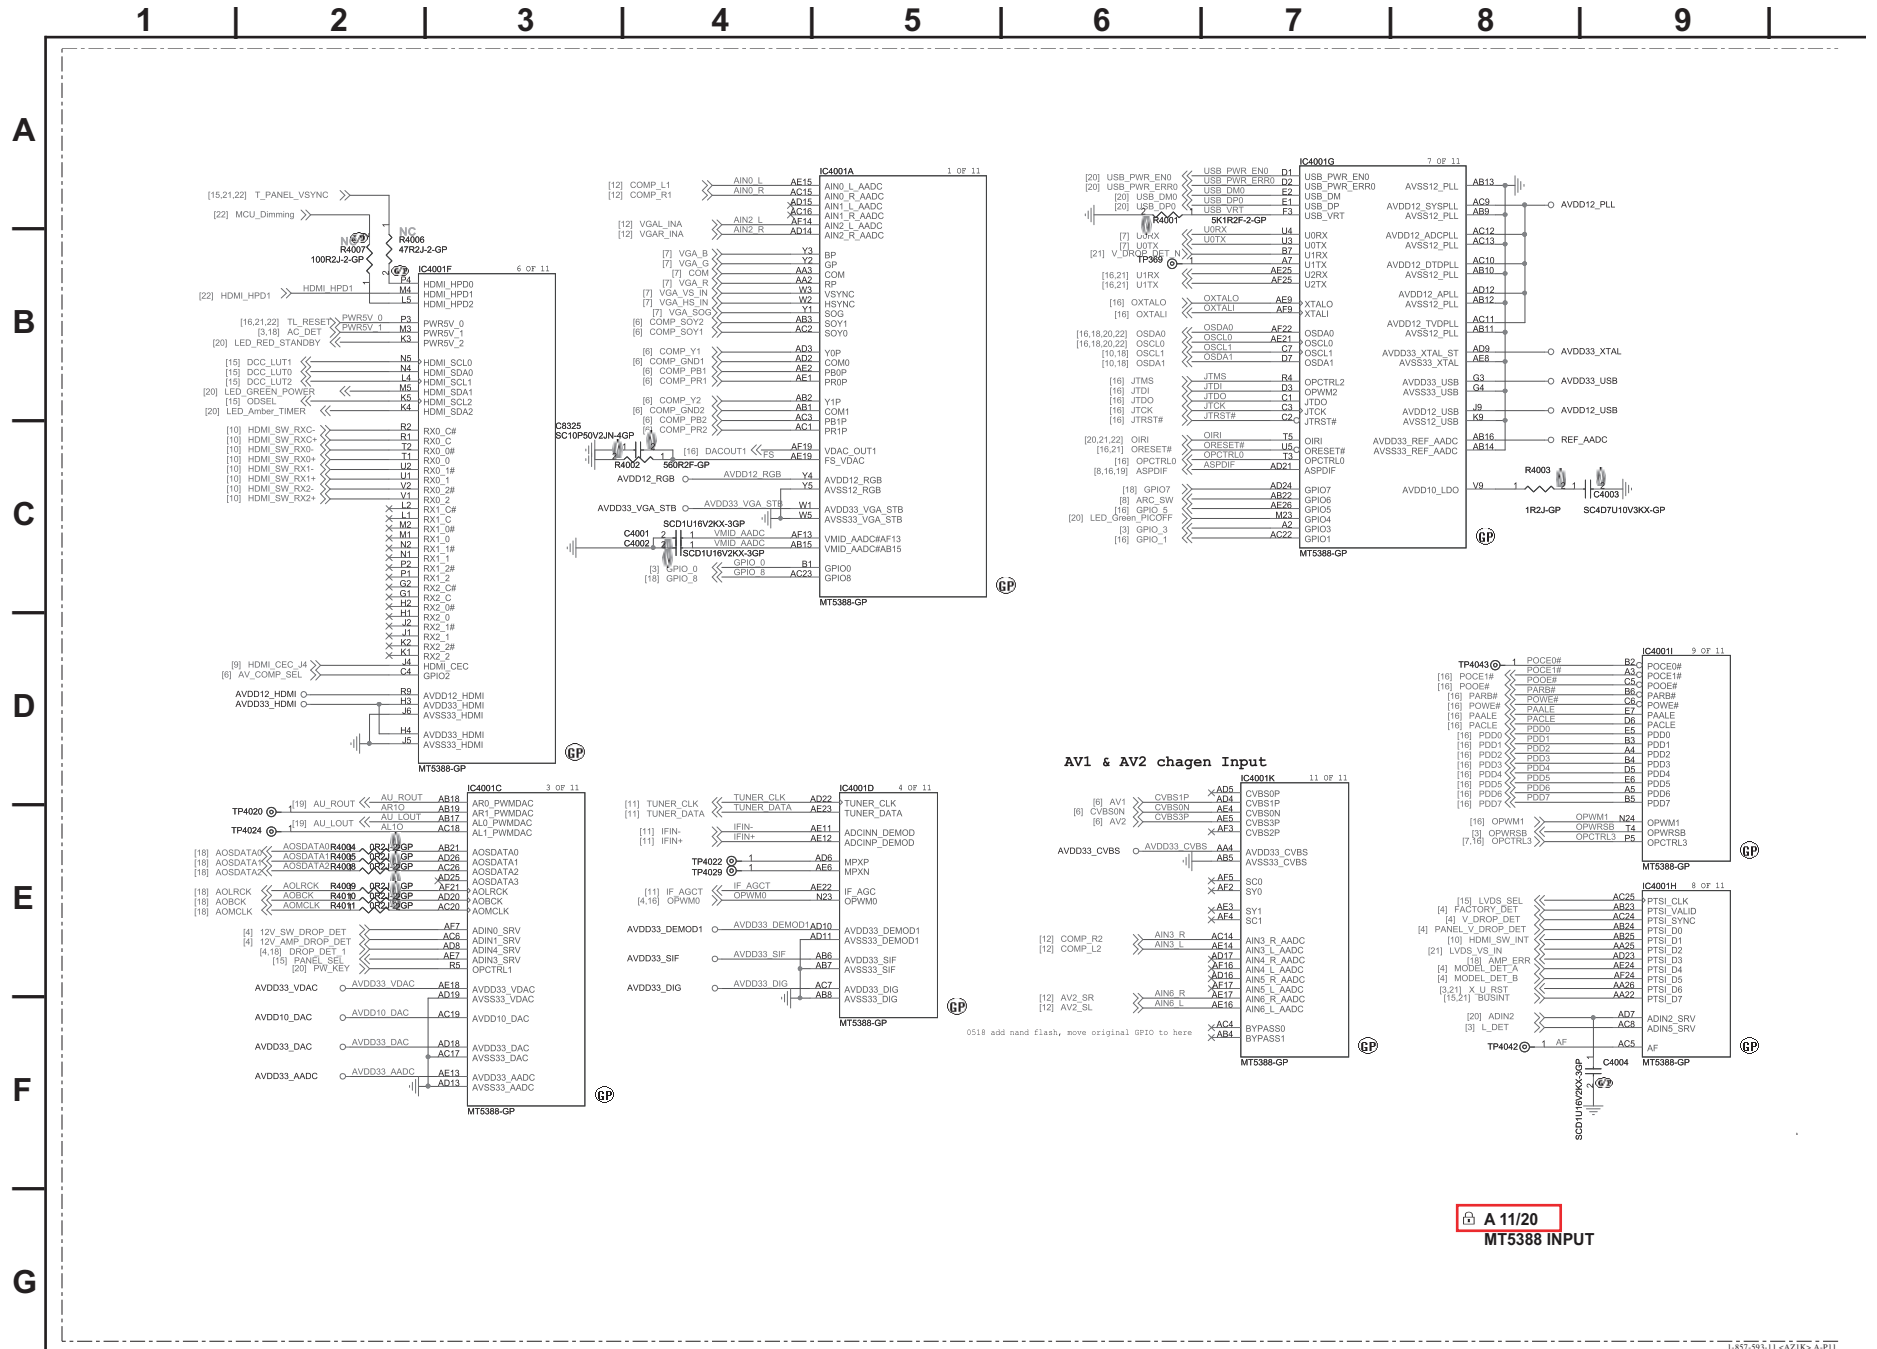


A 11/20
MT5388 INPUT

A BOARD SCHEMATIC DIAGRAM (12 OF 20)

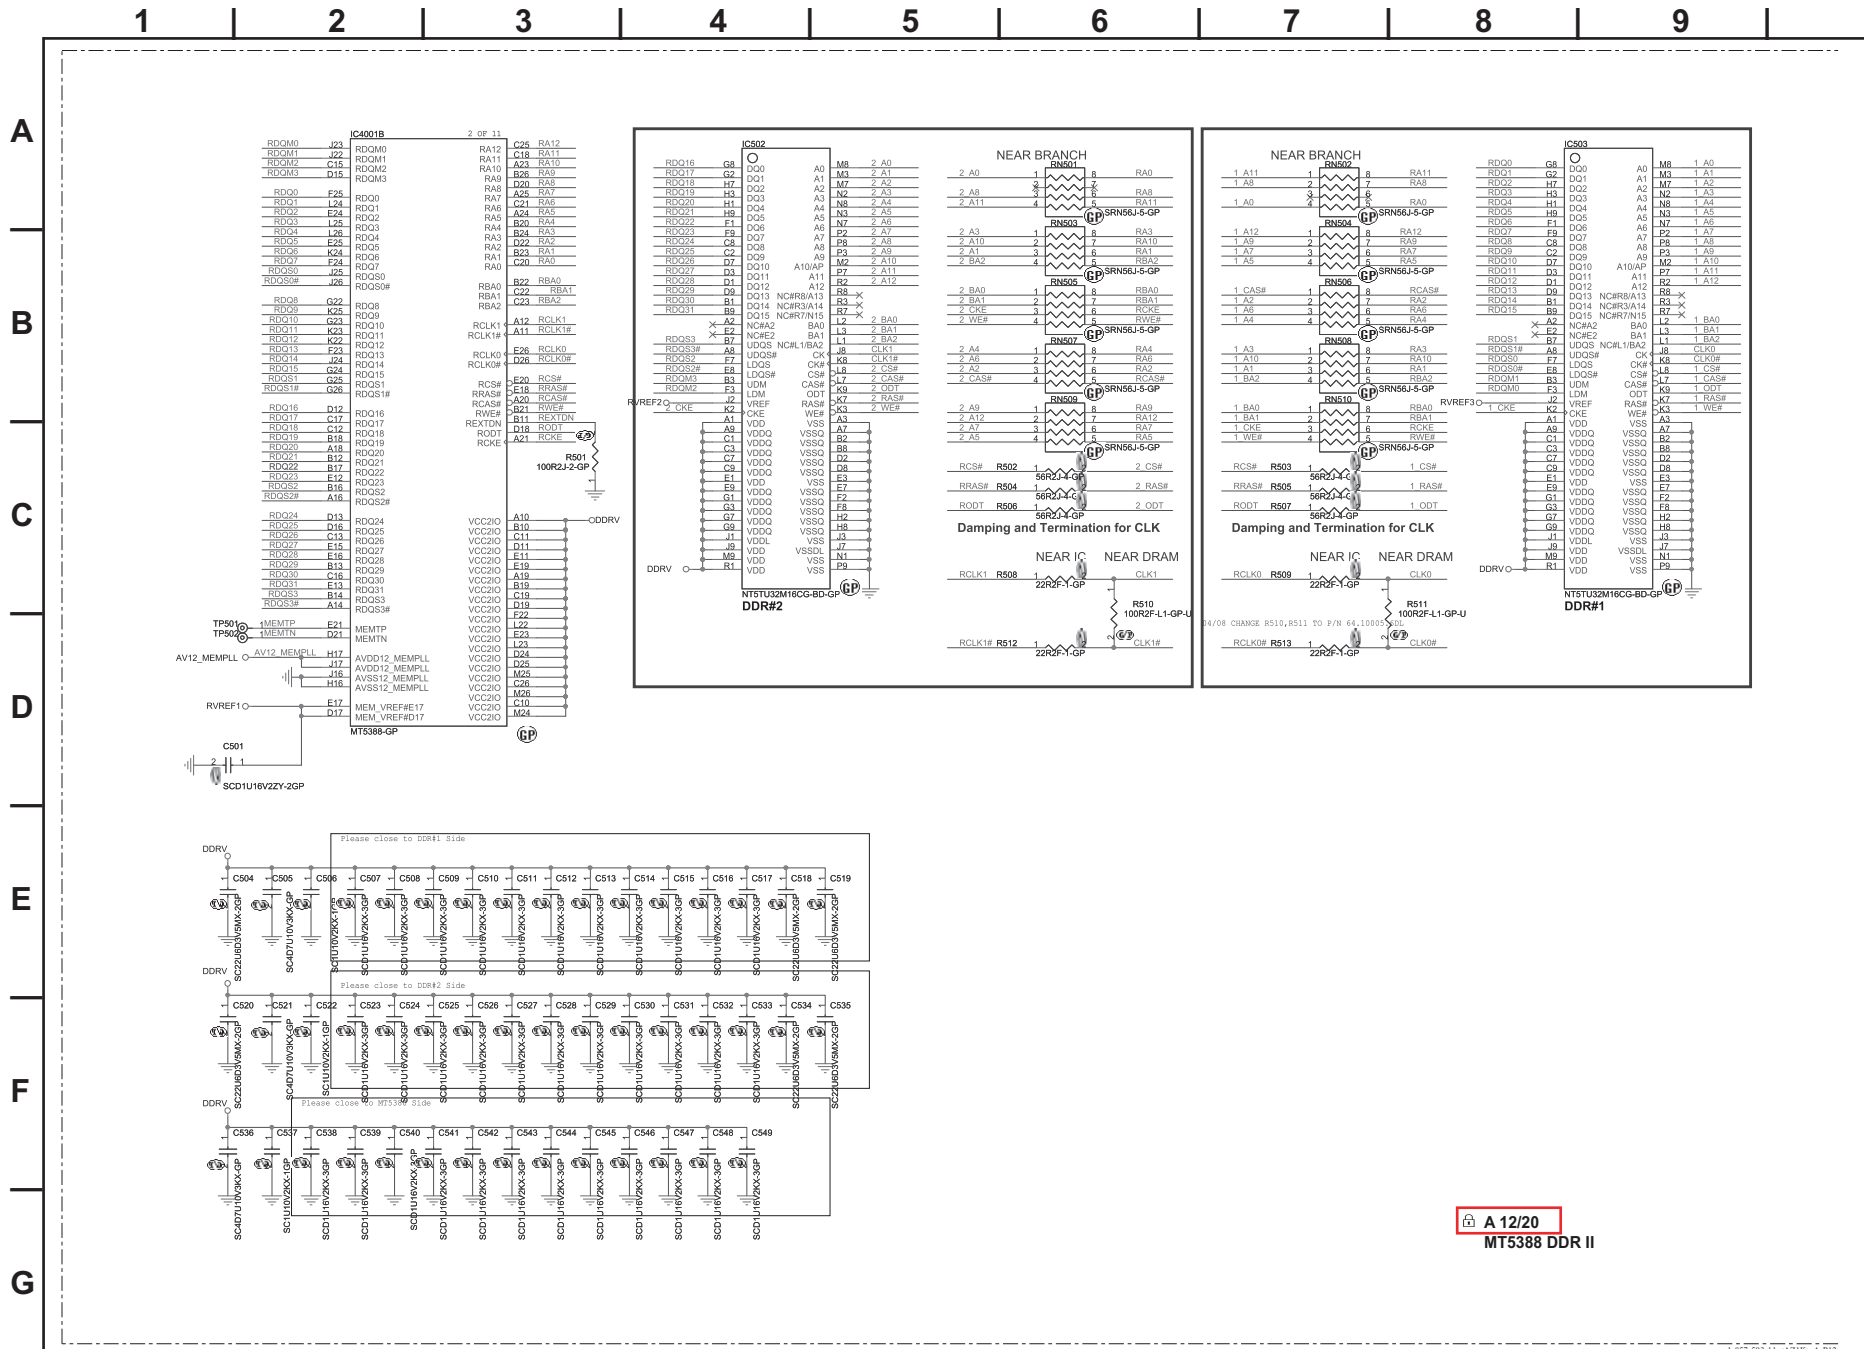


A 12/20
MT5388 DDR II

A BOARD SCHEMATIC DIAGRAM (13 OF 20)

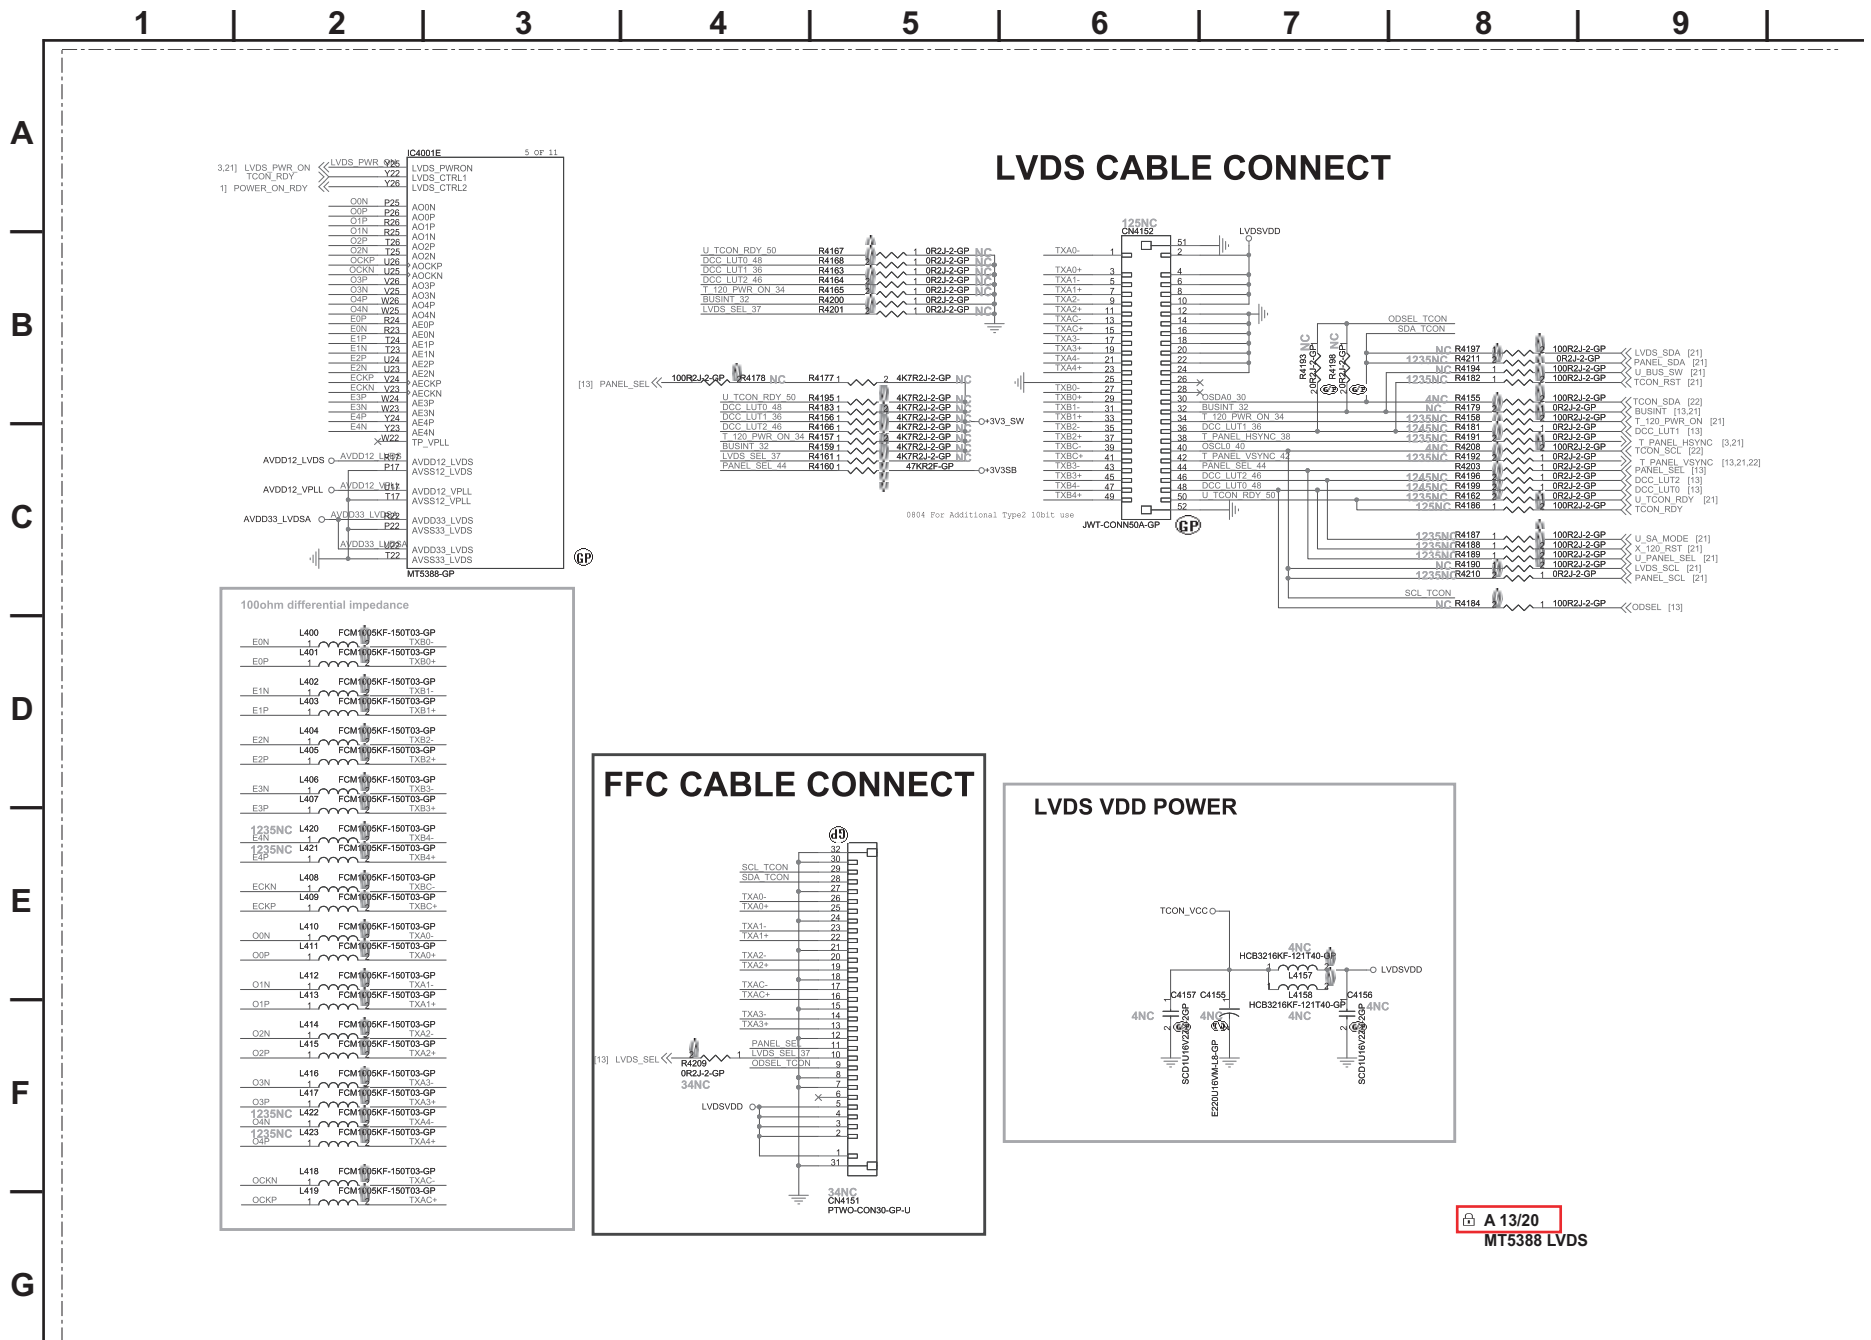


LVDS CABLE CONNECT

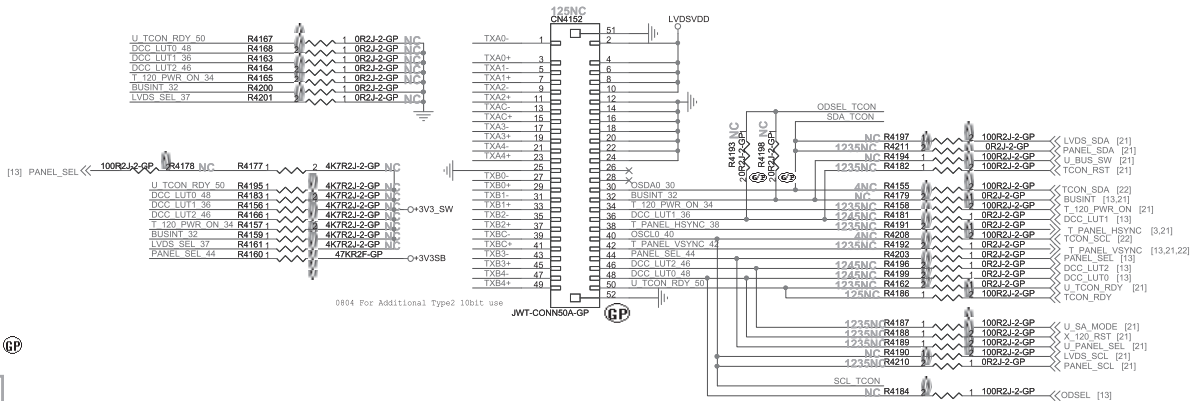


100ohm differential impedance

E0N	L400	FCM1005KF-150T03-GP	TXB5-
E0P	L401	FCM1005KF-150T03-GP	TXB0+
E1N	L402	FCM1005KF-150T03-GP	TXB1-
E1P	L403	FCM1005KF-150T03-GP	TXB1+
E2N	L404	FCM1005KF-150T03-GP	TXB2-
E2P	L405	FCM1005KF-150T03-GP	TXB2+
E3N	L406	FCM1005KF-150T03-GP	TXB3-
E3P	L407	FCM1005KF-150T03-GP	TXB3+
E4N	L408	FCM1005KF-150T03-GP	TXB4-
E4P	L409	FCM1005KF-150T03-GP	TXB4+
E5N	L410	FCM1005KF-150T03-GP	TXA0-
E5P	L411	FCM1005KF-150T03-GP	TXA0+
O0P	L412	FCM1005KF-150T03-GP	TXA1-
O1P	L413	FCM1005KF-150T03-GP	TXA1+
O2N	L414	FCM1005KF-150T03-GP	TXA2-
O2P	L415	FCM1005KF-150T03-GP	TXA2+
O3N	L416	FCM1005KF-150T03-GP	TXA3-
O3P	L417	FCM1005KF-150T03-GP	TXA3+
O4N	L422	FCM1005KF-150T03-GP	TXA4-
O4P	L423	FCM1005KF-150T03-GP	TXA4+
O5N	L418	FCM1005KF-150T03-GP	TXAC-
O5P	L419	FCM1005KF-150T03-GP	TXAC+
O6P	L419	FCM1005KF-150T03-GP	TXAC+

FFC CABLE CONNECT

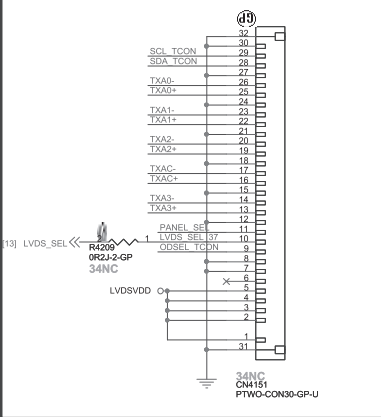


LVDS VDD POWER

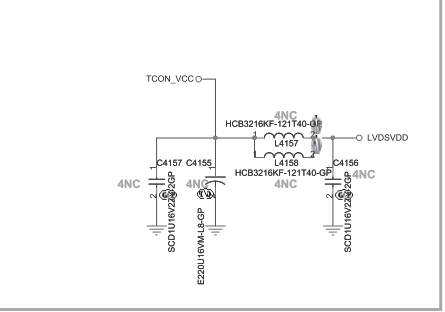


A 13/20
MT5388 LVDS

1-857-593-11 ©2015 A-P13


A BOARD SCHEMATIC DIAGRAM (14 OF 20)

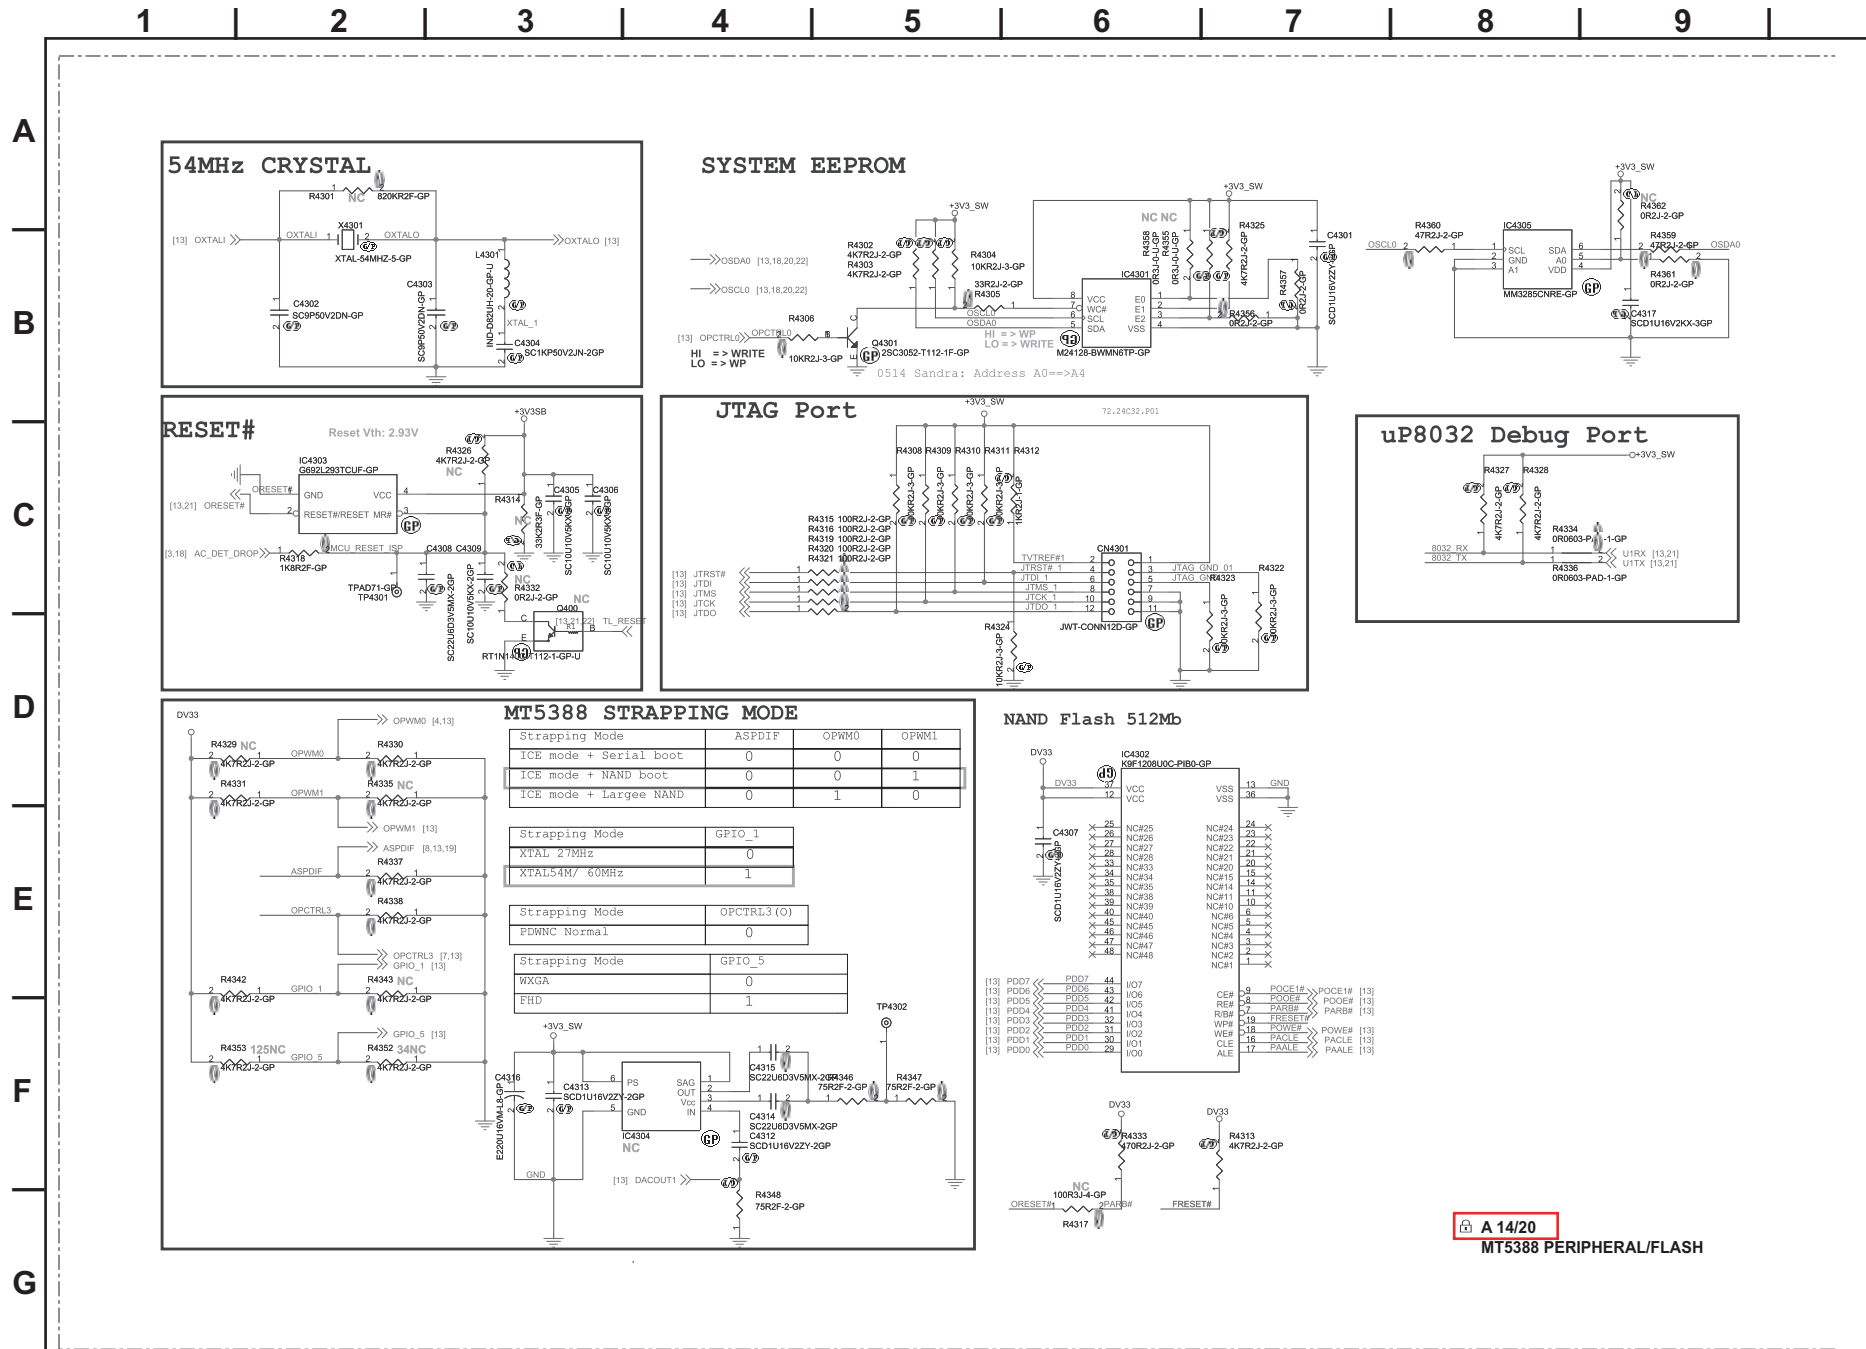


A BOARD SCHEMATIC DIAGRAM (15 OF 20)

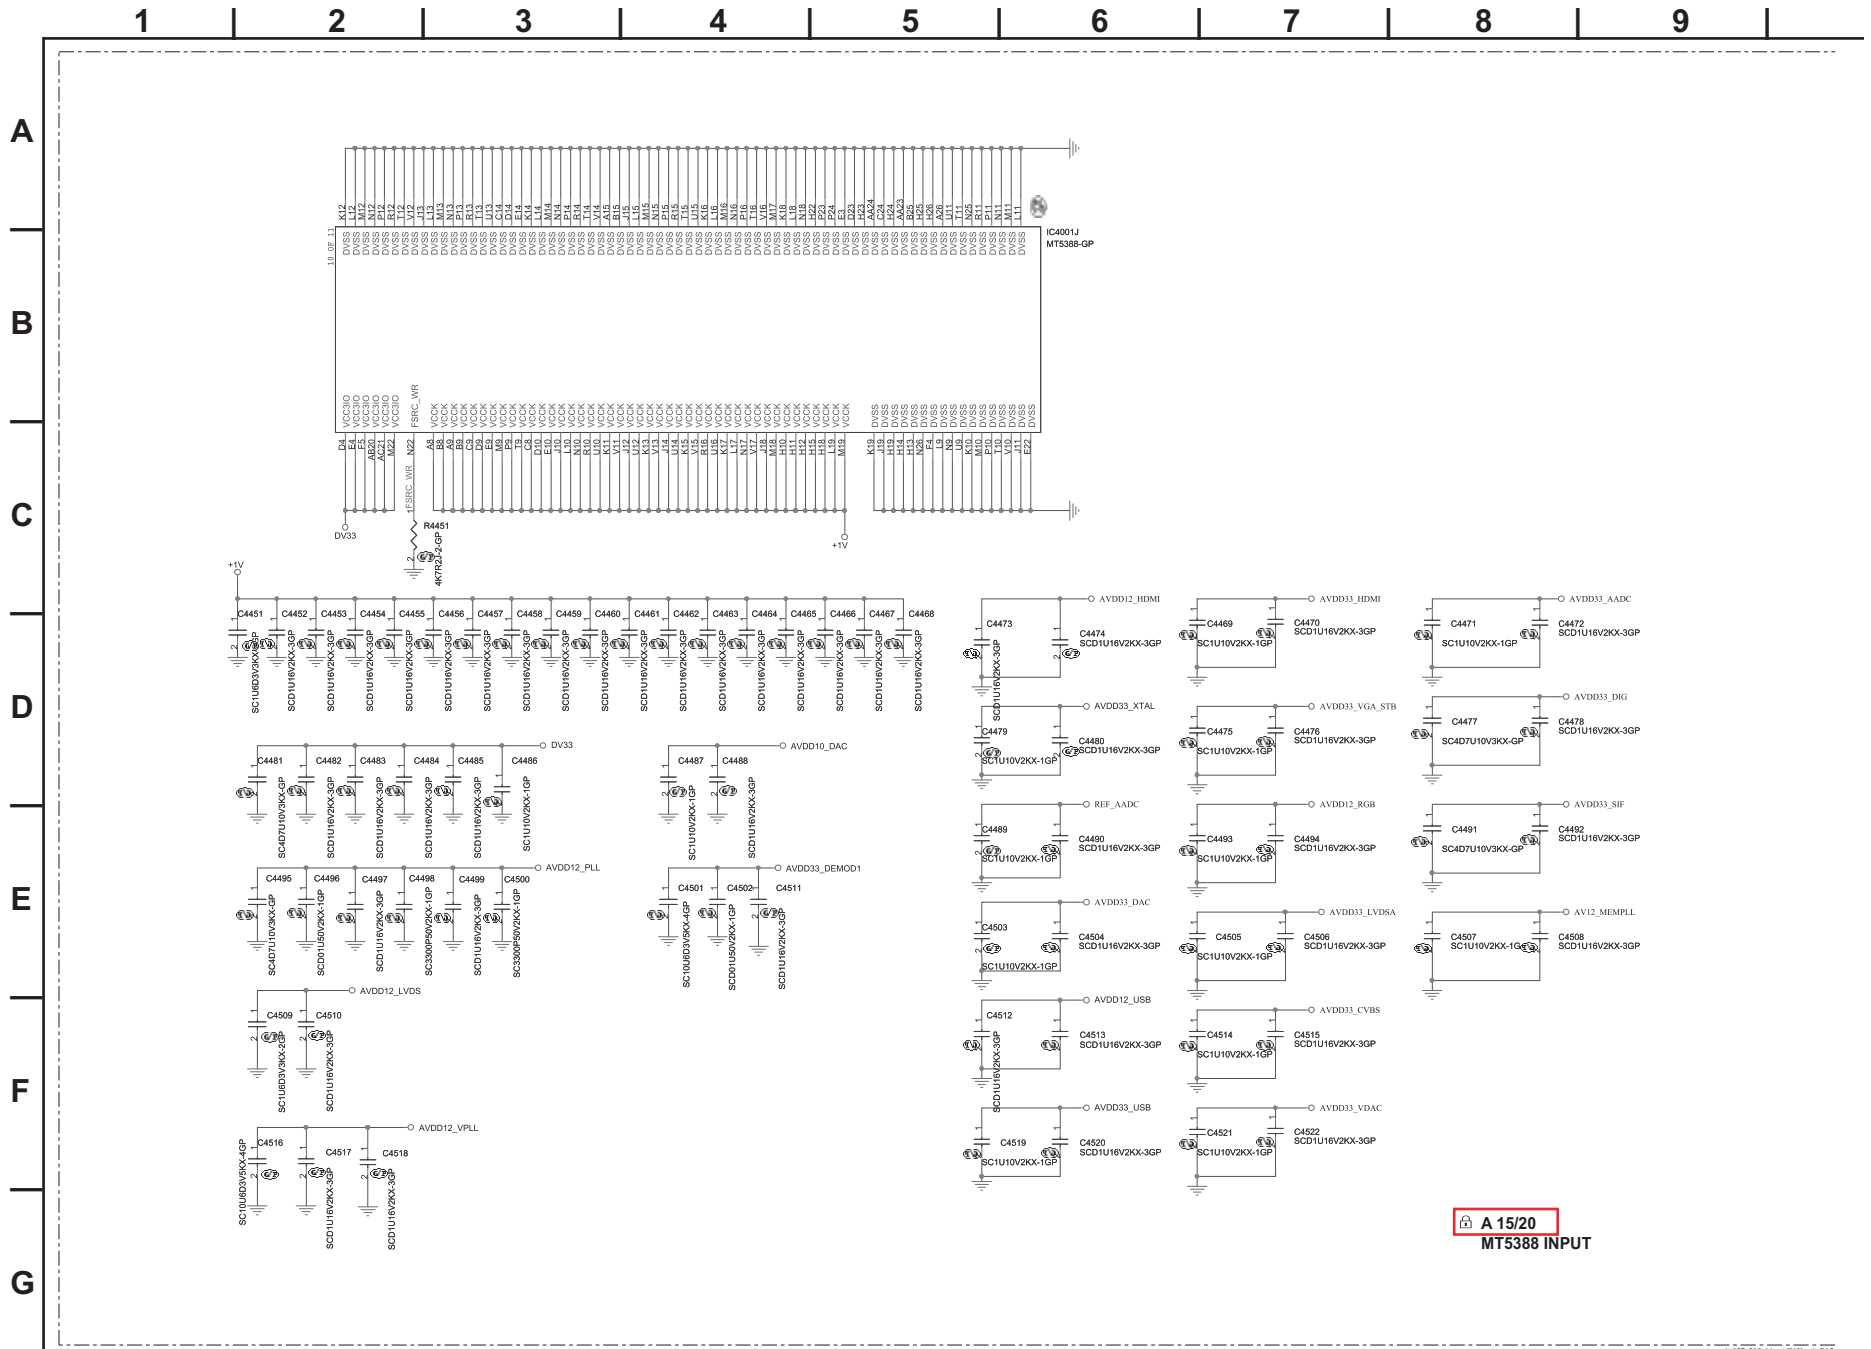


A BOARD SCHEMATIC DIAGRAM (16 OF 20)

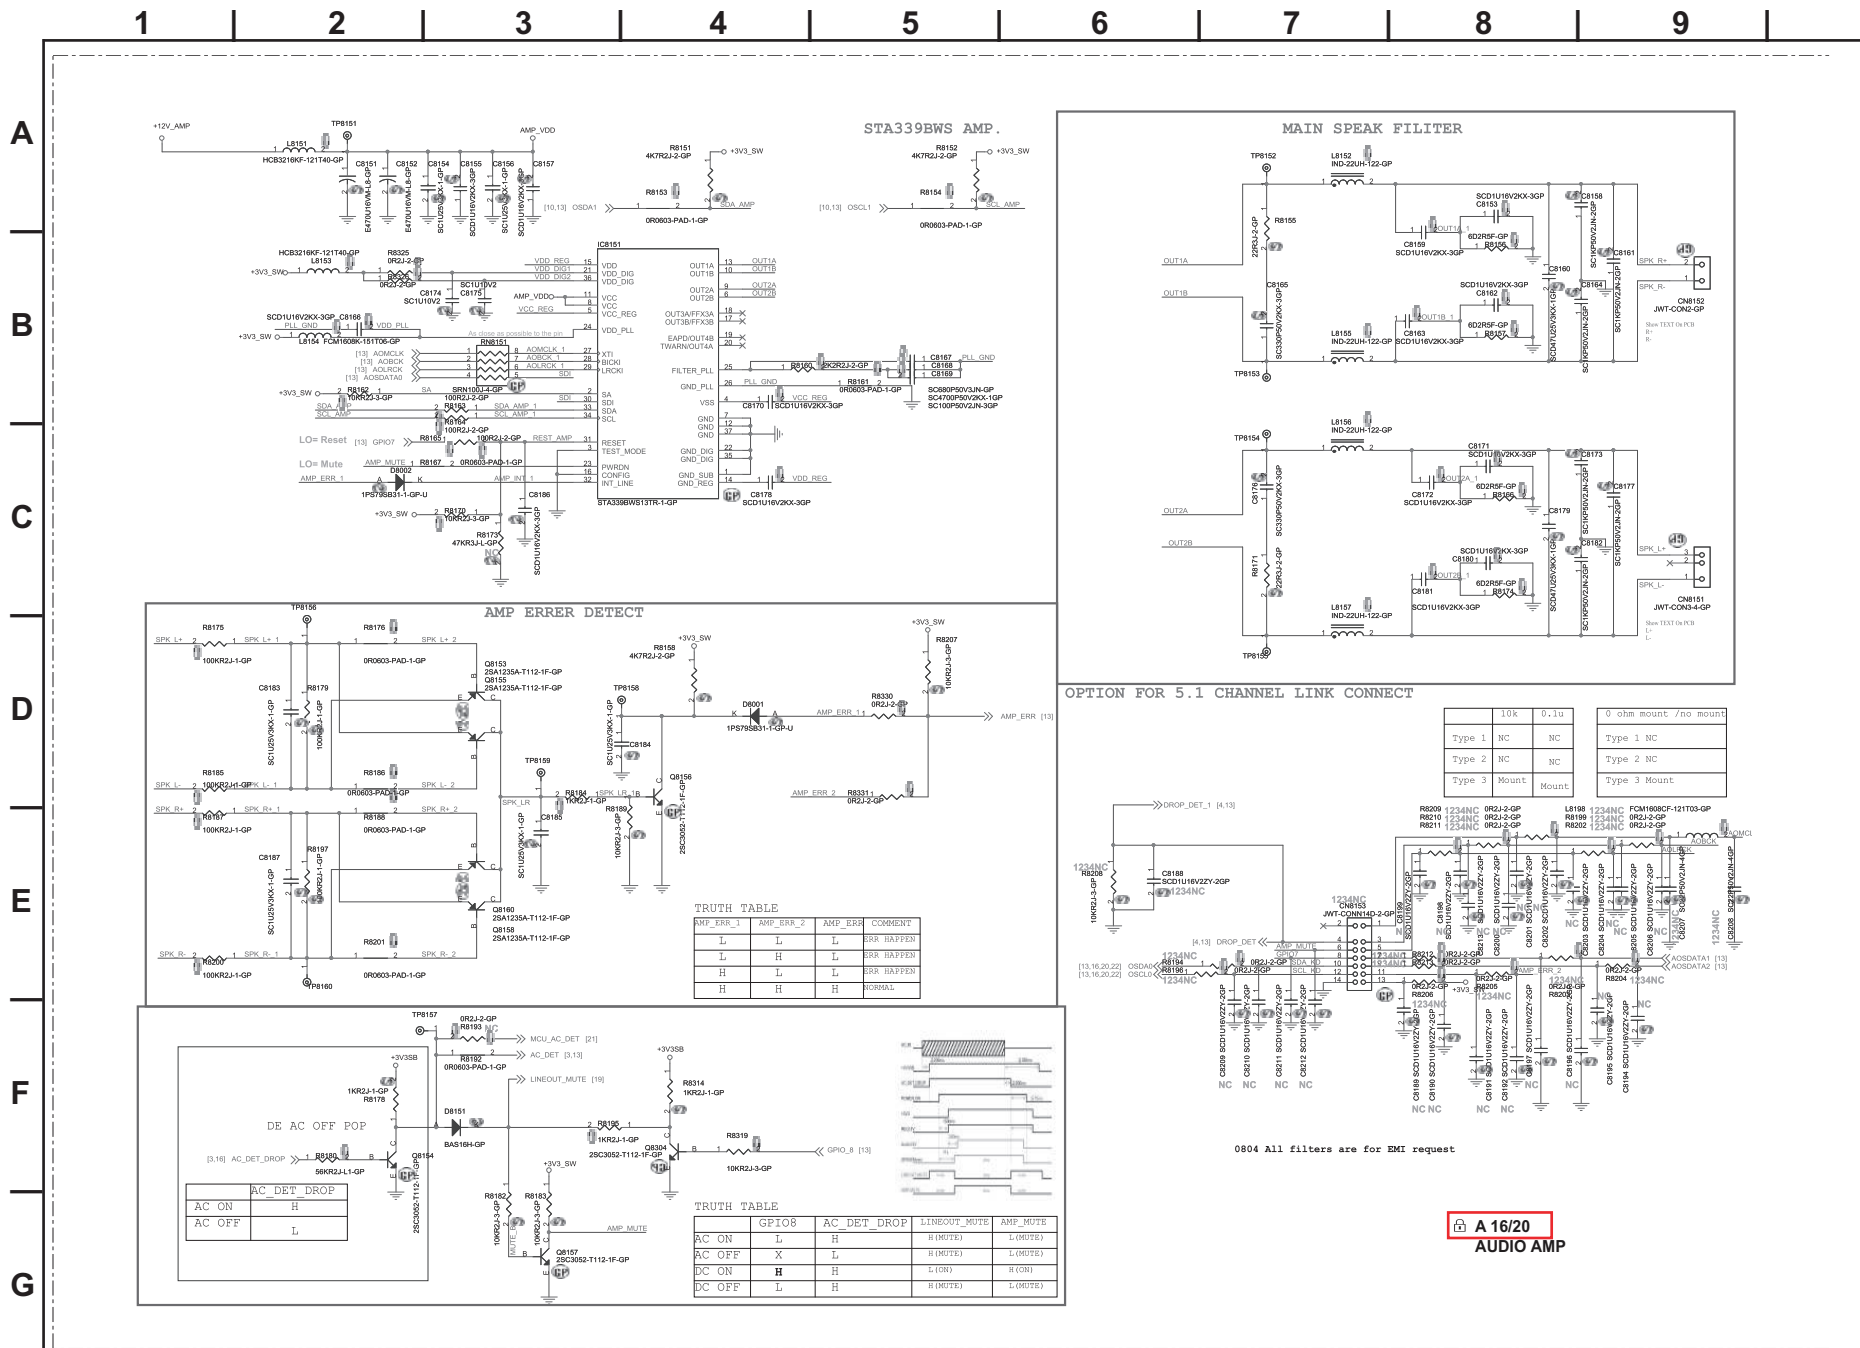

A BOARD SCHEMATIC DIAGRAM (17 OF 20)

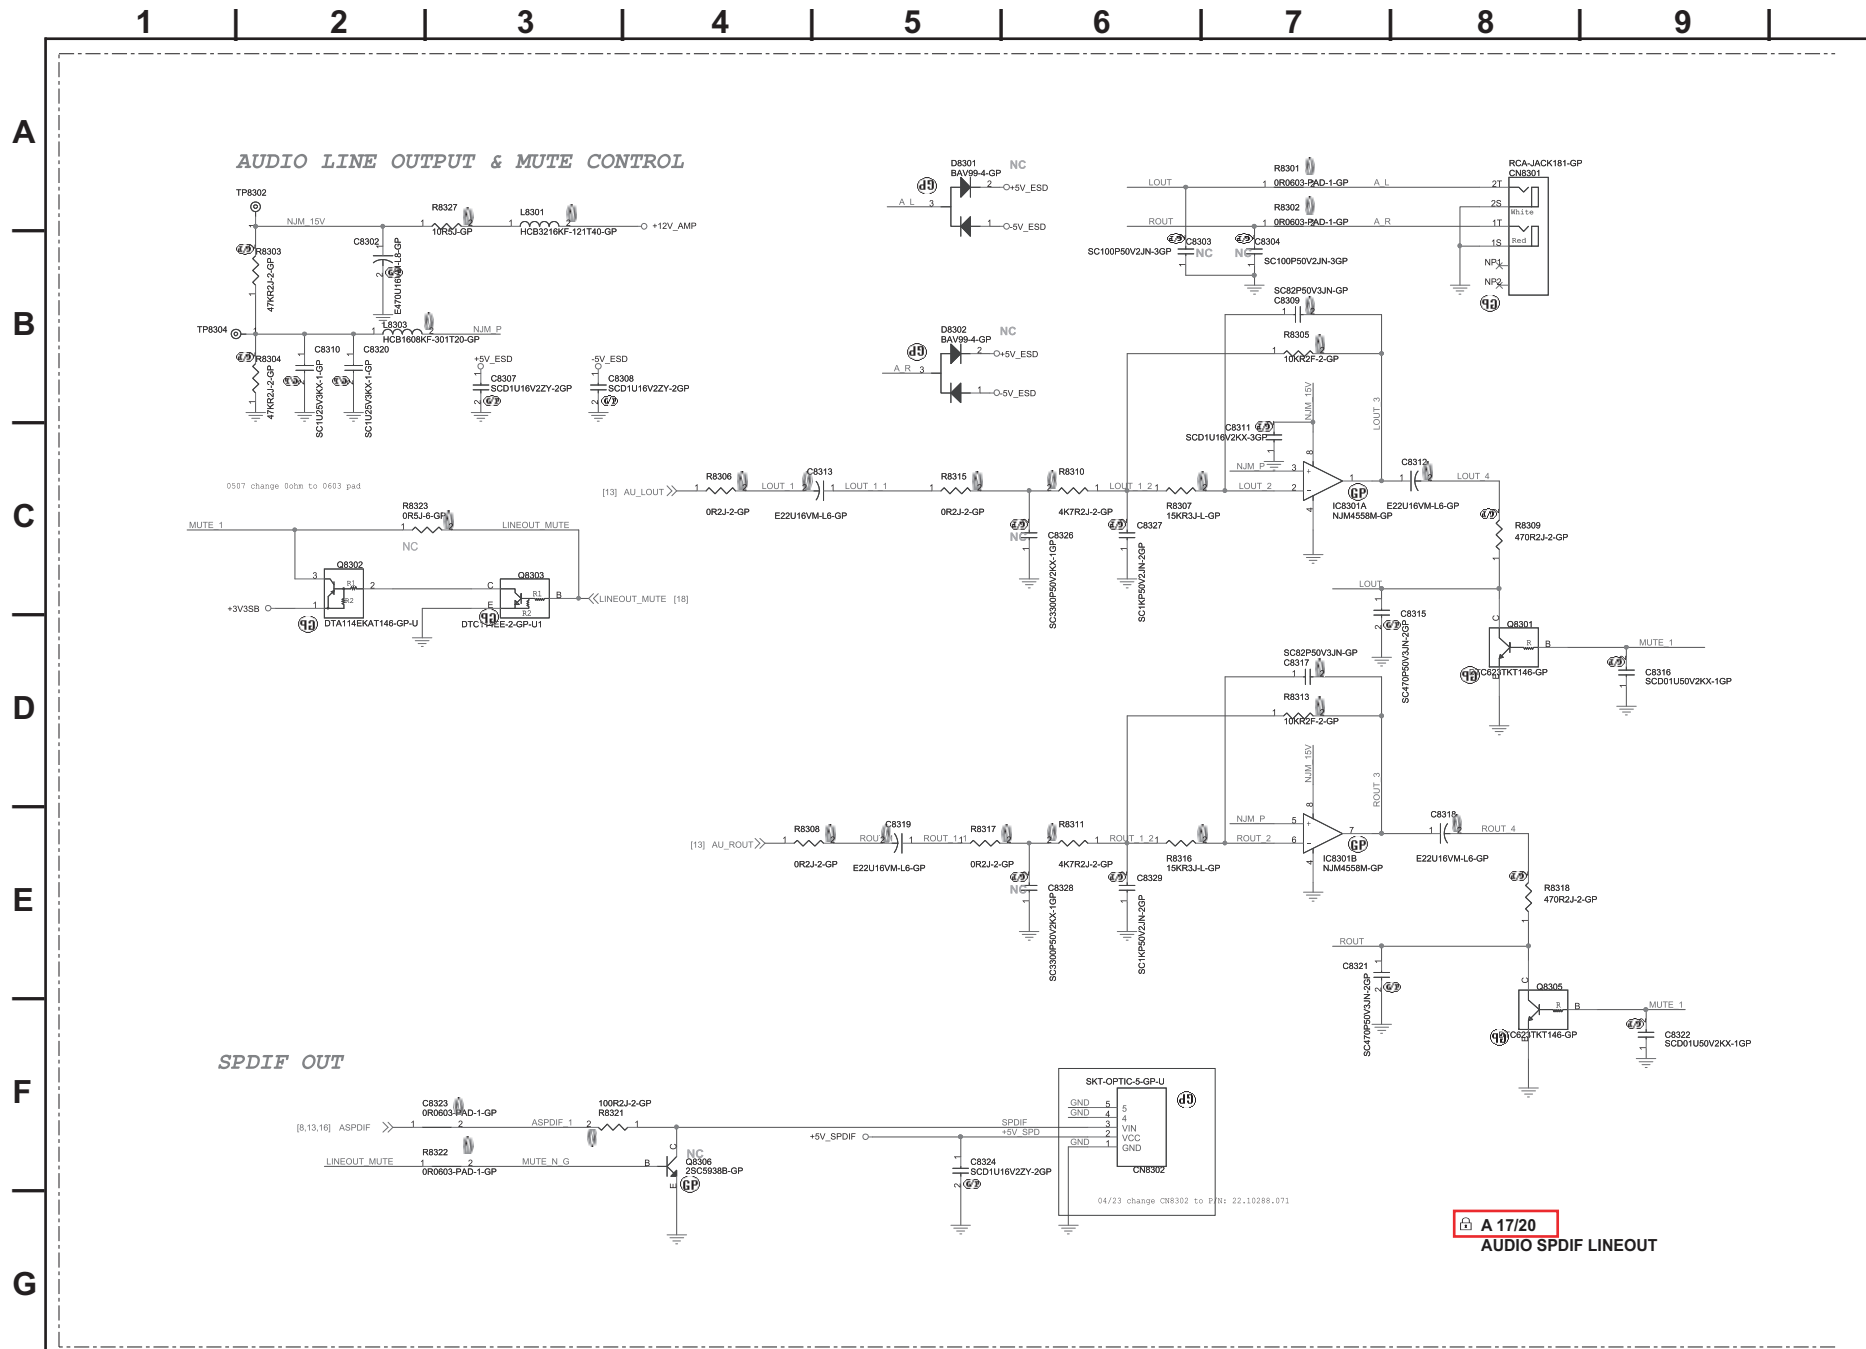


A BOARD SCHEMATIC DIAGRAM (18 OF 20)

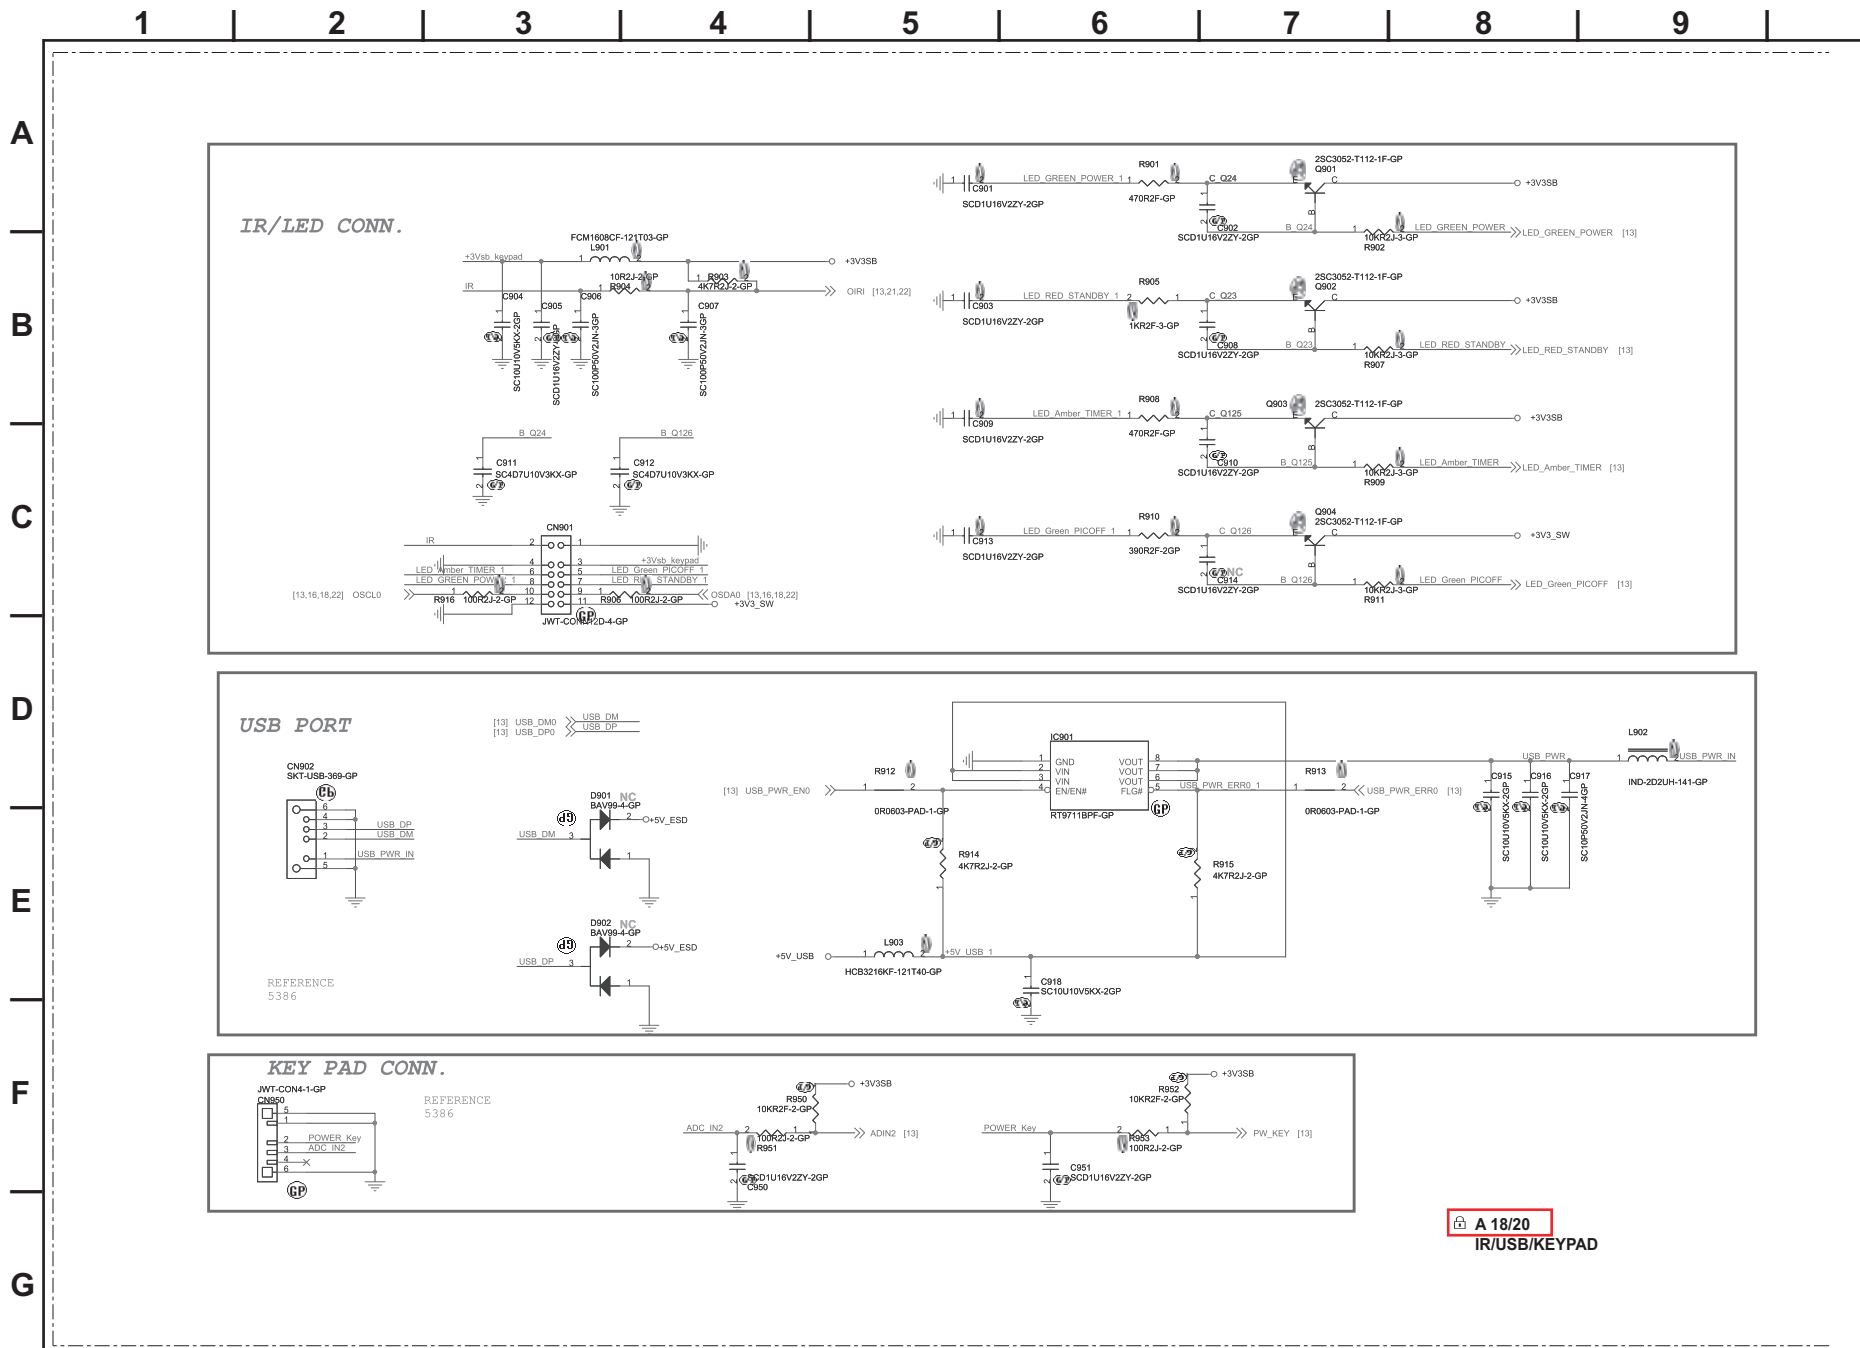


A 18/20
IR/USB/KEYPAD

A BOARD SCHEMATIC DIAGRAM (19 OF 20)

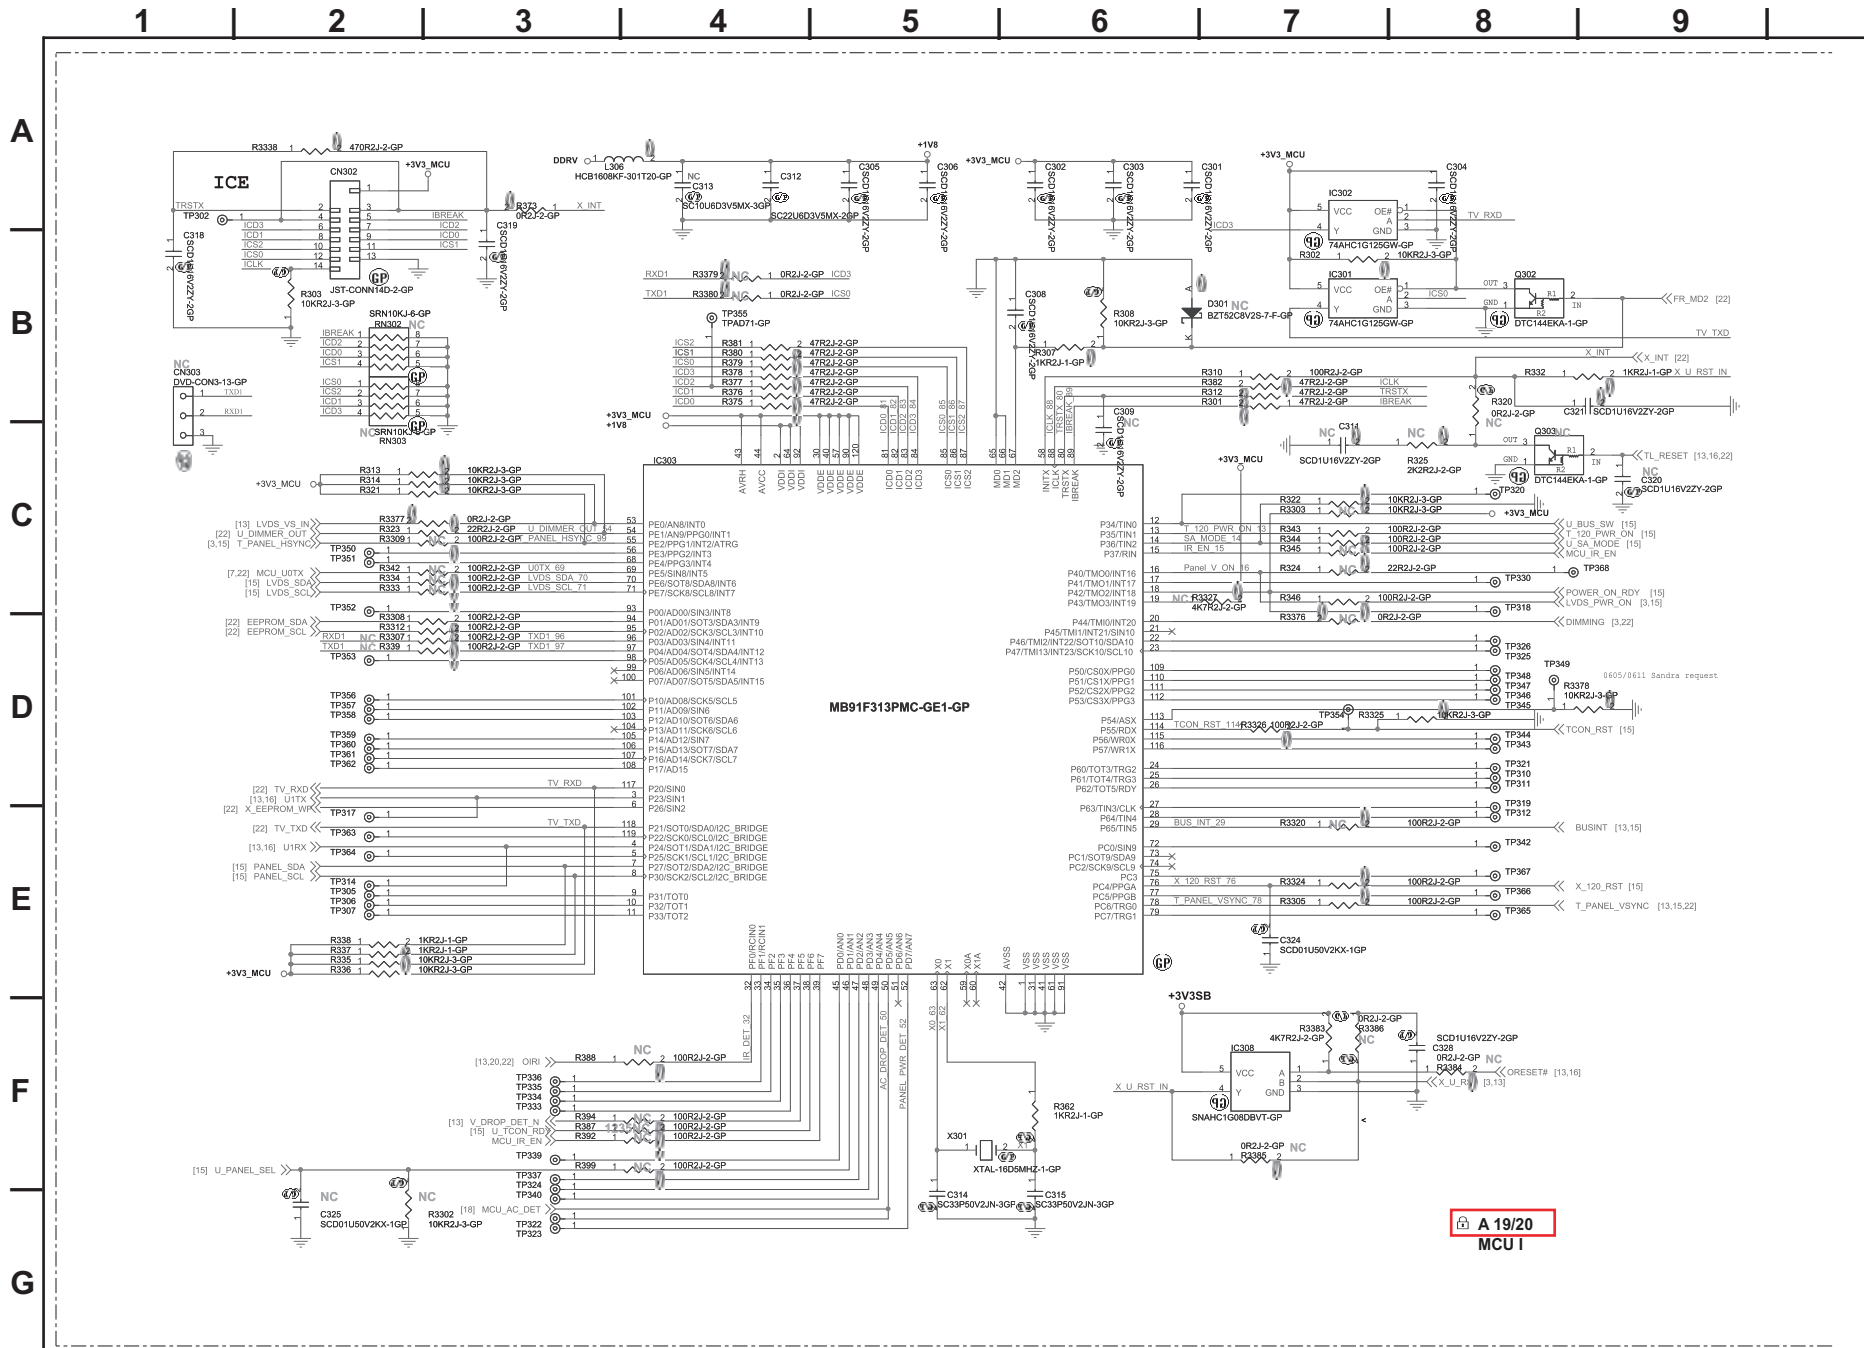

A 19/20
MCU I


A BOARD SCHEMATIC DIAGRAM (20 OF 20)

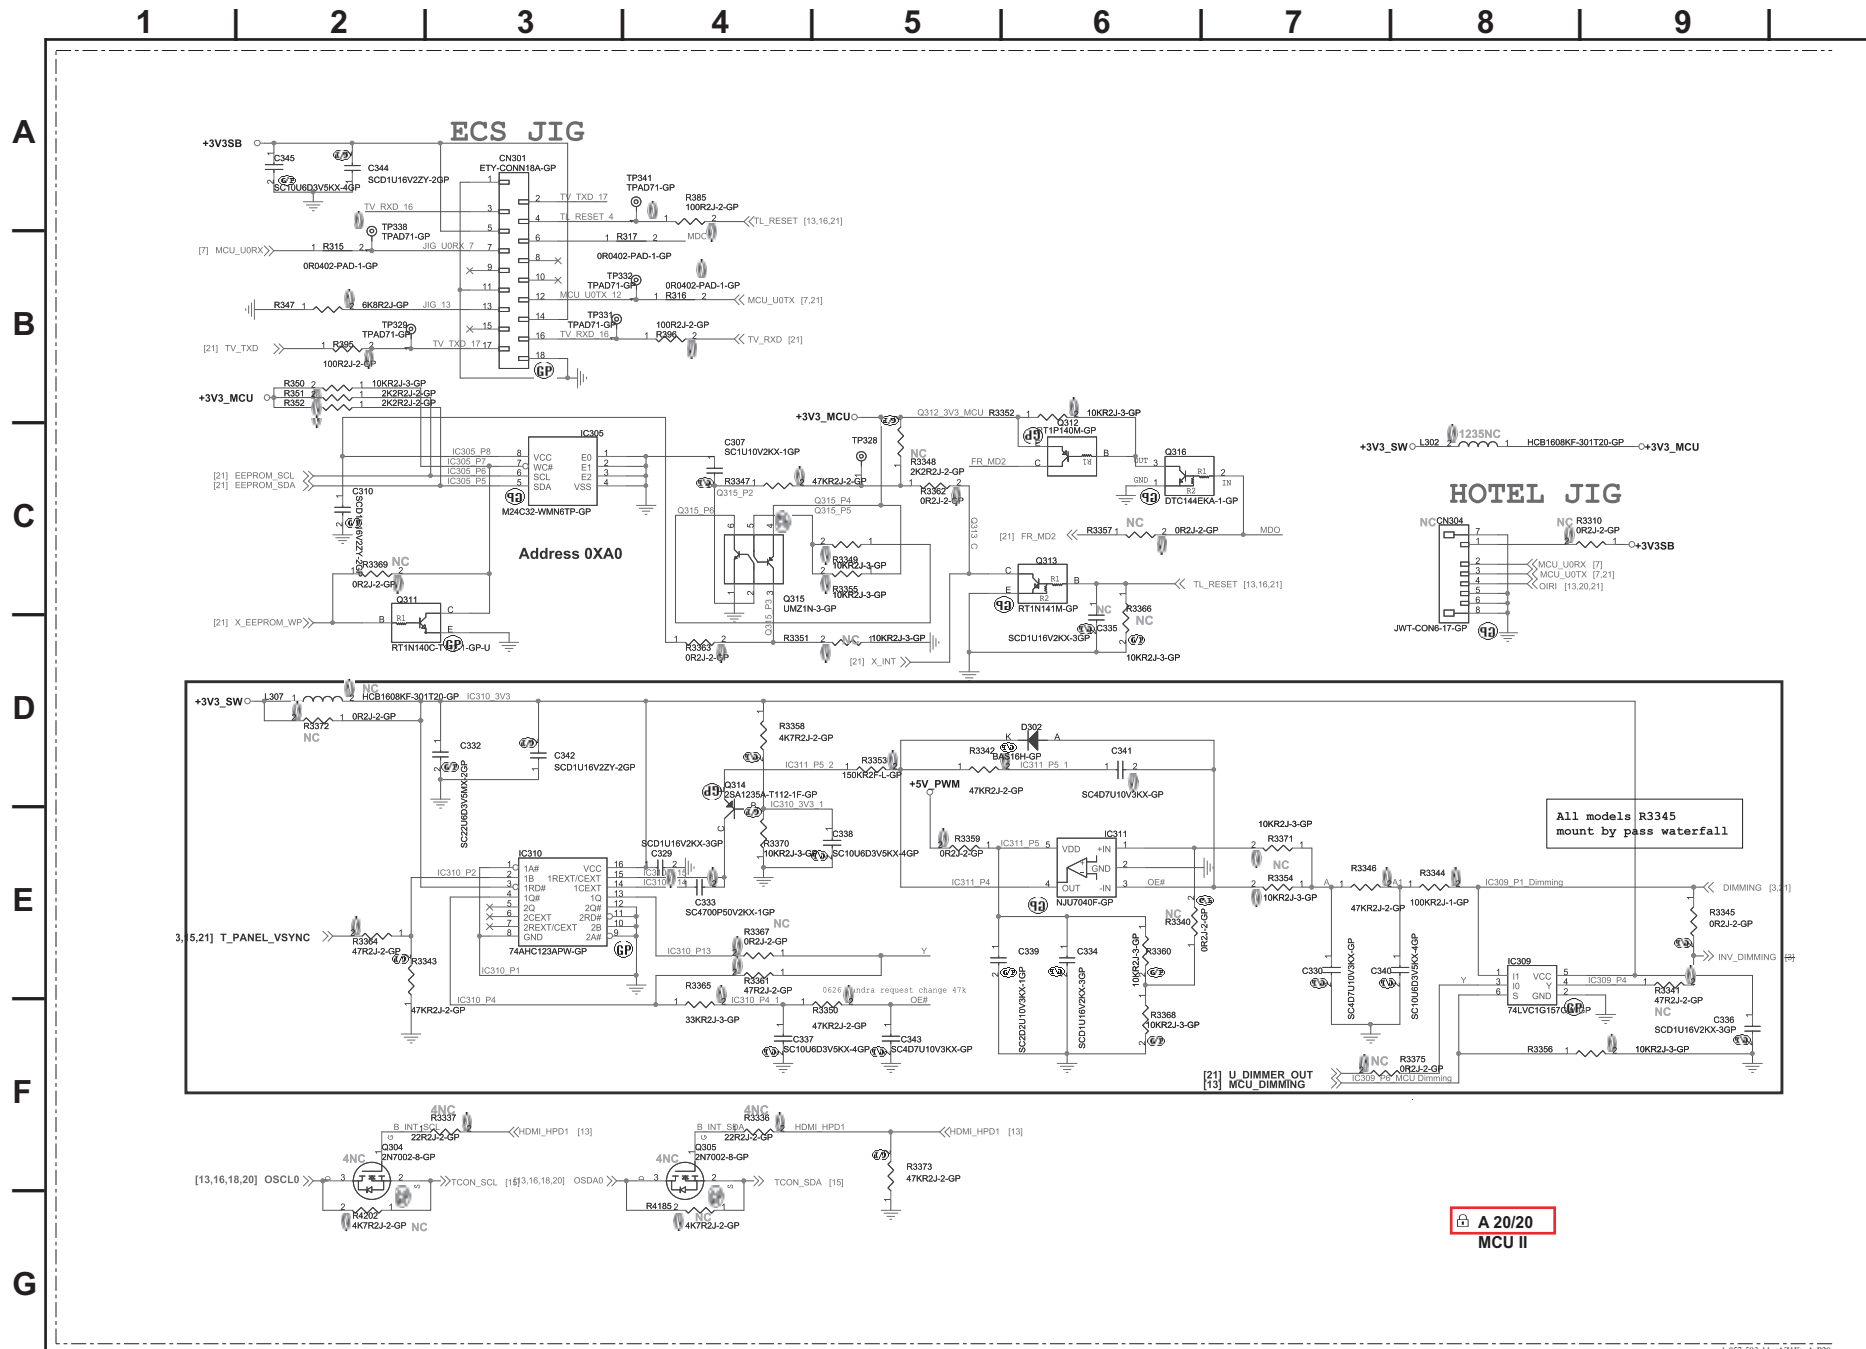


A 20/20
MCU II

A [DC CONVERTER I, DC CONVERTER II, DC CONVERTER II, INPUT ANALOG VIDEO, INPUT D SUB, INPUT HDMI I, INPUT HDMI II, INPUT HDMI SW, TUNER, AUDIO IN, MT5388 INPUT, MT5388 DDR II, MT5388 LVDS OUT, MT5388 PERIPHERAL/FLASH, MT5388 POWER, AUDIO AMP, AUDIO SPDIF LINEOUT, IR/USB/KEYPAD, MCU I, MCU II]


COMPONENT SIDE

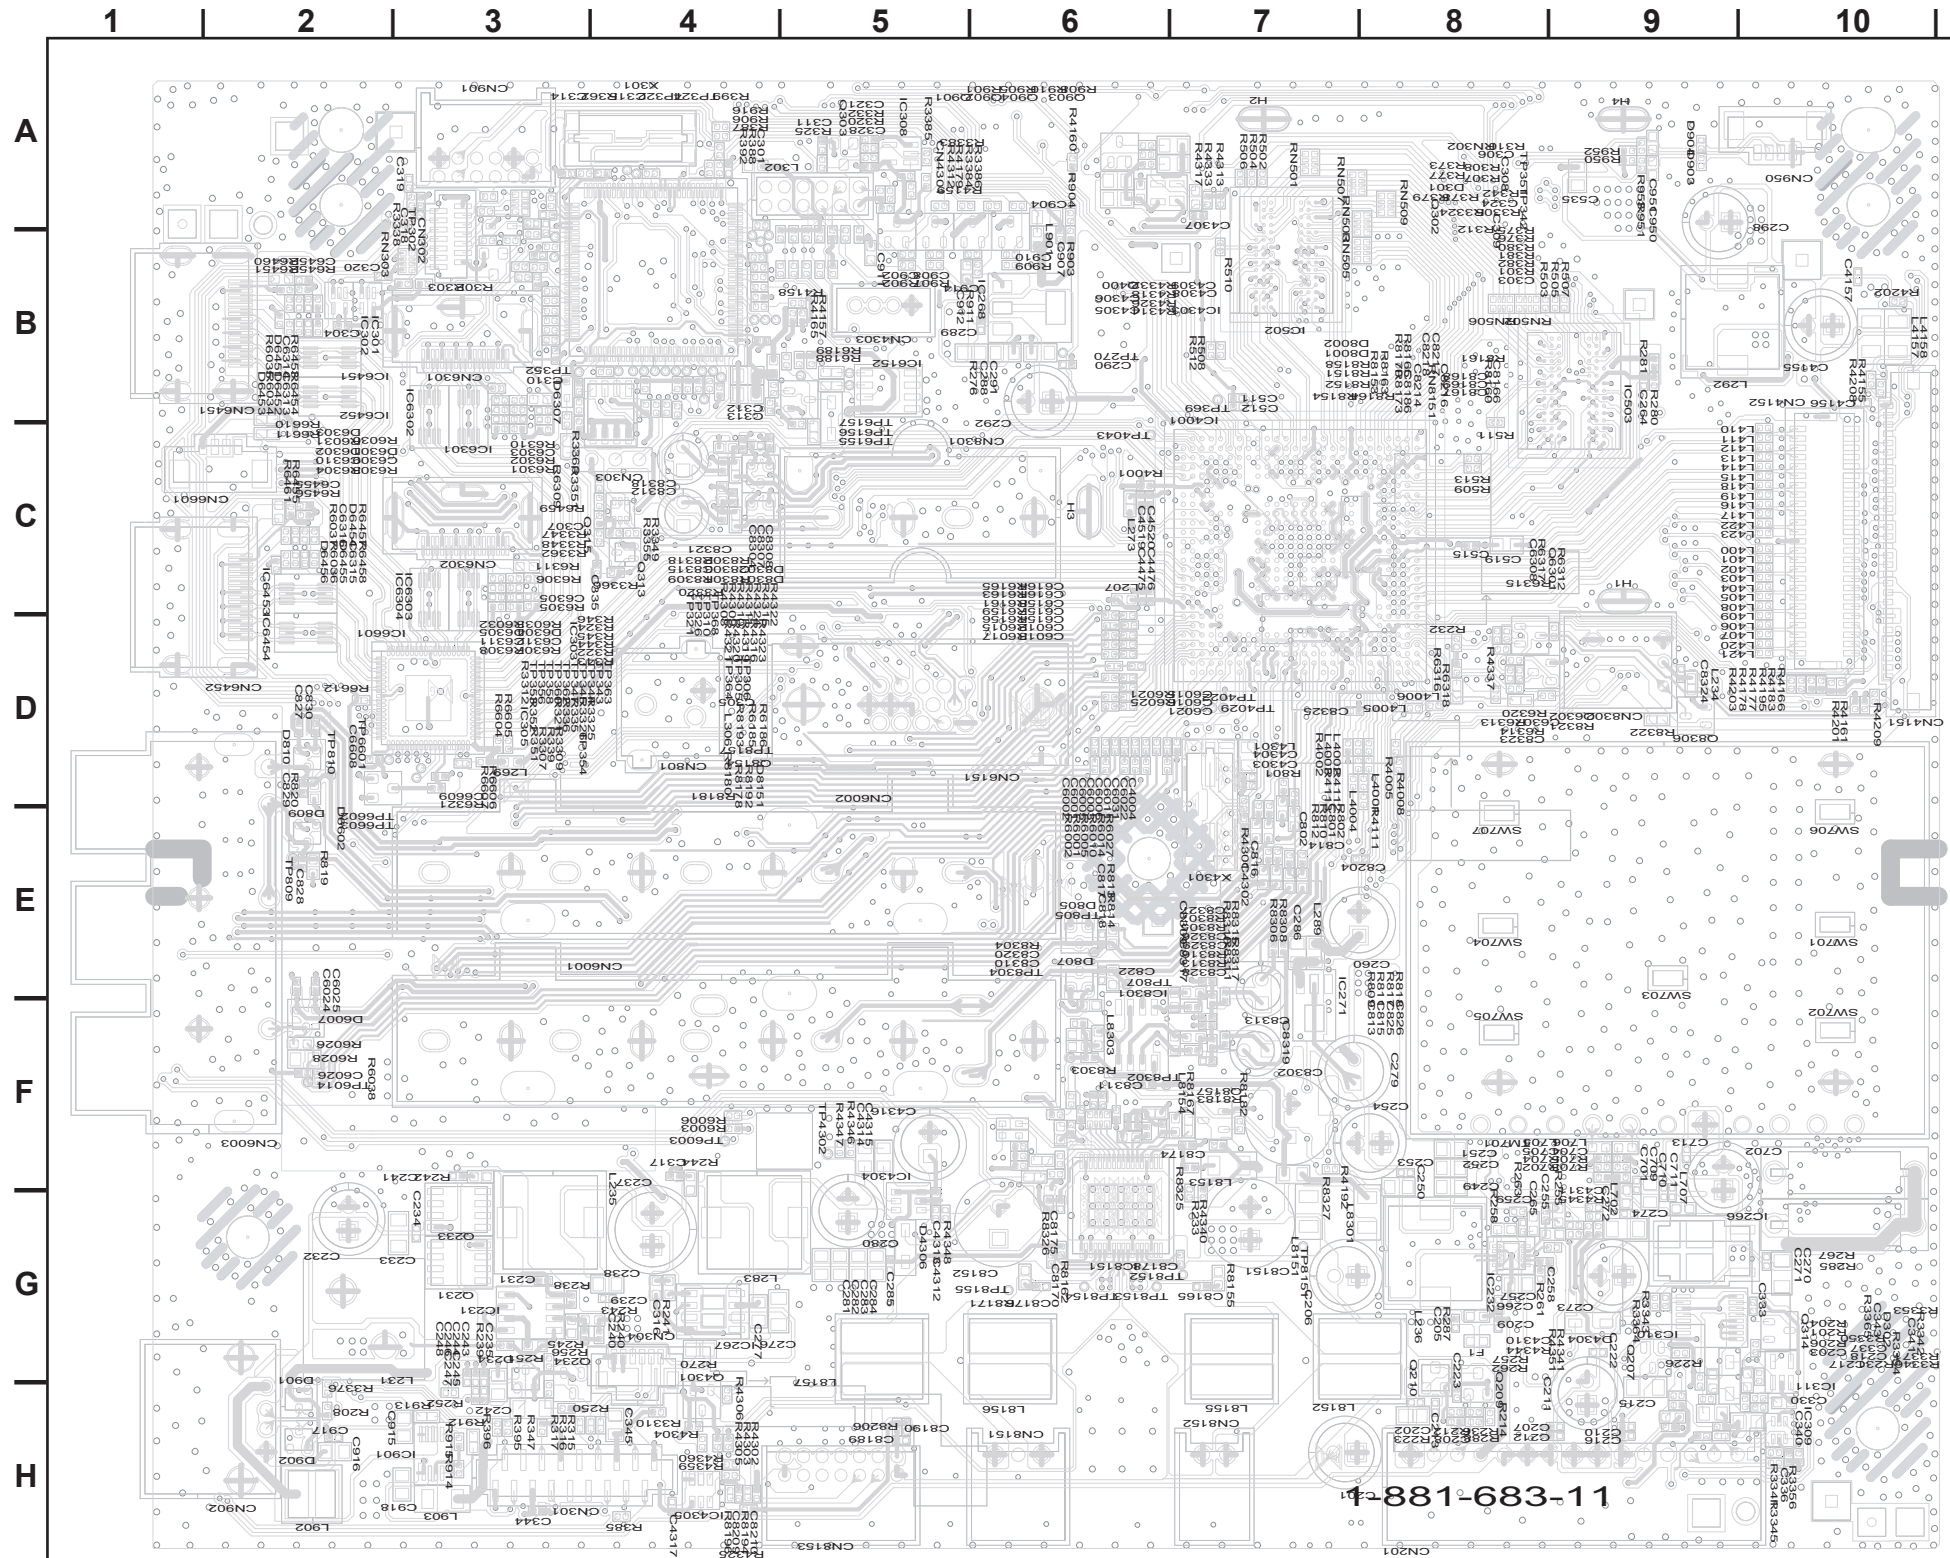


A [DC CONVERTER I, DC CONVERTER II, DC CONVERTER II, INPUT ANALOG VIDEO, INPUT D SUB, INPUT HDMI I, INPUT HDMI II, INPUT HDMI SW, TUNER, AUDIO IN, MT5388 INPUT, MT5388 DDR II, MT5388 LVDS OUT, MT5388 PERIPHERAL/FLASH, MT5388 POWER, AUDIO AMP, AUDIO SPDIF LINEOUT, IR/USB/KEYPAD, MCU I, MCU II]
CONDUCTOR SIDE

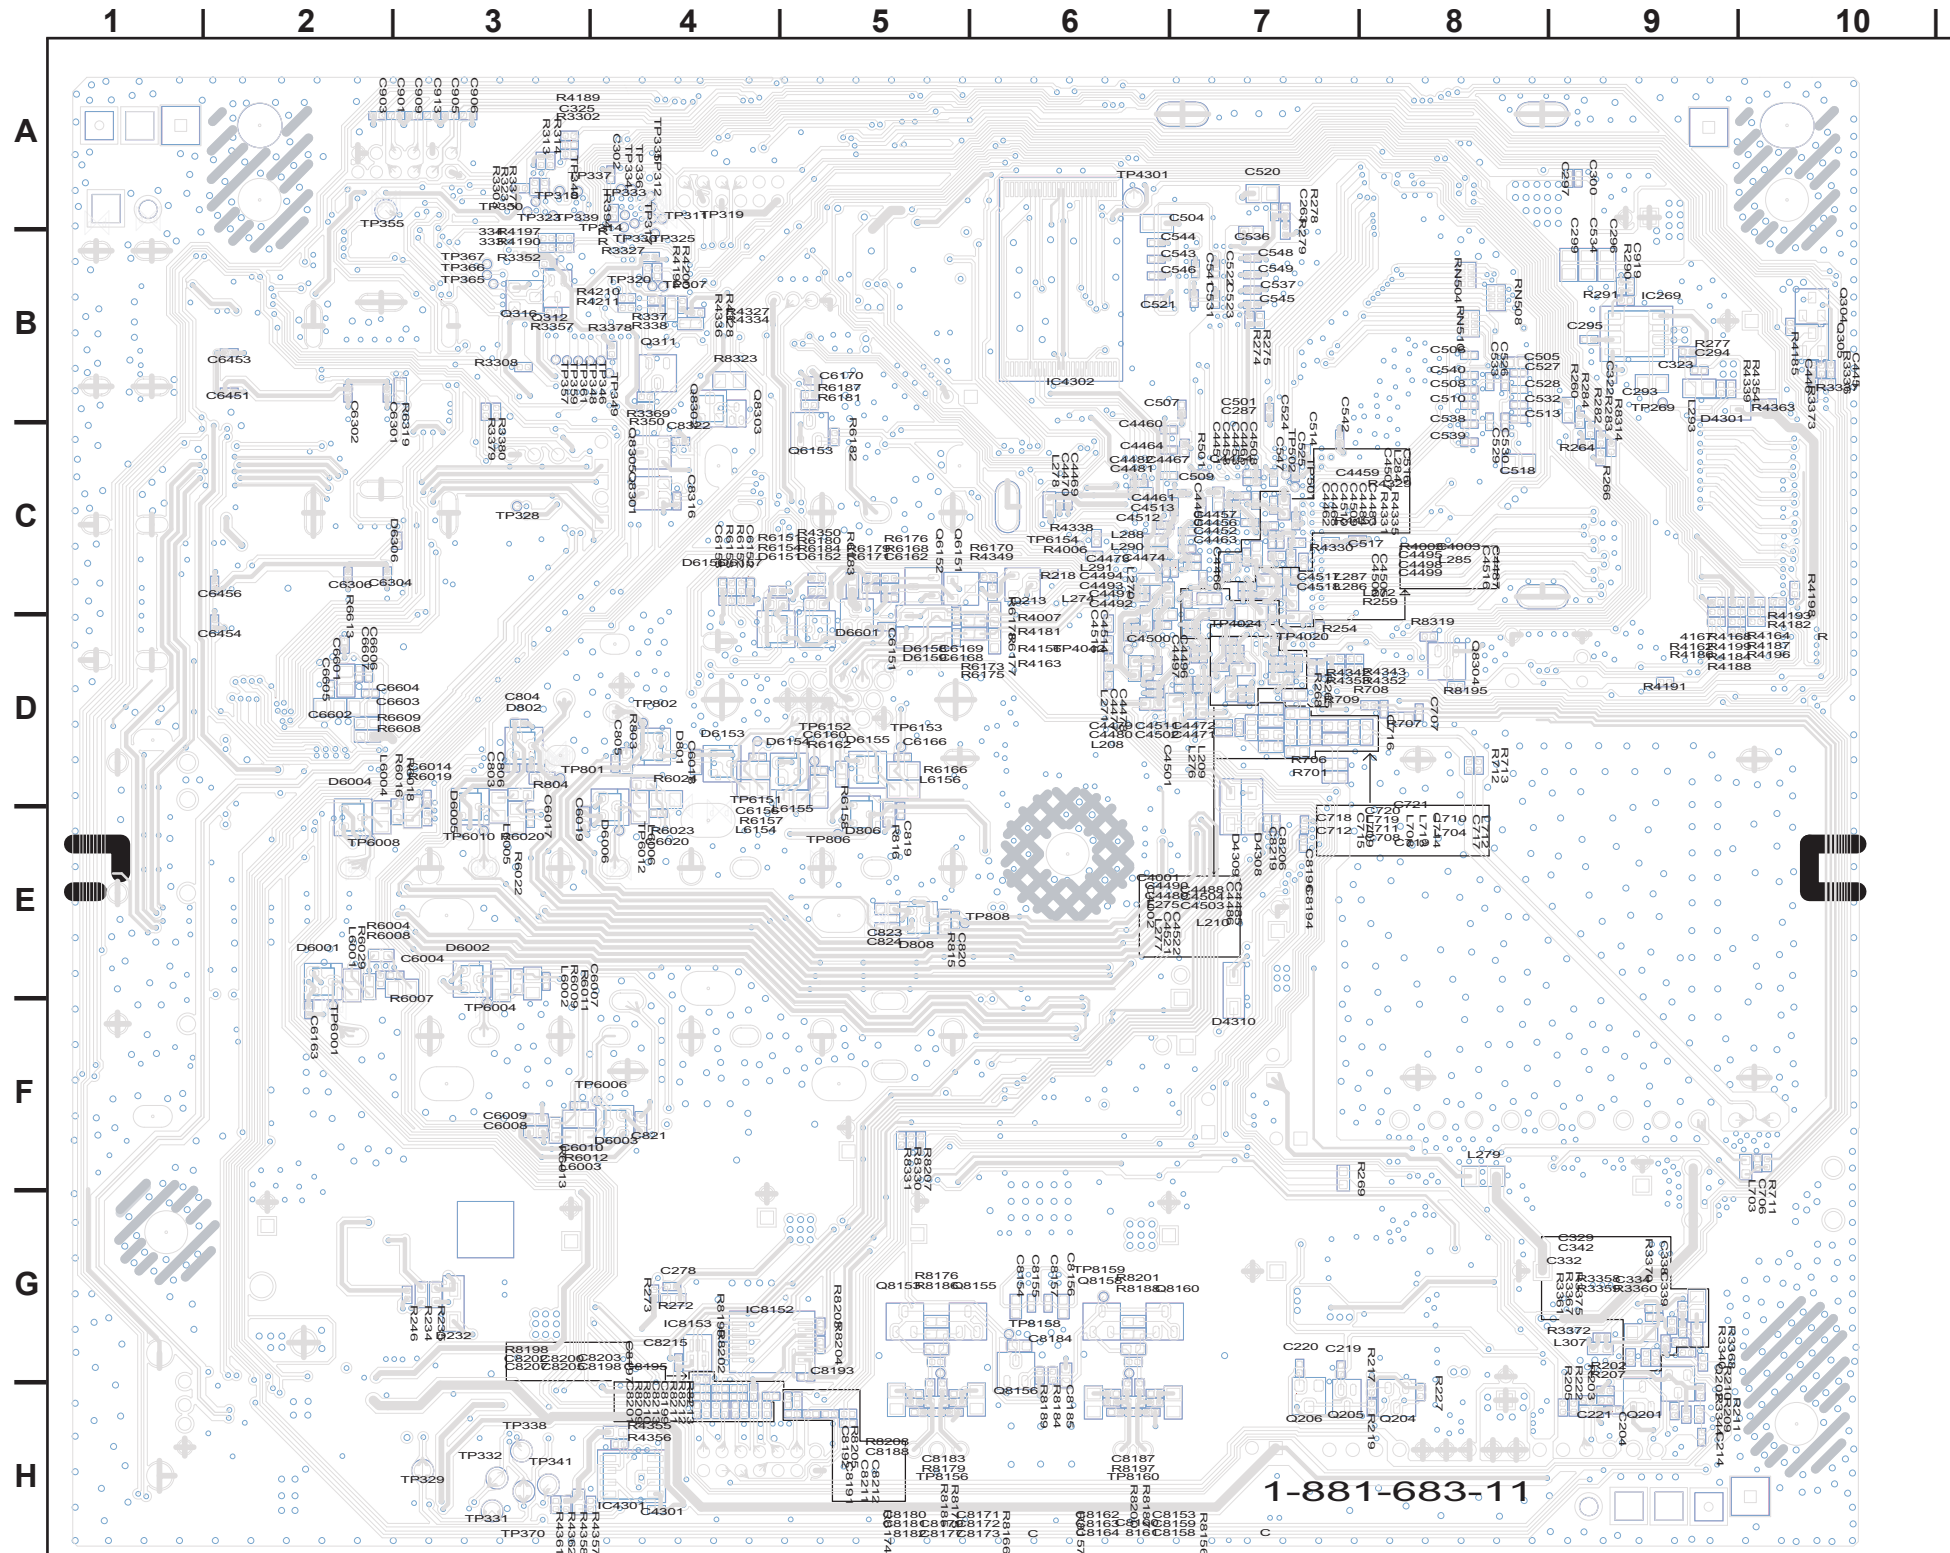

GE3B BOARD SCHEMATIC DIAGRAM (PAGE 1 OF 2) (KDL-32EX600/40EX600 ONLY)


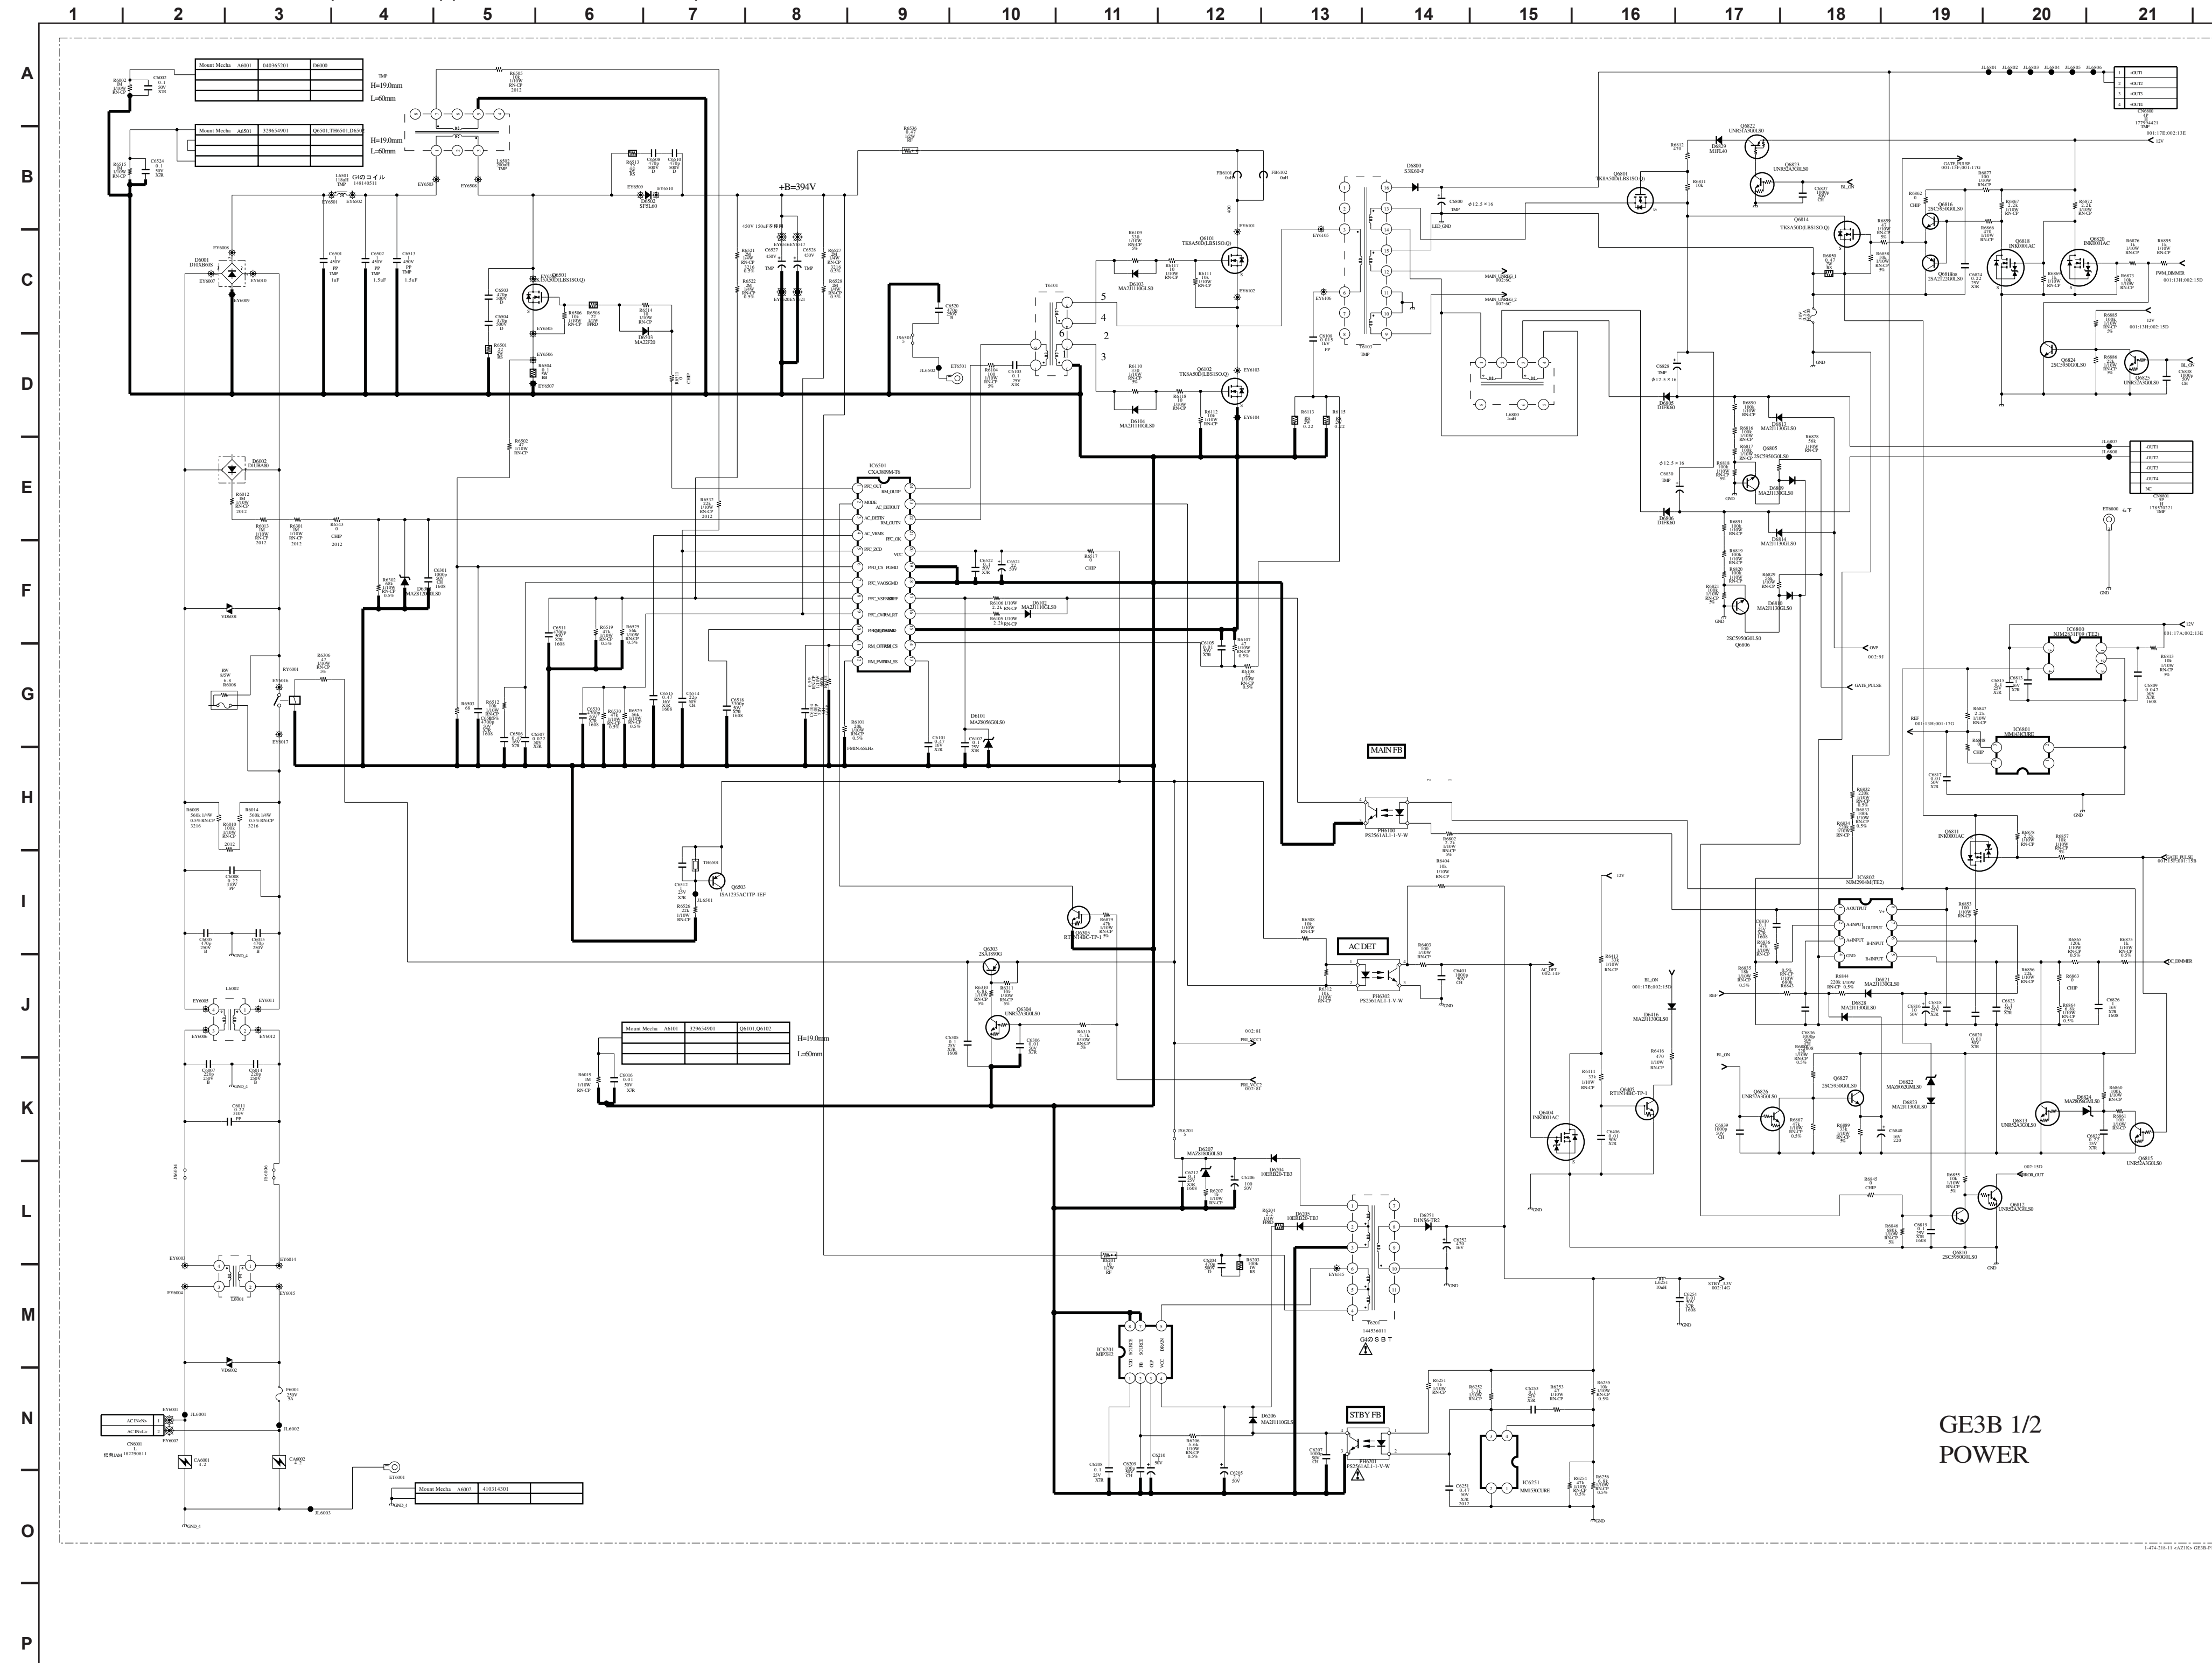


GE3B BOARD SCHEMATIC DIAGRAM (PAGE 2 OF 2) (KDL-32EX600/40EX600 ONLY)

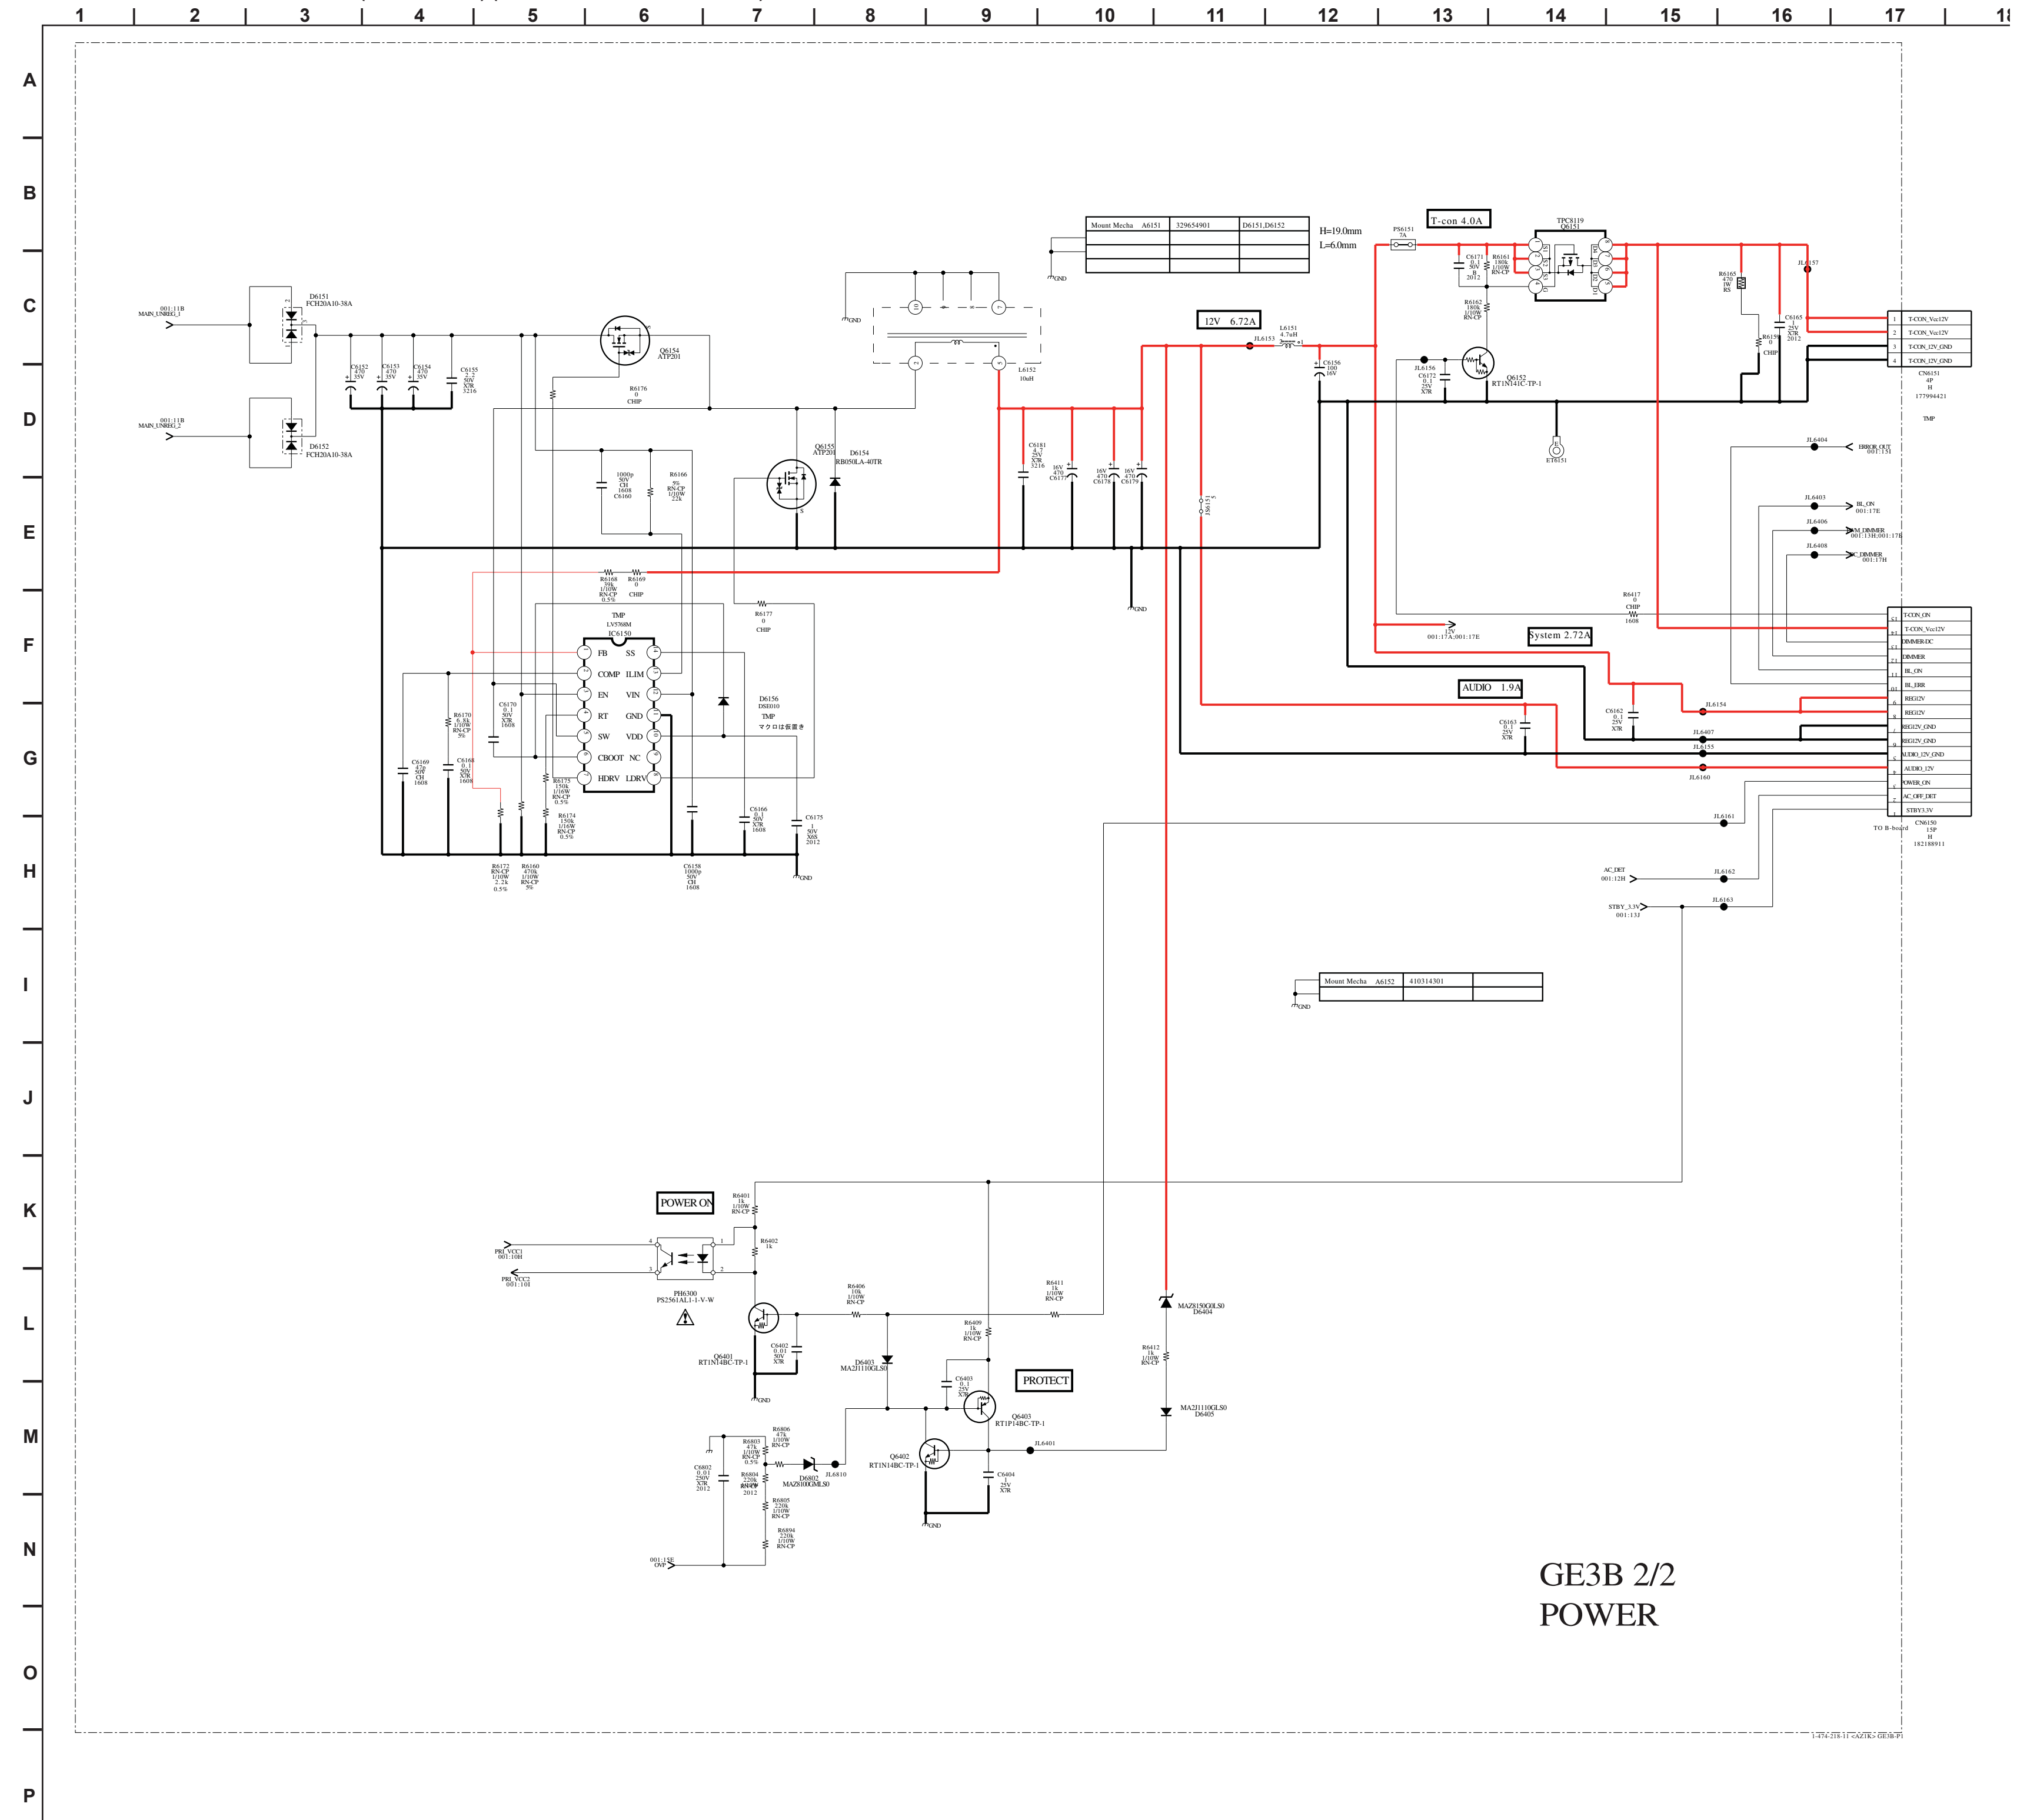


GE3B [POWER] COMPONENT SIDE (KDL-32EX600/40EX600 ONLY)


GE3B [POWER] CONDUCTOR SIDE (KDL-32EX600/40EX600 ONLY)

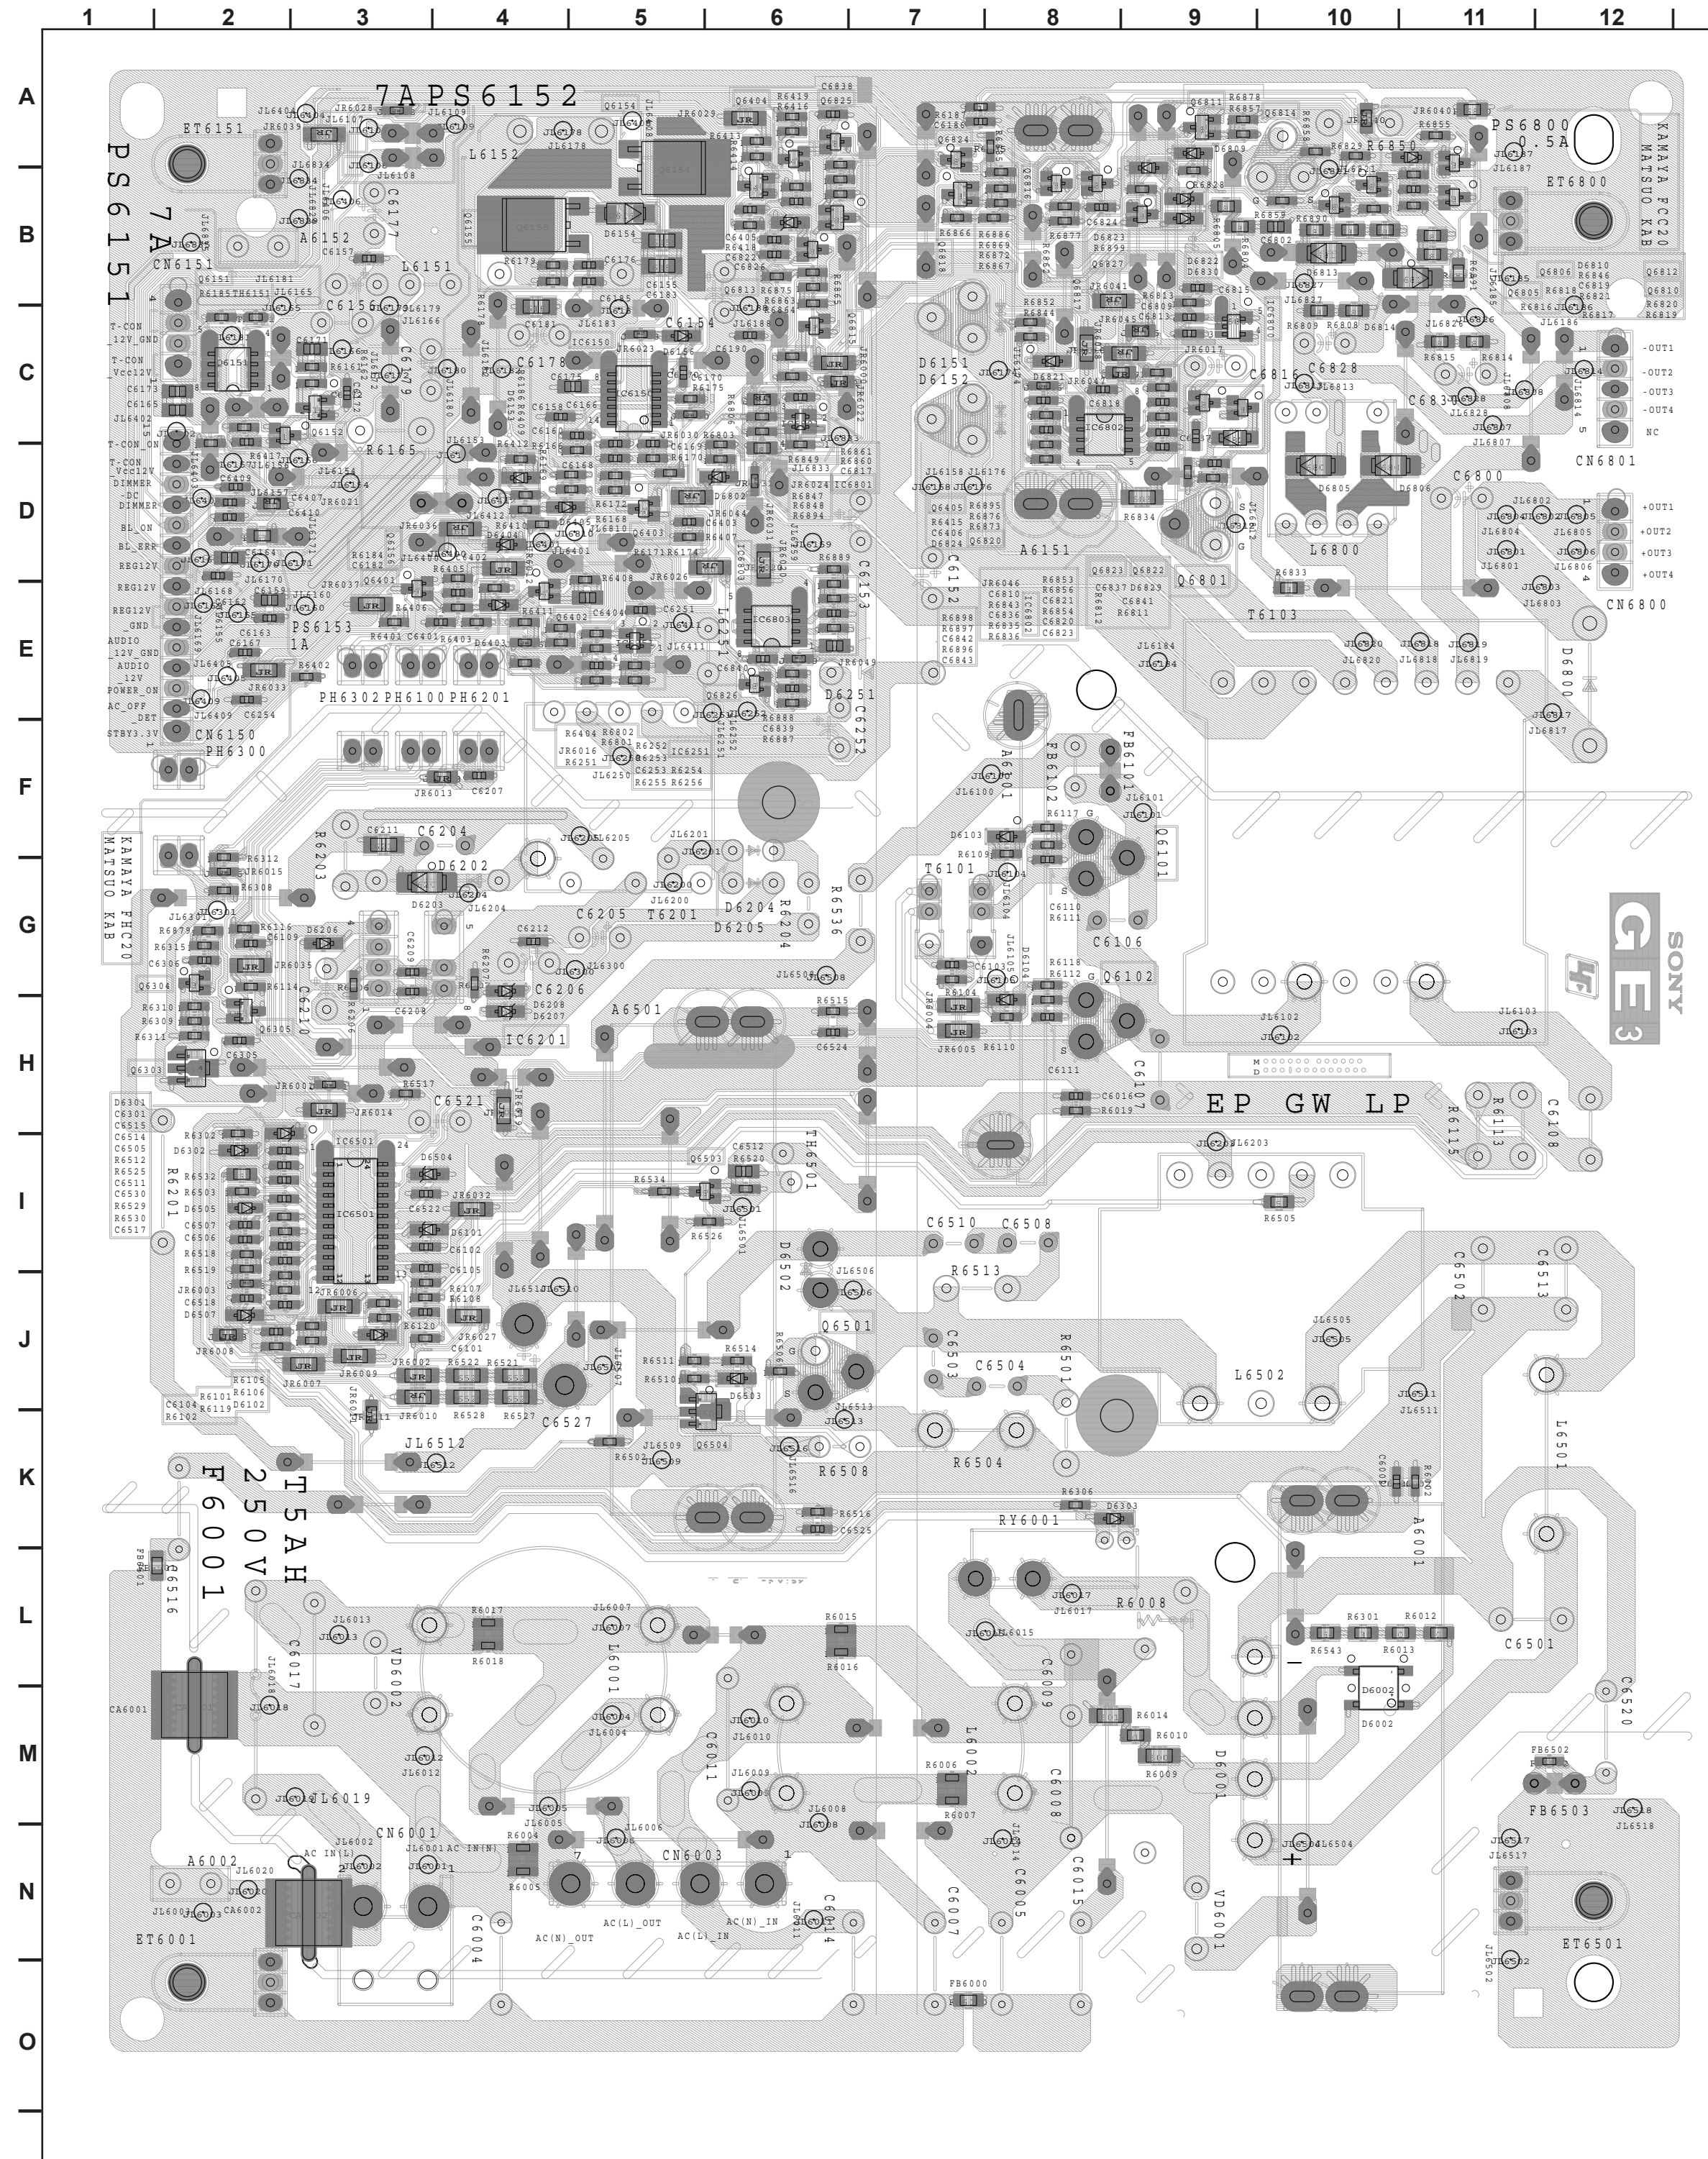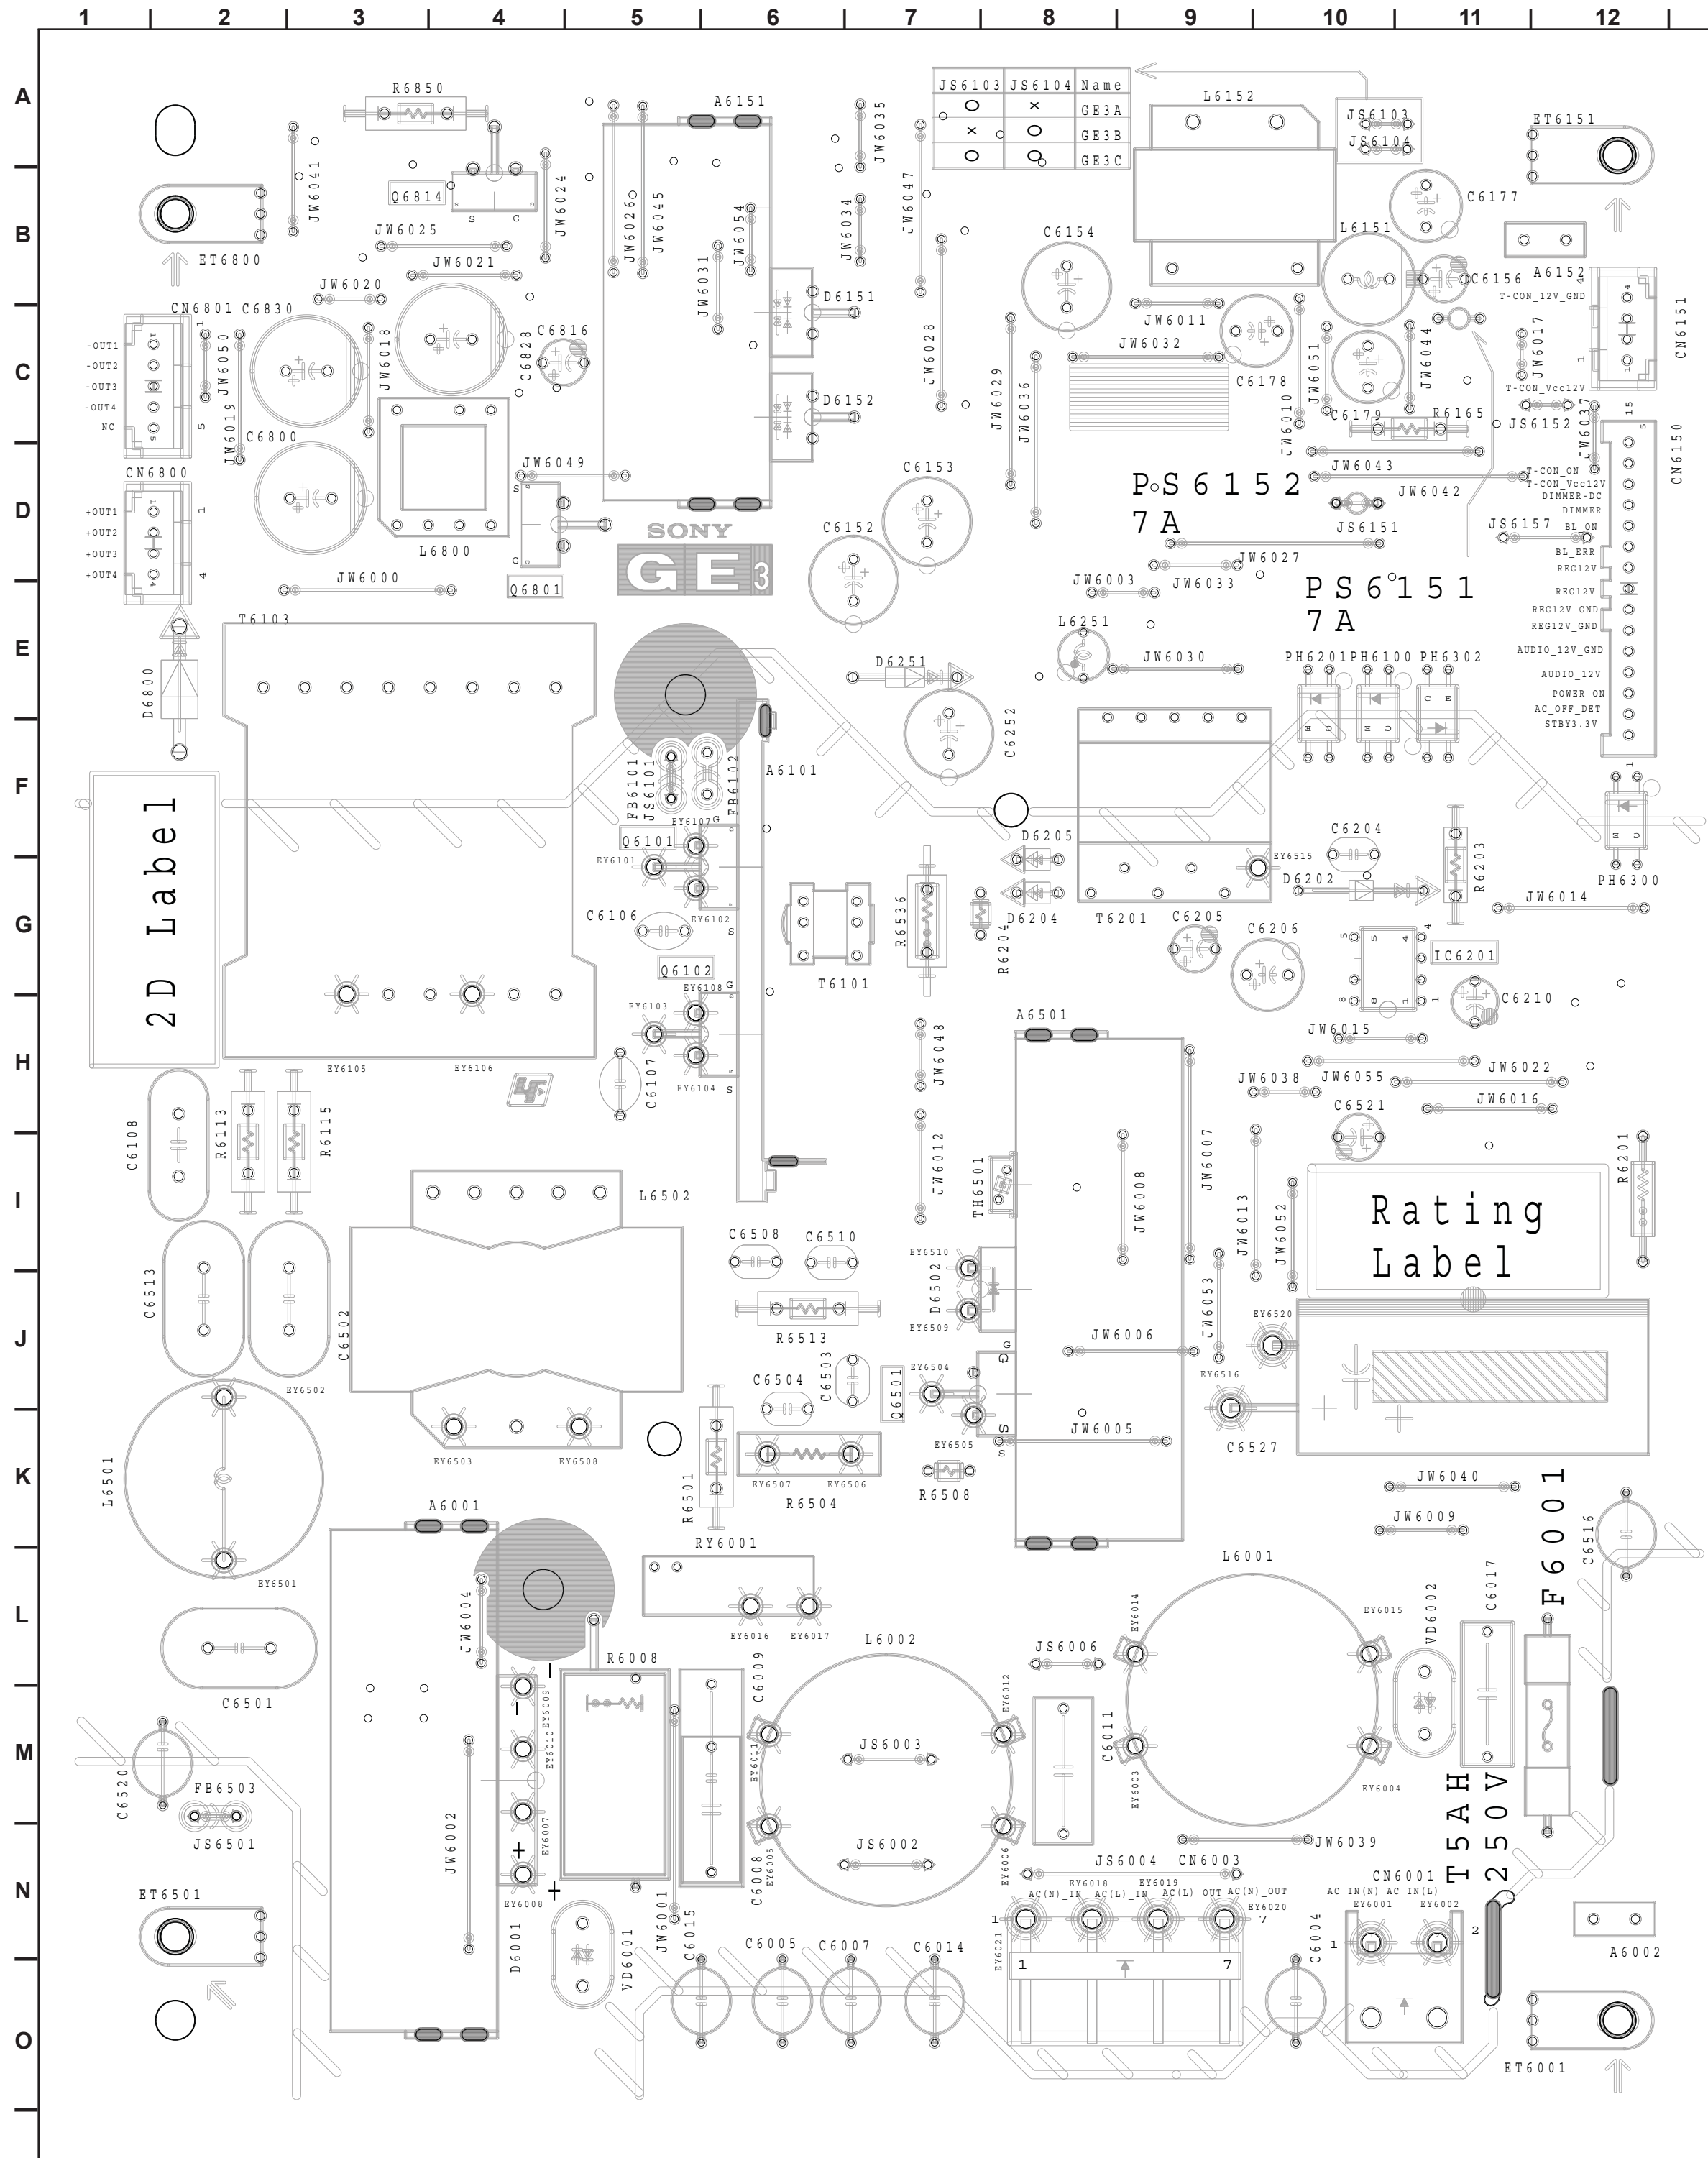

GE2C BOARD SCHEMATIC DIAGRAM (1 OF 2) (KDL-46EX600 ONLY)

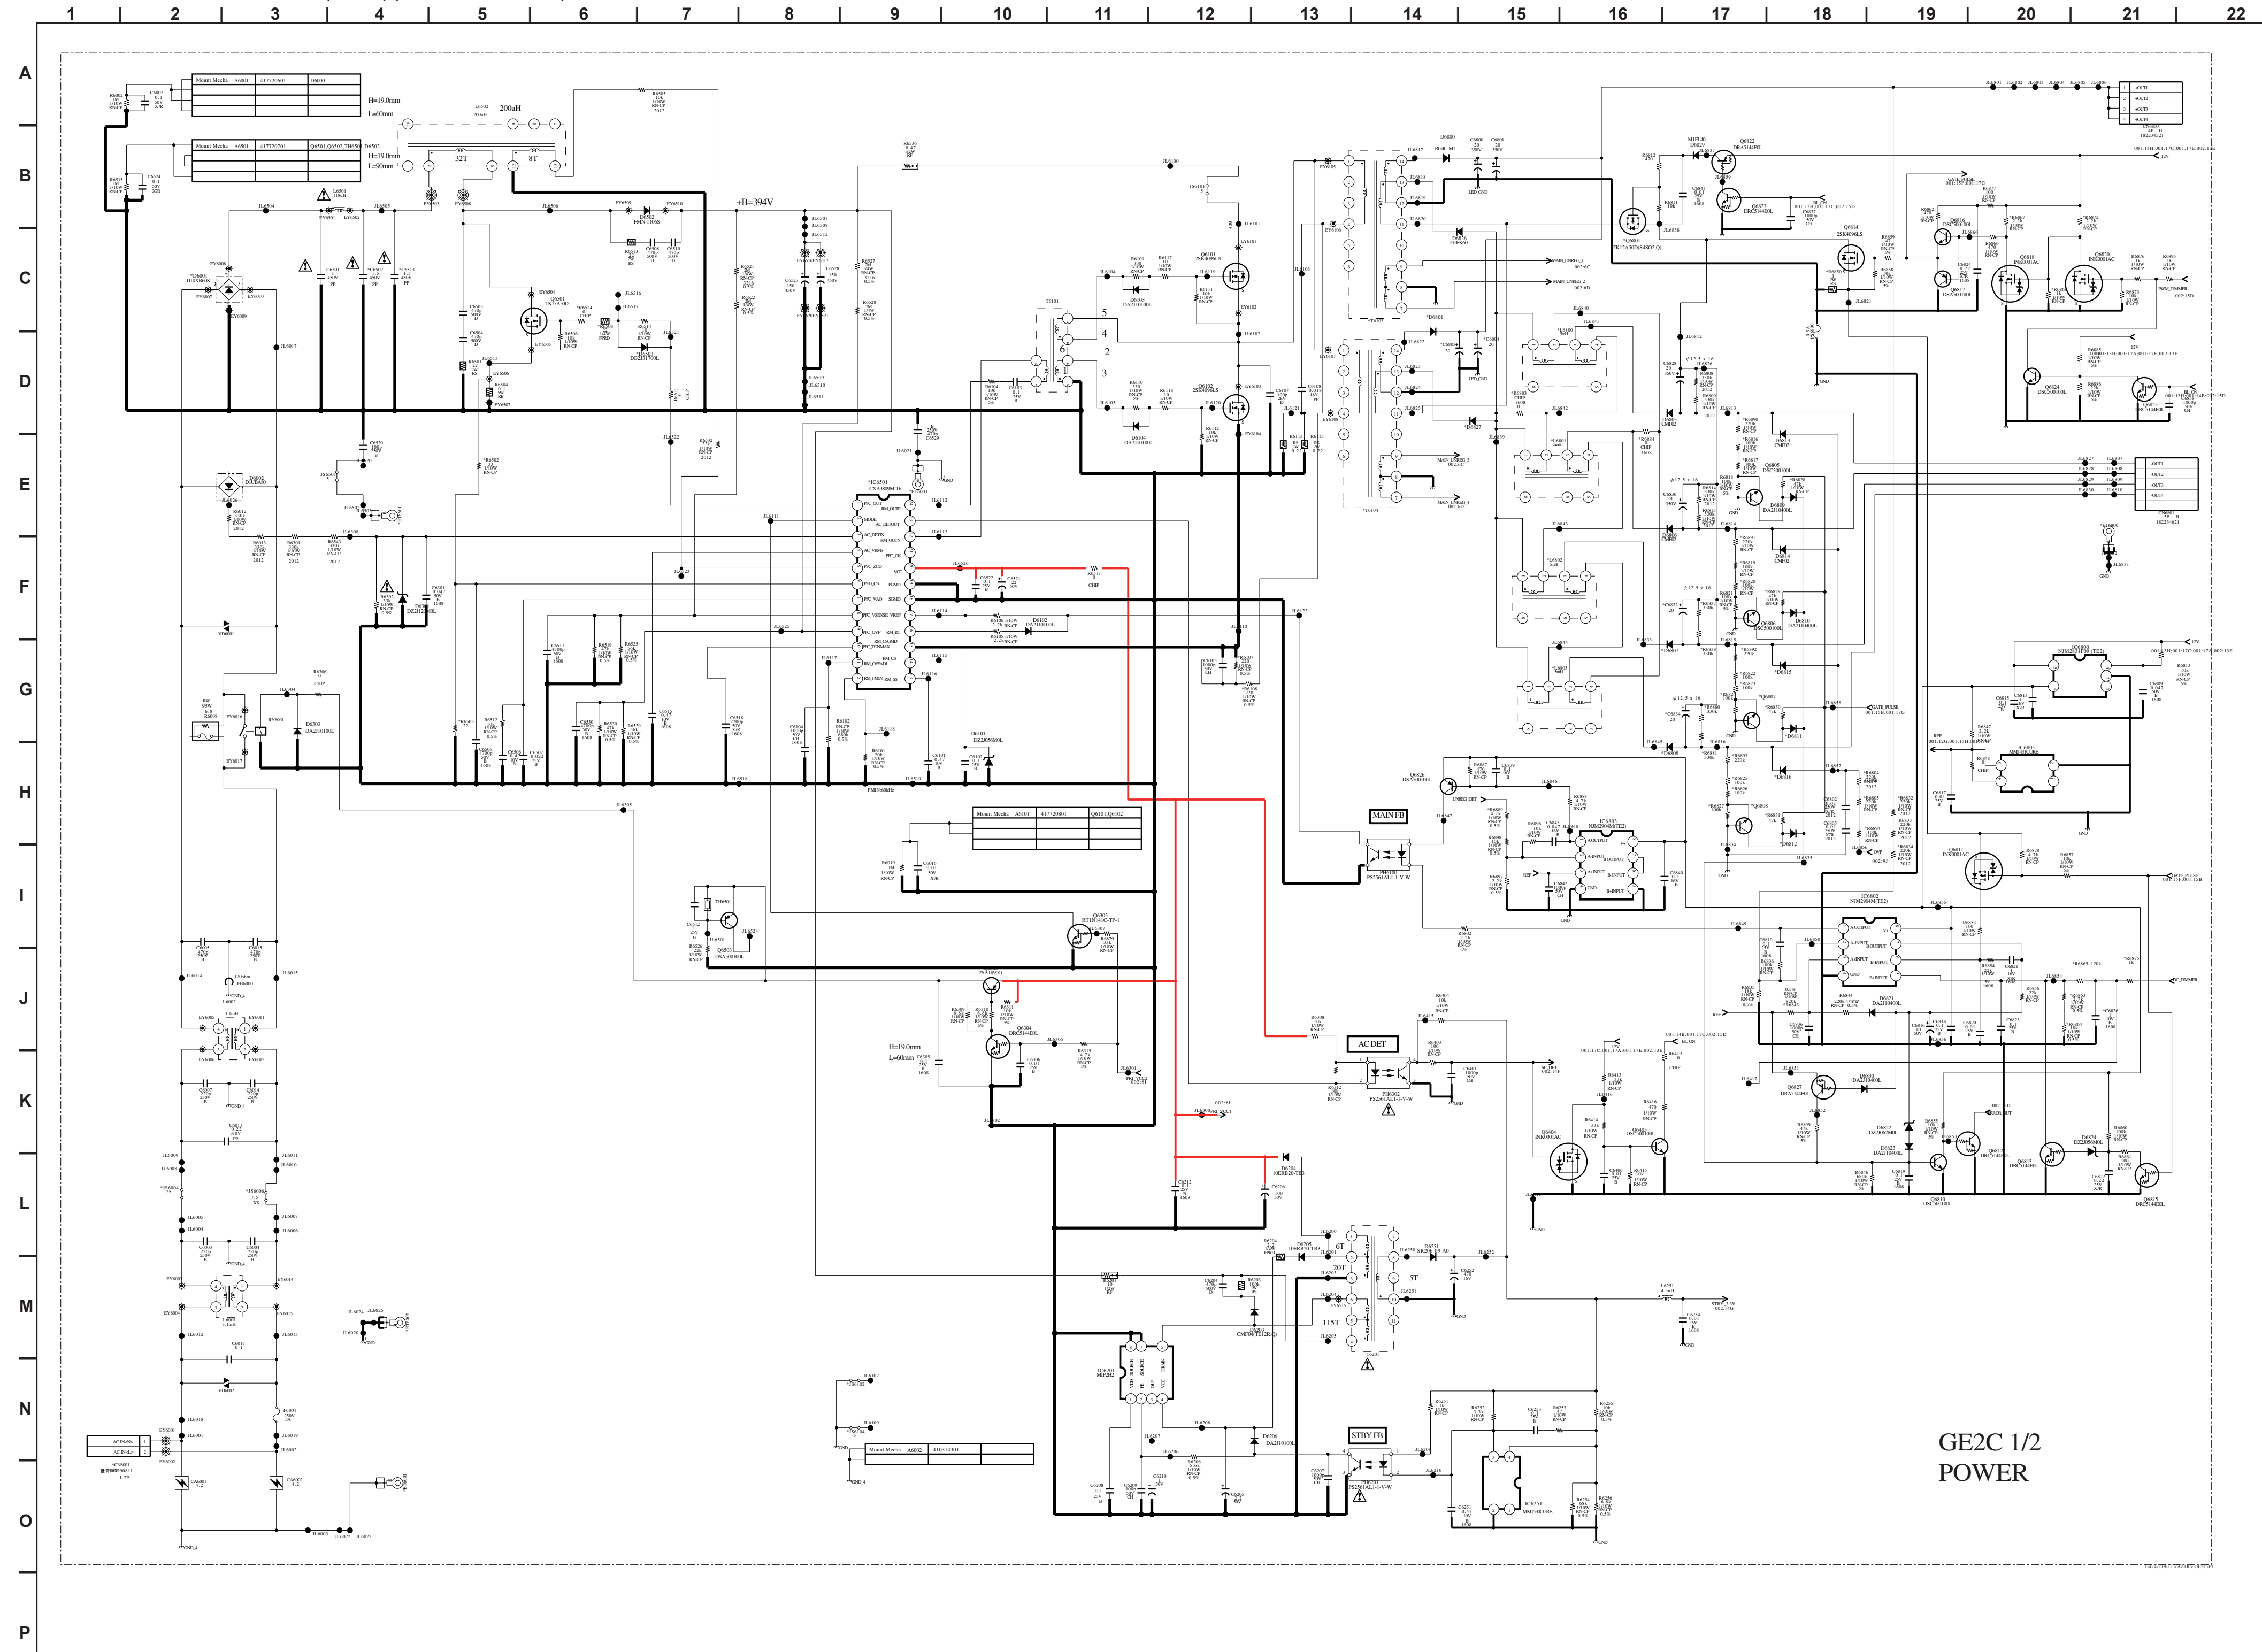


GE2C BOARD SCHEMATIC DIAGRAM (2 OF 2) (KDL-46EX600 ONLY)

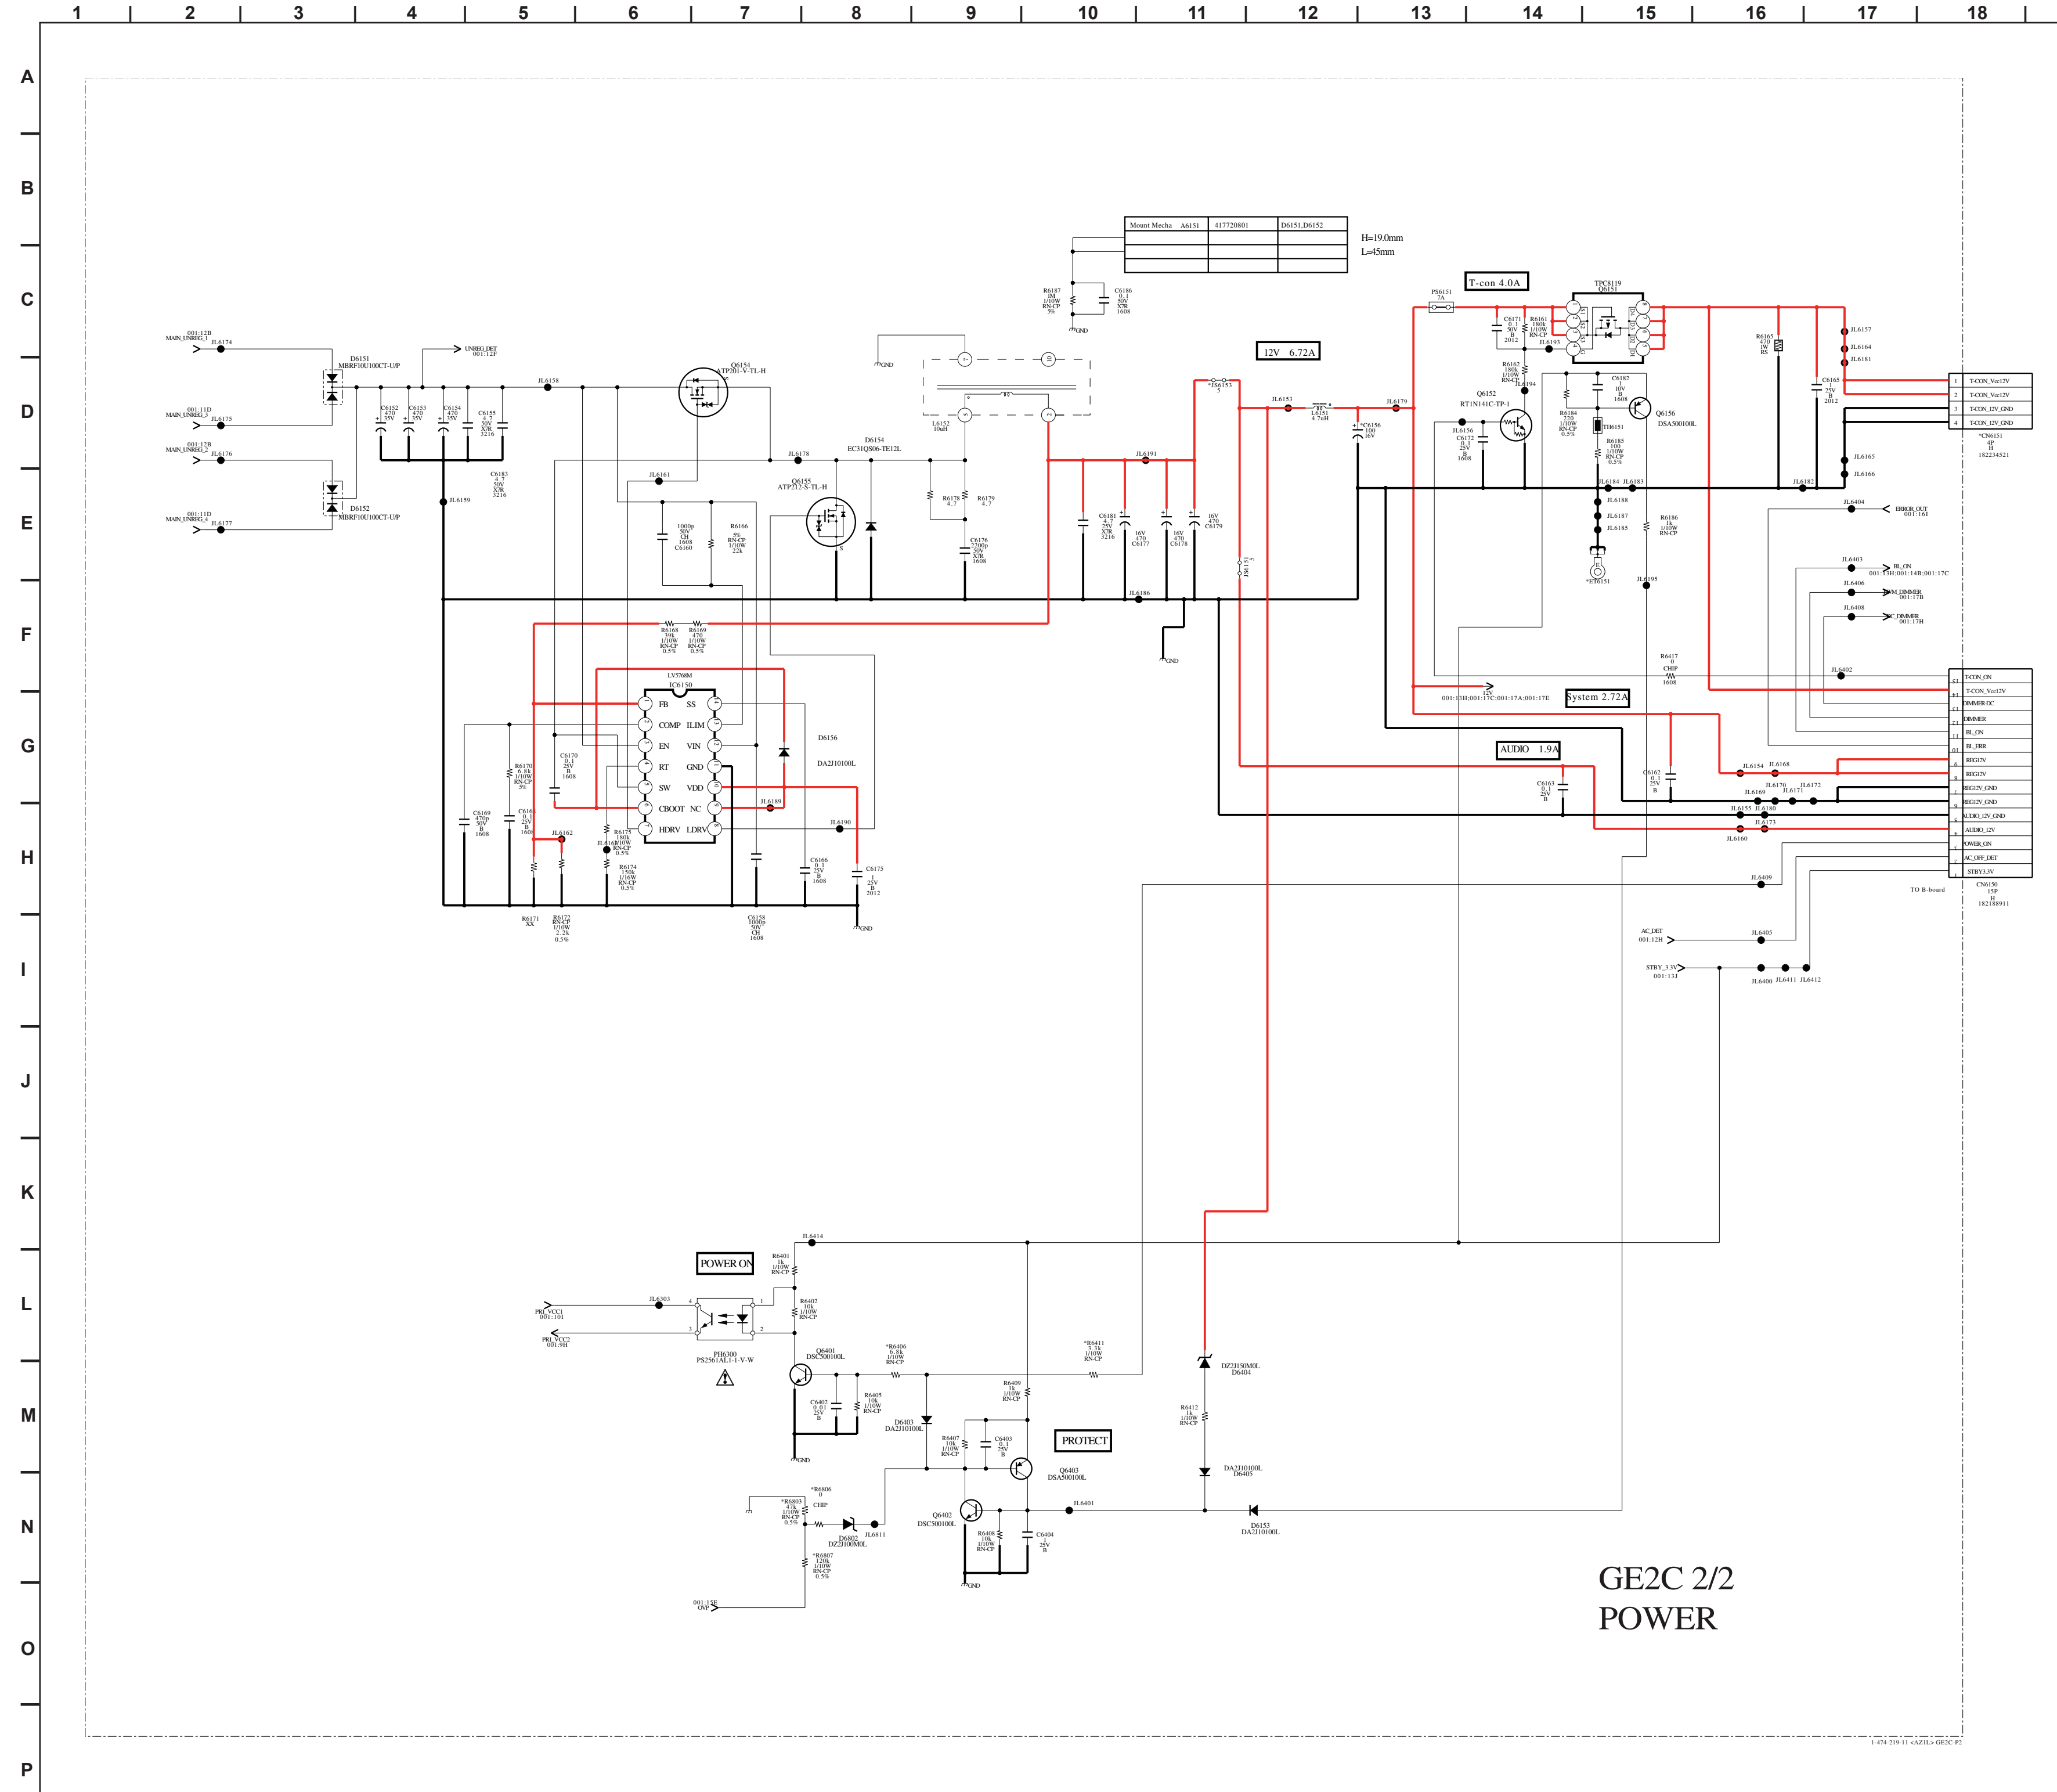


GE2C 2/2
POWER


GE2C [POWER]
COMPONENT SIDE (KDL-46EX600 ONLY)

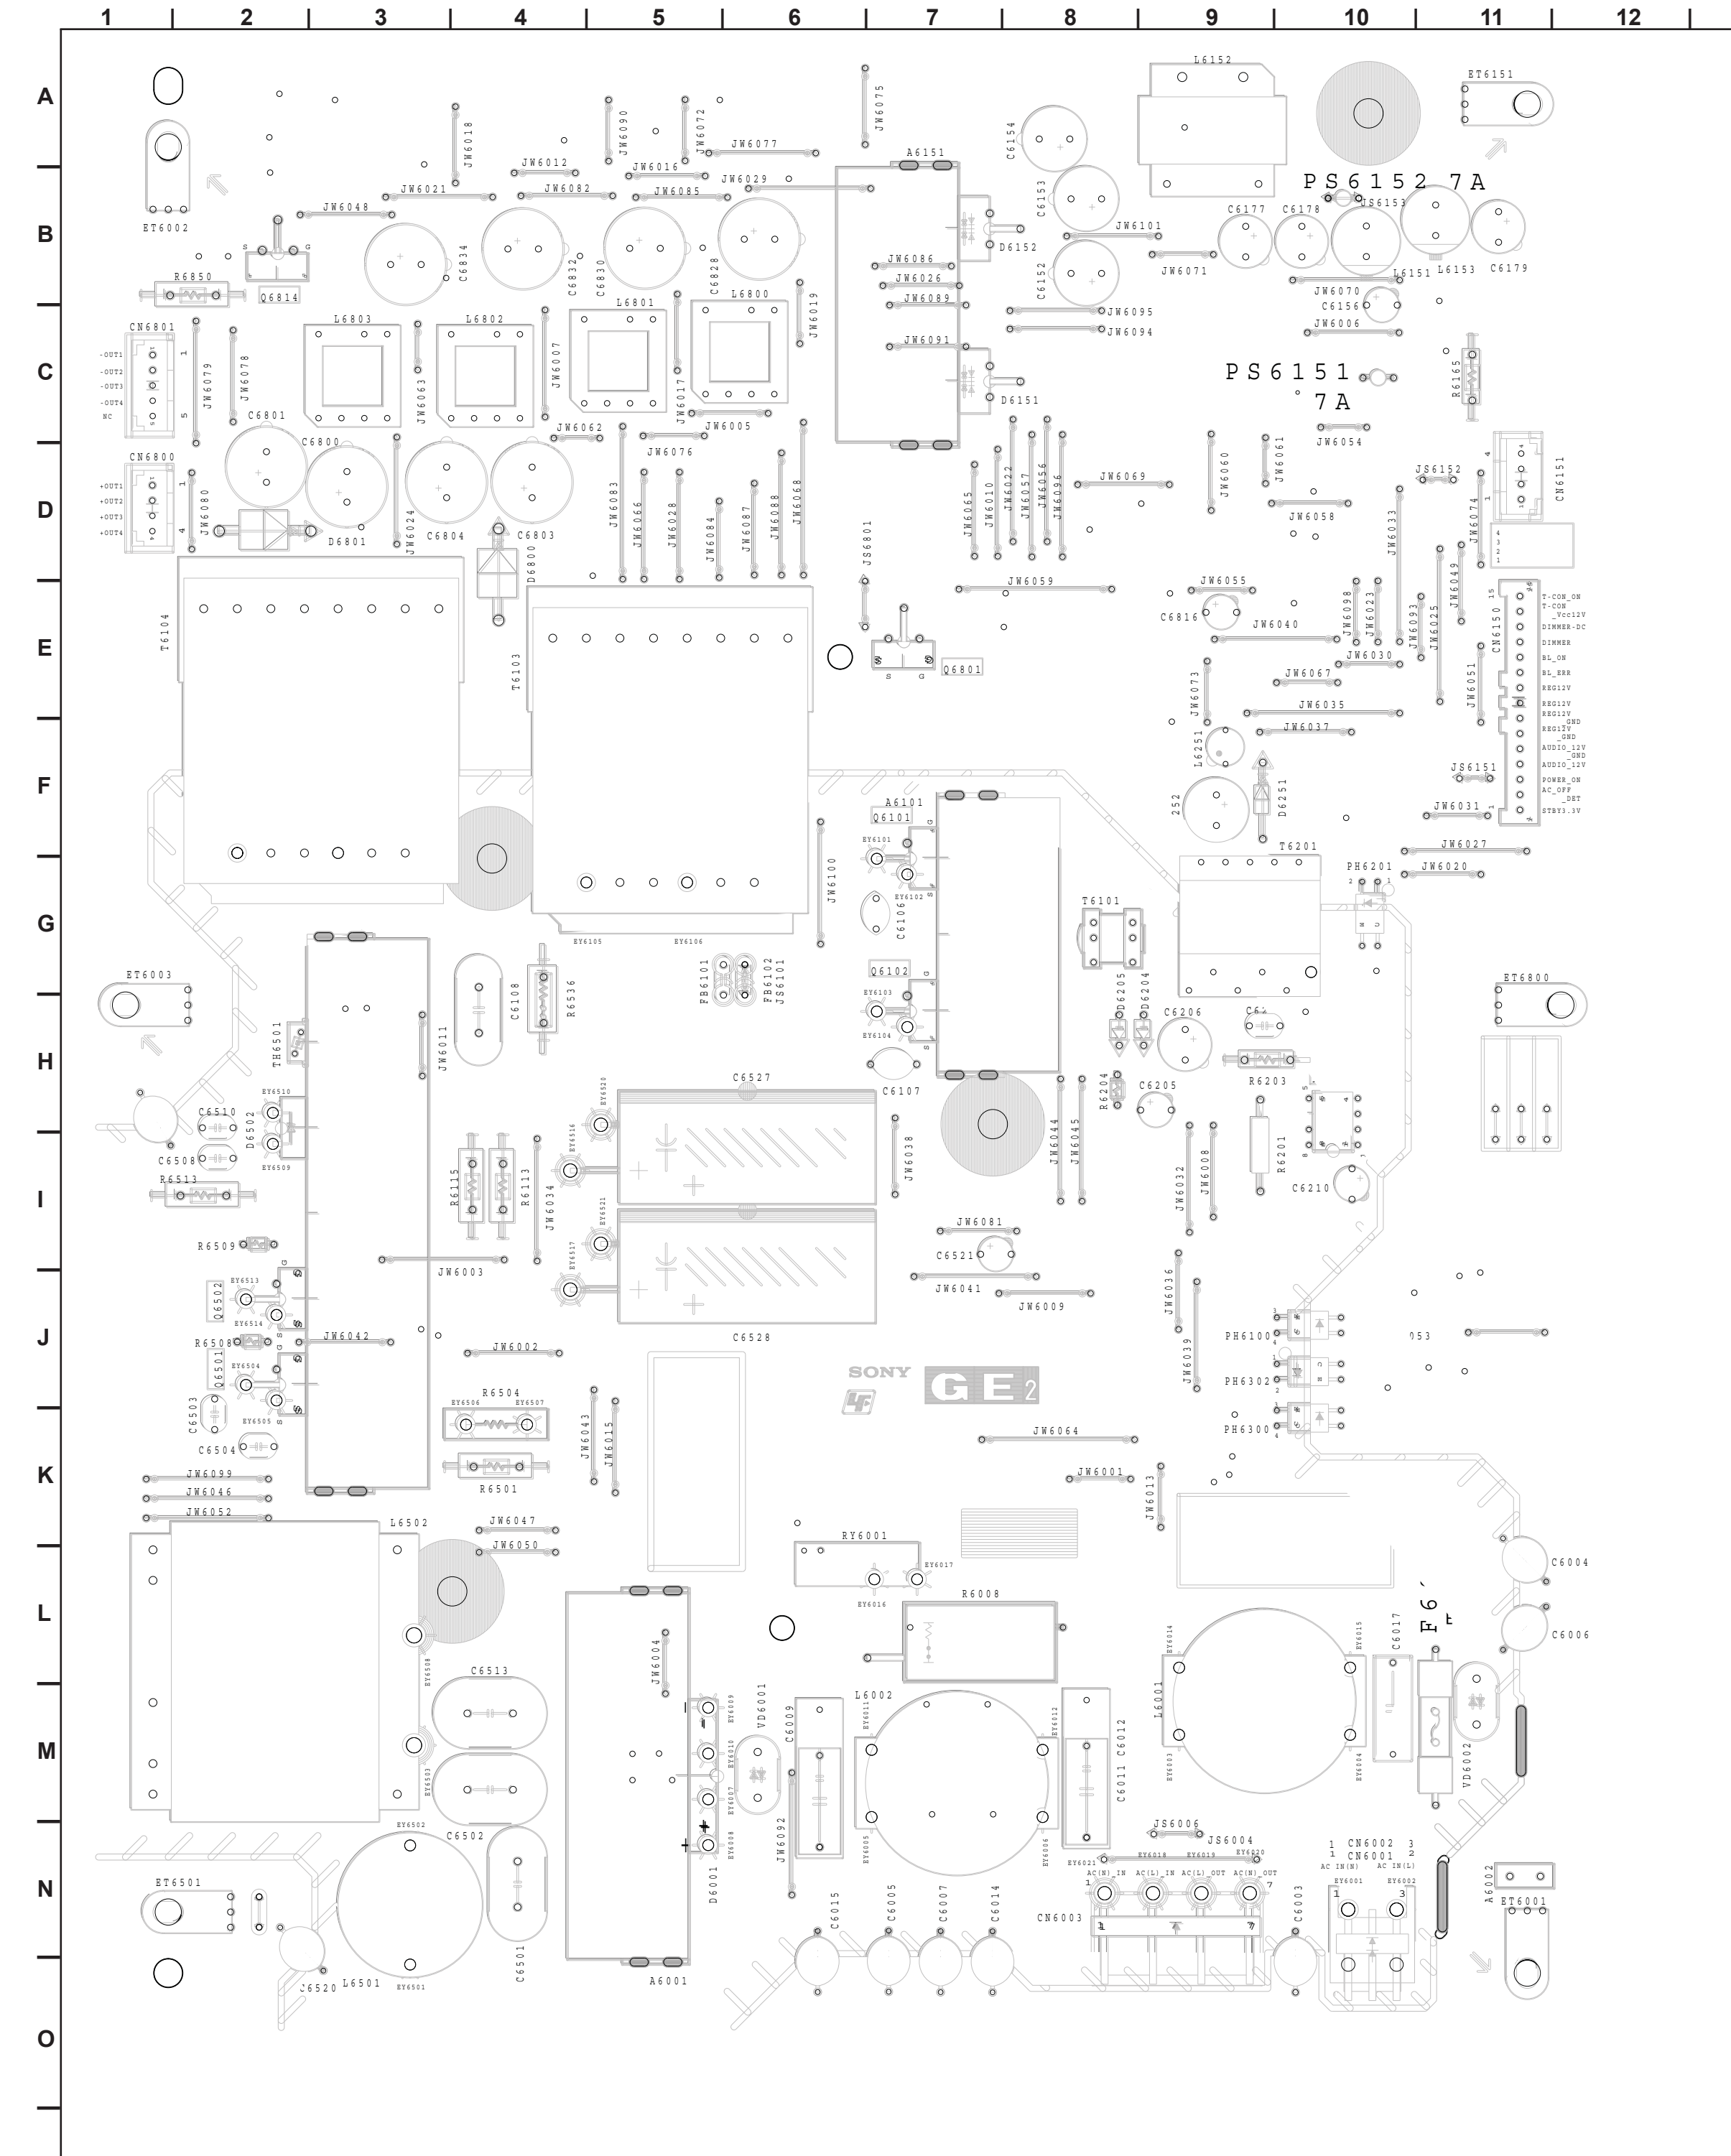


GE2C [POWER]
CONDUCTOR SIDE (KDL-46EX600 ONLY)

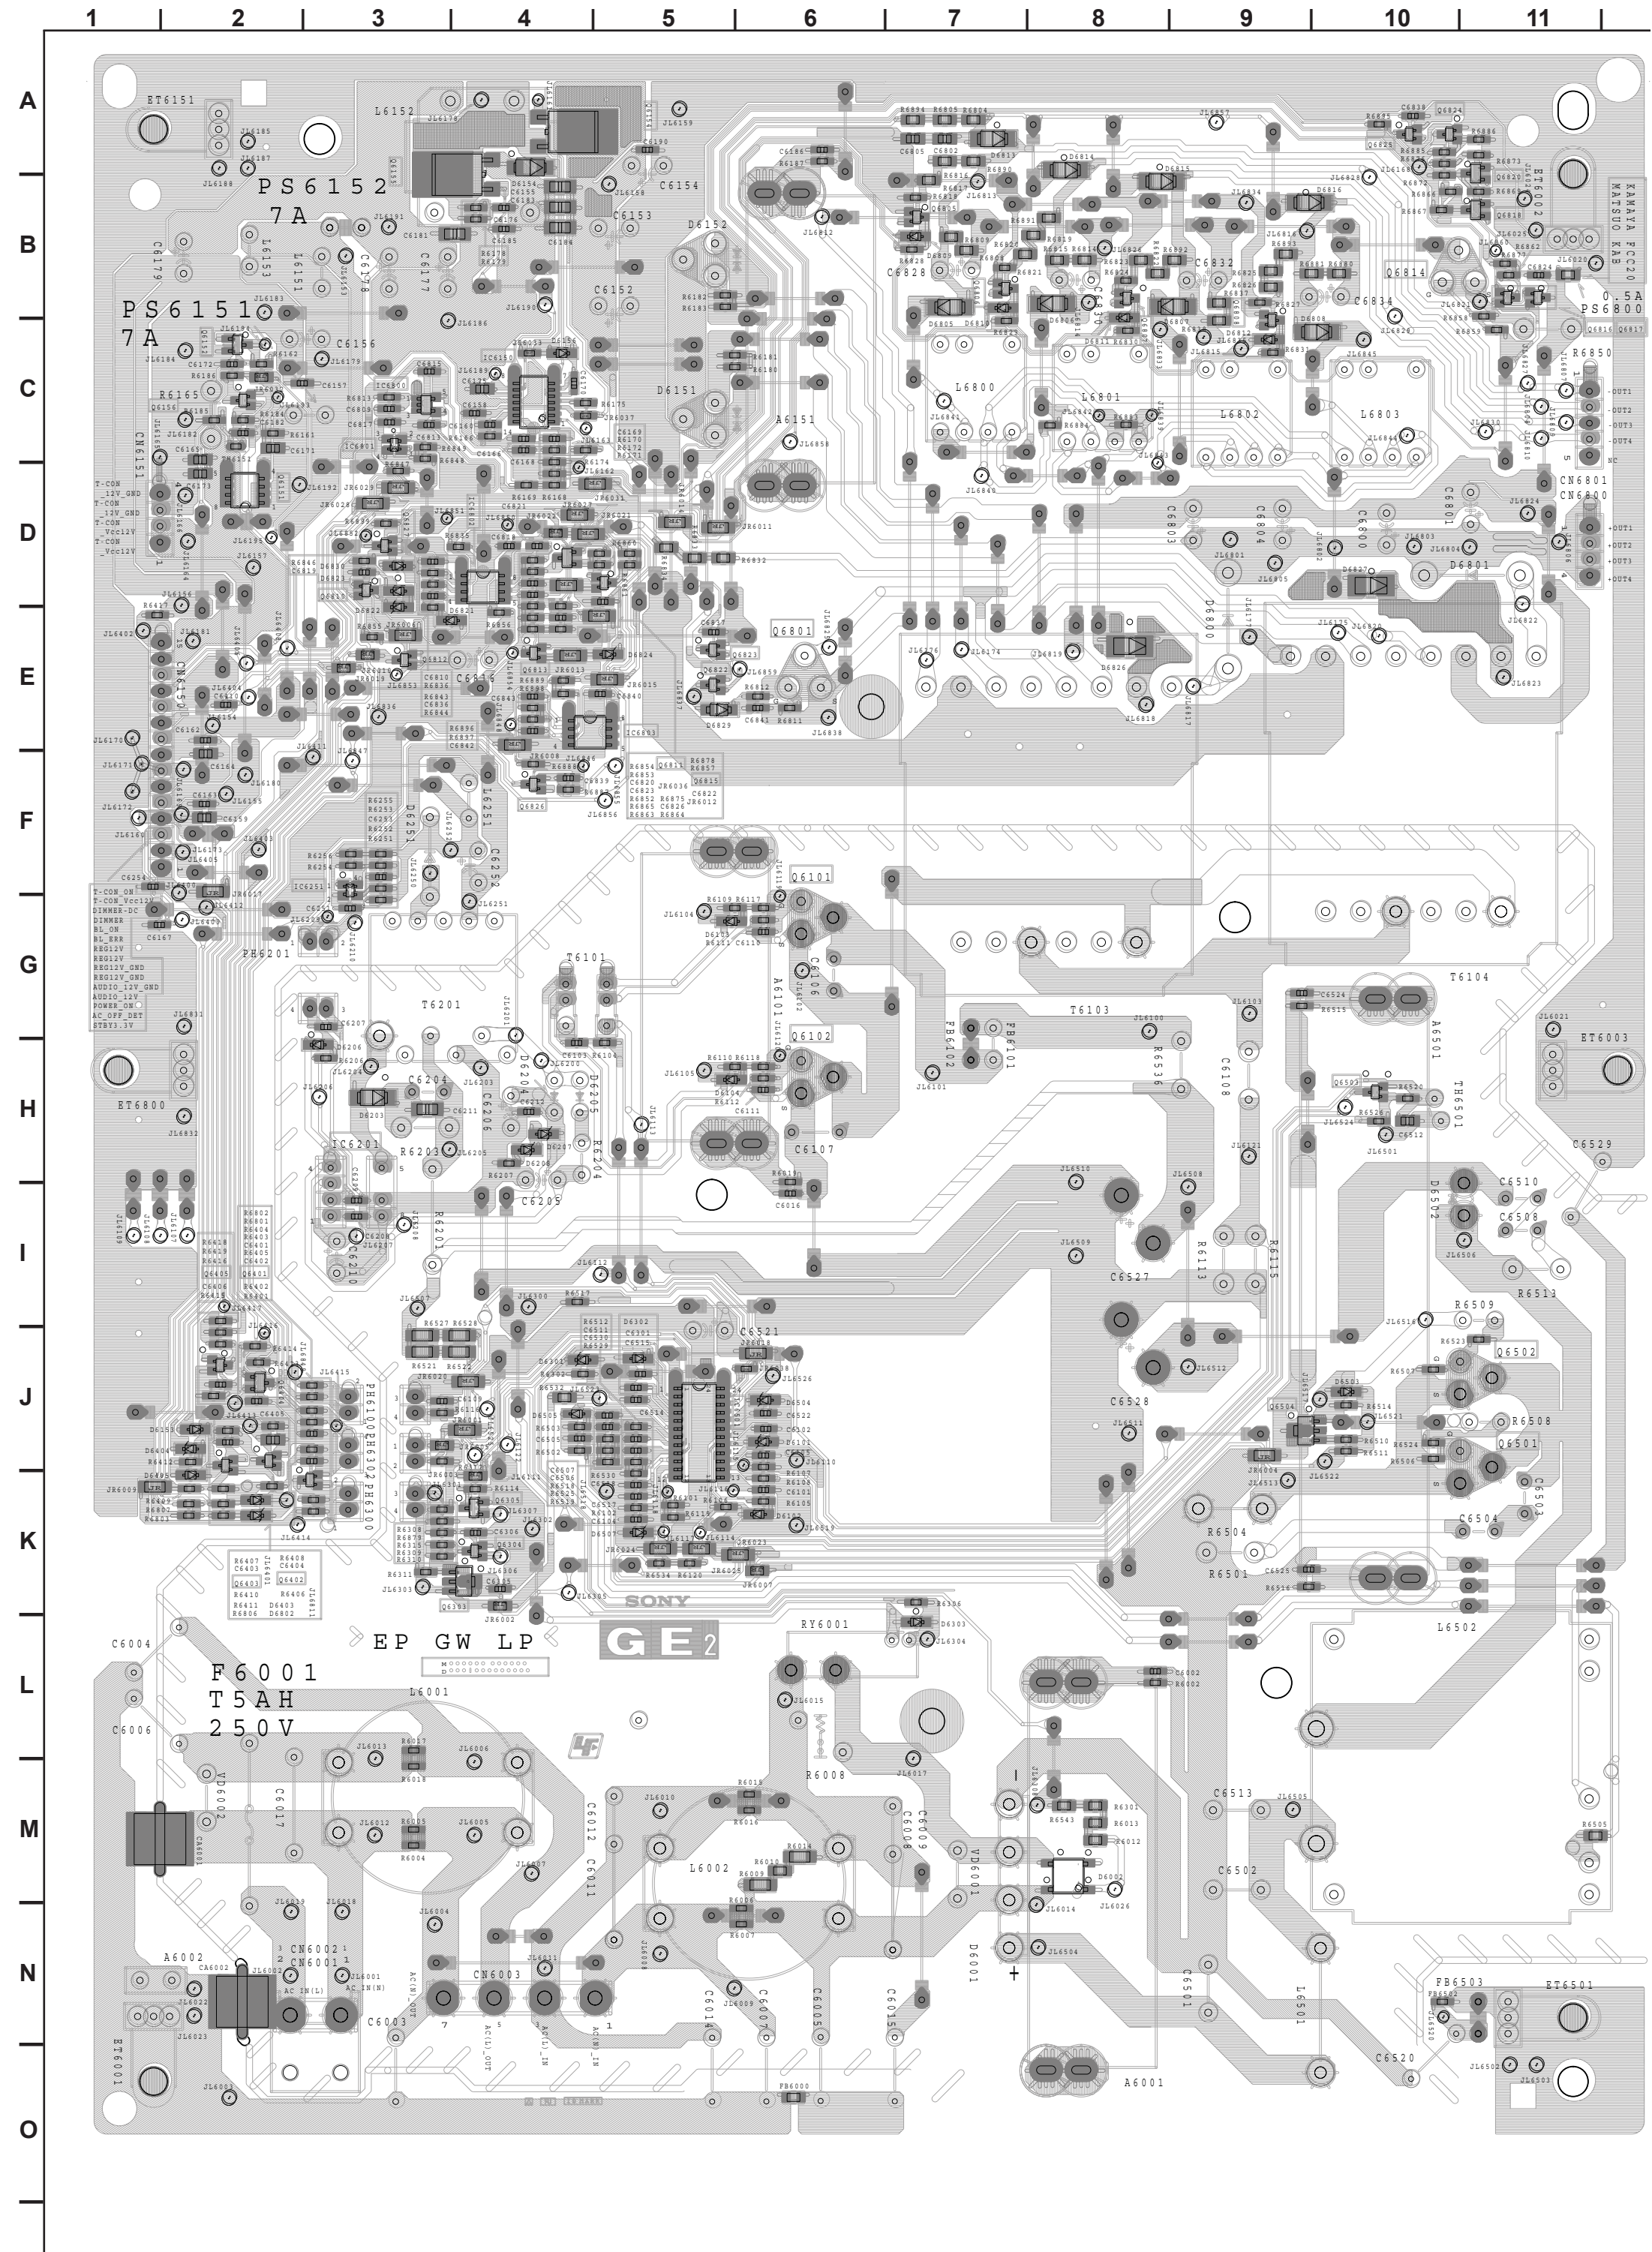


H2 BOARD SCHEMATIC DIAGRAM

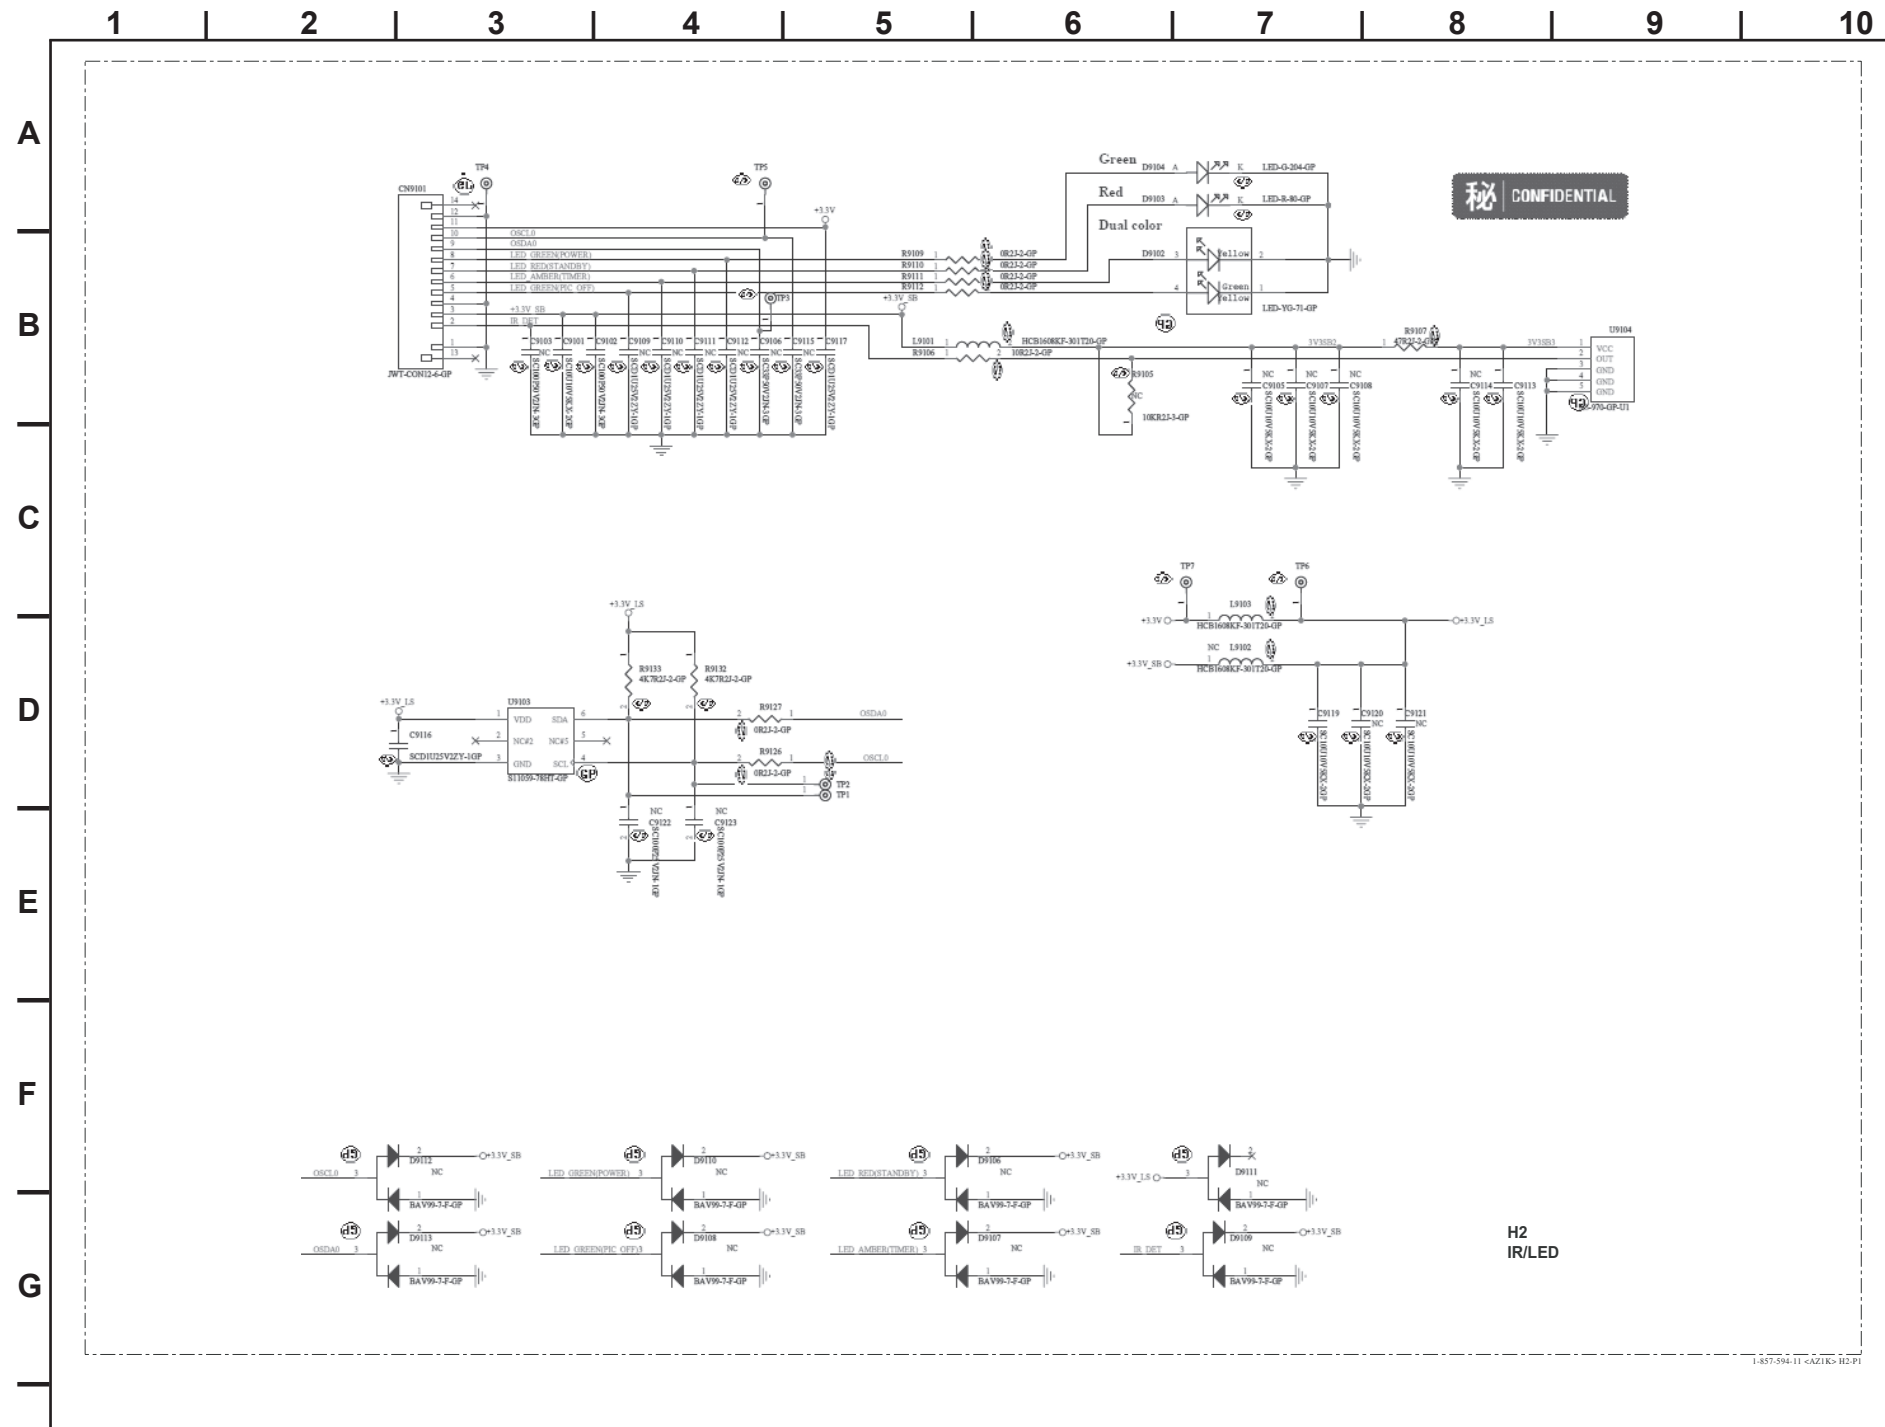

H2 [IR/LED]
COMPONENT SIDE

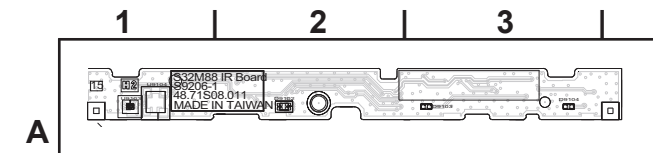

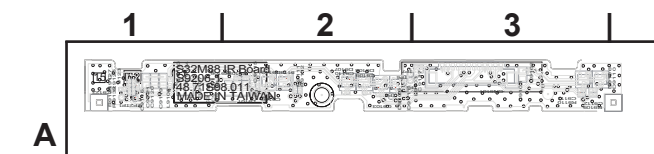


H2 [IR/LED]
CONDUCTOR SIDE



APPENDIX A: ENCRYPTION KEY COMPONENTS

Encryption key components developed by Sony Corporation contain confidential information, and shall be handled under the non-disclosure obligations provided in the applicable agreement with Sony Corporation (and/or its subsidiary).

As part of this agreement specific instructions must be adhered to whenever a Circuit Board containing encryption key components is repaired and/or replaced pursuant to the following:

- 1) In the service manual the Circuit Board(s) containing encryption key components shall be identified with a **red outline and a **.
- 2) Only repair boards or components listed in the service manual shall be utilized for replacement and/or repair.
- 3) Disassembly, decryption, or reverse-engineering component(s) is strictly prohibited.
- 4) Any board in which the Servicer replaces an encryption key component must be placed back into the set it originally came from and the replaced defective component **MUST BE DESTROYED**. Boards cannot be swapped.
- 5) If a Circuit Board identified with a **red outline and a ** in the service manual is deemed to be defective:
 - a) and if a core charge is imposed and is covered under the product warranty, the defective un-repaired or modified board **MUST BE RETURNED** to Sony.
 - b) and if the core charge is **NOT** covered under the product warranty, the defective un-repaired or modified board **MUST BE DESTROYED**.
- 5) If a unit is destroyed (such as field scrap), the Circuit Board identified with a **red outline and a ** in the service manual **MUST BE DESTROYED**.

SONY® is a trademark of Sony Electronics

Reproduction in whole or part without written permission is prohibited. All rights reserved